

*R. and
Frank Bialas*

*Herb M. Jean
345 W. ...*

ROGERS

**REPLACEMENT
PARTS
AND
CIRCUITS
1926-1934**

Compiled by

ROGERS MAJESTIC LIMITED
SERVICE DIVISION

Head Office - LEASIDE, ONTARIO



Volume I
(Revised April 1945)

P R E F A C E

INTRODUCTION

This revised edition parts and circuit catalogue contains complete parts lists and schematic diagrams for Rogers radio receivers, manufactured during the years 1926 to 1934 inclusive. Volume II of this manual is also available and covers parts lists and circuit diagrams of succeeding models of Rogers radio receivers for the years 1935 to 1937 inclusive.

On the following pages will be found listed the various models of receivers and chassis types together with the page on which circuit information may be found. This index provides a ready means of identifying the receiver model against the chassis type, and also in numerical order, the chassis type against the model name. Circuit and alignment information diagrams are arranged in order of chassis type number. The parts list applying against these chassis types is arranged first in alphabetical order of part name and then in numerical order of part number.

SHIPPING INSTRUCTIONS

Unless definite shipping instructions are indicated on the order, we will use our discretion in determining routing, basing our decision on the contents of the shipment, weight, size and distance to point of delivery.

Shipment will be made transportation charges collect unless otherwise stated. If prepaid shipment is specified, transportation charges will be added to the invoice covering the goods.

ORDERING

When ordering always quote part number and description of the part required as well as shipping instructions in detail.

TERMS

Terms are strictly net cash. C.O.D. shipments will be made only to established accounts. Remittance should be included with your order and should be sufficient to also cover transportation charges. Any excess in the remittance will be promptly refunded. Remittance may be made in the form of a marked cheque, money order or bank draft.

TECHNICAL SERVICE

Our service Offices at Toronto and Divisional Branch Office at Montreal maintain a technical staff for reference purposes offering every reasonable assistance to dealers and servicemen on problems pertaining to Rogers, Majestic and De Forest Radio Receivers.

The privilege of reference in the case of specific problems in connection with any of the products is extended to dealers and servicemen.

CONTENTS

	<u>PAGE</u>		<u>PAGE</u>
Preface-----	2	Meters (Line - Tuning)-----	59
Index to Circuits-----	3-4	Phonograph Parts (Miscellaneous)-----	59
Series and Shunt Resistors-----	5	Resistors (Variable - Wire Wound)-----	59
Technical Tables and Formulae-----	6-7	Resistors (Fixed - Wire Wound)-----	59-60
Circuit Diagrams-----	8-47	Resistors (Variable - Carbon)-----	60-61
Romaco Battery Eliminators-----	48-49	Resistors (Fixed Carbon)-----	61-62-63-64
Auto Radio Parts, Miscellaneous-----	50	Shields (Condenser-Coil-Tube-Chassis Base)-----	64
Ballasts - Voltage Regulators-----	50	Sockets (Tube and Insulators)-----	64-65
Binding Posts, (Jacks, Plugs, Connectors)-----	50	Sockets (Dial and Tuning Light)-----	65
Bulbs (Dial and Tuning Light)-----	50	Speakers-Dynamic (Assemblies and Parts)	65-66-67-68-69
Cabinet Parts (Knobs)-----	50-51	Speakers - Magnetic - Assemblies and Parts---	69
Cabinet Parts (Escutcheon Parts)-----	51	Speakers - P.M. Dynamic (Assemblies and Parts)	69
Cables (Speaker, Drive, Battery)-----	51-52	Switches (Battery - Phono - Line - Band -	
Condensers (Fixed By-Pass)-----	52-53-54	Sensitivity)-----	69-70
Condensers (Filter)-----	54-55	Transformers (Power - Filament)-----	70-71
Condensers (Variable Tuning)-----	55	Transformers (R.F. Coil and R.F. Choke	
Condensers (Variable Padding, etc.)-----	55	Assemblies, etc.)-----	71-72
Chokes (Filter - Audio)-----	55-56	Transformers (Audio - Input - Output - Pickup)	73-74
Clock Parts (Automatic Time Unit)-----	56	I.F. Transformer (Assembly and Replacement	
Dials & Scales (Tuning)-----	56	Coil Data)-----	74-75
Drive Parts (Condenser & Silencer)-----	57	Transformers (Intermediate Frequency)-----	75-76
Indicators (Brackets & Arms)-----	58		
Miscellaneous Parts-----	58-59		

ROGERS INDEX

NUMERICALLY BY MODEL NUMBER

<u>MODEL NO.</u>	<u>CHASSIS TYPE</u>	<u>PAGE</u>	<u>CHASSIS TYPE</u>	<u>MODEL NO.</u>	<u>PAGE</u>
90-----	90	8	5 Romaco-----	5	48-49
200-----	200	9	8 "-----	8	48-49
200A-----	200A	9	90-----	90	8
220-----	220	9	200-----	200	9
250-----	250	10	200A-----	200A	9
260-----	250	10	220-----	220	9
400-----	400	13	250-----	250	10
400C-----	400C	13	250-----	260	10
410-----	400	13	261-----	860	11
420-----	420	13	261-----	880	11
440-----	400	13	261-----	955	11
460-----	400	13	261-----	960	11
480-----	480	16	261-----	965	11
490-----	490	16	261-----	1162	11
520-----		29	M290-----	993	
525-----		29	M310-----	914	Refer to Majestic Manual
530-----		29			
535-----		29	371-----	903	12
540-----	See	29	371-----	904	12
550-----		29	400-----	400	13
560-----	Chassis	29	400-----	410	13
575-----		30	400-----	440	13
580-----		30	400-----	460	13
586-----	833	30	400C-----	400C	13
588-----		30	420-----	420	13
591-----		29	451-----	705	14
592-----		29	462 {460	960	15
593-----		29	{261		
595-----		29	480-----	480	16
599-----		29	490-----	490	16
610-----	641	22	551-----	706	17
615-----	641	22	561-----	805	18
617-----	641	22	561-----	815	18
618-----	641	22	562-----	905	19
619-----	641	22	563A-----	910	20
620-----	641	22	563A-----	915	20
625-----	641	22	563A-----	916	20
630-----	741	25	563E-----	912	20
635-----	741	25	563F-----	911	20
640-----	741	25	581-----	918	21
650-----	741	25	641-----	610	22
660-----	741	25	641-----	615	22
670-----	642	22	641-----	617	22
680-----	742	26	641-----	618	22
705-----	451	14	641-----	619	22
706-----	551	17	641-----	620	22
710-----	646	23	641-----	625	22
715-----	646	23	642-----	670	22
725-----	841	31	646-----	710	23
725A-----	951	33	646-----	715	23
730-----	951	33	661-----	925	24
740-----	841	31	661-----	930	24
740A-----	951	33	741-----	630	25
750-----	841	31	741-----	635	25
755A-----	951	33	741-----	640	25
805-----	561	18			

ROGERS INDEX Cont'd

NUMERICALLY BY MODEL NUMBER

NUMERICALLY BY CHASSIS TYPE

MODEL NO.	CHASSIS TYPE	PAGE	CHASSIS TYPE	MODEL NO.	PAGE
810-----	861	32	741-----	650	25
815-----	561	18	741-----	660	25
840-----	861A	32	742-----	680	26
850-----	861A	32	771-----	935	27
855-----	961	34	772-----	955	27
860-----	862	32	772A-----	965	28
	261	11	831-----	520	29
870-----	1161	35	832-----	525	29
880-----	1162	35	832-----	530	29
	261	11	832-----	535	29
903-----	371	12	832-----	540	29
904-----	371	12	832-----	550	29
905-----	562	19	832-----	560	29
910-----	563	20	832-----	591	29
911-----	563F	20	832-----	592	29
912-----	563E	20	832-----	593	29
914-----	M310	Refer to	832-----	595	29
		Majestic	832-----	599	29
		Manual	833-----	575	30
915-----	563A	20	833-----	580	30
916-----	563A	20	833-----	586	30
918-----	581	21	833-----	588	30
925-----	661	24	841-----	725	31
930-----	661	24	841-----	730	31
935-----	771	27	841-----	740	31
950-----	861A	32	841-----	750	31
955-----	772	27	861-----	810	32
	261	11	861A-----	840	32
960-----	462 460	15	861A-----	850	32
	261	11	861A-----	950	32
965-----	772A	28	862-----	860	32
	261	11	261-----		
993-----	M290	Refer to	951-----	725A	33
		Majestic	951-----	740A	33
		Manual	951-----	755A	33
4421-----	4421	36	961-----	855	34
4422-----	4422	36	1161-----	870	35
4423-----	4423	36	1162-----	880	35
4424-----	4424	36	262-----		
4442-----	4442	37	4421-----	4421	36
4443-----	4443 (5441)	38	4422-----	4422	36
4511-----	4511	39	4423-----	4423	36
4512-----	4512	39	4424-----	4424	36
4513-----	4513	39	4442-----	4442	37
4514-----	4514	39	4443 (R5441)-----	4443	38
4521-----	4521	40	4511-----	4511	39
4541-----	4541	41	4512-----	4512	39
4542-----	4542	41	4513-----	4513	39
4621-----	4621	42	4514-----	4514	39
4622-----	4622	42	4521-----	4521	40
4623-----	4623	42	4541-----	4541	41
4624-----	4624	43	4542-----	4542	41
4751-----	4751	44	4621-----	4621	42
4821-----	4821	45	4622-----	4622	42
4822-----	4822	45	4623-----	4623	42
R5441-----	R5441 (4443)	38	4624-----	4624	43
R5525-----	R5525	46	4751-----	4751	44
R5725-----	R5725	47	4821-----	4821	45
R5726-----	R5726	47	4822-----	4822	45
King-----	R5441	38	R5441 (4443)-----	R5441	38
Romaco-5-----	5	48-49	R5525-----	R5525	46
Romaco-8-----	8	48-49	R5725-----	R5725	47
			R5726-----	R5726	47

TECHNICAL TABLES AND FORMULAE

OHMS LAW

I=Amperes, E=Volts, R=Resistance, W=Watts.

$$I = \frac{E}{R} \quad E = R \times I \quad R = \frac{E}{I} \quad W = I \times E.$$

EXAMPLES

$$5 \text{ amps.} = \frac{10 \text{ volts}}{2 \text{ ohms}} \quad 5 \text{ amps.} \times 2 \text{ ohms.} = 10 \text{ volts.}$$

$$2 \text{ ohms} = \frac{10 \text{ volts}}{5 \text{ amps.}} \quad 50 \text{ watts} = 5 \text{ amps.} \times 10 \text{ volts.}$$

RESISTANCES

In series—4 ohms, 6 ohms, 8 ohms=18 ohms
or $R=R^1+R^2+R^3 = 18 \text{ ohms}$

In Parallel $R = \frac{1}{R^1 + R^2 + R^3}$

$$\text{or } R = \frac{1}{\frac{1}{4} + \frac{1}{6} + \frac{1}{8}} = \frac{1}{\frac{13}{24}} = 1.8 \text{ ohms}$$

CONDENSERS

In Parallel .004 mfd. + .004 mfd. + .004 mfd. = .012 mfd.
 $C=C^1 + C^2 + C^3 = .012 \text{ mfd.}$

In series (equal values)

$$C = \frac{1}{\frac{1}{.004} + \frac{1}{.004} + \frac{1}{.004}} = \frac{1}{\frac{3}{.004}} = .0013 \text{ mfd.}$$

Unequal Values .002 + .003 + .004 = .00092 mfd.

$$C = \frac{1}{\frac{1}{.002} + \frac{1}{.003} + \frac{1}{.004}} = \frac{1}{\frac{.0013}{.0012}} = .00092 \text{ mfd.}$$

WAVE LENGTH CONVERSION

Wavelength = λ Frequency = f Velocity = V

$V = 3,000,000,000$ meters or 186,000 miles per second.

$$f = \frac{V}{\lambda}$$

$$\lambda = \frac{V}{f}$$

$$\text{Thus } 300 \text{ meters} = \frac{3,000,000,000}{300}$$

or 1,000,000 C.P.S.


or 1,000 K.C.

or 1 M.C.


TABLE OF RESISTANCE VALUES
AND RMA STANDARD COLOR CODE

Megohms	Ohms	Base	End	Dot
.0005	500	Green	Black	Brown
.00075	750	Violet	Green	Brown
.001	1,000	Brown	Black	Red
.002	2,000	Red	Black	Red
.003	3,000	Orange	Black	Red
.004	4,000	Yellow	Black	Red
.005	5,000	Green	Black	Red
.006	6,000	Blue	Black	Red
.007	7,000	Violet	Black	Red
.008	8,000	Gray	Black	Red
.009	9,000	White	Black	Red
.01	10,000	Brown	Black	Orange
.012	12,000	Brown	Red	Orange
.015	15,000	Brown	Green	Orange
.02	20,000	Red	Black	Orange
.025	25,000	Red	Green	Orange
.03	30,000	Orange	Black	Orange
.04	40,000	Yellow	Black	Orange
.05	50,000	Green	Black	Orange
.06	60,000	Blue	Black	Orange
.075	75,000	Violet	Green	Orange
.09	90,000	White	Black	Orange
.1	100,000	Brown	Black	Yellow
.15	150,000	Brown	Green	Yellow
.2	200,000	Red	Black	Yellow
.25	250,000	Red	Green	Yellow
.3	300,000	Orange	Black	Yellow
.5	500,000	Green	Black	Yellow
.75	750,000	Violet	Green	Yellow
1.	1,000,000	Brown	Black	Green
1.5	1,500,000	Brown	Green	Green
2.	2,000,000	Red	Black	Green
2.5	2,500,000	Red	Green	Green
3.	3,000,000	Orange	Black	Green
4.	4,000,000	Yellow	Black	Green
5.	5,000,000	Green	Black	Green
6.	6,000,000	Blue	Black	Green
7.	7,000,000	Violet	Black	Green
8.	8,000,000	Gray	Black	Green
9.	9,000,000	White	Black	Green
10.	10,000,000	Brown	Black	Blue


CODE	PT.No.	NAME	CODE	PT.No.	NAME	CODE	PT.No.	NAME
C1-2-3	1487	VAR CONDENSER.	R1	1163	1/10 MEG. GRID LEAK.	R6	1806	POT. 250,000 Ω
C4	1030	1/2 M.F. CONDENSER.	R2	1123	2 " " "	L1	1505	PICK UP COIL.
C5	1641	002 "	R3	2166	RESISTANCE 400 Ω.	L2-3	1506	R.F. COIL.
C6	1643	00025 "	R4	2018	POTENTIOMETER 400Ω	T1-2	1827	AUDIO TRANSFORMER.
C7	1122	00025 "	R5	1644	RHEOSTAT 100000Ω	RT	1135A	DET. ADJ. RES.

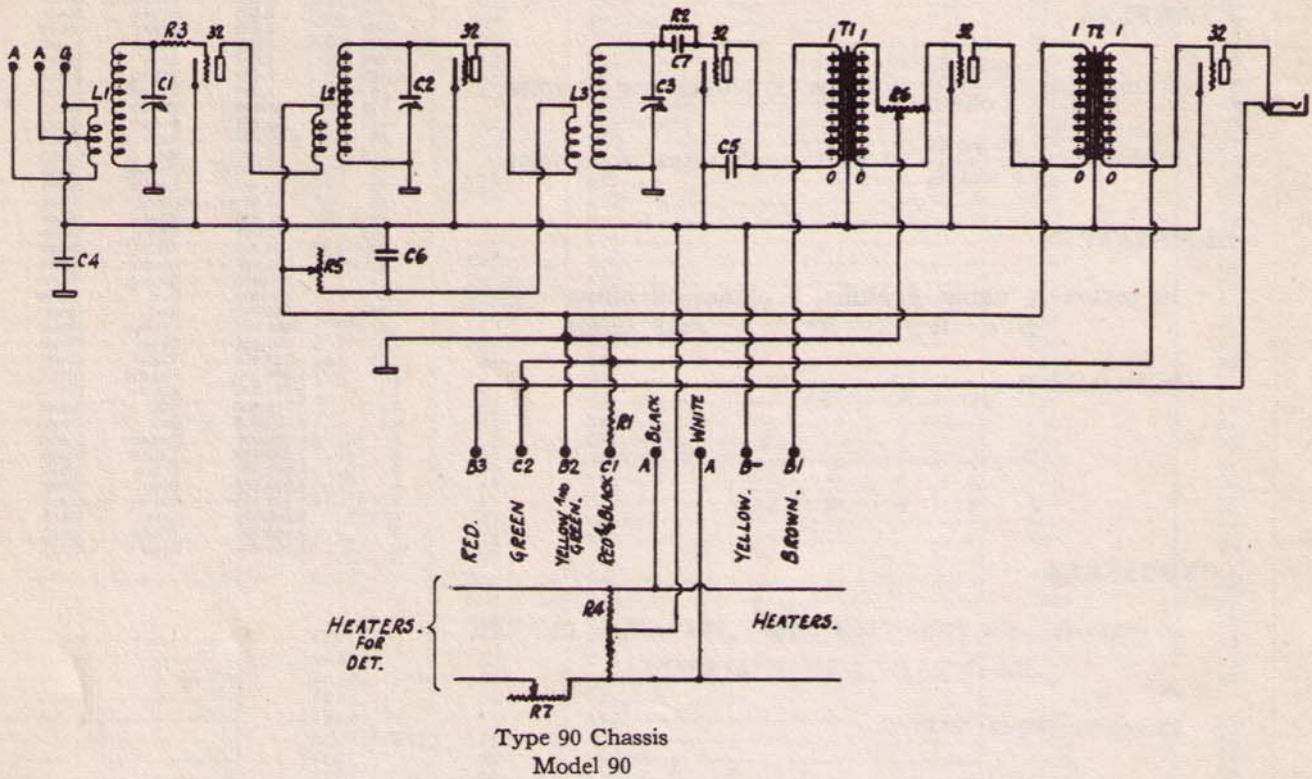

CODE	PT. NO.	NAME	CODE	PT. NO.	NAME	CODE	PT. NO.	NAME
T1	1594	A. and B. Transformer	R1	1340A	Resistance 4400Ω	R5	2018	Potentiometer 400Ω
CH	1586A	Choke	R2	1198B	50,000Ω Lavite	R6	1135A	Det., Adj., Res.
	1374	10 1/2 M.F. Condenser	R3	1336	C. Bias Res. 675Ω.	SW.	1555	Line Switch.
C1	1533	1/10 " "	R4	1580	Line Rheostat.			

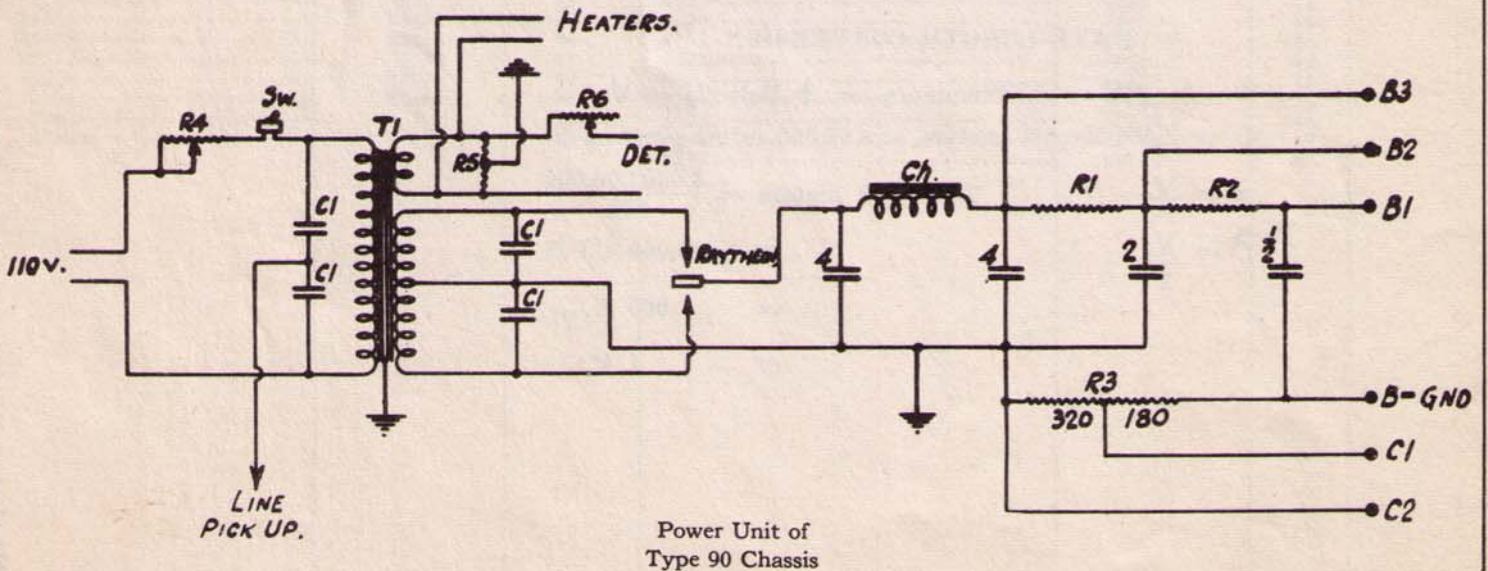


CODE	PT	NAME	CODE	PT	NAME	CODE	PT	NAME
C1-3	1271	VAR. CONDENSER	CB	1122	.00025 CONDENSER.	R4	1295B	POT. 100,000 OHMS
C4	1296	TRIMMER CONDENSER.	R1	1163	$\frac{1}{10}$ MEG. GRID LEAK.	L1	1304	PICK UP COIL
C5	1038	$\frac{1}{2}$ MF. CONDENSER.	R2	1123	2 " " "	L2	1305	R.F. COIL.
C6	1641	.002 "	R3	1295A	RHED. 100000 OHMS.	T1+2	182F	AUDIO TRANSFORMER.
C7	1309	.0005 "						

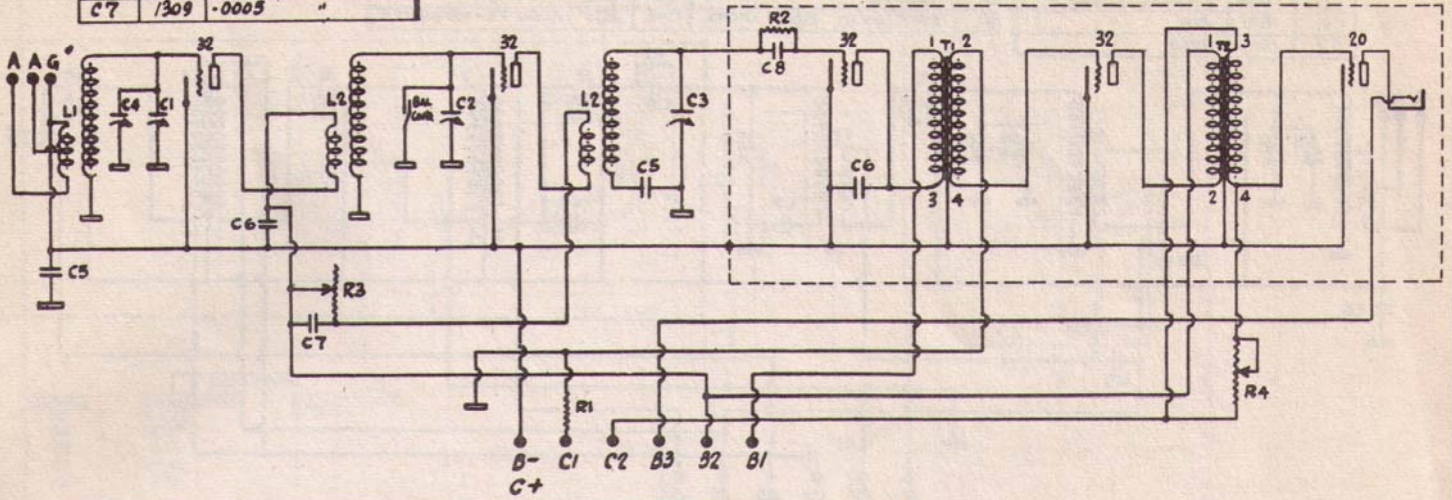


CODE	PT No	NAME	CODE	PT No	NAME
T1	1315A	A ₄ B ₅ TRANSFORMER	R1	1340	RESISTANCE 3000 ω
Ch	1350	DOUBLE CHOKES.	R2	1198B	50,000 ω LAVITE
	1374	10 $\frac{1}{2}$ MF. CONDENSER	R3	1336	C BIAS RES. 500 ω
C1	1038	$\frac{1}{2}$ " "	R4	1376	LINE RHEOSTAT.
				1384	CORD SWITCH.

Model 220 circuit

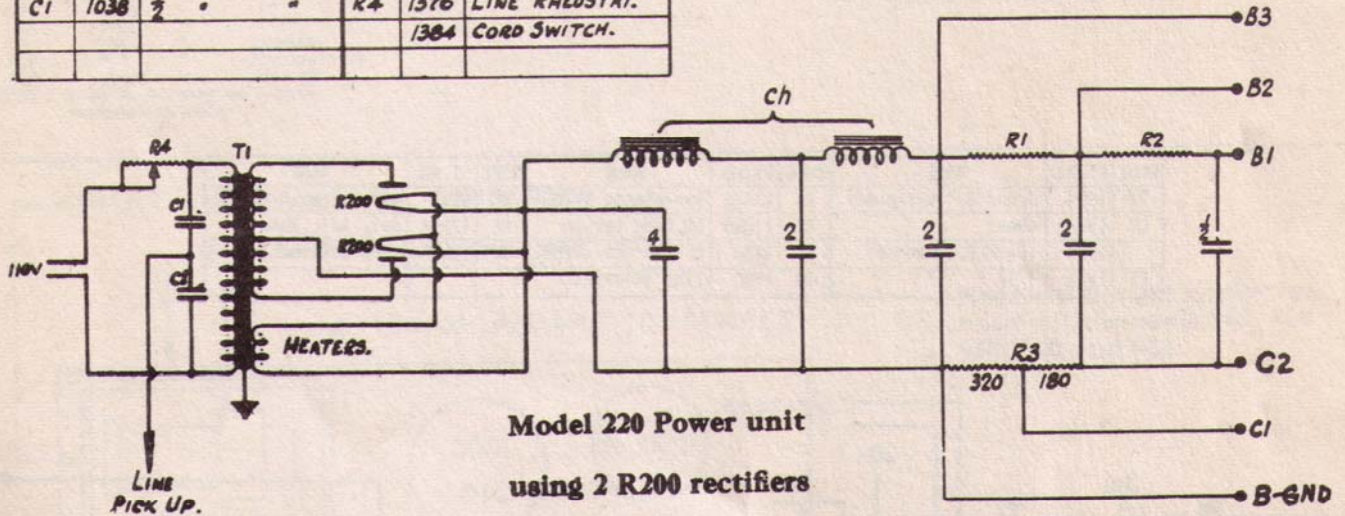


Model 220 Power unit
using 2 R200 rectifiers

NOTE:- IF POWER UNIT IS WIRED TO USE RAYTHEON TUBE, TYPE BH, PLACE TUBE IN THIS SOCKET, THIS SOCKET TO BE VACANT.

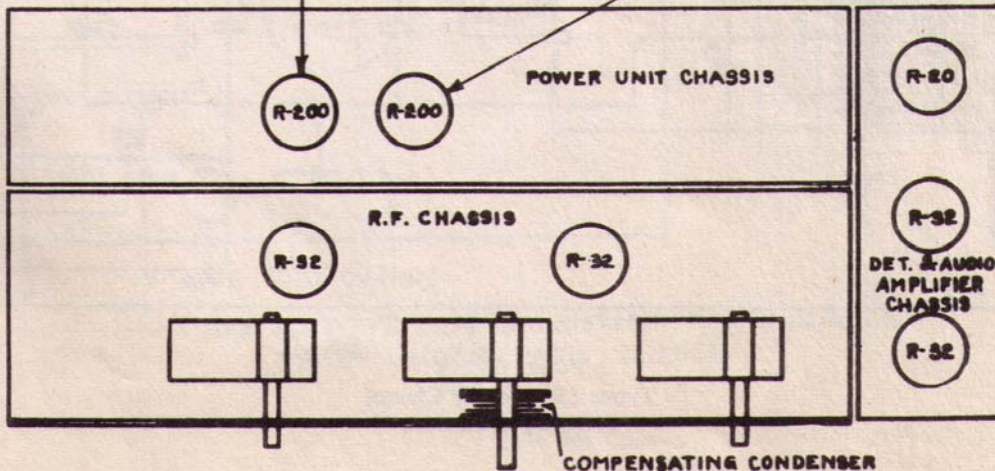


Type 200 Chassis
Models 200, 220



CODE	PT	NAME	CODE	PT	NAME	CODE	PT	NAME
C1-2-3	1271	VAR. CONDENSER	CB	1122	.00025 CONDENSER.	R4	1295B	POT. 100,000 OHMS
C4	1296	TRIMMER CONDENSER.	R1	1163	70 MEG. GRID LEAK.	L1	1304	PICK UP COIL
C5	1030	1/2 MF. CONDENSER.	R2	1123	2 " "	L2	1305	R.F. COIL.
C6	1641	.002 "	R3	1295A	RHEO. 100000 OHMS.	T1-2	182F	AUDIO TRANSFORMER.
C7	1309	.0005 "						

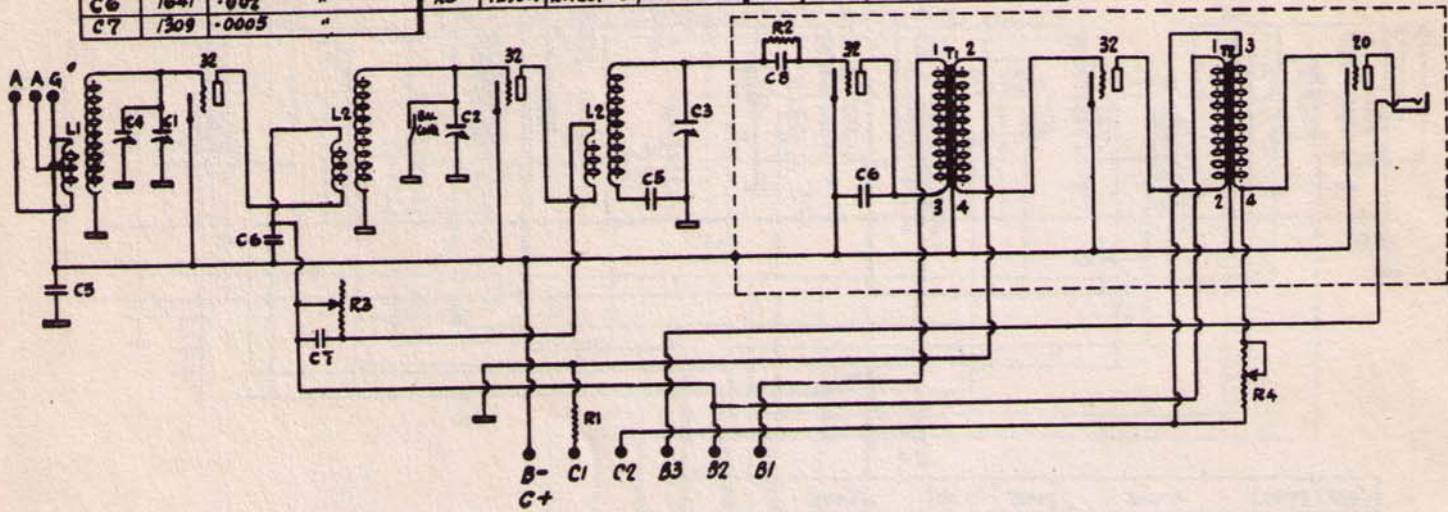

CODE	PT. NO.	NAME	CODE	PT. NO.	NAME	CODE	PT. NO.	NAME
T1	1594	A. and B. Transformer	R1	1340A	Resistance 4400W	R5	2018	Potentiometer 400W
CH	1586A	Choke	R2	1198B	50,000W Lavite	R6	1135A	Det., Adj., Res.
	1374	10 1/2 M. F. Condenser	R3	1336	C. Bias Res. 675W.	SW.	1555	Line Switch.
CI	1533	1/10 " "	R4	1580	Line Rheostat.			

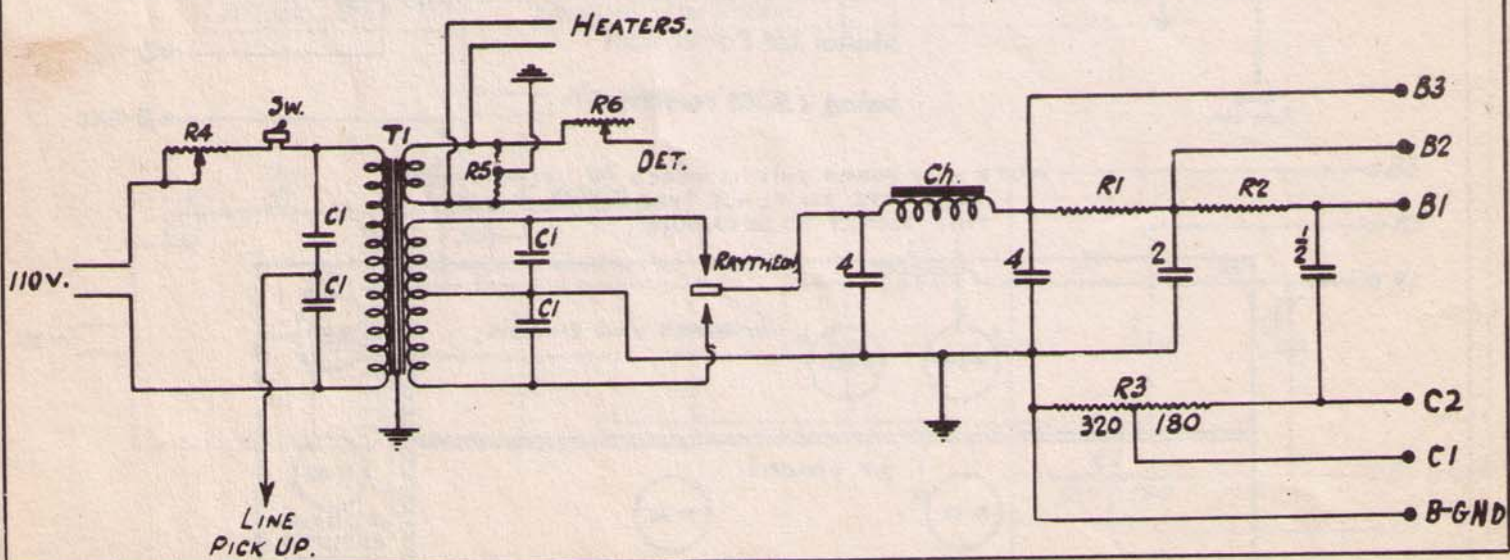


Power unit of
Types 250 and 260 Chassis
Models 250 and 260

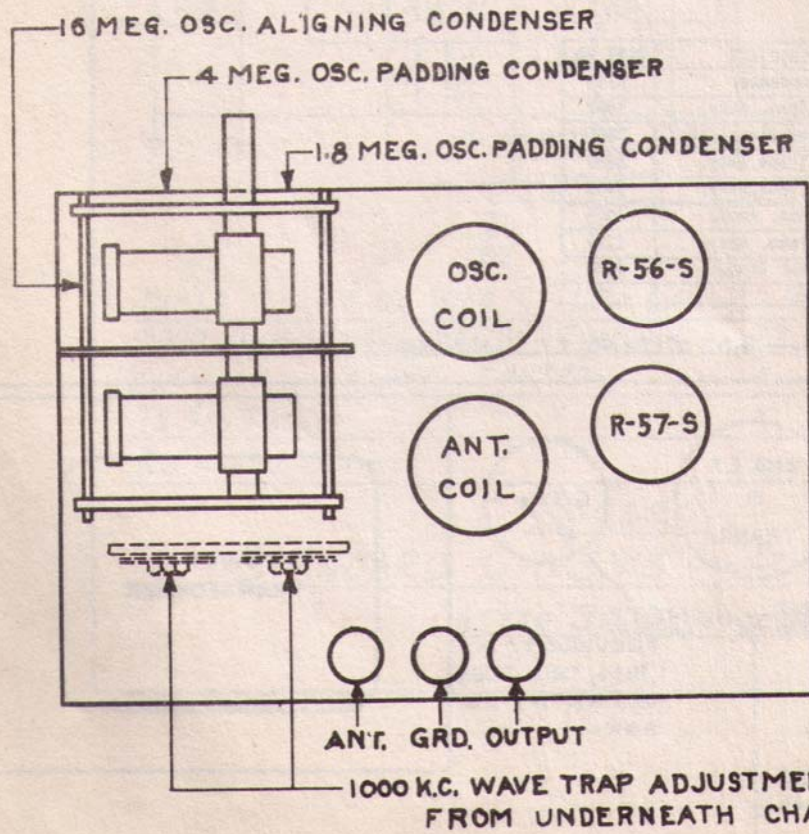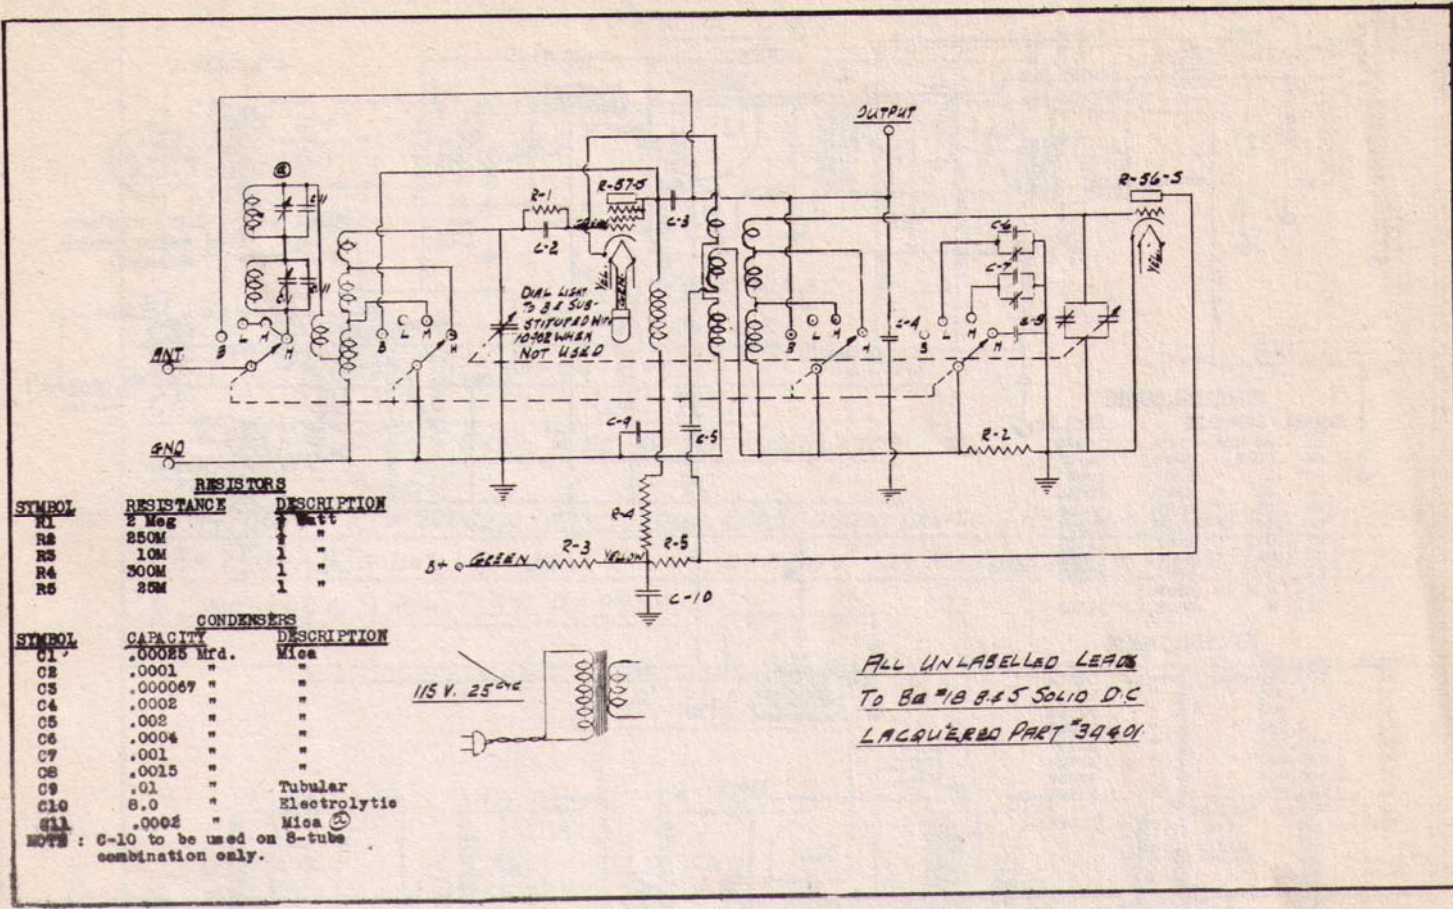


Note, Model 261 converter used with models 860, 880 955. 960 and 965


ITEM	DESCRIPTION	PART NO.
L1	ANTENNA TRANS. ASSY.	3541
L2	OSCILLATOR TRAN. ASSY.	3542
L3	S.W. CHOKE ASSY. 105 TURNS	3543
L4	S.W. CHOKE ASSY. 178 TURNS	3544
L5	R.F. CHOKE ASSY.	3551
C11	2 GANG CONDENSER	3625
T1	FILAMENT TRANS. ASSY.	3526

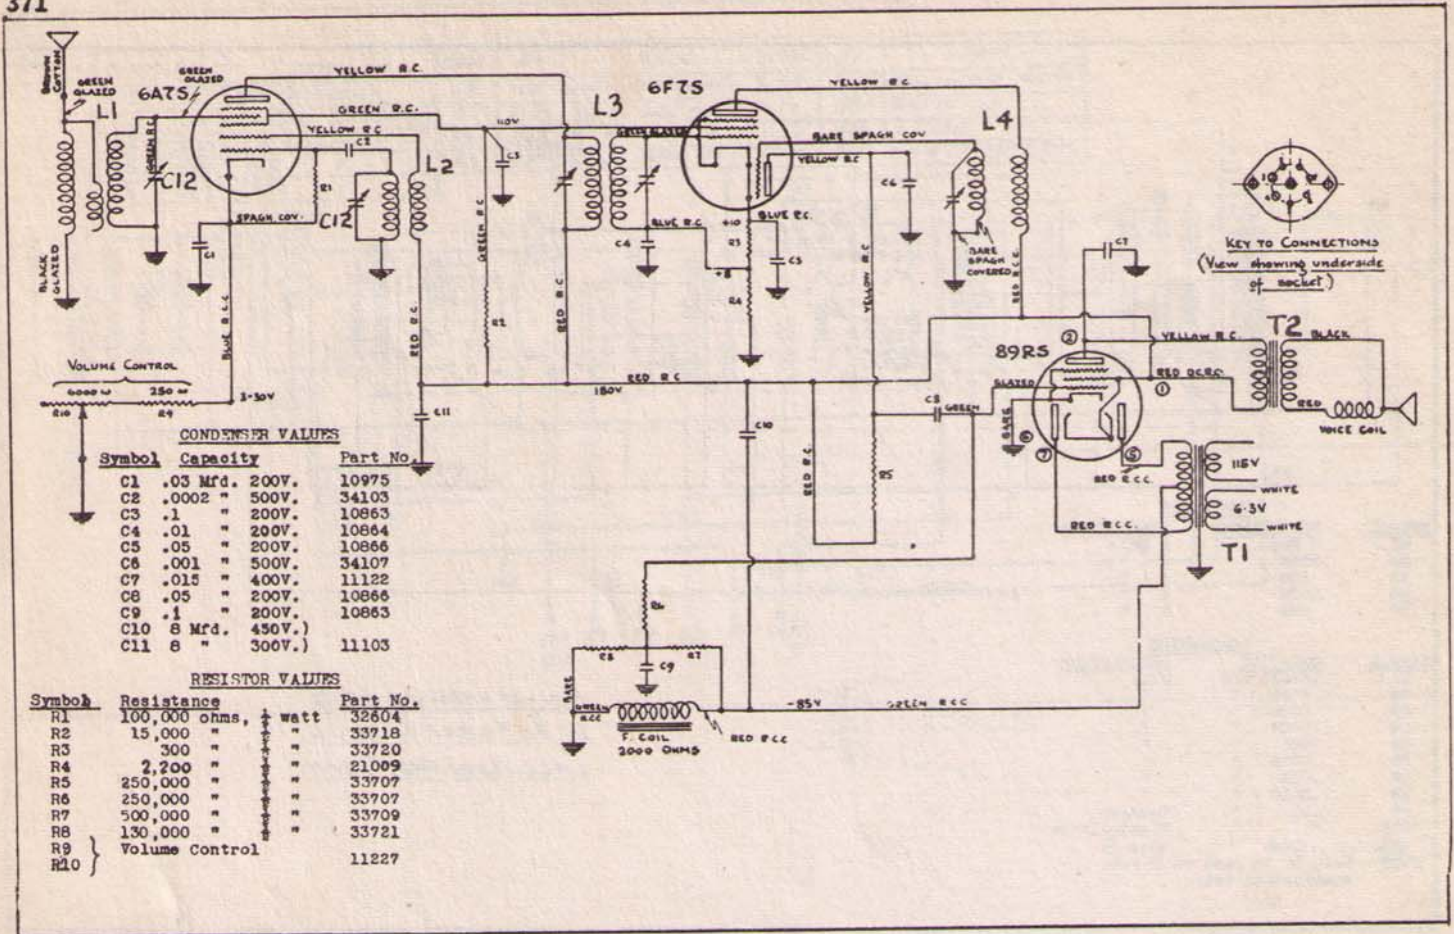

ITEM	DESCRIPTION	PART NO.
C12	2 Gang Condenser	3734
L1	Antenna Tran. Assy.	3867
L2	Oscillator Tran. Assy.	3862
L3	1st. I. F. Trans. Assy.	3857
L4	2nd I. F. Trans. Assy.	3859
T1	Power Trans. Assy.	3855
T2	Output Trans. Assy.	3722
	T-1 Speaker Assy.	3866

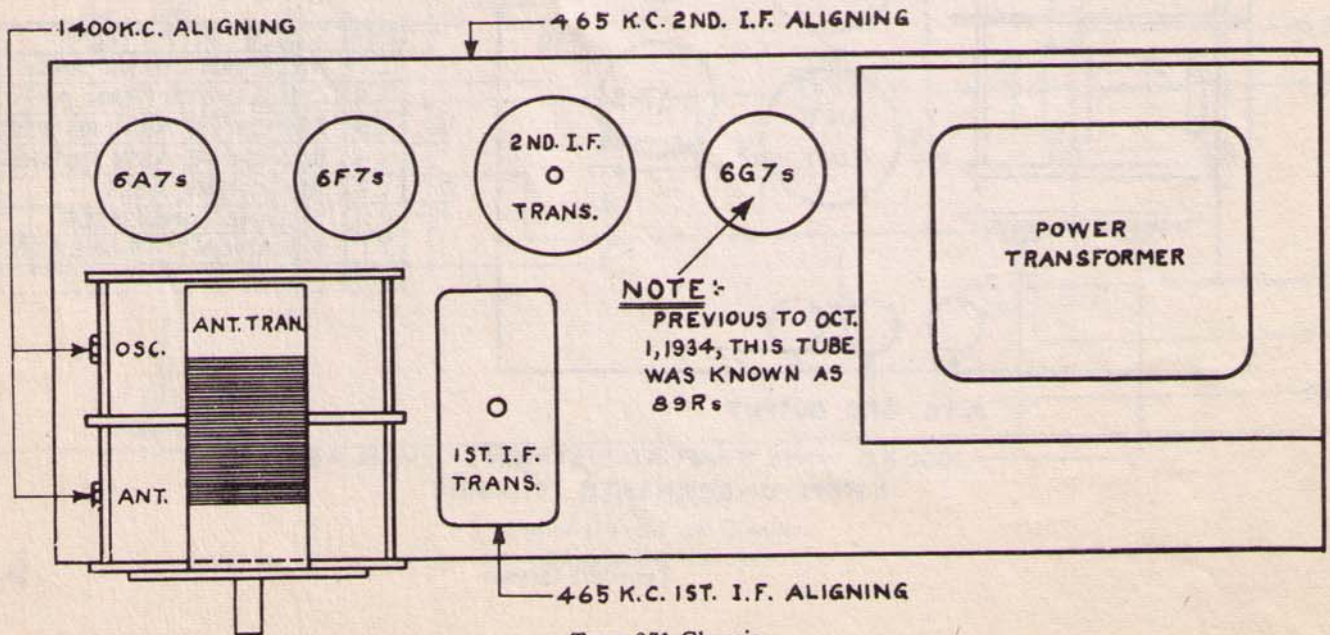

POWER UNIT.

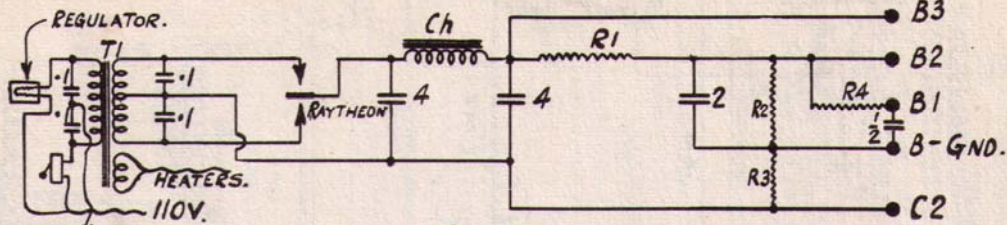

SPECIFICATIONS.

POWER UNIT FOR TYPE 15 POWER TUBE.

T1 :- UNIVERSAL (25 AND 60 CYCLE) PART 2260

Ch PART 2271.


REGULATORS. { 25 CYC. TYPE 6-20 REGULATOR.
60 " " 4H-20 " "

R1 = 7000Ω R2 = 20000Ω R3 = 1390Ω R4 = 50000Ω LAVITE (PYROHM RESISTANCE PT2324.)

B3 = 250V. B2 = 110V. B1 = 30V. C2 = 50V. 10½ M.F. COND. (800V. FLASH TEST) PART 2217.

1/10 COND - 800V. FLASH TEST PT 2285.

R. F. CHASSIS.

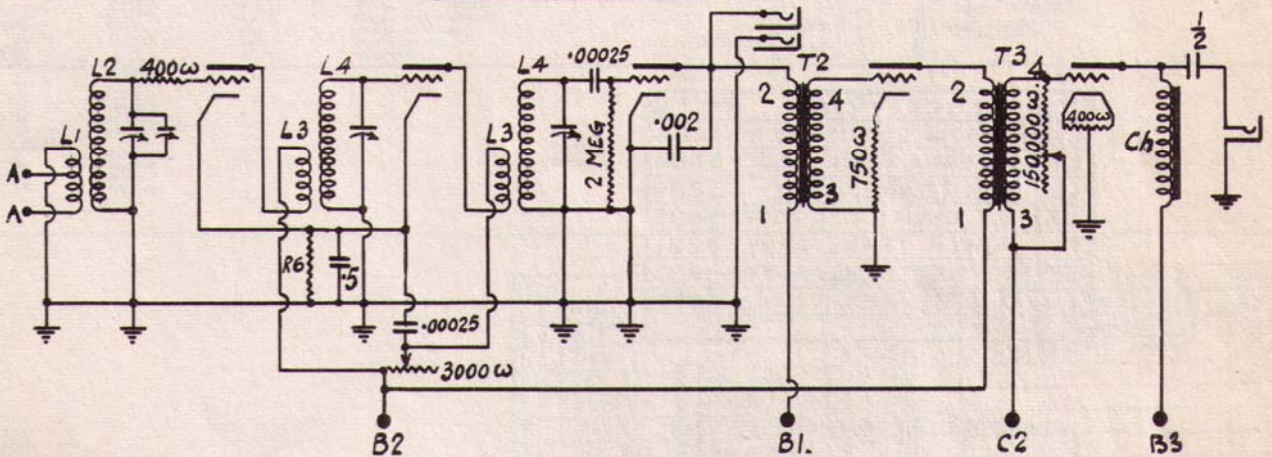

L1-L2 PT No 2034 L3-L4 PT No 2035 Ch PT No 1946

3000 OHM REGENERATION CONTROL PT No 2017

150000 " VOLUME CONTROL " " 2016


T2 AND T3 :- " " 182F.

R6 = 400 OHMS :- " " 2166.


ROGER'S
STANDARD CHASSIS AND POWER UNIT.

(AFTER SERIAL NO'S. [REDACTED])


L. B. Nov 14/28.
[Signature]

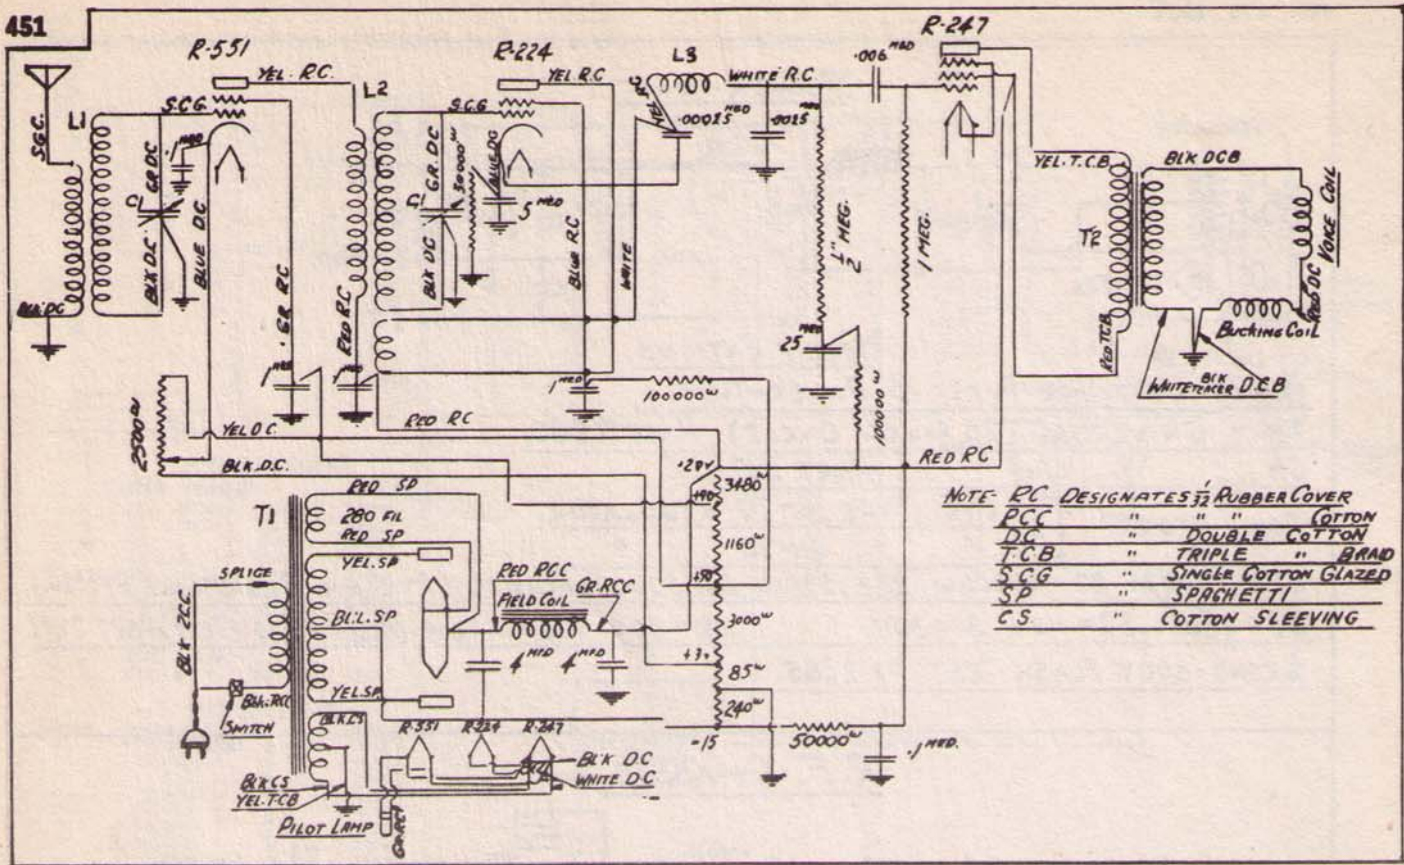

ITEM	DESCRIPTION	PART NO
C1	2 GANG CONDENSER	3284
L1	ANTENNA TRANS. ASSY.	3286
L2	R.F. TRANS. ASSY.	3285
L3	R.F. CHOKE COIL ASSY.	3035
T1	POWER TRANS. ASSY.	3281
T2	OUTPUT TRANS. ASSY.	3283
	D-15 SPEAKER ASSY.	3312

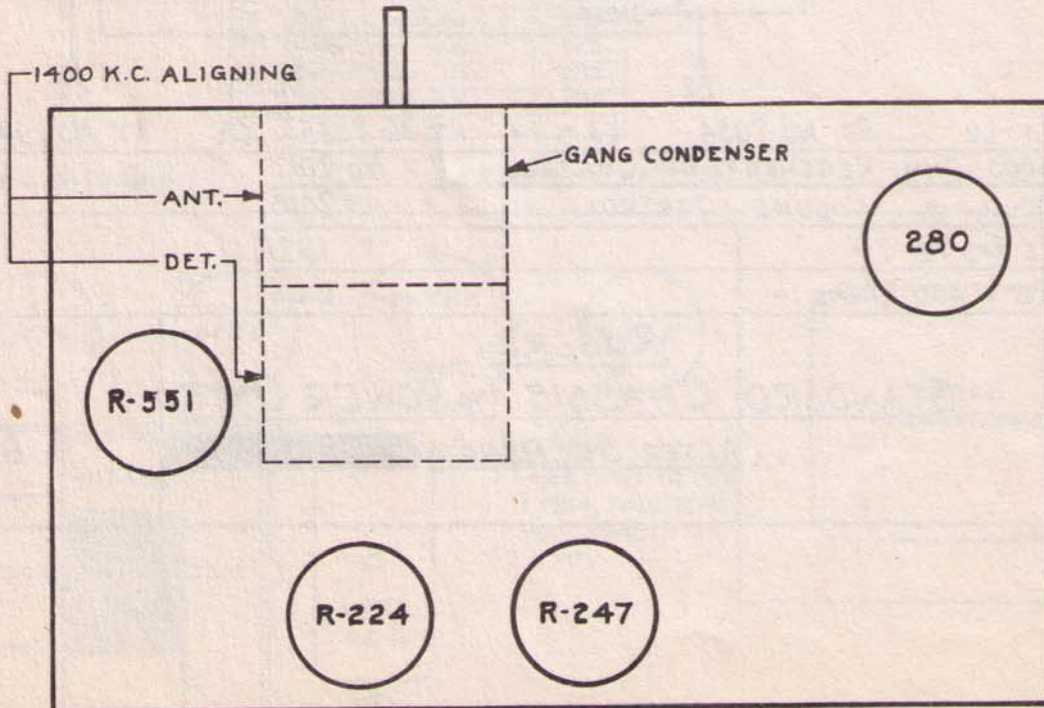


Top View of Chassis
 Type 451 Chassis
 Model 705

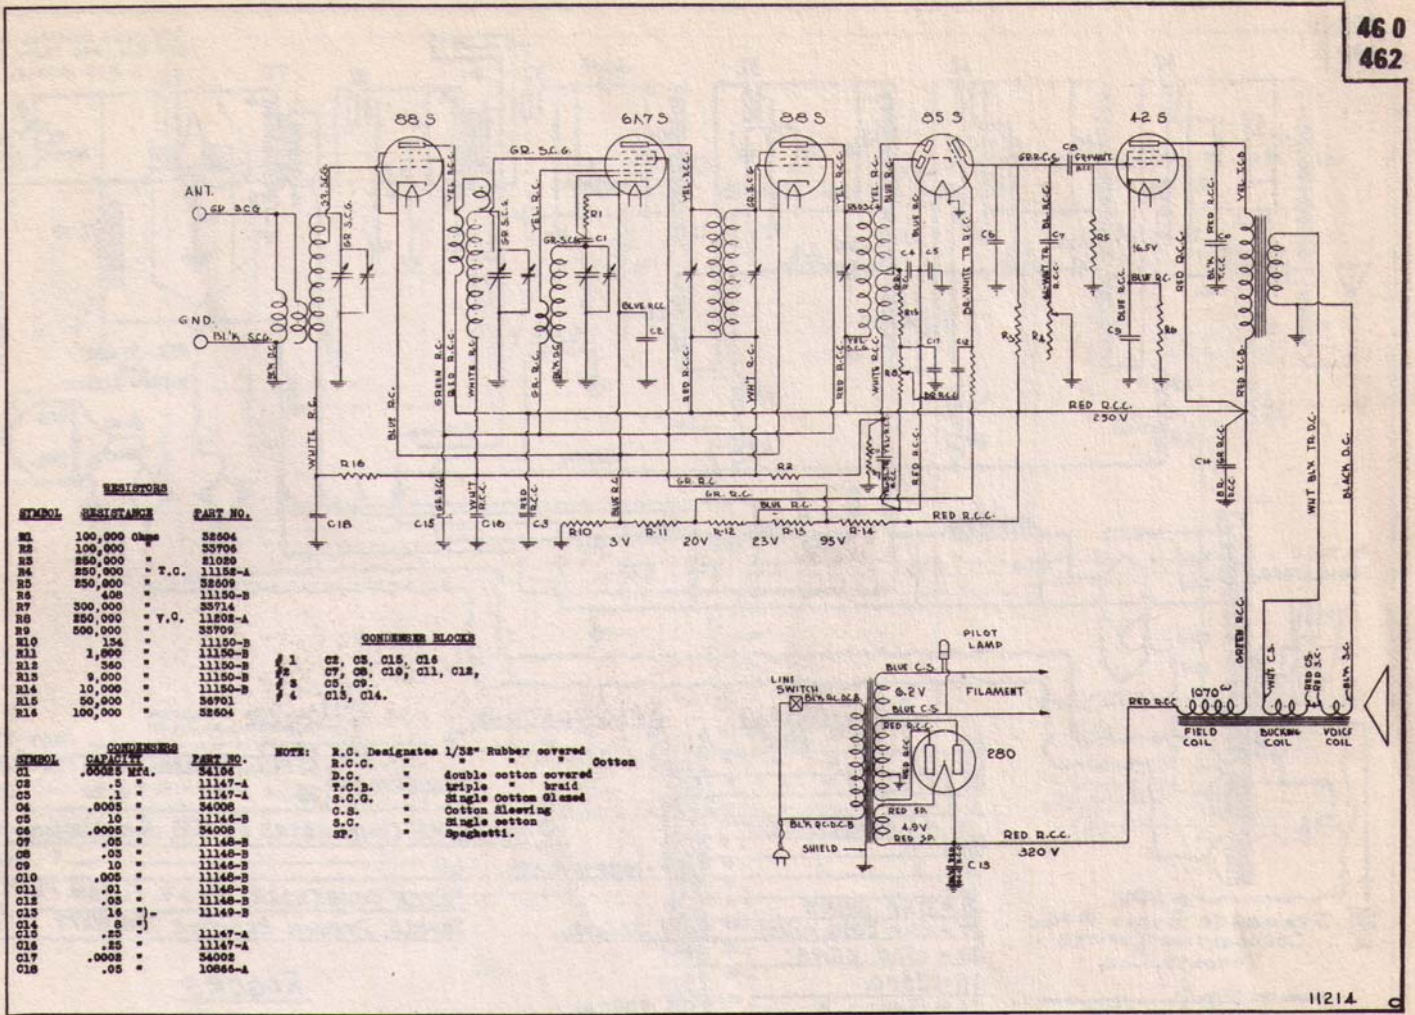


11214

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
L1	ANTENNA COIL ASSY.	3787	C1	3 GANG CONDENSER	3981
L2	R.F. COIL ASSY.	3788	C2	2ND. I.F. ALIGNING COND.	10995
L3	OSC. COIL ASSY.	3789		D-15 SPEAKER ASSY.	3799
L4	1ST. I.F. TRANS. ASSY.	3809			
L5	2ND. I.F. TRANS. COIL ASSY.	3810			
T1	POWER TRANS. ASSY.	3795			
T2	OUTPUT TRANS. ASSY.	3797			

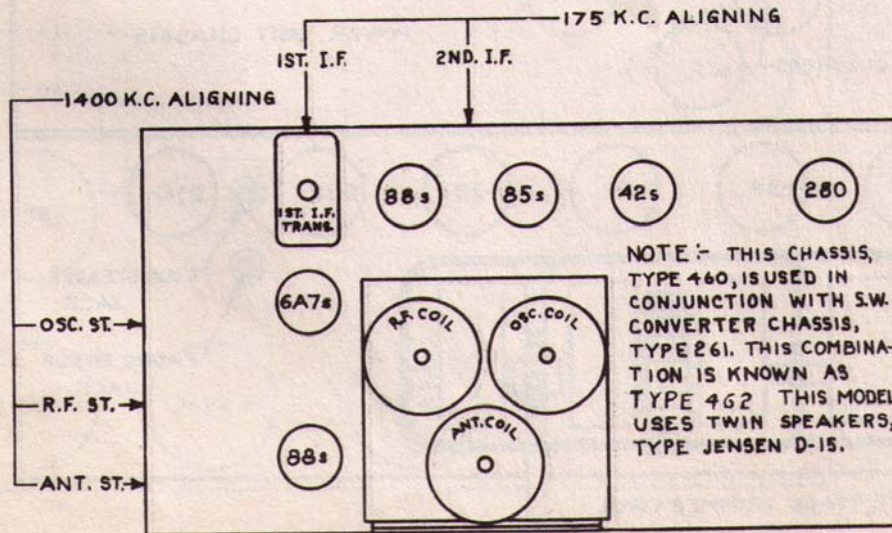


NOTE: THIS CHASSIS, TYPE 460, IS USED IN CONJUNCTION WITH S.W. CONVERTER CHASSIS, TYPE 261. THIS COMBINATION IS KNOWN AS TYPE 462 THIS MODEL USES TWIN SPEAKERS, TYPE JENSEN D-15.



Type 460 Chassis
Model 960

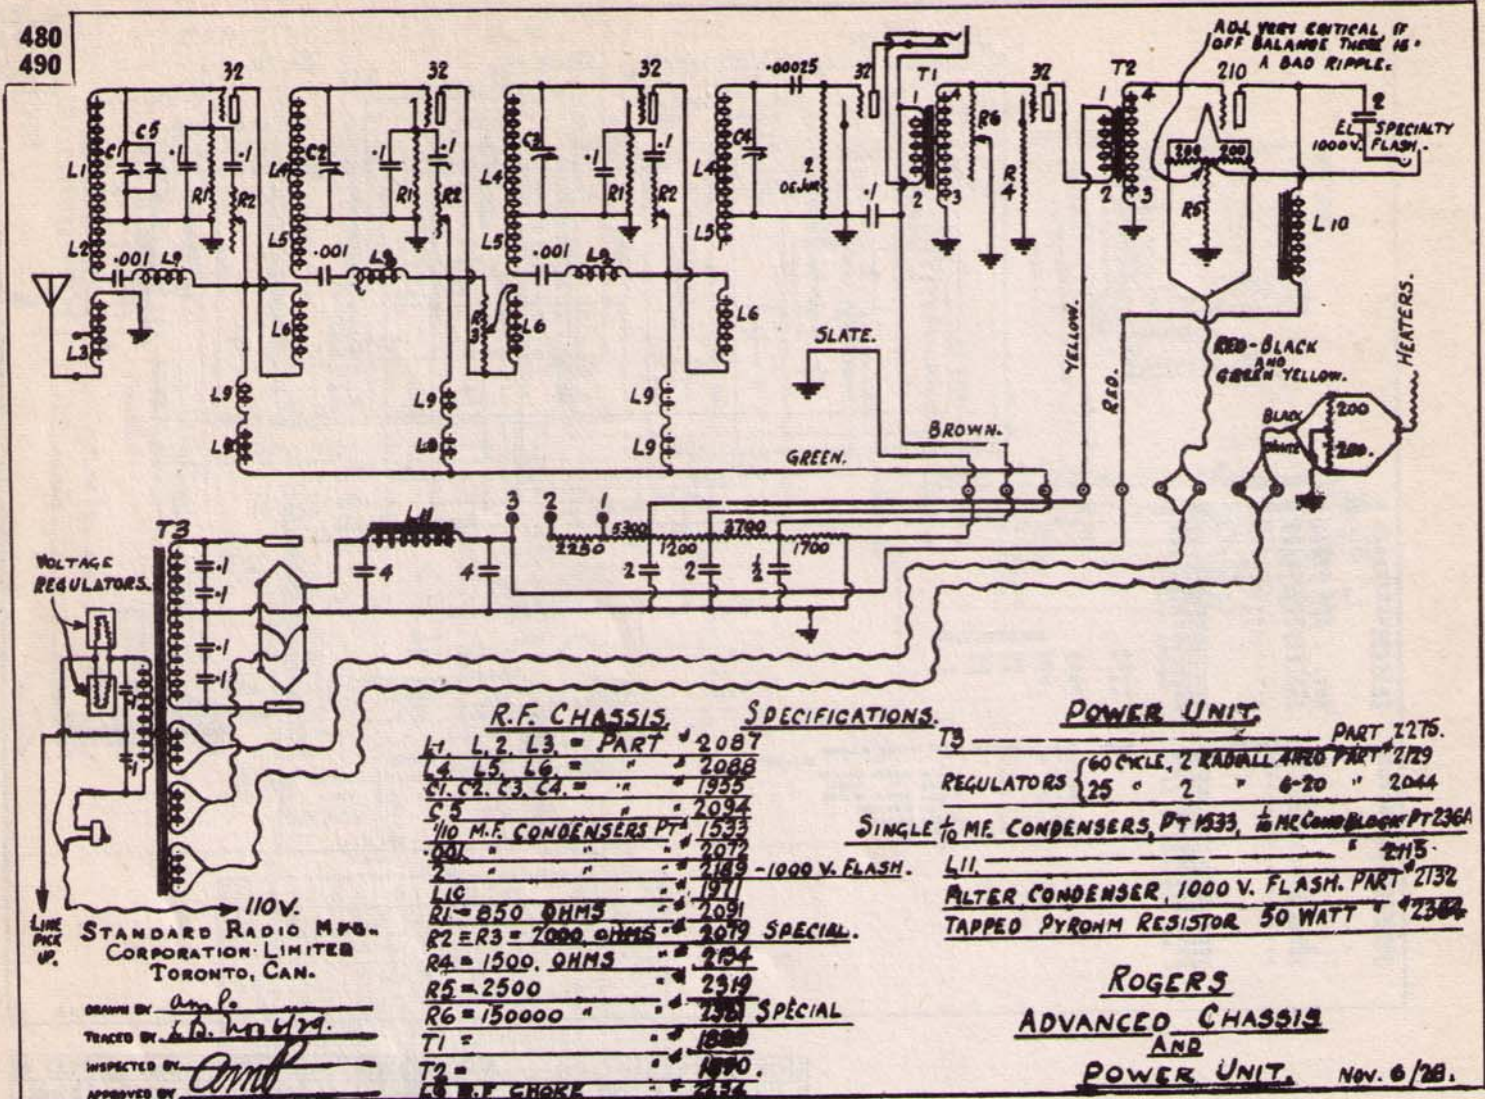

Models 480 and 490

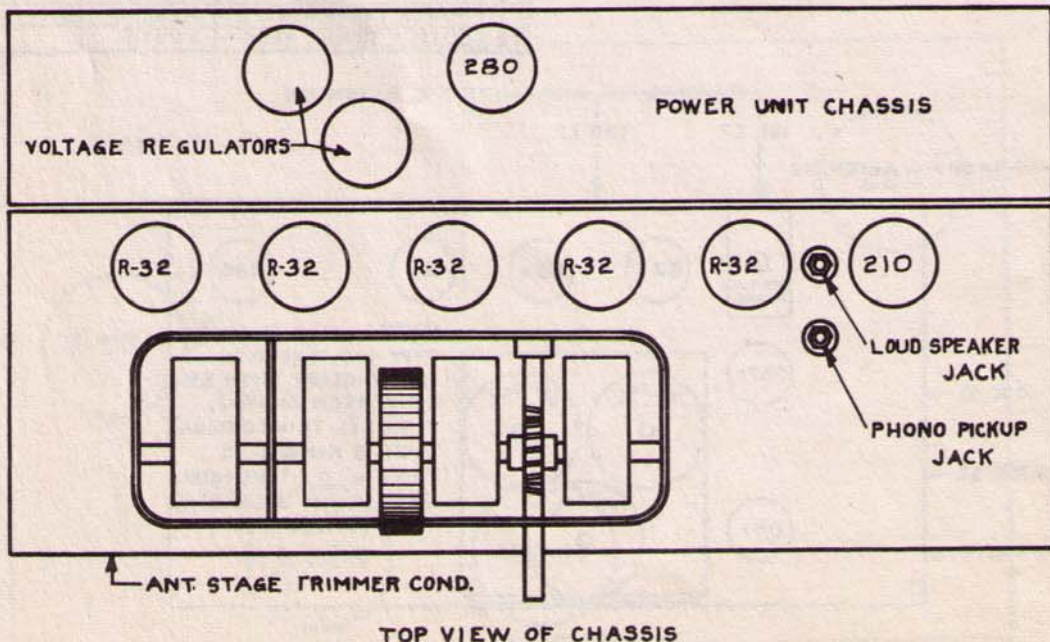


ROGERS ADVANCED CHASSIS & POWER UNIT

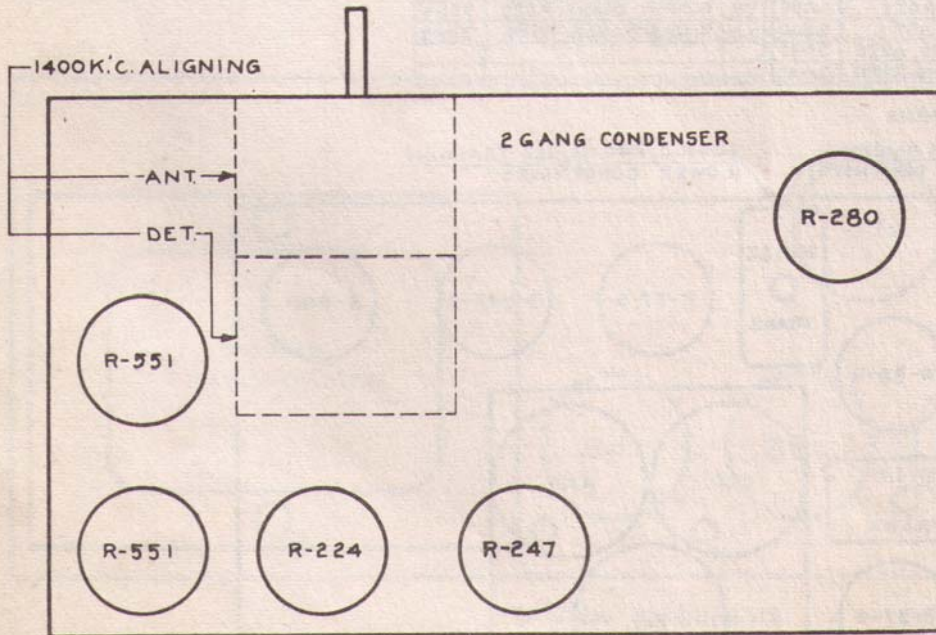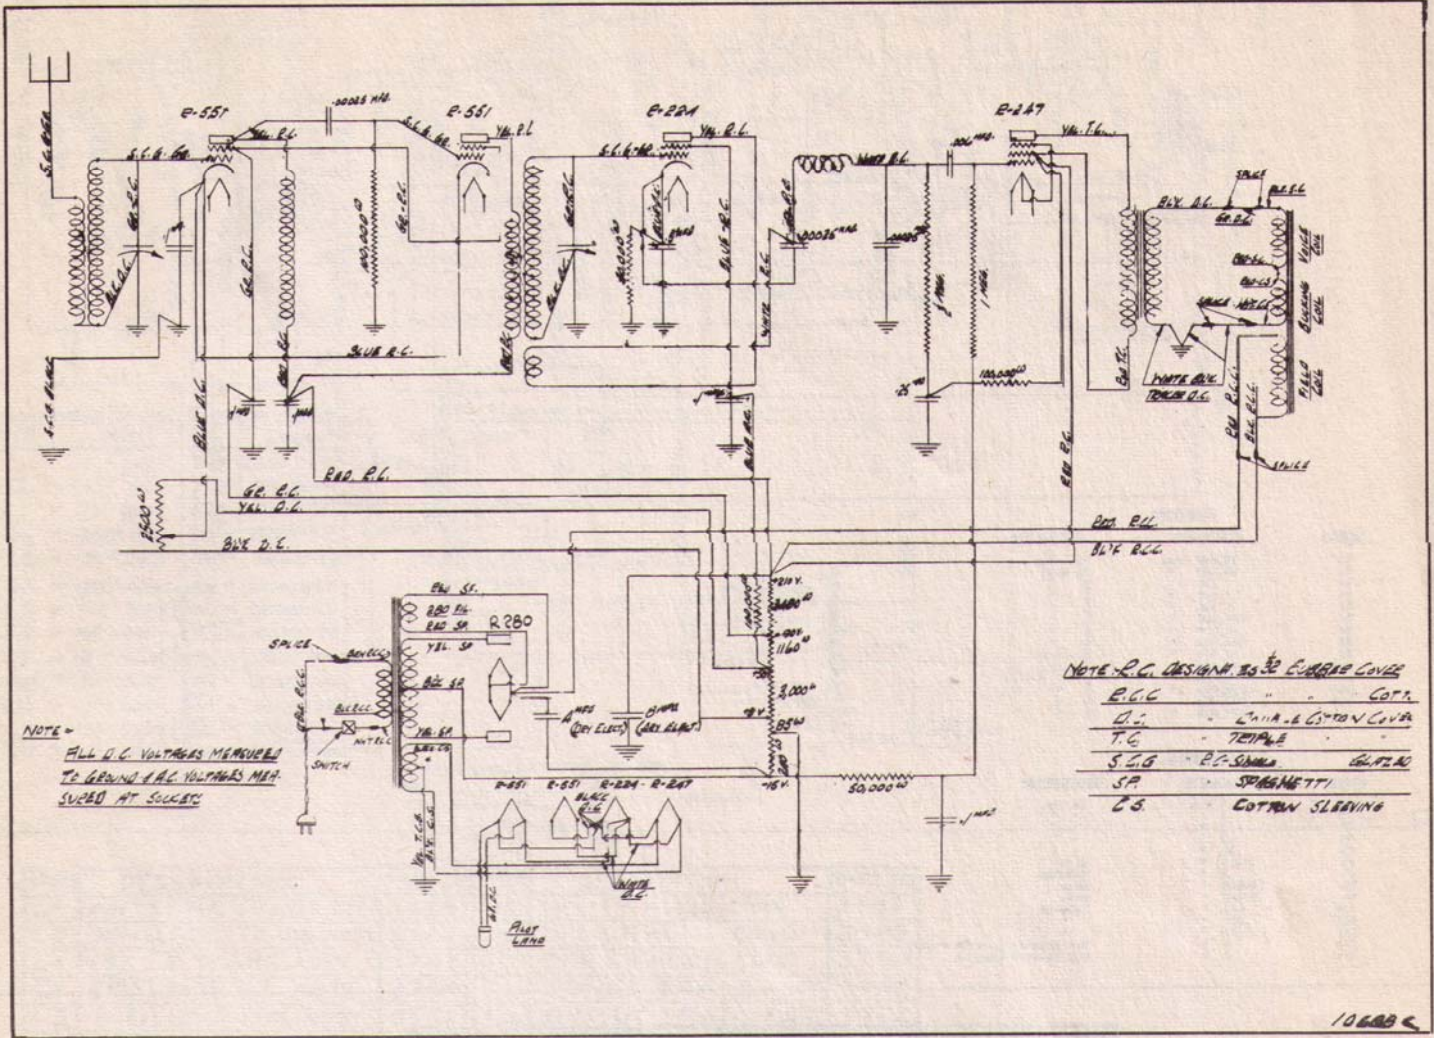


ITEM	DESCRIPTION	PART NO.
C1	2 GANG CONDENSER	3284
L1	ANTENNA TRANS. ASSY.	3399
L2	R.F. TRANS. ASSY.	3285
L3	R.F. CHOKE COIL ASSY.	3035
L4	BROAD BAND CHOKE ASSY.	3392
T1	POWER TRANS. ASSY.	3281
T2	OUTPUT TRANS. ASSY.	3283
	D-15 SPEAKER ASSY.	33.2


Type 551 Chassis
Model 706

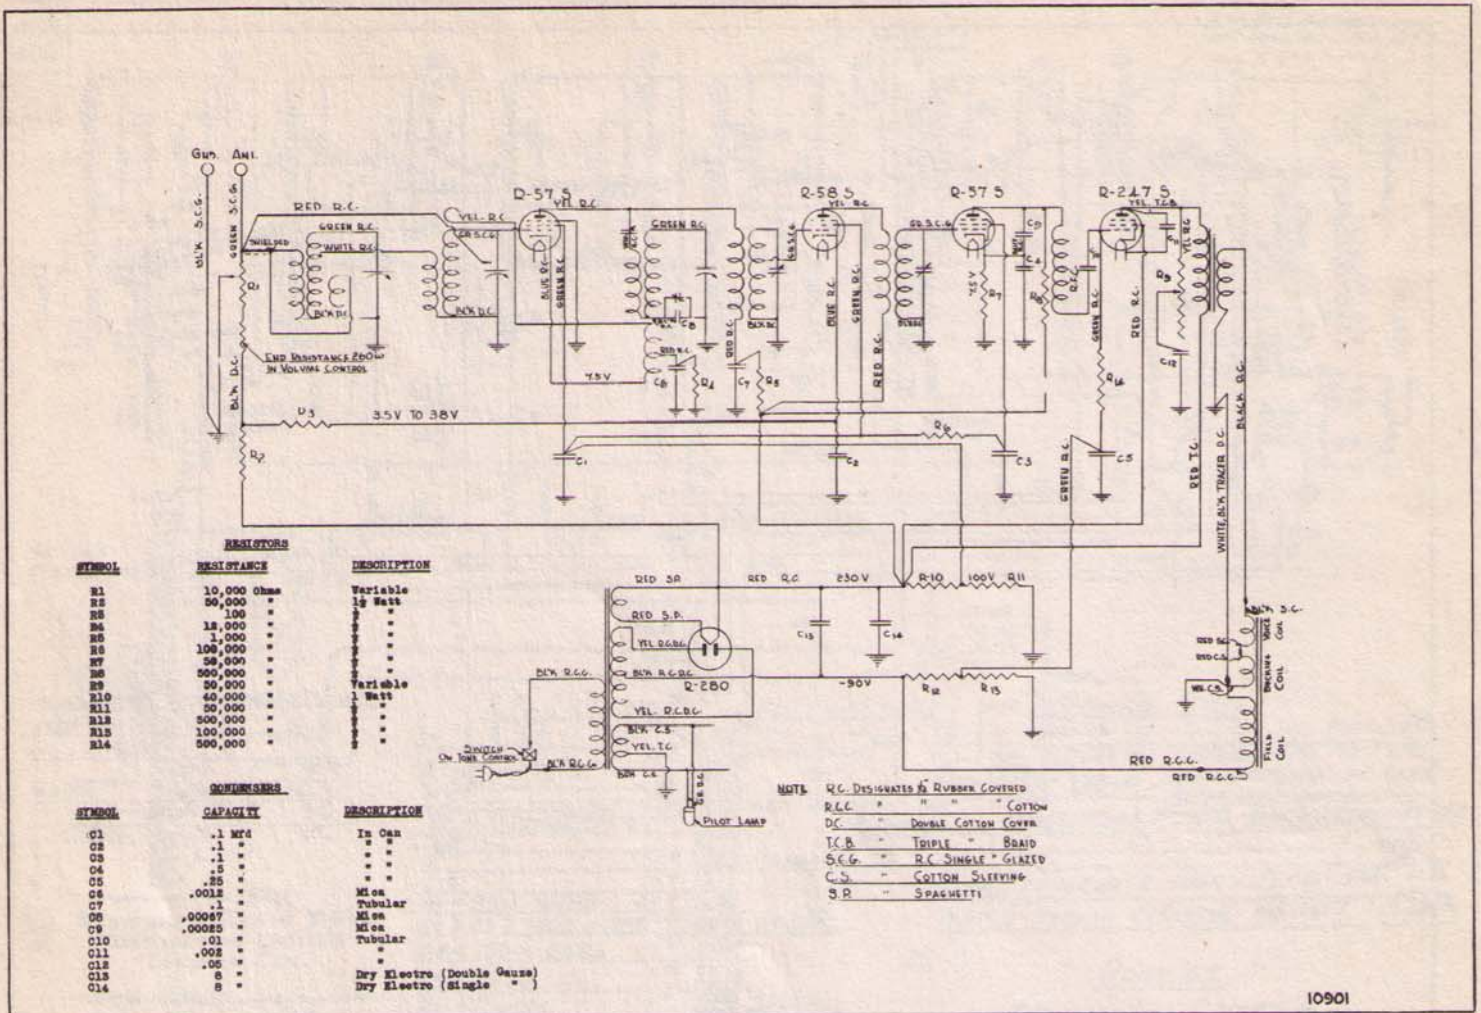


10901

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
C15	3 GANG CONDENSER	3482	L6	R.F. CHOKE COIL ASSY.	3551
L1	ANTENNA TRANS. ASSY.	3498	T1	POWER TRANS. ASSY.	3466
L2	R.F. TRANS. ASSY.	3499	T2	OUTPUT TRANS. ASSY.	3203
L3	OSC. TRANS. ASSY.	3500		D-15 SPEAKER ASSY.	3549
L4	1ST. I.F. TRANS. ASSY.	3491			
L5	2ND. I.F. TRANS. ASSY.	3492			

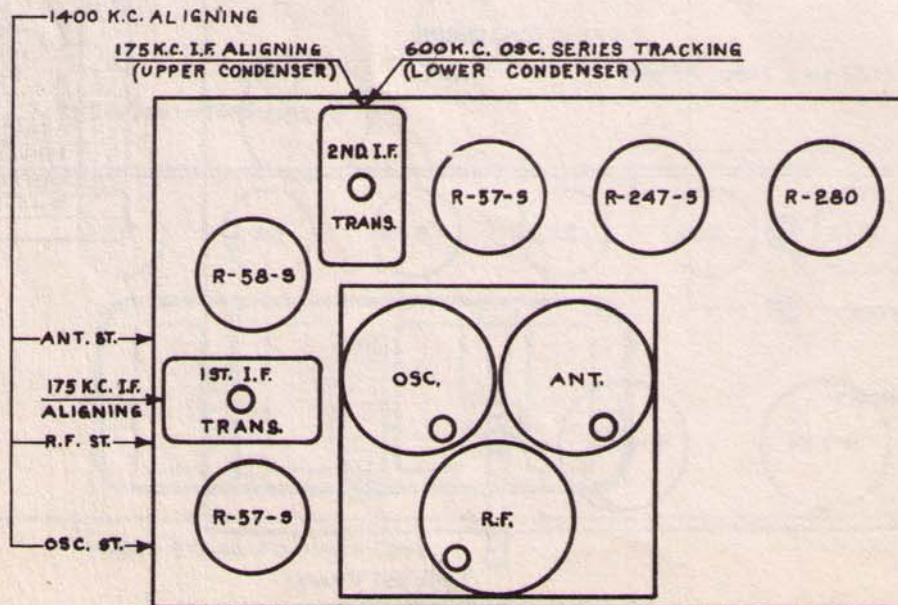

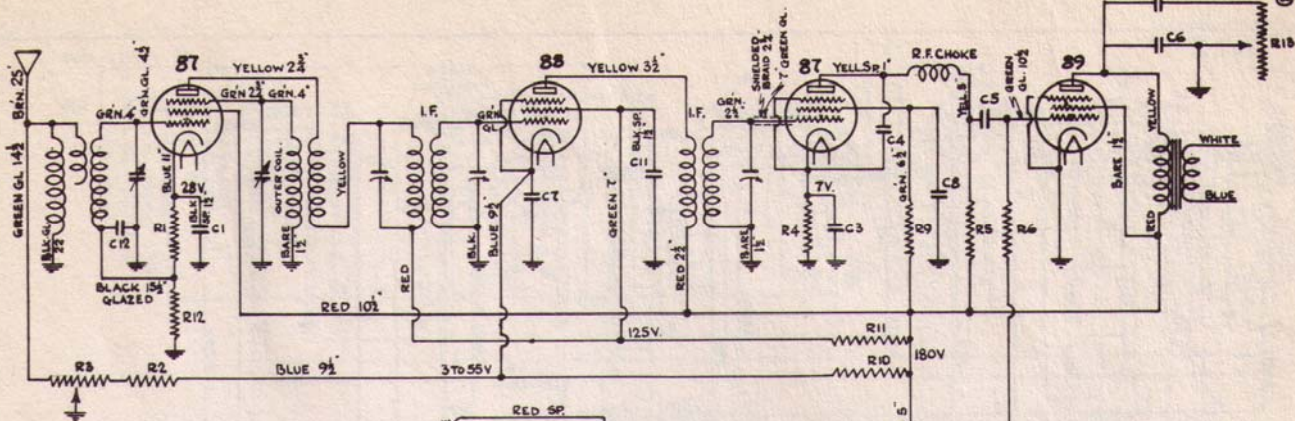


CONDENSER VALUES		RESISTOR VALUES	
NR	MFD	NR	OHMS.
C1	.1 - 200V.	R1	600 - 1/2 W.
C2	.1 - 200V.	R2	250 VOLUME CONTROL
C3	.25 - 200V	R3	11000
C4	.0005 MICA	R4	30,000 - 1/2 W
C5	.03 - 200V	R5	200,000 - 1/2 W
C6	.005 - 400V	R6	300,000 - 1/2 W
C7	.1 - 200V	R7	130,000 - 1/2 W
C8	.03 - 200V	R8	500,000 - 1/2 W
C9	8 - 450V	R9	1MEG. - 1/2 W.
C10	8 - 300V	R10	30,000 - 1W.
C11	.1 - 200V	R11	10,000 - 1/2 W.
C12	.03 - 200V	R12	5000 - 1/2 W.
C13	.05 - 400V	R15	50000 TONE CONTROL

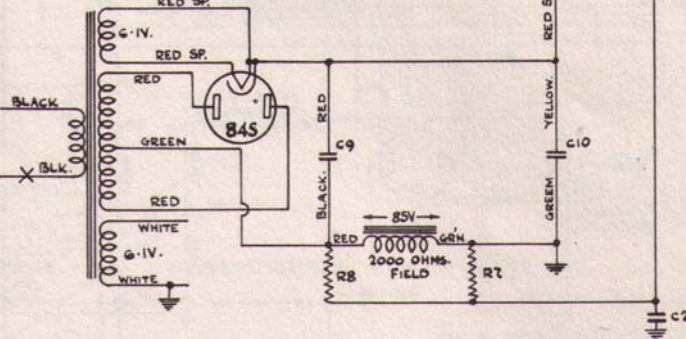

11113 c


ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
L1	ANTENNA TRANS. ASSY.	3728	C15	1ST. I.F. ALIGN. COND.	3488
L2	OSCILLATOR TRANS. ASSY.	3727	C16	1ST. I.F. ALIGN. COND.	3488
L3	1ST. I.F. TRANS. ASSY.	3745	C17	2ND. I.F. ALIGN. COND.	3730
L4	2ND. I.F. TRANS. ASSY.	3744	T1	POWER TRANS. ASSY.	3732
L5	R.F. CHOKE COIL ASSY.	3551	T2	OUTPUT TRANS. ASSY.	3722
C14	2 GANG CONDENSER	3734		T-1 SPEAKER ASSY.	3739

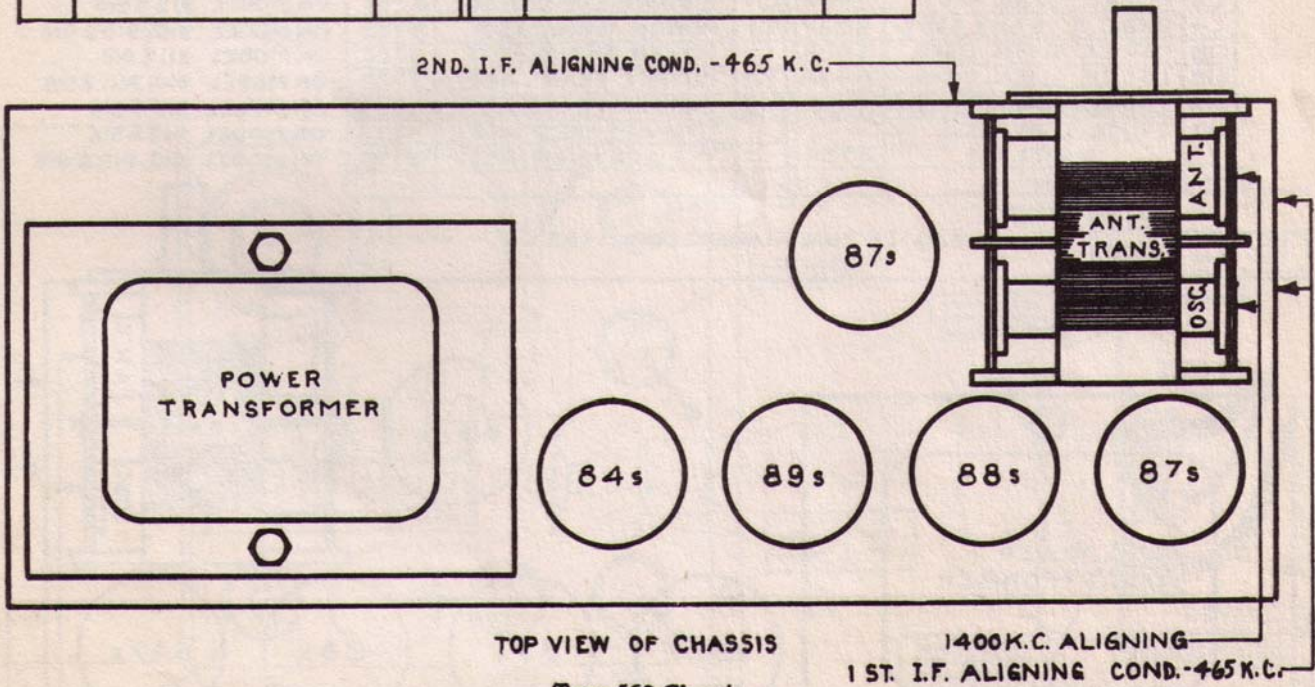

TOP VIEW OF CHASSIS

Type 562 Chassis
Model 905


1400 K.C. ALIGNING
1ST. I.F. ALIGNING COND. -465 K.C.


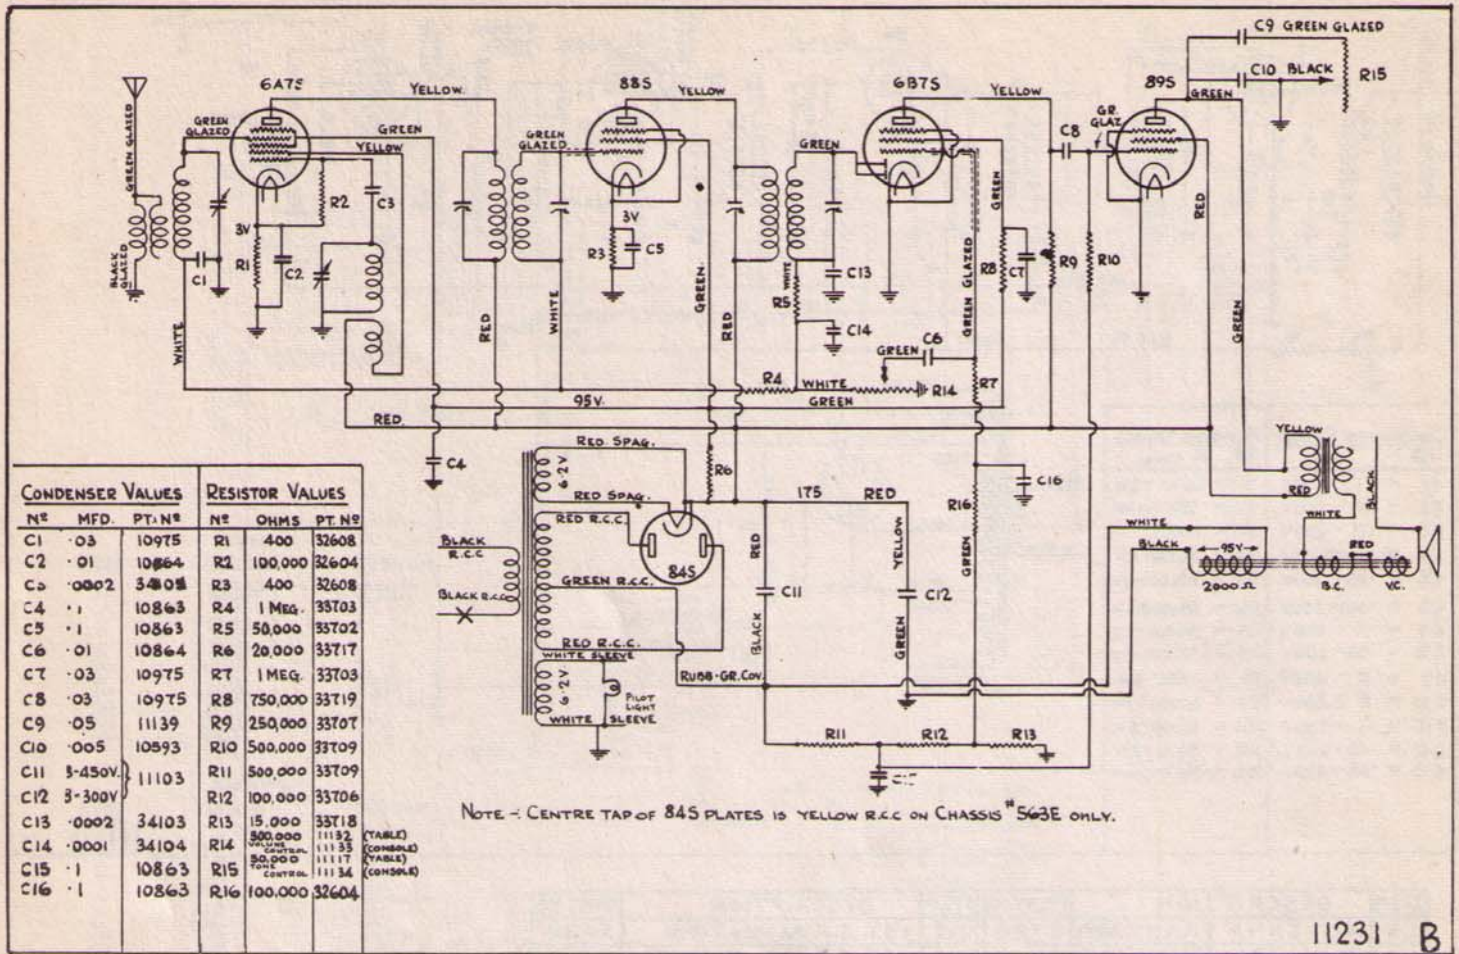


11231 B

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
L1	ANTENNA TRANS. ASSY.	3771	C17	2 GANG CONDENSER	3912
L2	OSCILLATOR TRANS. ASSY.	3772	C17	2 GANG CONDENSER	3887
L3	1ST. I.F. TRANS. ASSY.	3766	C17	2 GANG CONDENSER	3761
L4	2ND. I.F. TRANS. ASSY.	3767	T1	POWER TRANS. ASSY.	3732
C18	1ST. I.F. ALIGN. COND.	3488	T1	POWER TRANS. ASSY.	3882
C19	1ST. I.F. ALIGN. COND.	3488	T2	OUTPUT TRANS. ASSY.	3722
C20	2ND. I.F. DUAL ALIGN. COND.	11126	T2	OUTPUT TRANS. ASSY.	3763
C17	2 GANG CONDENSER - ON MODEL 910	3734		D-15 SPEAKER ASSY.	3776
				T-1 SPEAKER ASSY.	3739

ON MODEL 911
 ON MODEL 912
 ON MODEL 915 & 916
 ON MODEL 910, 915 & 916
 ON MODEL 911 & 912
 ON MODEL 910, 911, & 912
 ON MODEL 915 & 916
 ON MODEL 915 & 916
 ON MODEL 910, 911, & 912

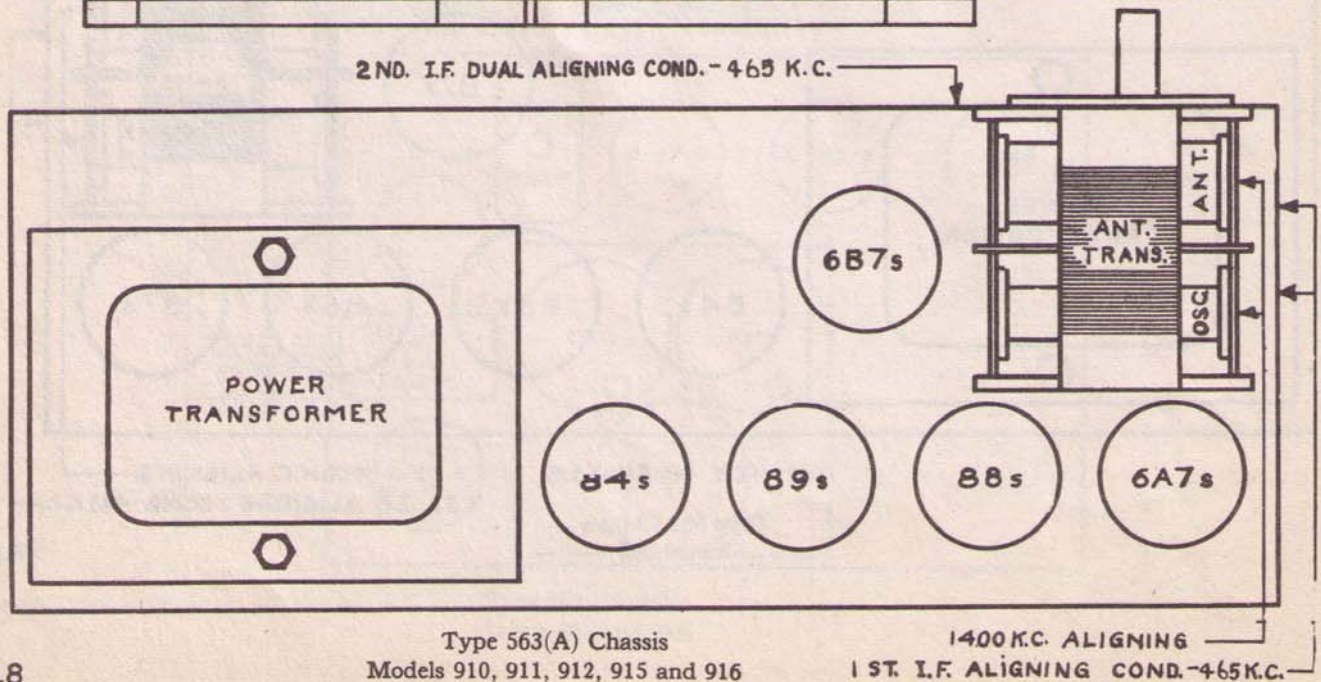

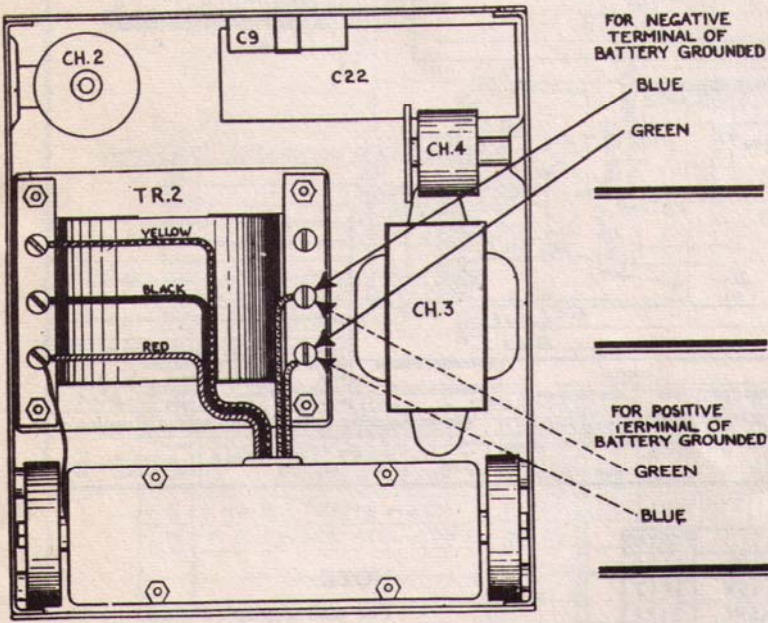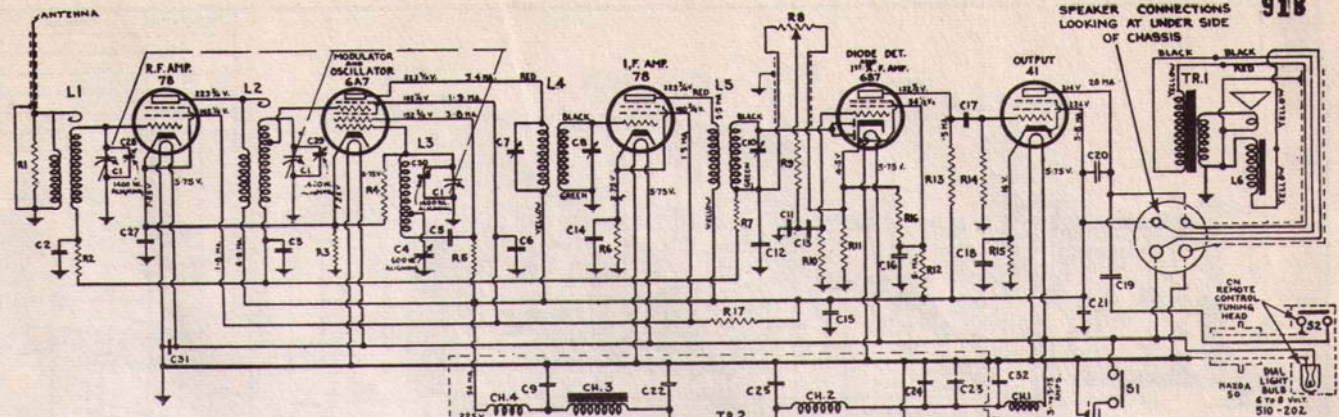

End View of Synchronode Unit
Figure 1

NOTE—All tubes are genuine Rogers shielded tubes and should be replaced with Rogers tubes when necessary.

Model 918

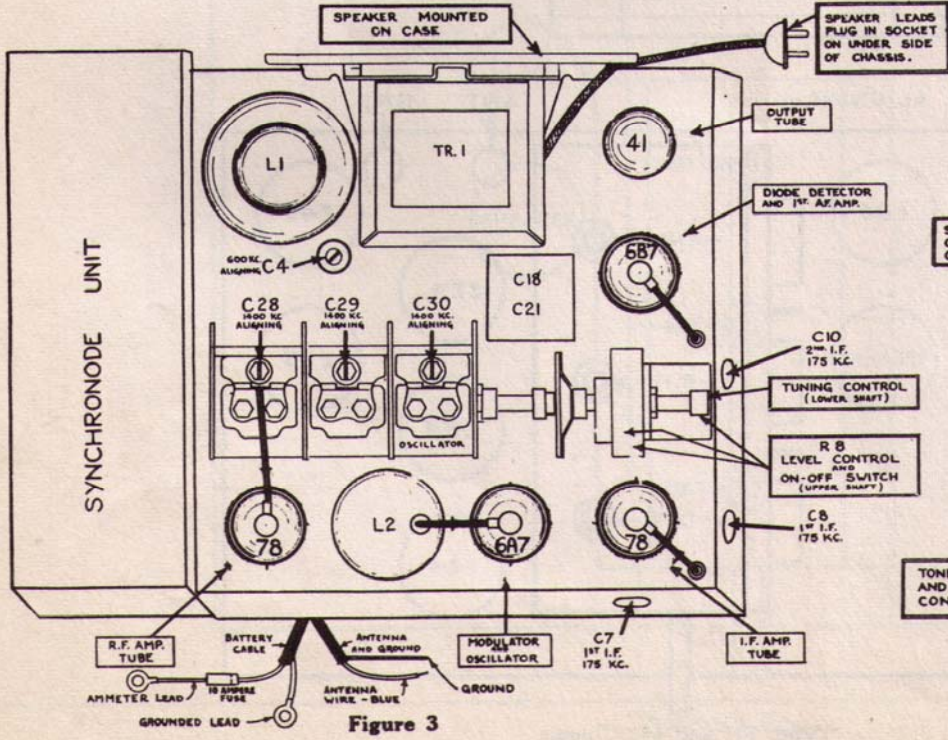


Figure 3

NOTE—All tubes are seal shielded. The R.F. and I.F. tubes are 88s.

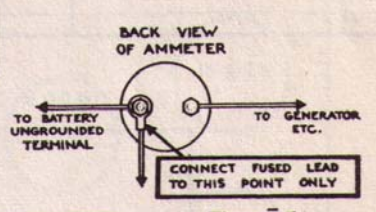


Figure 5



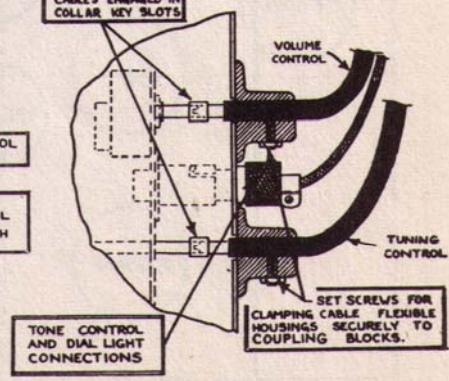


Figure 4

MEMO NUMBER	LTR	CHANGE	BY	DATE	CHECK
2		Added Parts	T.C.	10/25	
		ADDED			
		ADDED			
		ADDED			

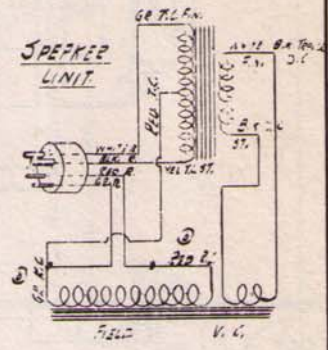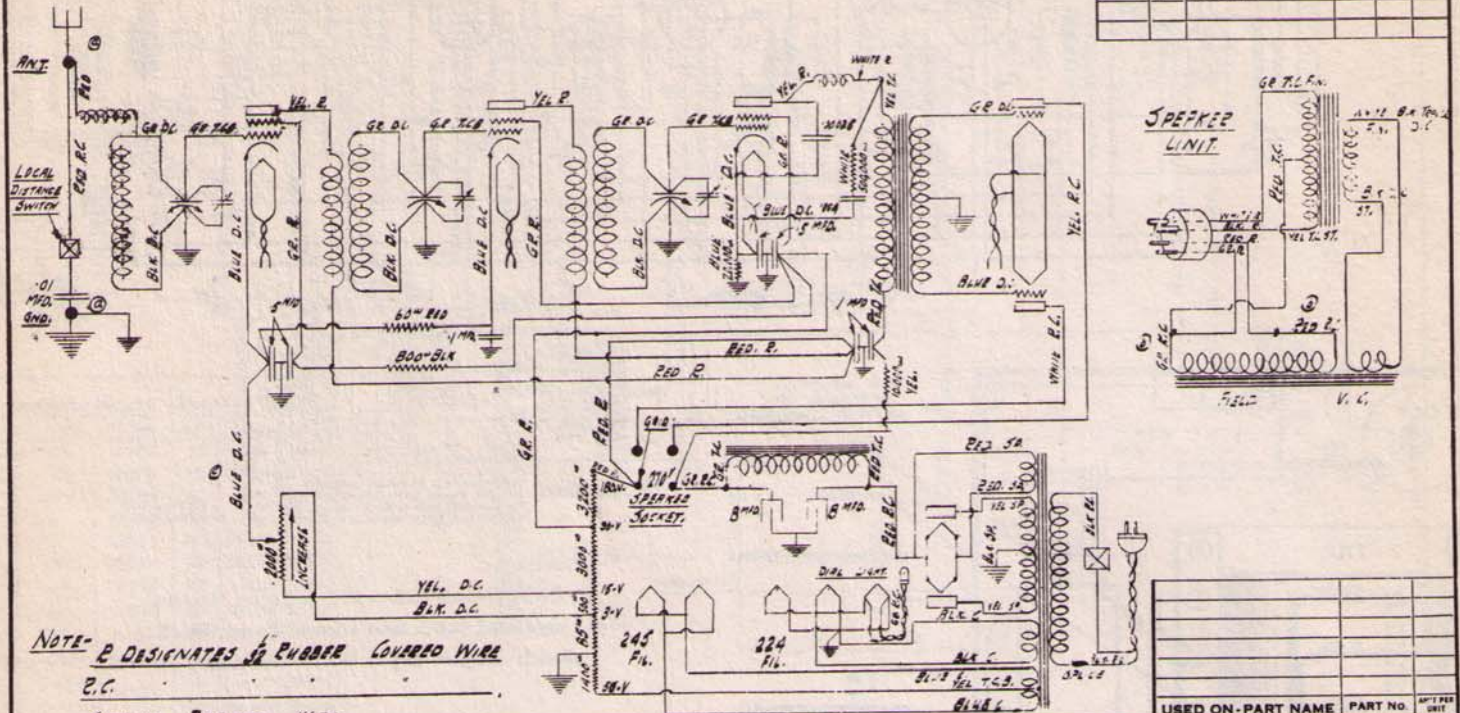



NOTE- P DESIGNATES RUBBER COVERED WIRE
 D.C. COTTON BRAIDED WIRE
 D-C. DOUBLE COTTON COVERED WIRE
 SP SPRAGHETTI.
 C COTTON SLEEVING,
 T.C. TRIPLE COTTON BRAID

FINISH ..	SCALE	SUPERSEDES DWG. NO.	DRAWN DATE	CHECKED DATE
ALL DIMENSIONS SUBJECT TO A TOLERANCE OF ± .008 UNLESS OTHERWISE SPECIFIED.	RAW MATERIAL	APPROVED ELEC. DATE	10-25-51	10-25-51
MATERIAL ..	PER M PIECES	APPROVED MECH. DATE	10-25-51	10-25-51
	FINISHED MATERIAL	ROGERS-MAJESTIC CORP. LIMITED, TORONTO, CANADA		
	PER M PIECES	NAME	640 507515 C	No. 10295-B
		DIAG. WITH	10-25-51	

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
C1	3 GANG CONDENSER	3132	T1	POWER TRANS. ASSY.	3120
L1	ANTENNA TRANS. ASSY.	3128	T2	INPUT TRANS. ASSY.	3217
L2	1ST. R.F. TRANS. ASSY.	3011	T3	OUTPUT TRANS. ASSY.	3122
L3	2ND. R.F. TRANS. ASSY.	3011		D-10 SPEAKER ASSY. -	
L4	R.F. CHOKE COIL ASSY.	3035		LESS FIELD COIL	3138
L5	FILTER CHOKE ASSY.	3126		D-10 SPEAKER FIELD COIL	3139

NOTE-
 For phonograph circuit arrangement (Type 642) see Type 742 Chassis.

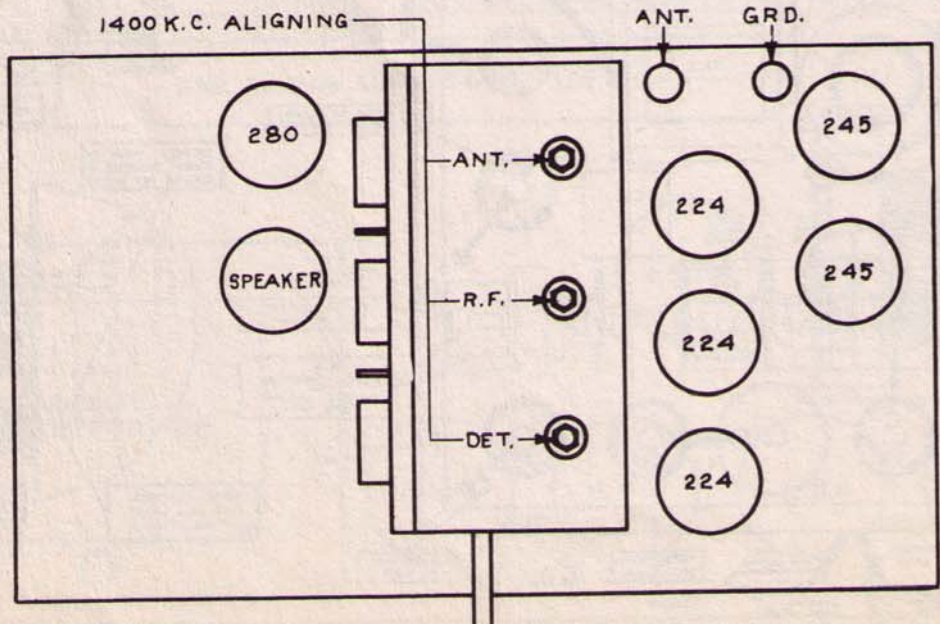

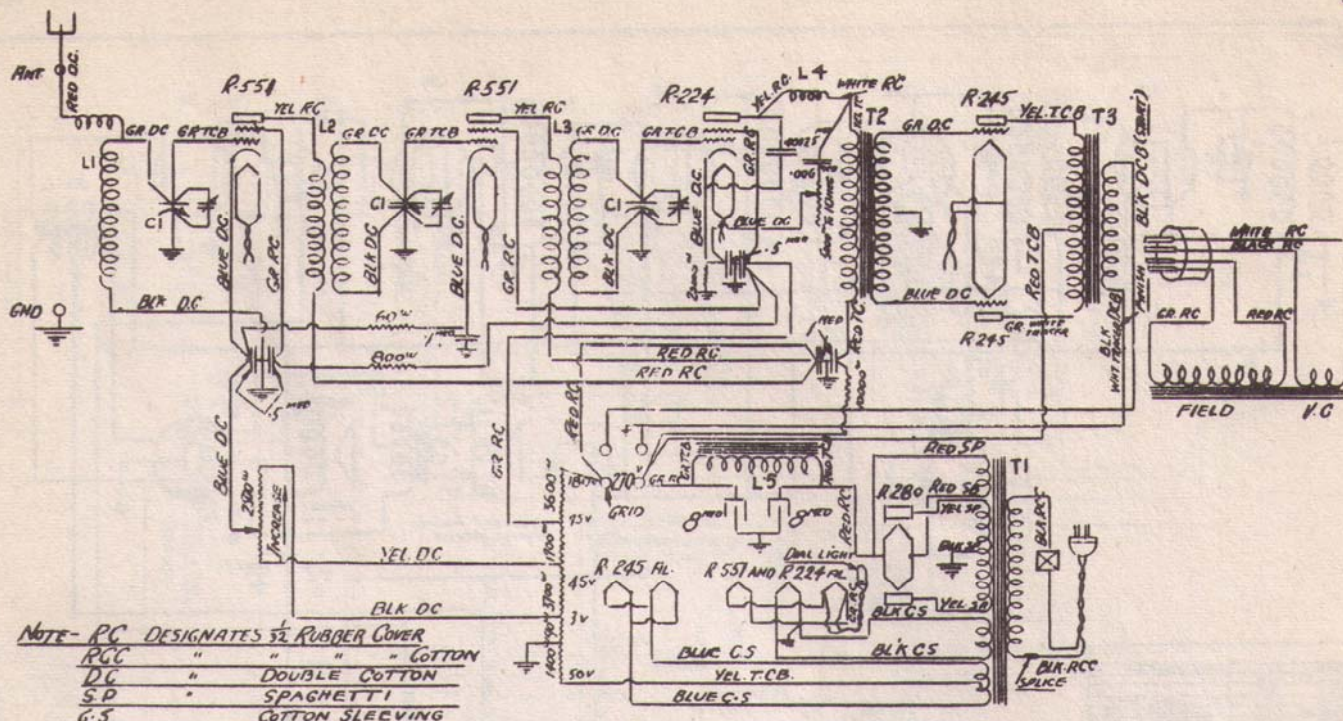






NOTE- RC DESIGNATES 1/2 RUBBER COVER
 RCC " " " COTTON
 DC " " DOUBLE COTTON
 SP " SPAGHETTI
 G.S. COTTON SLEEVING


NOTE- ALL DC VOLTAGES MEASURED
 GROUND AND AC VOLTAGES
 MEASURED AT SOCKETS

10427


ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
C1	3 GANG CONDENSER	3223	L5	FILTER CHOKE ASS'Y.	3199
L1	ANTENNA TRAN. ASS'Y.	3128	T1	POWER TRANS. ASS'Y.	3222
L2	1ST. R.F. TRANS. ASS'Y.	3011	T2	INPUT TRANS. ASS'Y.	3217
L3	2ND. R.F. TRANS. ASS'Y.	3011	T3	OUTPUT TRANS. ASS'Y.	3203
L4	R. F. CHOKE COIL ASS'Y.	3035		D-15 SPEAKER ASS'Y	3241

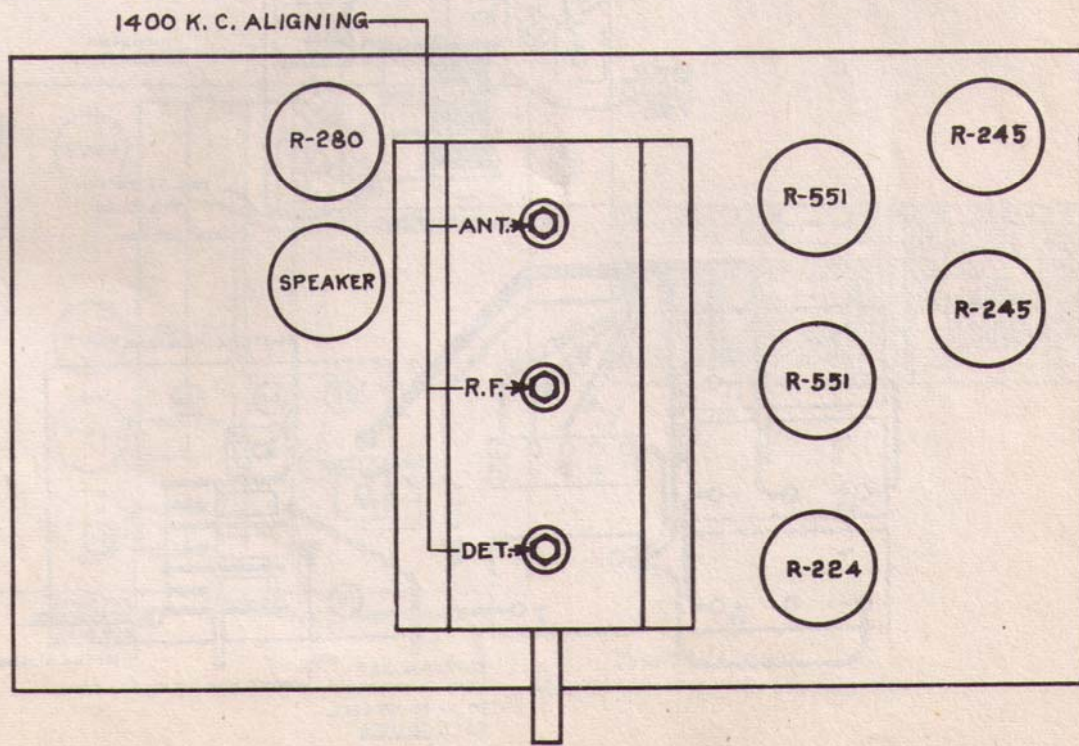

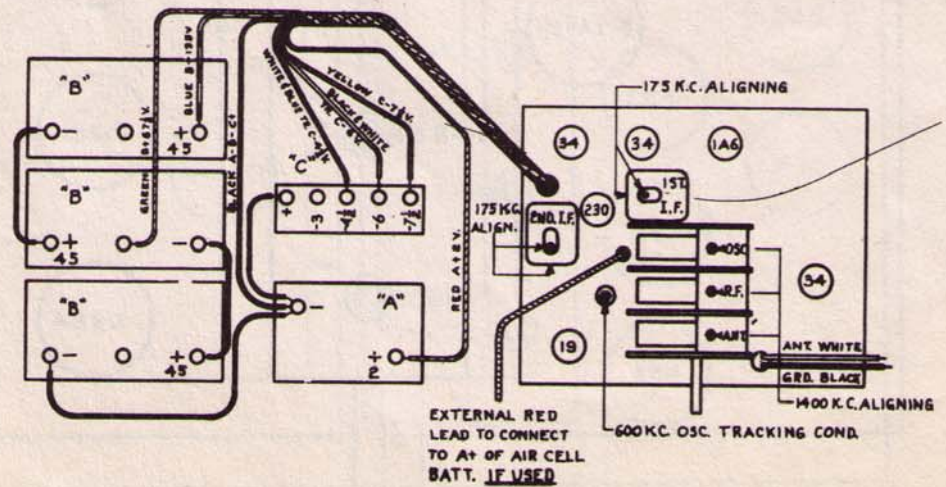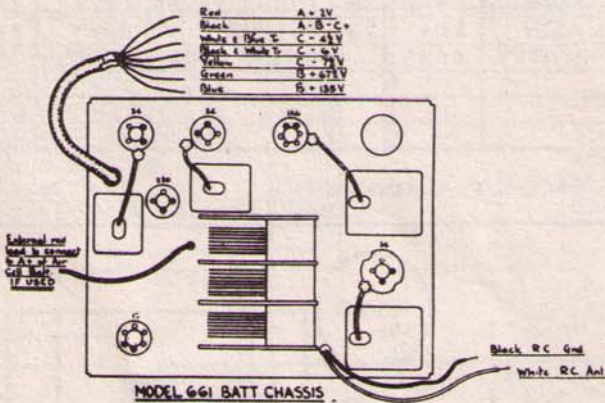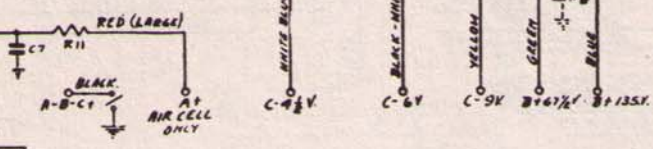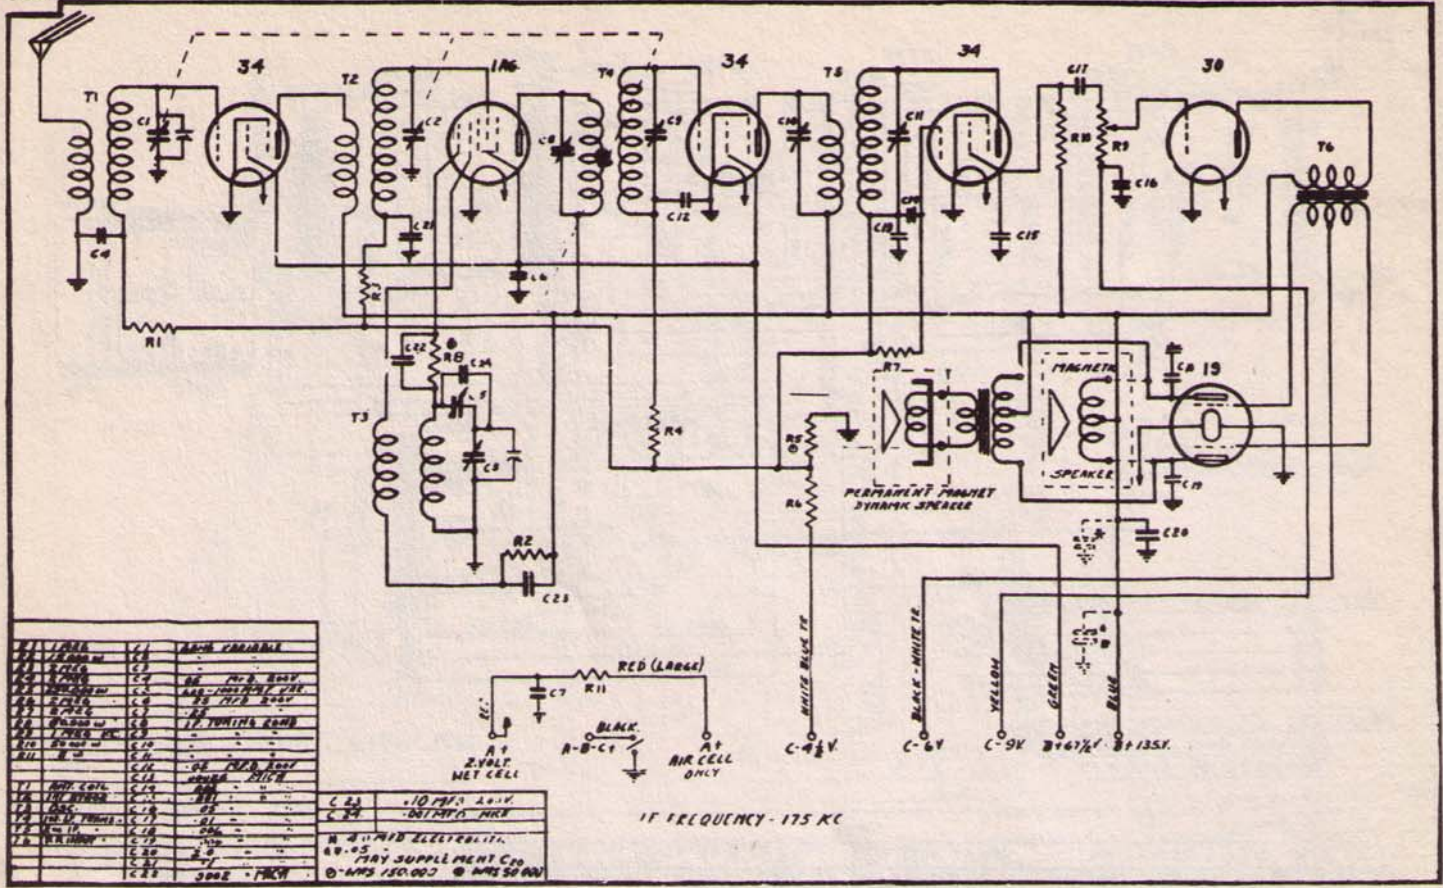

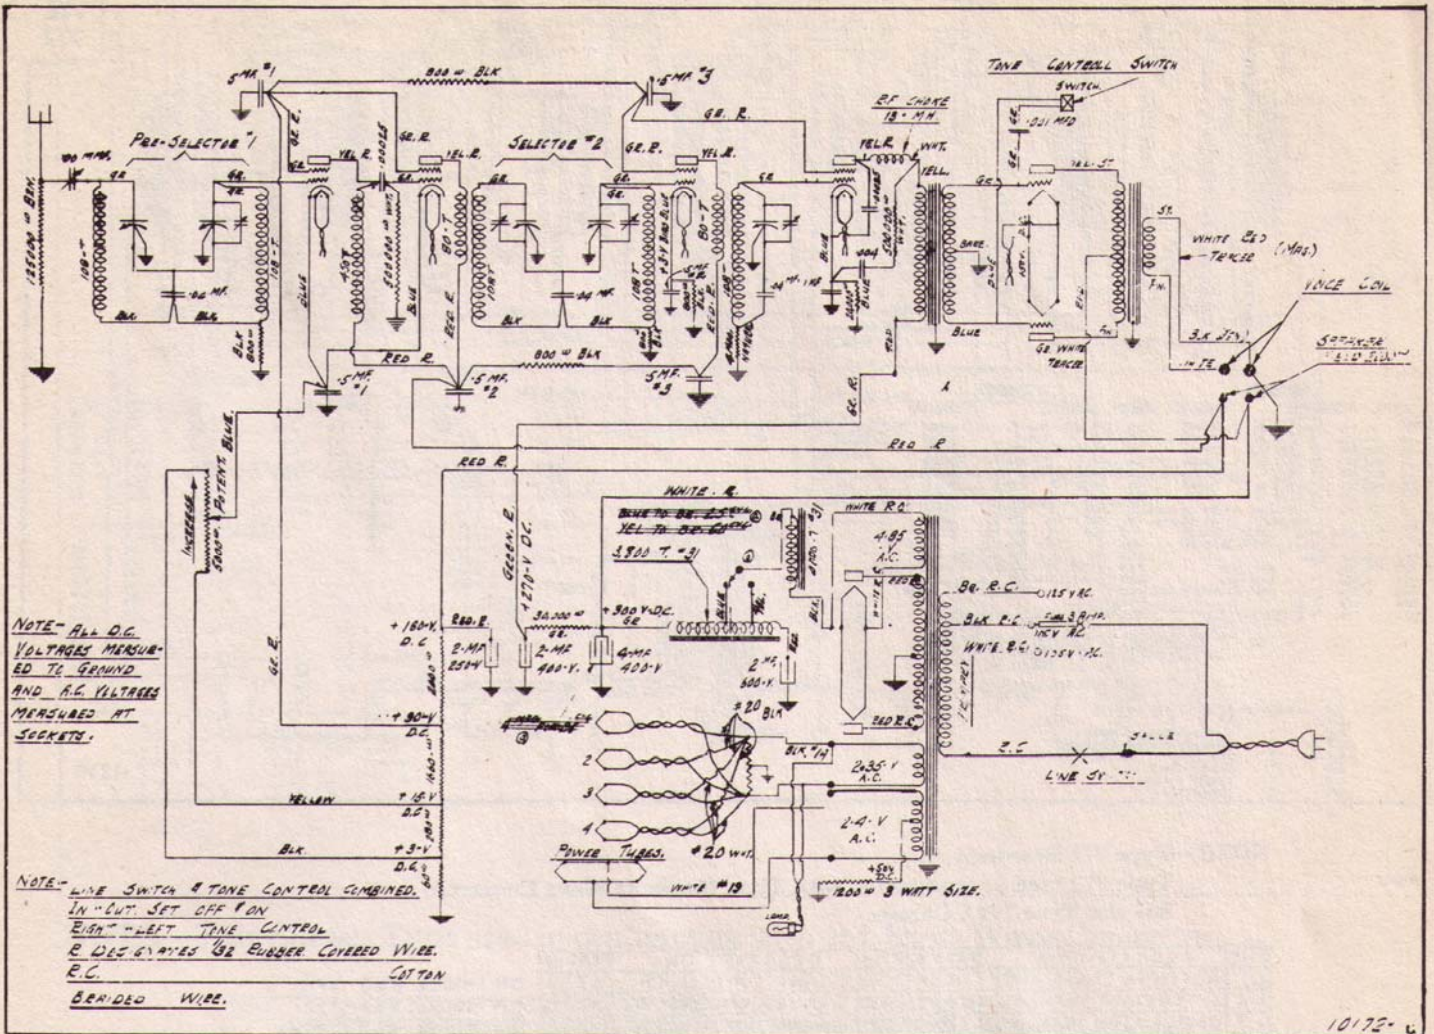


10172-6

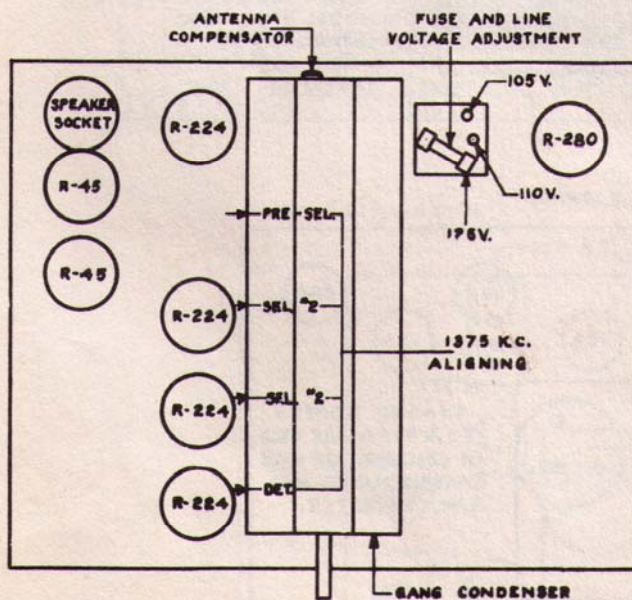

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
L1	R.F. COIL ASS'Y.	3012	G1	5 GANG CONDENSER	3002
L2	"	"	T1	POWER TRANS. ASS'Y.	3014
L3	BROAD BAND CHOKE ASS'Y.	3039	T2	INPUT TRANS. ASS'Y.	3021
L4	R.F. COIL ASS'Y.	3011	T3	OUTPUT TRANS. ASS'Y. (HAR)	3073
L5	R.F. COIL ASS'Y.	3012	T3	OUTPUT TRANS. ASS'Y. (GENERO)	3028
L6	R.F. COIL ASS'Y.	3011		D-8 JENSEN SPEAKER ASS'Y.	3060
L7	R.F. CHOKE COIL ASS'Y.	3035		D-8 MAGNAVON SPEAKER ASS'Y.	3070
L8	DOUBLE FILTER CHOKE ASS'Y.	3020			


Type 741 Chassis
Models 630, 635, 640, 650 and 660

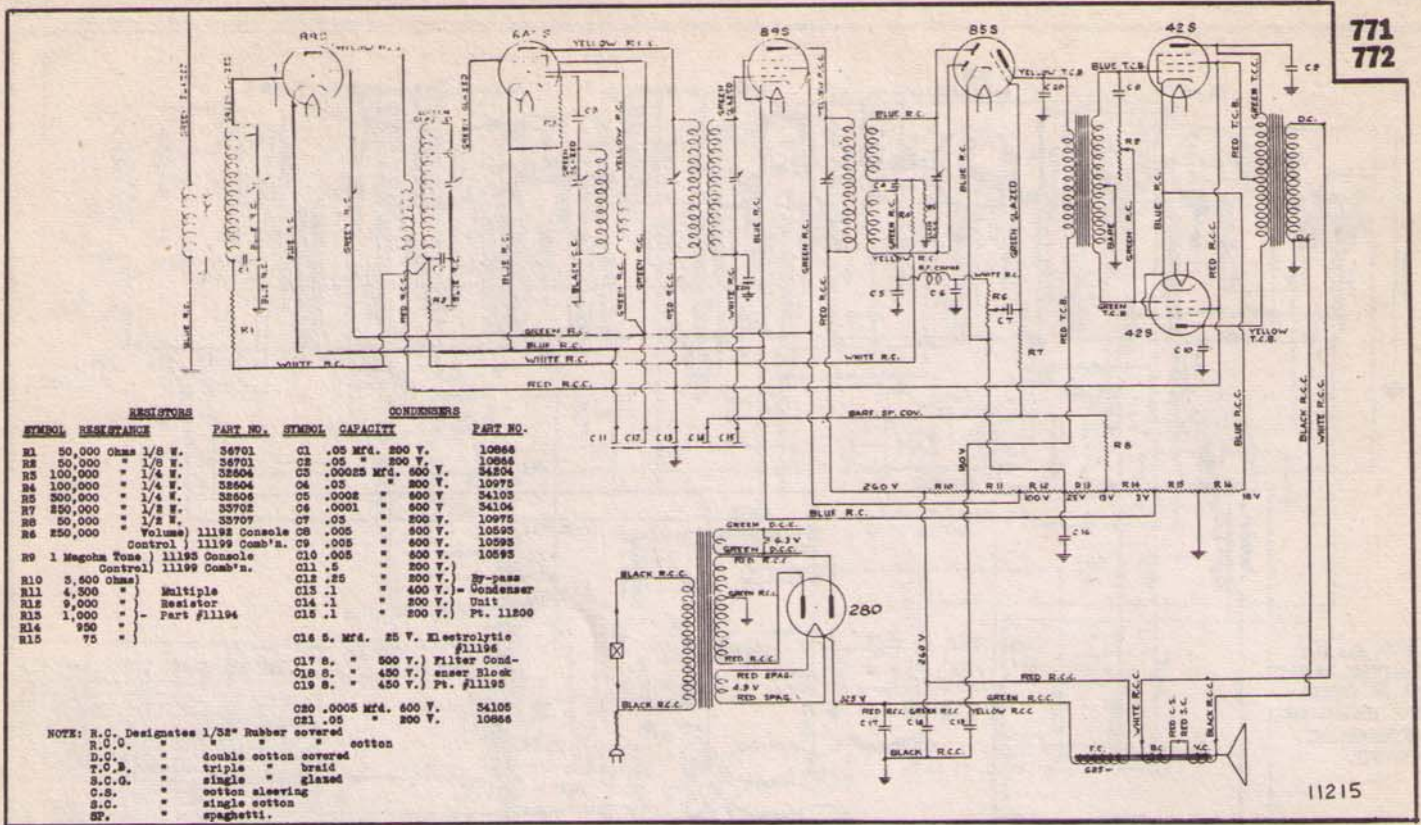


NOTE—Type 771 Broadcast only.
 Type 772 used in conjunction with Type 261 Short Wave Converter.
 See also Type 772A Chassis.

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
L1	ANTENNA TRANS. ASSY.	3838	C22	3 GANG CONDENSER	3756
L2	INTERSTAGE TRANS. ASSY.	3839	C22	3 GANG CONDENSER	3805
L3	OSCILLATOR TRANS. ASSY.	3840	C22	3 GANG CONDENSER	3852
L4	1ST. I.F. TRANS. ASSY.	3809	T1	POWER TRANS. ASSY.	3824
L5	2ND. I.F. TRANS. ASSY.	3834	T1	POWER TRANS. ASSY.	3906
	D9 SPEAKER ASSY.—ON		T2	INPUT TRANS. ASSY.	3890
	MODEL 935 & 955 (771 & 772)	3851	T3	OUTPUT TRANS. ASSY.	3828
	D9 SPEAKER ASSY.—ON		T3	OUTPUT TRANS. ASSY.	3898
	MODEL 965 (772A)	3884	T4	COUPLING TRANS. ASSY.	3900
L6	R.F. CHOKE ASSY.	3551			

ON MODEL 935 (771)
 ON MODEL 955 (772)
 ON MODEL 965 (772A)
 ON MODEL 935 & 955 (771 & 772)
 ON MODEL 965 (772A)
 ON MODEL 935 & 955 (771 & 772)
 ON MODEL 965 (772A)
 ON MODEL 965 (772A)

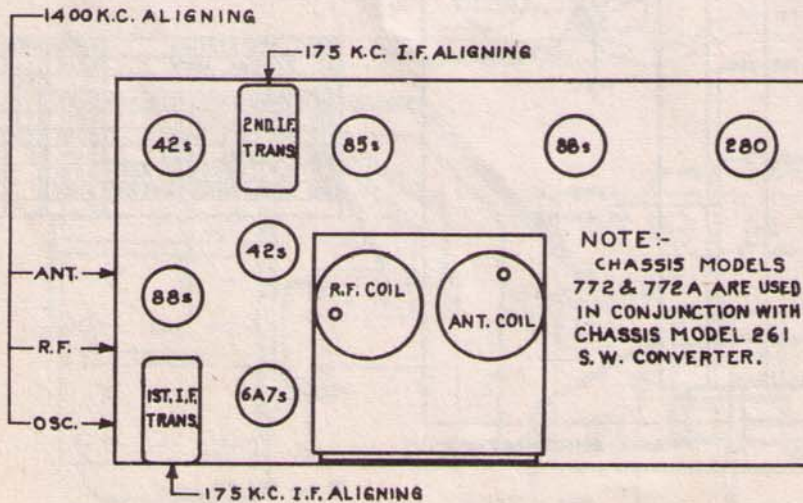


Types 771 and 772 Chassis.
 Models 935 and 955.

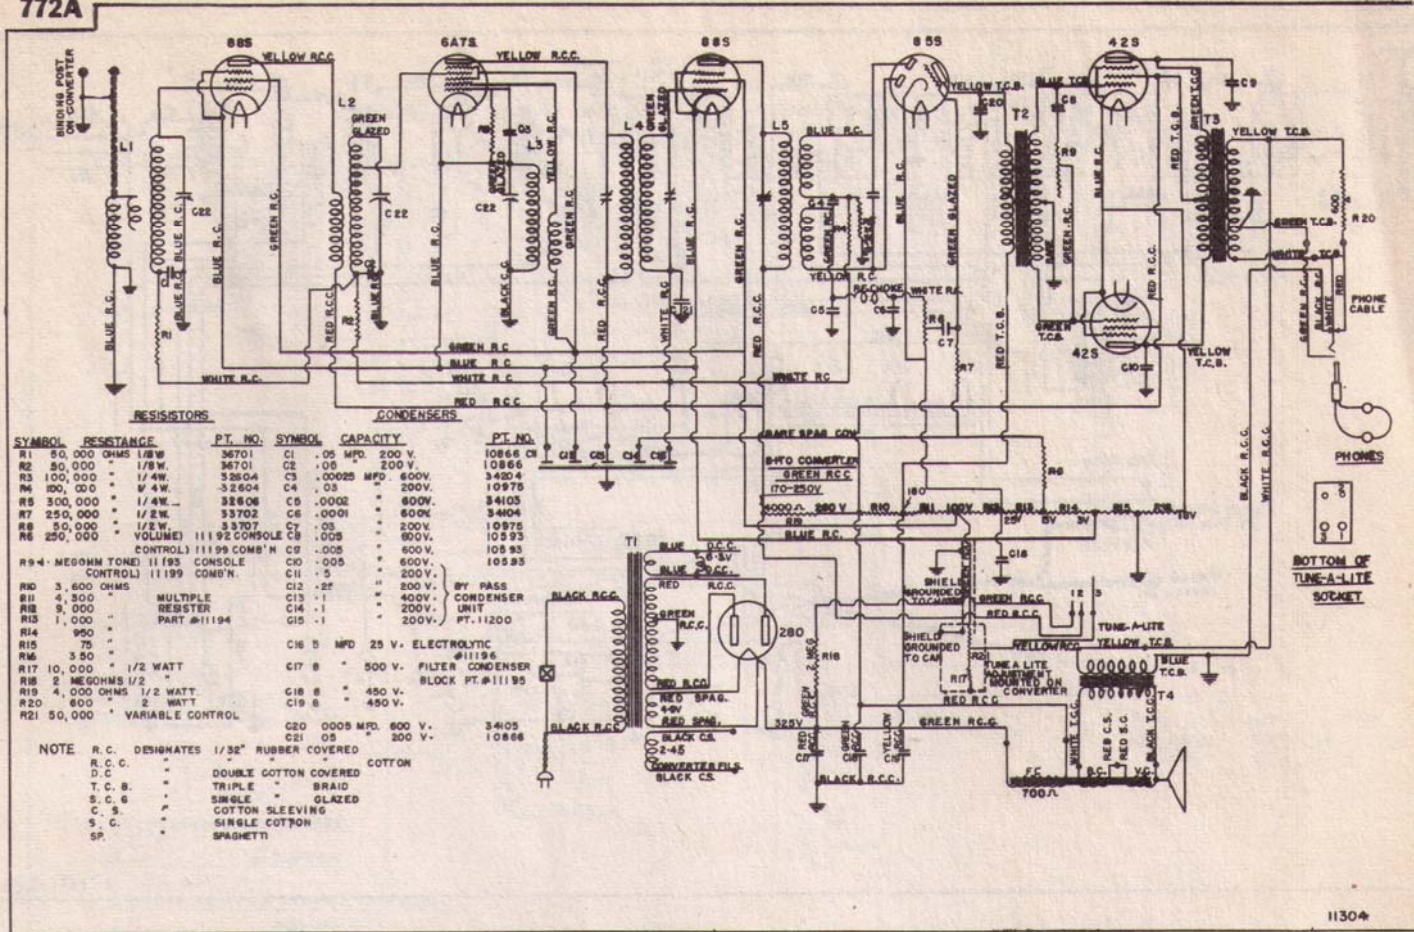


NOTE—This Chassis Type used in conjunction with 261 Short Wave Converter.

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
L1	ANTENNA TRANS. ASSY.	3838	C22	3 GANG CONDENSER	3756
L2	INTERSTAGE TRANS. ASSY.	3839	C22	3 GANG CONDENSER	3805
L3	OSCILLATOR TRANS. ASSY.	3840	C22	3 GANG CONDENSER	3852
L4	1ST. I.F. TRANS. ASSY.	3809	T1	POWER TRANS. ASSY.	3824
L5	2ND. I.F. TRANS. ASSY.	3834	T1	POWER TRANS. ASSY.	3906
D9	SPEAKER ASSY. - ON MODEL 935 & 955 (771 & 772)	3851	T2	INPUT TRANS. ASSY.	3830
D9	SPEAKER ASSY. - ON MODEL 965 (772A)	3884	T3	OUTPUT TRANS. ASSY.	3828
L6	R.F. CHOKE ASSY.	3551	T3	OUTPUT TRANS. ASSY.	3898
			T4	COUPLING TRANS. ASSY.	3900

ON MODEL 935 (771)
ON MODEL 955 (772)
ON MODEL 965 (772A)
ON MODEL 935 & 955 (771 & 772)
ON MODEL 965 (772A)
ON MODEL 935 & 955 (771 & 772)
ON MODEL 965 (772A)
ON MODEL 965 (772A)

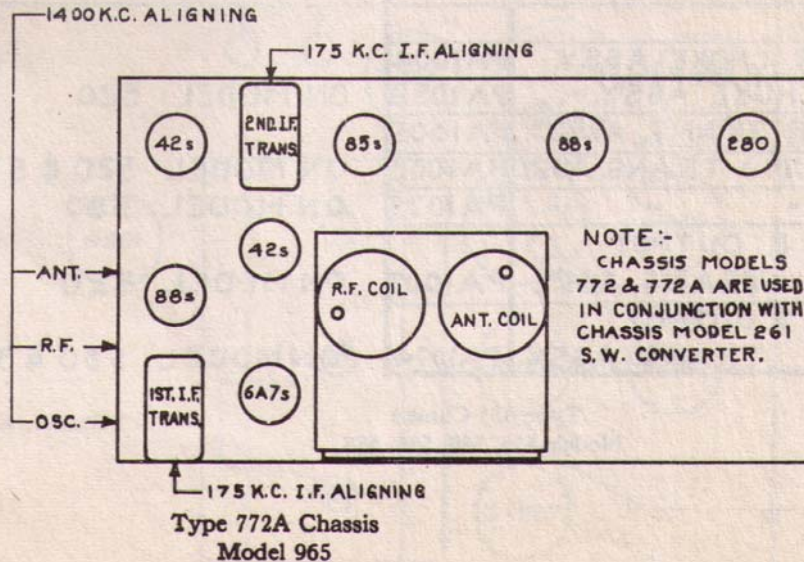

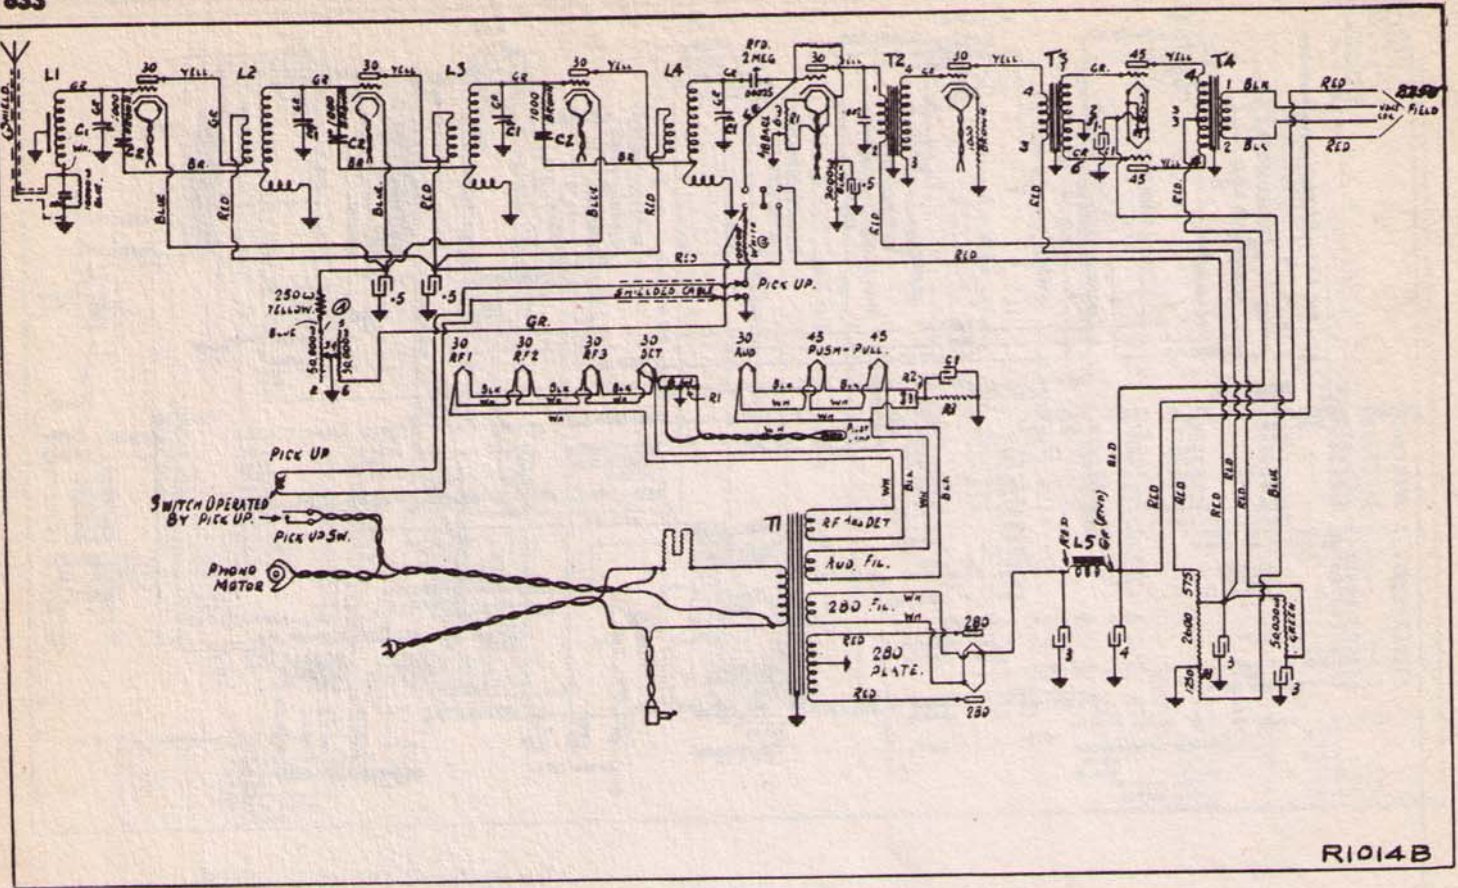

NOTE—For Chassis Layout see Type 832, page 29.

ITEM	DESCRIPTION	PART. NO
C1	4 GANG CONDENSER	PA1056
C2	BALANCING CONDENSER	PA1018
L1	ANTENNA TRANS. ASS'Y.	PA1017
L2	R.F. TRANS. ASS'Y.	PA1016
L3	" " " "	"
L4	" " " "	"
L5	FILTER CHOKE ASS'Y.	PA1004
L6	HUM CHOKE ASS'Y.	PA1038
T1	POWER TRANS. ASS'Y.	PA1005
T2	1ST. AUDIO TRANS. ASS'Y.	PA1002
T2	" " " "	PA1073
T3&T4	INPUT & OUTPUT TRANS. ASS'Y.	PA1003
T3&T4	INPUT & OUTPUT TRANS. ASS'Y.	PA1074

ON MODEL 520


ON MODEL 520 & 530

ON MODEL 580

ON MODEL 520


ON MODEL 530 & 580

Type 833 Chassis
Models 575, 580, 586, 588

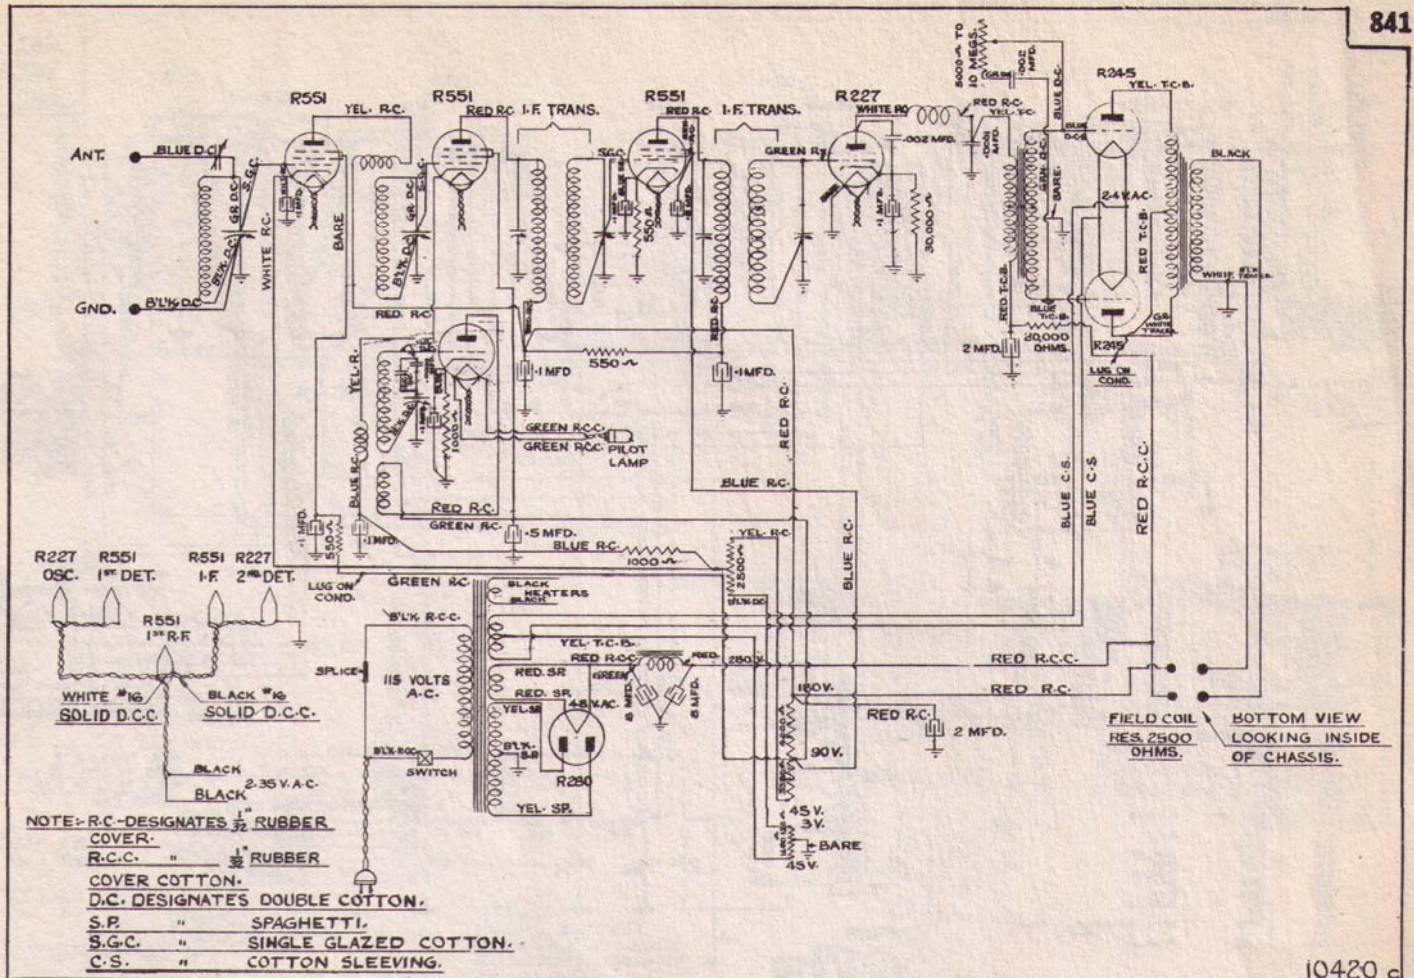

10420 c


ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
C1	3 GANG CONDENSER	3180	L6	R.F. CHOKE COIL ASSY.	3035
C2	ANT. TRIMMER COND.	3210	L7	FILTER CHOKE ASSY.	3199
C3	600 K.C. OSC. ALIGN. COND.	3211	T1	POWER TRANS. ASSY.	3197
L1	ANTENNA TRANS. ASSY.	3206	T2	INPUT TRANS. ASSY.	3201
L2	INTERSTAGE TRANS. ASSY.	3204	T2	OUTPUT TRANS. ASSY.	3236
L3	OSCILLATOR TRANS. ASSY.	3205		D-15 SPEAKER ASSY.	3241
L4	1ST. I.F. TRANS. ASSY.	3193			
L5	2ND. I.F. TRANS. ASSY.	3194			

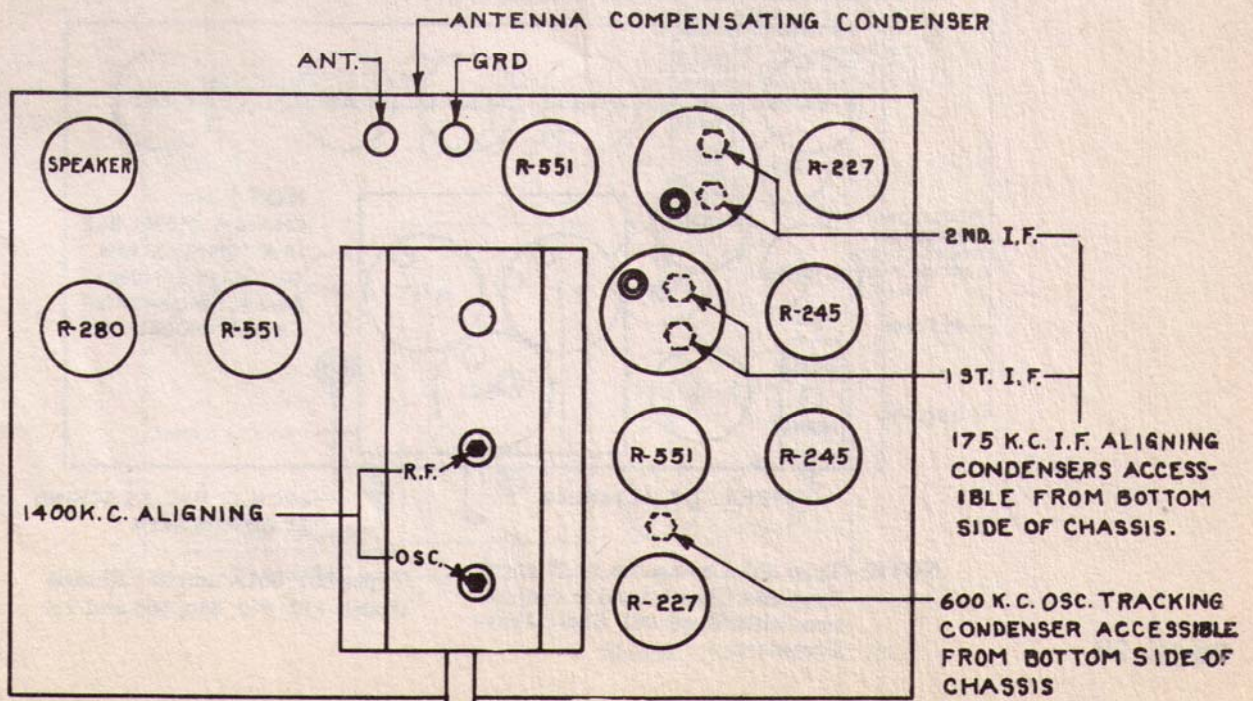

Type 841 Chassis


Models 725, 730, 740 and 750

861
861A
862

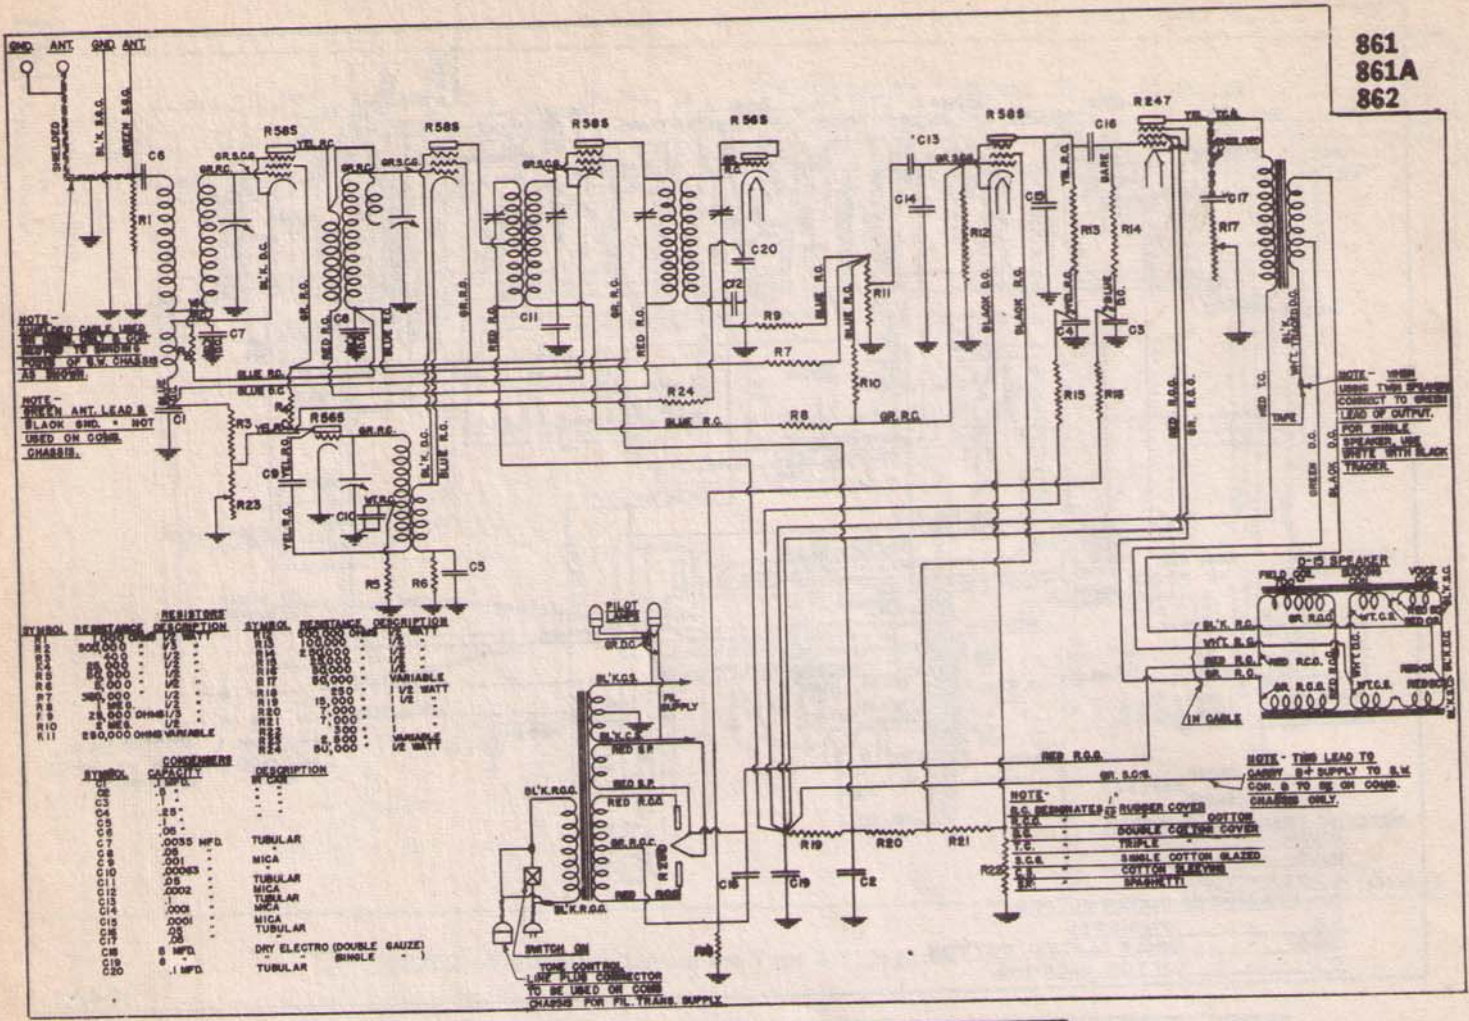


ITEM	DESCRIPTION	PT. NO.	ITEM	DESCRIPTION	PT. NO.
C21	3GANG CONDENSER	3464	T1	OUTPUT TRANS. ASSY.	3470
C22	600 K.C. OSC. ALIGN.	3553	T1	" "	3573
L1	ANTENNA TRANS. ASSY.	3501	T2	POWER TRANS. ASSY.	3468
L2	INTERSTAGE " "	3502	D9	SPEAKER ASSY.	3550
L3	OSCILLATOR " "	3503	D15	SPEAKER ASSY.	3575
L4	1ST. I.F. TRANS. ASSY.	3489	D15	SPEAKER ASSY.	3548
L5	2ND. I.F. " "	3490			

ON MODEL 810 (861)
ON MODEL 850 & 860 (861A & 862)
ON MODEL 850 & 860 (861A & 862)
ON MODEL 810 (861)

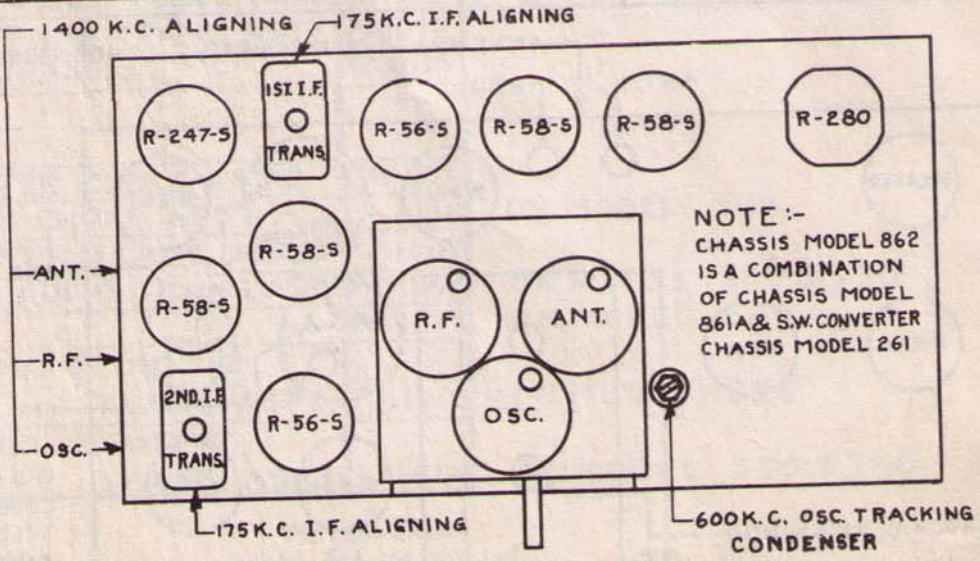


NOTE—Type 861 Chassis has no Silencer.
Type 862 Chassis used in conjunction with Type 261 Short Wave Converter.

Types 861, 861A and 862 Chassis Models 810, 840, 850, 860 and 950

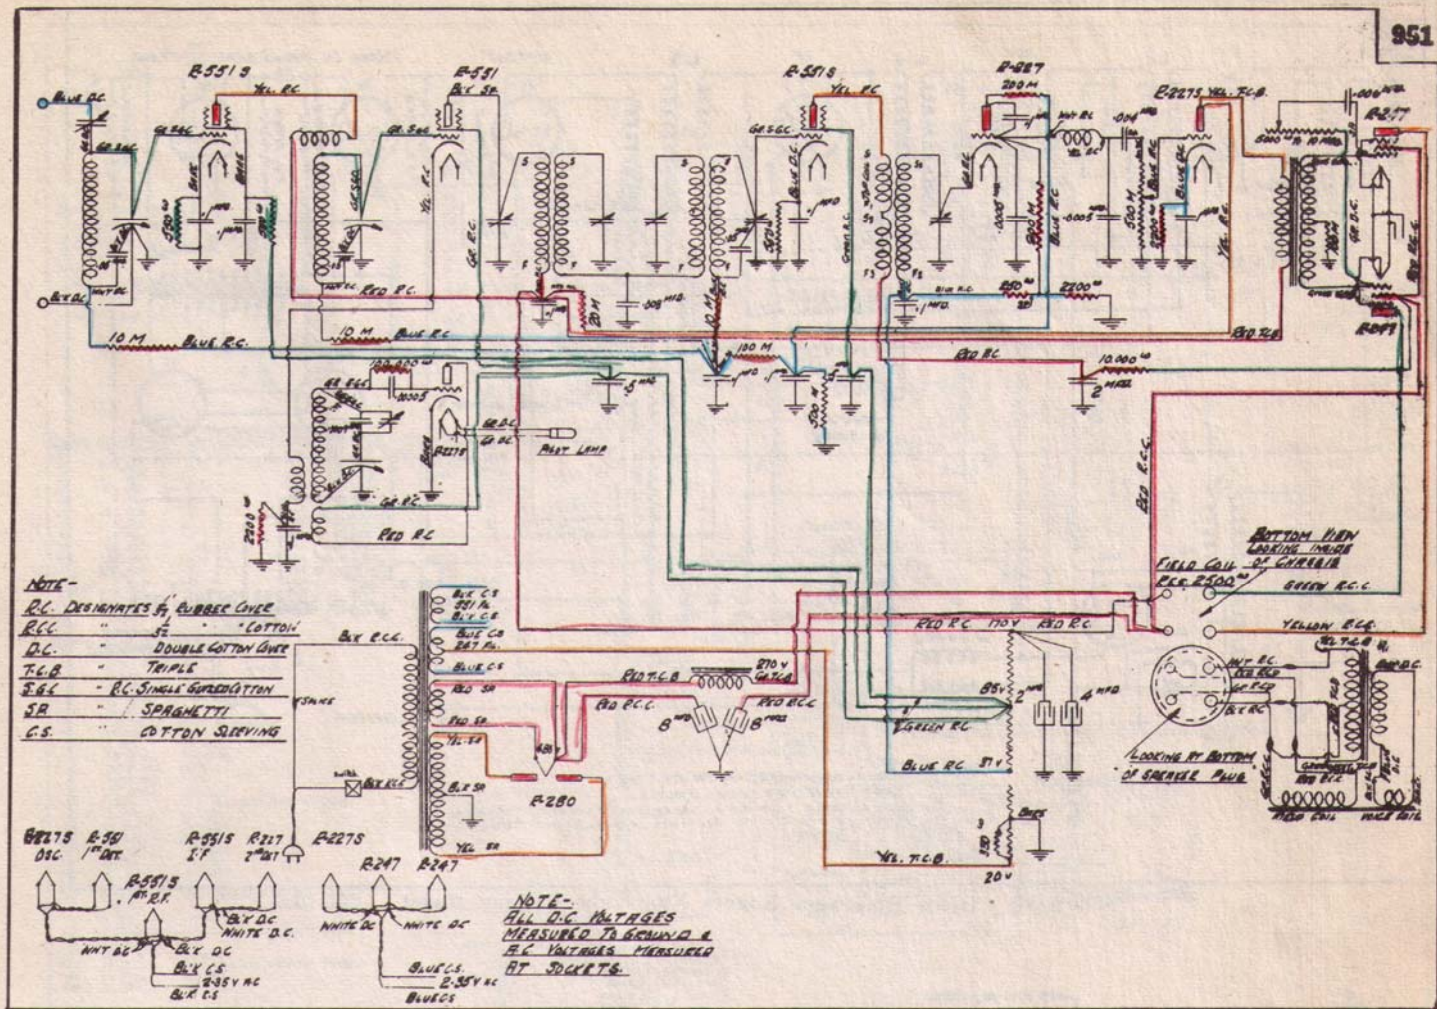


ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
C1	3 GANG CONDENSER	3180	L7	R.F. CHOKE ASSY.	3095
C2	ANT. TRIMMER COND.	3210	L8	FILTER CHOKE ASSY.	3198
C3	600K.C. OSC. ALIGN. COND.	3211	T1	POWER TRANS. ASSY.	3384
L1	ANTENNA TRANS. ASSY.	3206	T2	INPUT TRANS. ASSY.	3422
L2	INTERSTAGE TRANS. ASSY.	3204	T3	OUTPUT TRANS. ASSY.	3414
L3	OSCILLATOR TRANS. ASSY.	3205		D-9 SPEAKER ASSY.	3356
L4	1ST & 2ND I.F. TRANS. ASSY.	3388		D-15 SPEAKER ASSY.	3401
L6	3RD. I.F. TRANS. ASSY.	3389			


ON MODEL 755A
 ON MODEL 725A & 740A

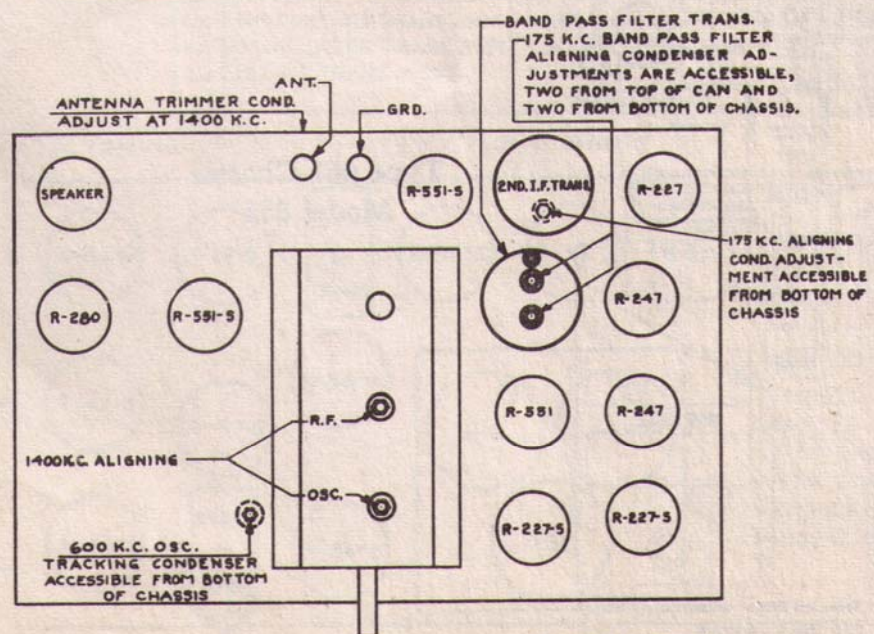

Type 951 Chassis
 Models 725A, 740A and 755A

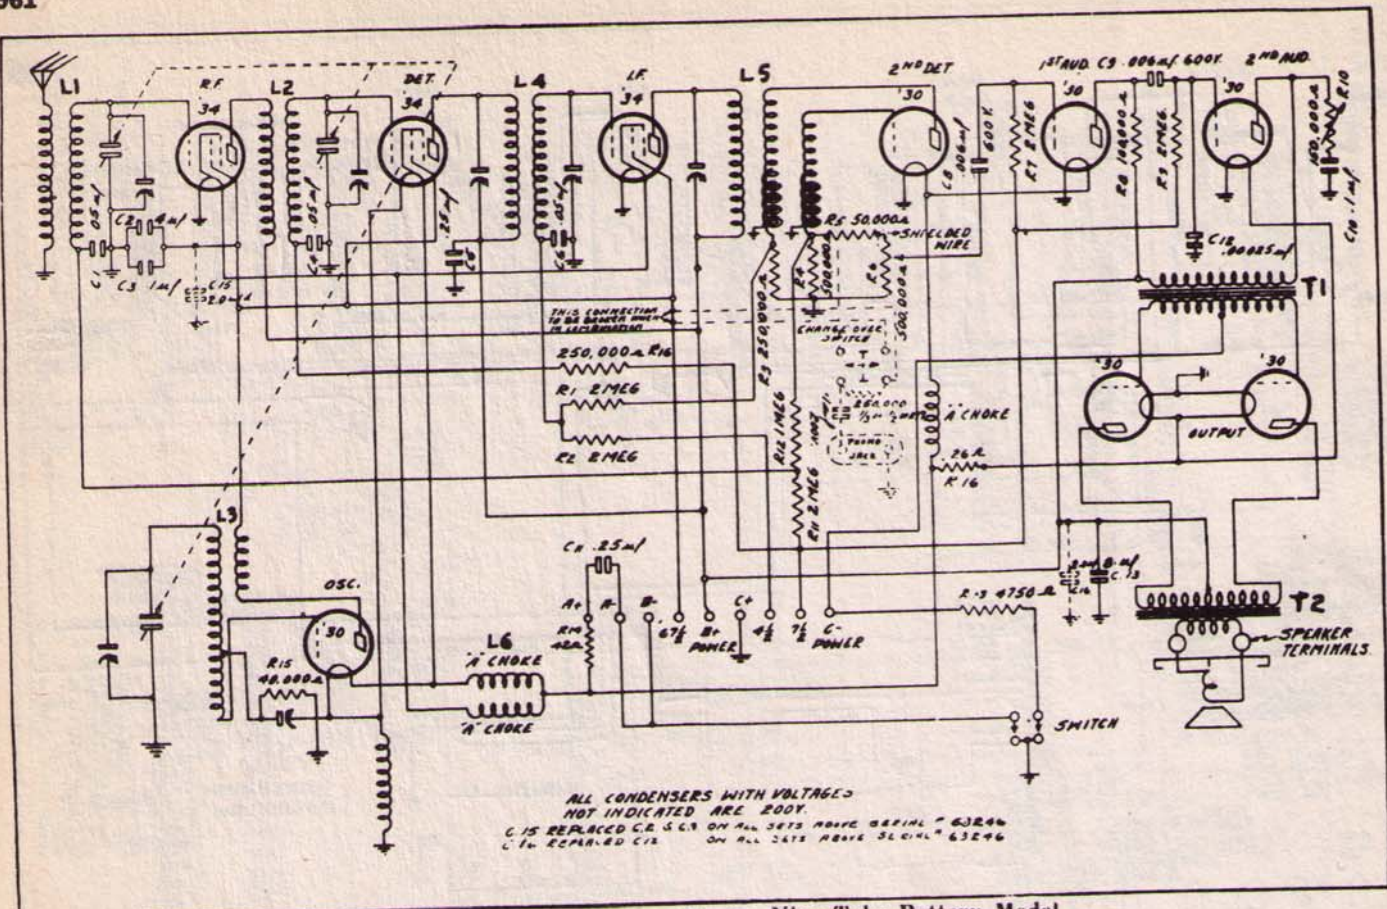

Schematic Circuit Diagram—Rogers Nine Tube Battery Model

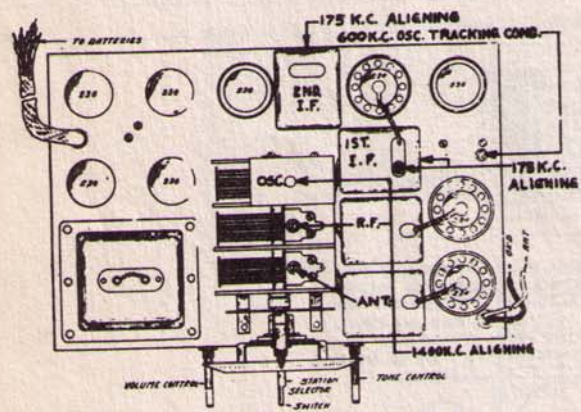

STEP	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
L1	ANTENNA TRANS. ASSY.	PE-110	L6	CHOKE COIL ASSY.	PE-107
L2	INTERSTAGE TRANS. ASSY.	PE-109	T1	INPUT TRANS. ASSY.	P-30581
L3	OSCILLATOR TRANS. ASSY.	PE-111	T2	OUTPUT TRANS. ASSY.	P-60610
L4	1ST. I.F. TRANS. ASSY.	PE-112			
L5	END. I.F. TRANS. ASSY.	PE-113			

Type 961 Chassis Model 855



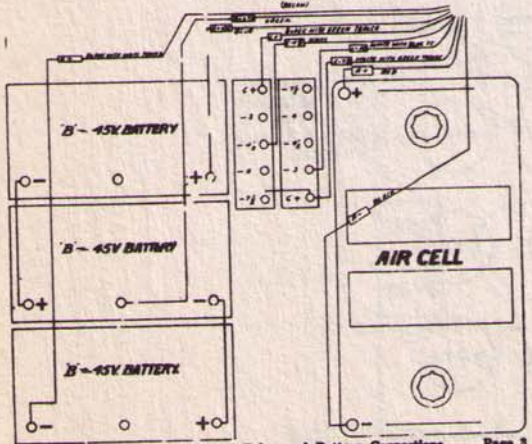


Figure 2—Location of Tubes and Battery Connections Page 3 MODEL 855 BATT. CHASSIS

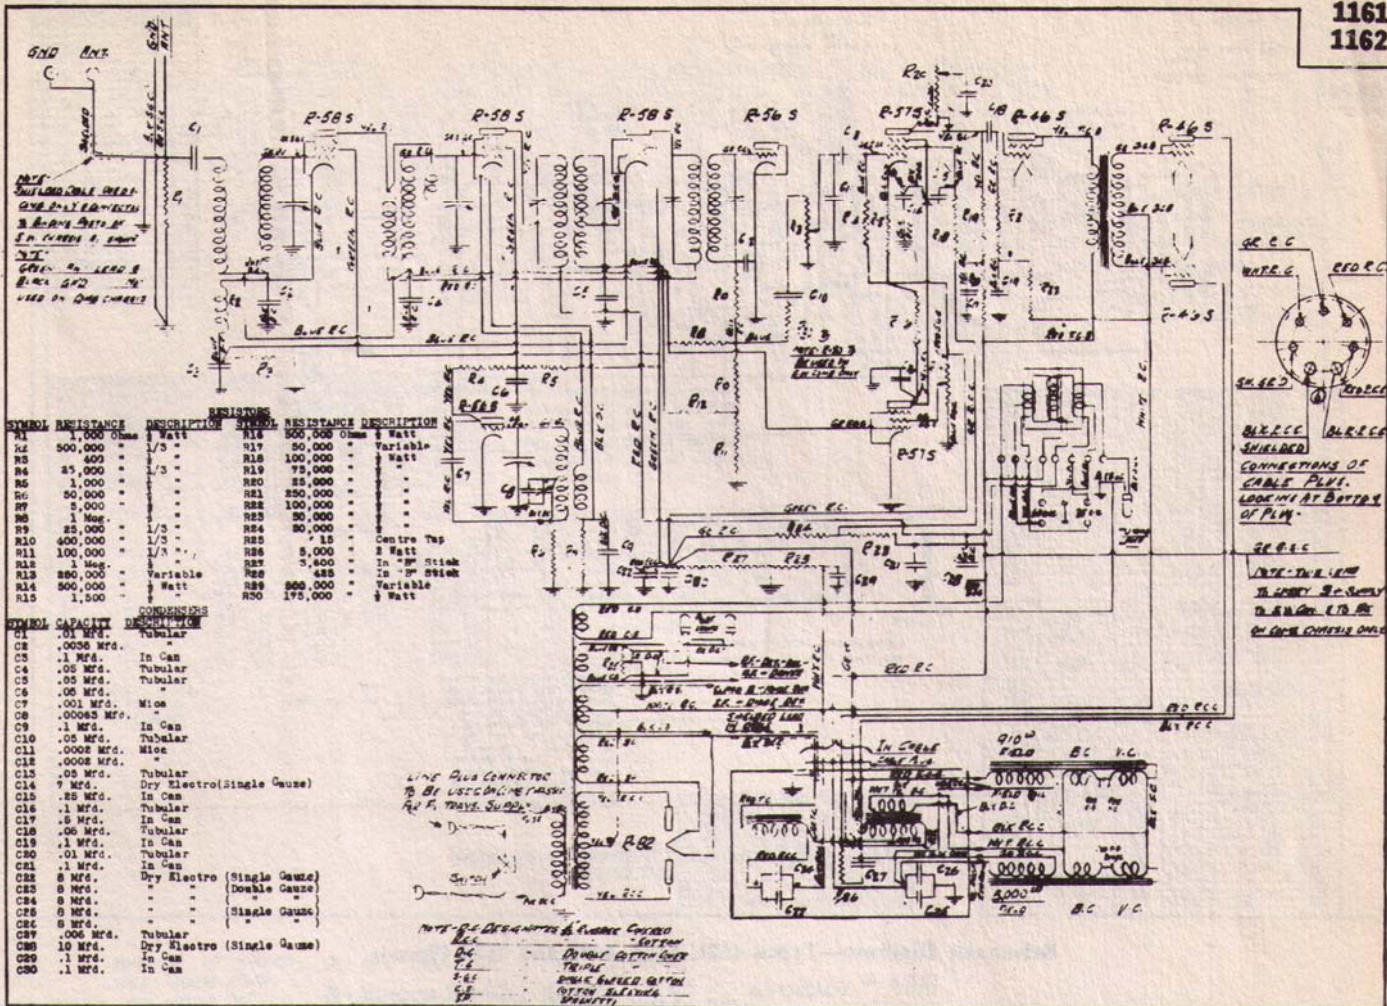

NOTE—Type 1162 Chassis used in conjunction with Type 261 Short Wave Converter.

ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
C31	3 GANG CONDENSER-ON MODEL 870 (1161)	3484	L5	2ND. I.F. TRANS. ASSY.	3571
C31	3 GANG CONDENSER-ON MODEL 880 (1162)	3464	L6	FILTER CHOKE ASSY.	3478
C32	600KC. OSC. ALIGN. COND.	3553	T1	POWER TRANS. ASS'Y.	3472
L1	ANTENNA TRANS. ASSY.	3501	T2	INPUT TRANS. ASS'Y.	3476
L2	INTERSTAGE TRANS. ASSY.	3502	T3	OUTPUT TRANS. ASS'Y.	3573
L3	OSCILLATOR TRANS. ASSY.	3503	T4	TUNING LAMP REACTOR TRANS. ASS'Y.	3584
L4	1ST. I.F. TRANS. ASSY.	3570		D-15 SPEAKER ASS'Y.	3566
				D-9 SPEAKER ASS'Y.	3568

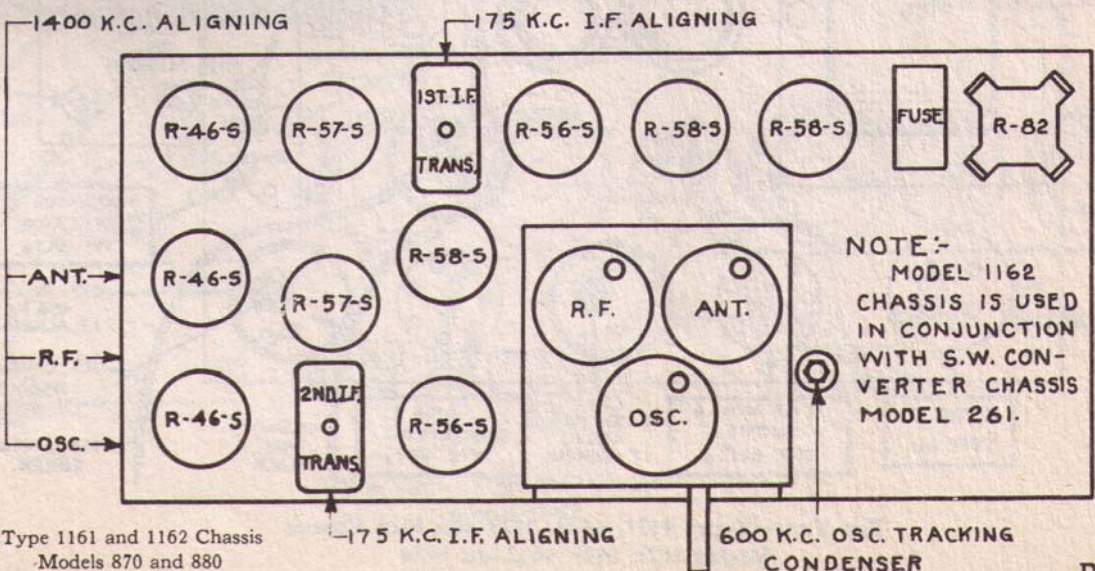


Type 1161 and 1162 Chassis Models 870 and 880


4421
4422
4423
4424

NO.	DATE	CHANGE BY	REASON
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			
21			
22			
23			
24			
25			
26			
27			
28			
29			
30			
31			
32			
33			
34			
35			
36			
37			
38			
39			
40			
41			
42			
43			
44			
45			
46			
47			
48			
49			
50			


C15, 17, 20 & 21
456 KC.
I.F. ALIGNING CONDENSERS

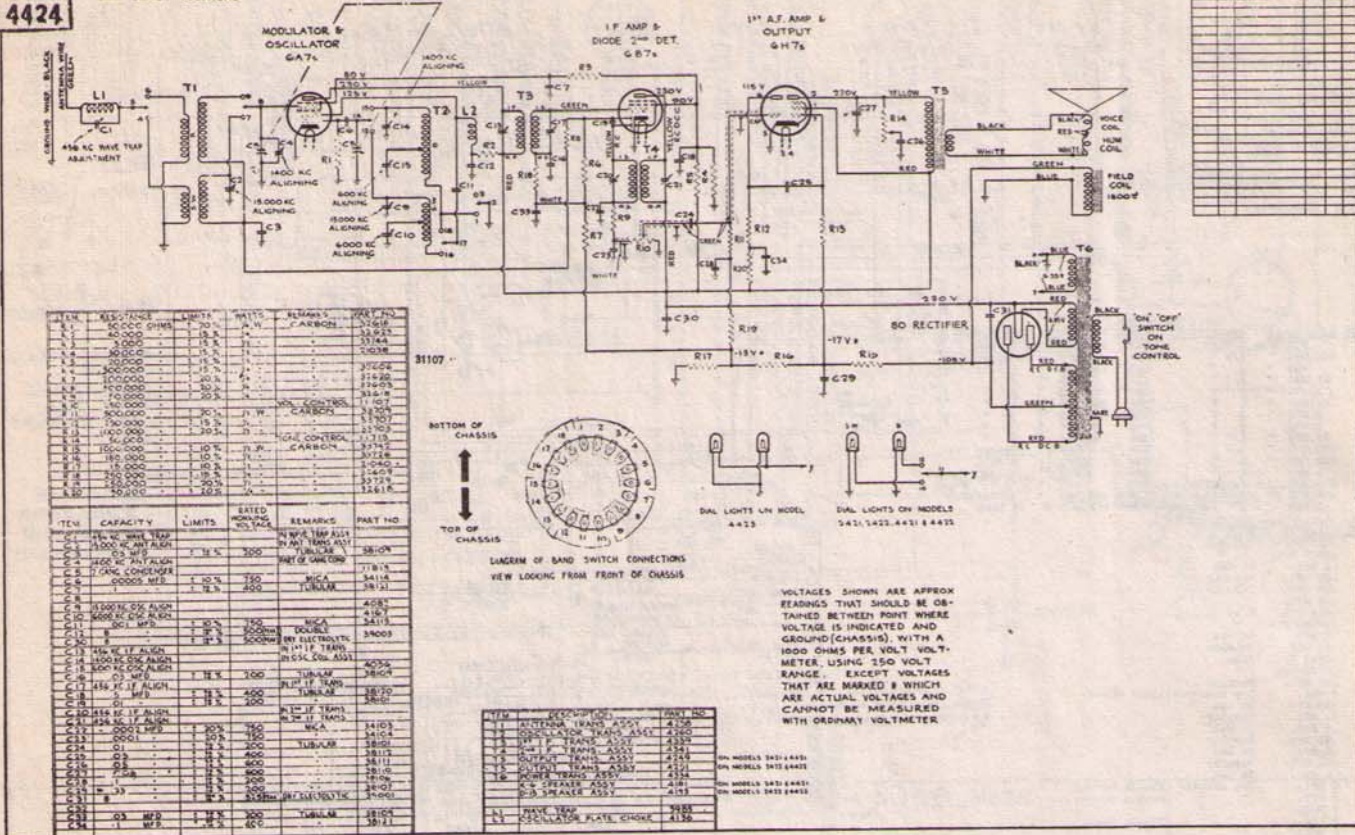


ITEM	DESCRIPTION	LIMITS	REMARKS	PART NO.
1	5000 KC. ANT. ALIGN.	15.5	A.W.	33823
2	1500 KC. ANT. ALIGN.	15.5	A.W.	33744
3	600 KC. ANT. ALIGN.	15.5	A.W.	33658
4	456 KC. ANT. ALIGN.	15.5	A.W.	33658
5	456 KC. I.F. ALIGN.	15.5	A.W.	33658
6	456 KC. I.F. ALIGN.	15.5	A.W.	33658
7	456 KC. I.F. ALIGN.	15.5	A.W.	33658
8	456 KC. I.F. ALIGN.	15.5	A.W.	33658
9	456 KC. I.F. ALIGN.	15.5	A.W.	33658
10	456 KC. I.F. ALIGN.	15.5	A.W.	33658
11	456 KC. I.F. ALIGN.	15.5	A.W.	33658
12	456 KC. I.F. ALIGN.	15.5	A.W.	33658
13	456 KC. I.F. ALIGN.	15.5	A.W.	33658
14	456 KC. I.F. ALIGN.	15.5	A.W.	33658
15	456 KC. I.F. ALIGN.	15.5	A.W.	33658
16	456 KC. I.F. ALIGN.	15.5	A.W.	33658
17	456 KC. I.F. ALIGN.	15.5	A.W.	33658
18	456 KC. I.F. ALIGN.	15.5	A.W.	33658
19	456 KC. I.F. ALIGN.	15.5	A.W.	33658
20	456 KC. I.F. ALIGN.	15.5	A.W.	33658
21	456 KC. I.F. ALIGN.	15.5	A.W.	33658
22	456 KC. I.F. ALIGN.	15.5	A.W.	33658
23	456 KC. I.F. ALIGN.	15.5	A.W.	33658
24	456 KC. I.F. ALIGN.	15.5	A.W.	33658
25	456 KC. I.F. ALIGN.	15.5	A.W.	33658
26	456 KC. I.F. ALIGN.	15.5	A.W.	33658
27	456 KC. I.F. ALIGN.	15.5	A.W.	33658
28	456 KC. I.F. ALIGN.	15.5	A.W.	33658
29	456 KC. I.F. ALIGN.	15.5	A.W.	33658
30	456 KC. I.F. ALIGN.	15.5	A.W.	33658
31	456 KC. I.F. ALIGN.	15.5	A.W.	33658
32	456 KC. I.F. ALIGN.	15.5	A.W.	33658
33	456 KC. I.F. ALIGN.	15.5	A.W.	33658
34	456 KC. I.F. ALIGN.	15.5	A.W.	33658
35	456 KC. I.F. ALIGN.	15.5	A.W.	33658
36	456 KC. I.F. ALIGN.	15.5	A.W.	33658
37	456 KC. I.F. ALIGN.	15.5	A.W.	33658
38	456 KC. I.F. ALIGN.	15.5	A.W.	33658
39	456 KC. I.F. ALIGN.	15.5	A.W.	33658
40	456 KC. I.F. ALIGN.	15.5	A.W.	33658
41	456 KC. I.F. ALIGN.	15.5	A.W.	33658
42	456 KC. I.F. ALIGN.	15.5	A.W.	33658
43	456 KC. I.F. ALIGN.	15.5	A.W.	33658
44	456 KC. I.F. ALIGN.	15.5	A.W.	33658
45	456 KC. I.F. ALIGN.	15.5	A.W.	33658
46	456 KC. I.F. ALIGN.	15.5	A.W.	33658
47	456 KC. I.F. ALIGN.	15.5	A.W.	33658
48	456 KC. I.F. ALIGN.	15.5	A.W.	33658
49	456 KC. I.F. ALIGN.	15.5	A.W.	33658
50	456 KC. I.F. ALIGN.	15.5	A.W.	33658

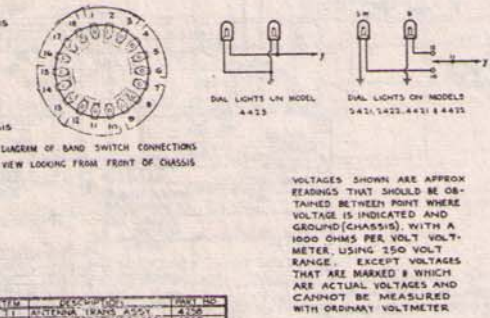

Schematic Diagram—Types 4421, 4422, 4423 and 4424 Chassis

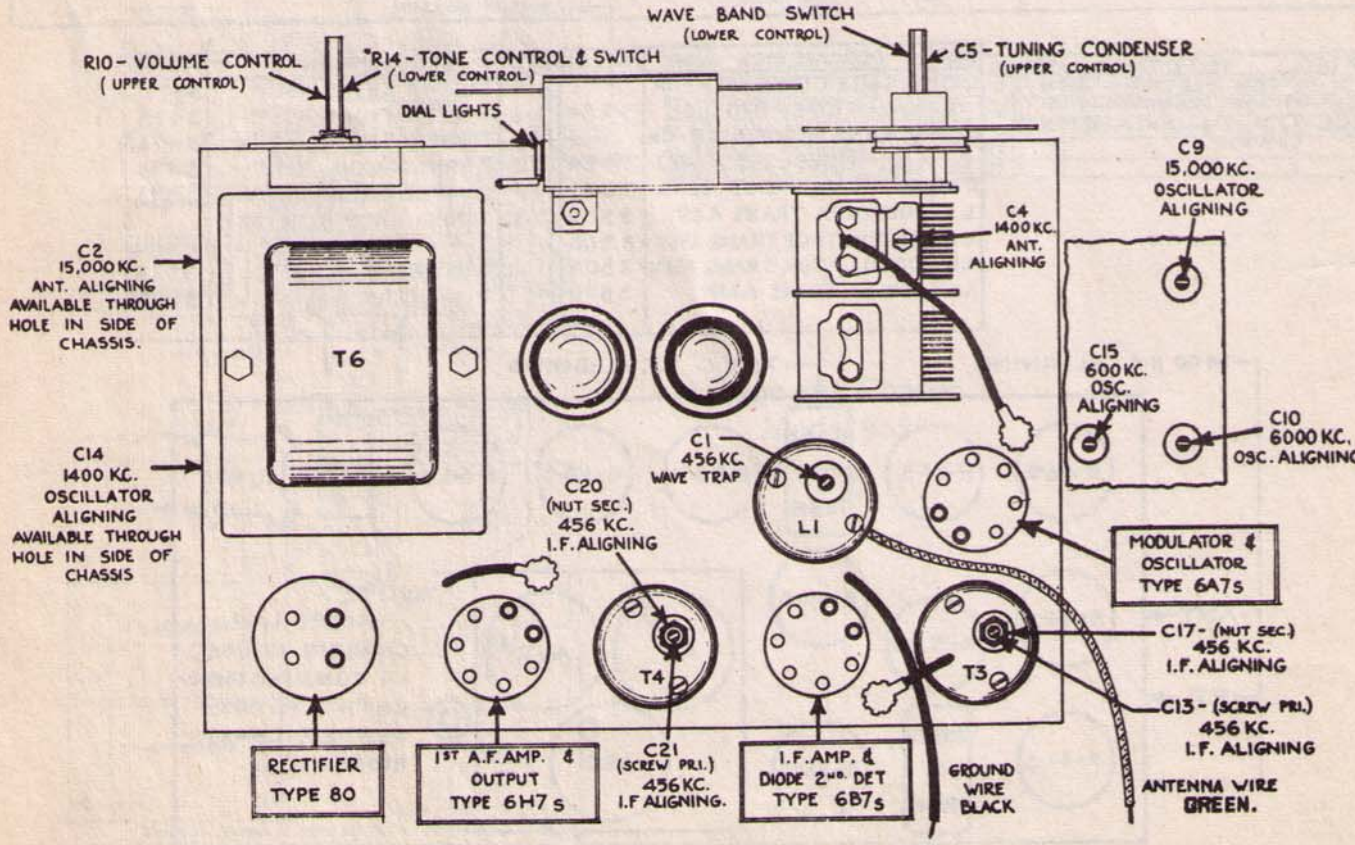

Top View—Types 4421, 4422, 4423 and 4424 Chassis
Models 4421, 4422, 4423 and 4424

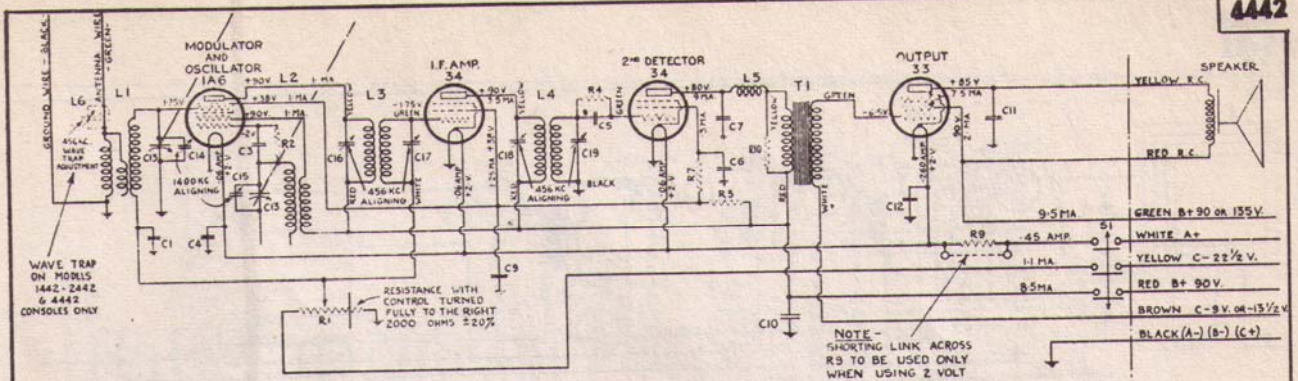


ITEM	RESISTANCE	LIMITS	WATTS	REMARKS	PART NO.
R1	20,000 OHMS			VOL. CONTROL	1142-B-A
R2	100,000	± 15%	1/4 W.	CARBON	32604-A
R3	16,000	± 10%	1/4 W.		33722-A
R4	2,000,000	± 20%	1/4 W.		32619-A
R7	100,000	± 20%	1/2 W.		33706-A
R8	-6	± 5%	1/2 W.	CANDOHM	38203-A
R9	300,000	± 15%	1/2 W.	CARBON	21018-A

ITEM	CAPACITY	LIMITS	WORKING VOLTS	TYPE	PART NO.
C1	1 MFD.	+20% -10%	200 V.	PAPER	38106-A
C3	.0002 "	± 20%	750 V.	MICA	34103-A
C4	.25	+20% -10%	200 V.	PAPER	36107-A
C5	.0001 "	± 20%	750 V.	MICA	37901-A
C6	1	+20% -10%	200 V.	PAPER	38106-A
C7	.0002 "	± 20%	750 V.	MICA	34103-A
C9	.25	+20% -10%	200 V.	PAPER	38107-A
C10	.5	+20% -10%	200 V.		38108-A
C11	.003	+20% -10%	300 V.		38103-A
C12	.25	+20% -10%	200 V.		38107-A



ITEM	DESCRIPTION	PART NO.
L1	ANTENNA R.F. TRANS.	4010-A
L2	OSCILLATOR COIL	4019-A
L3	1st I.F. TRANSFORMER	4025-A
L4	2nd I.F. TRANSFORMER	4028-A
L5	R.F. CHOKER, DET. PLATE	3551-A
L6	WAVE TRAP ASSEM.	3985-A
T1	AUDIO TRANSFORMER	4024-A
S1	BATTERY ON-OFF SWITCH	11537-A
	MODELS-1441-2441	11484-A
	USES 6" BEST MAGNETIC	
	MODELS-1442-2442-4442	11623-C
	USES 8" BEST MAGNETIC	

NOTE - VOLTAGES SHOWN ARE APPROX READINGS THAT SHOULD BE OBTAINED WITH A 1000 OHMS PER VOLT, VOLTMETER, BETWEEN POINT WHERE VOLTAGE IS INDICATED AND GROUND (CHASSIS).


Schematic Circuit Diagram, Type 4442 Chassis

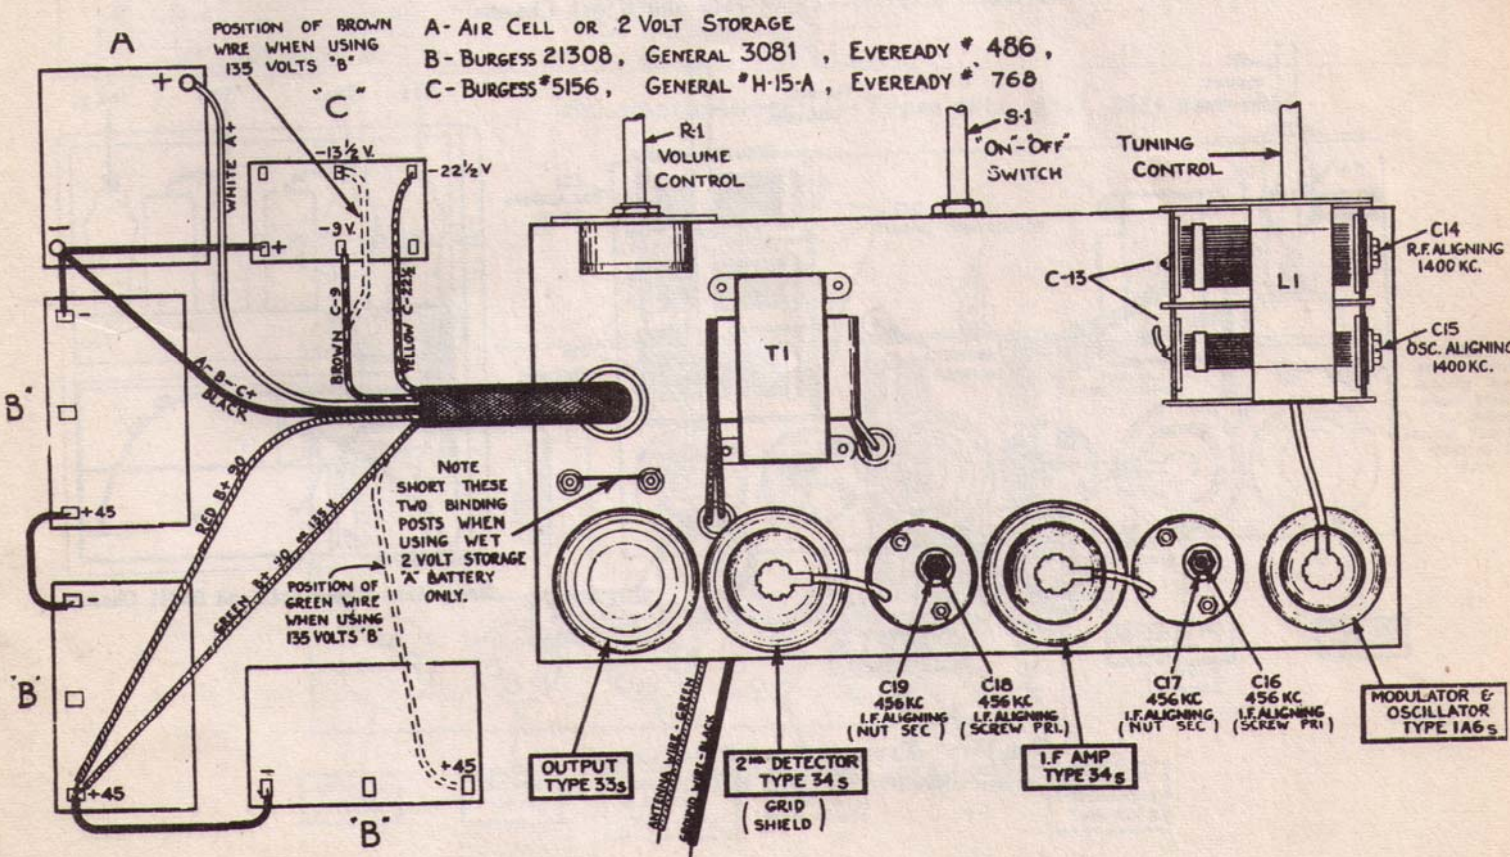


Top View—Type 4442 Chassis Model 4442

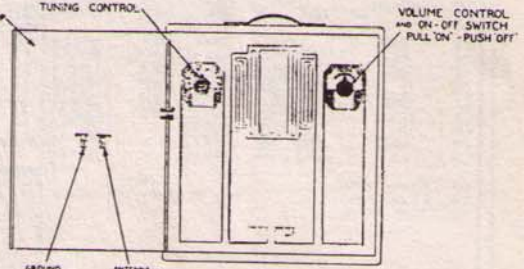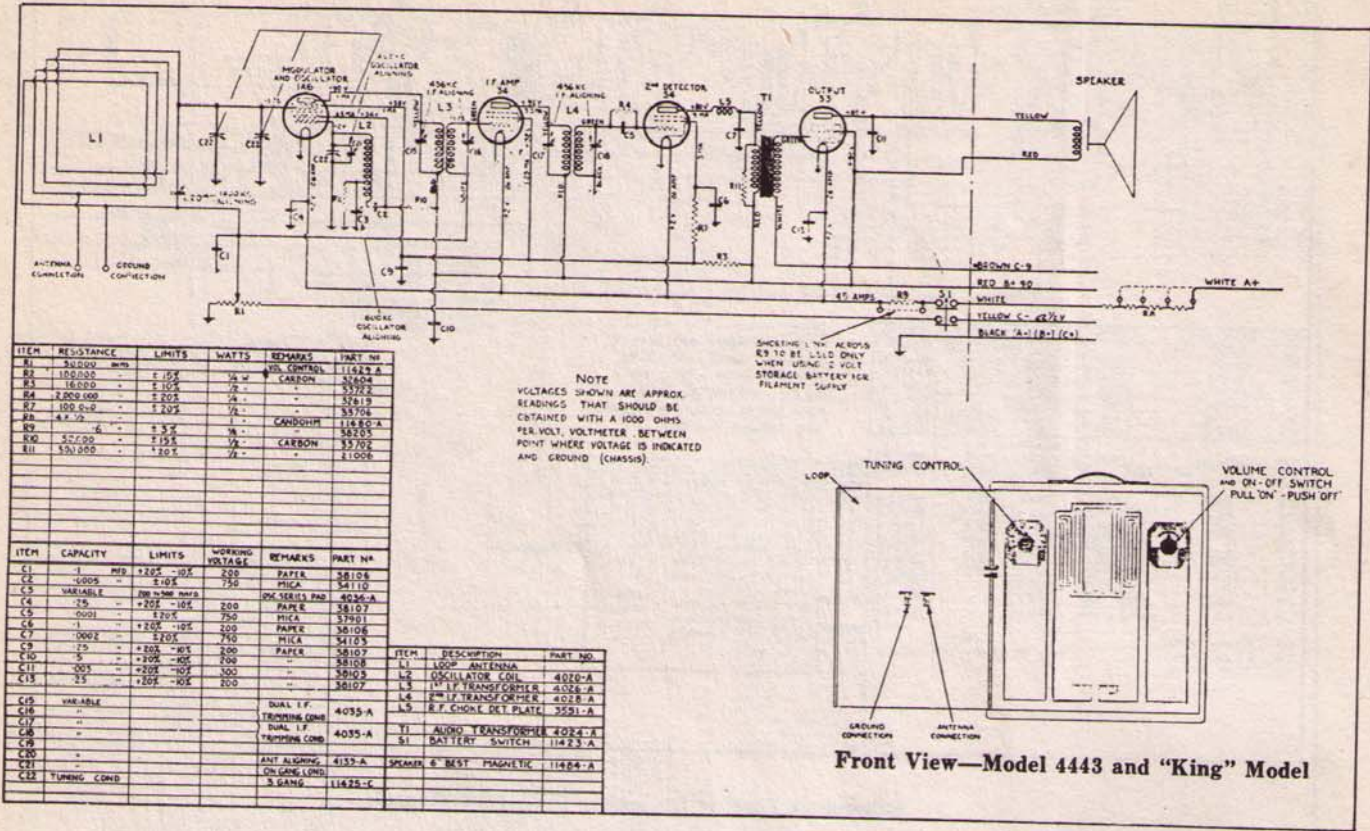


Schematic Diagram—Types 4443 and R5441 Chassis

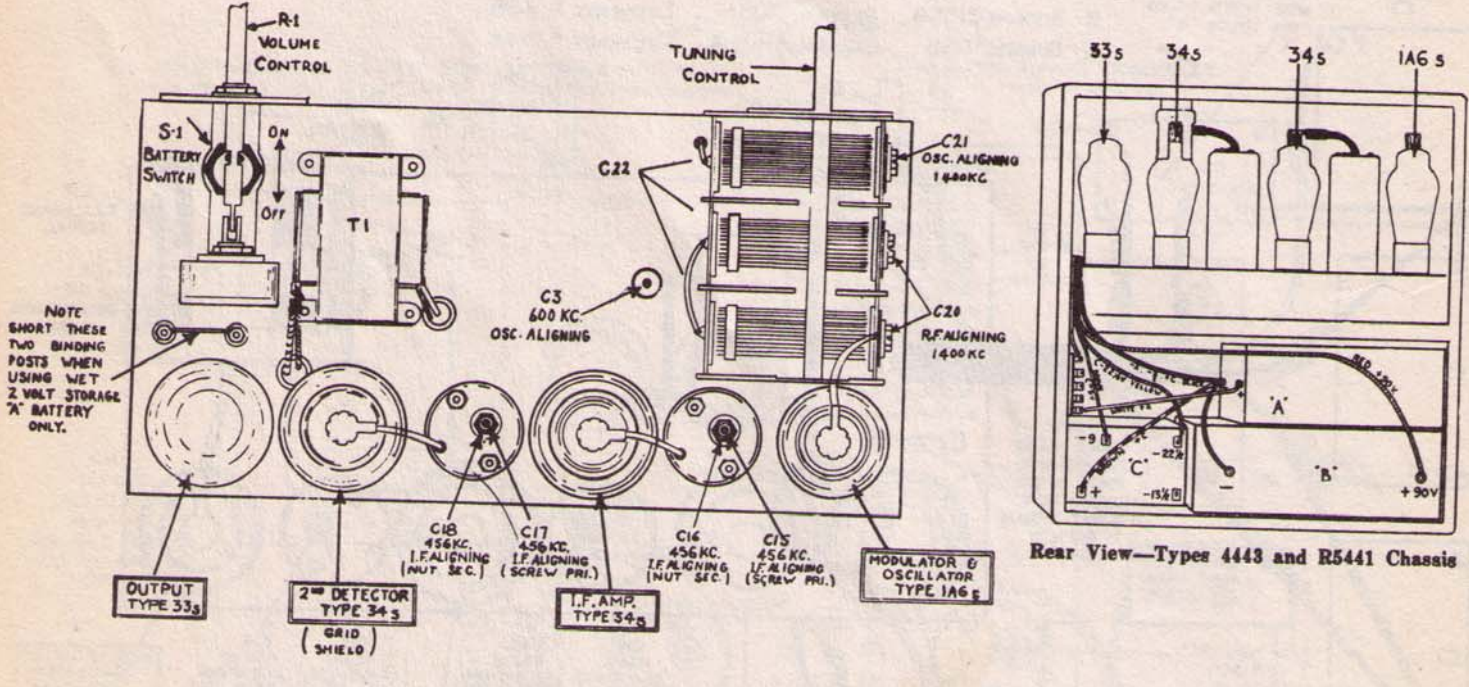


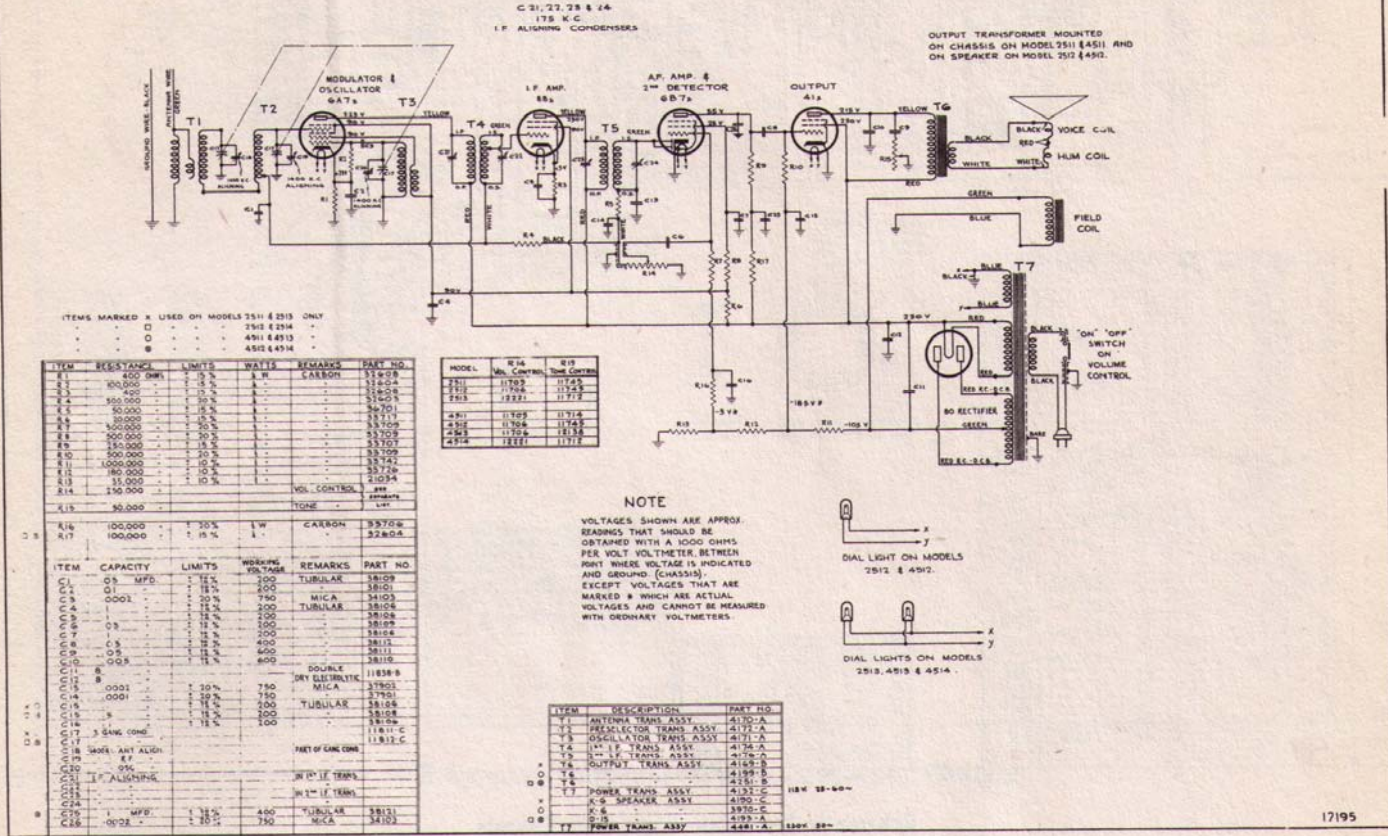

Schematic Diagram—Types 4511, 4512, 4513 and 4514

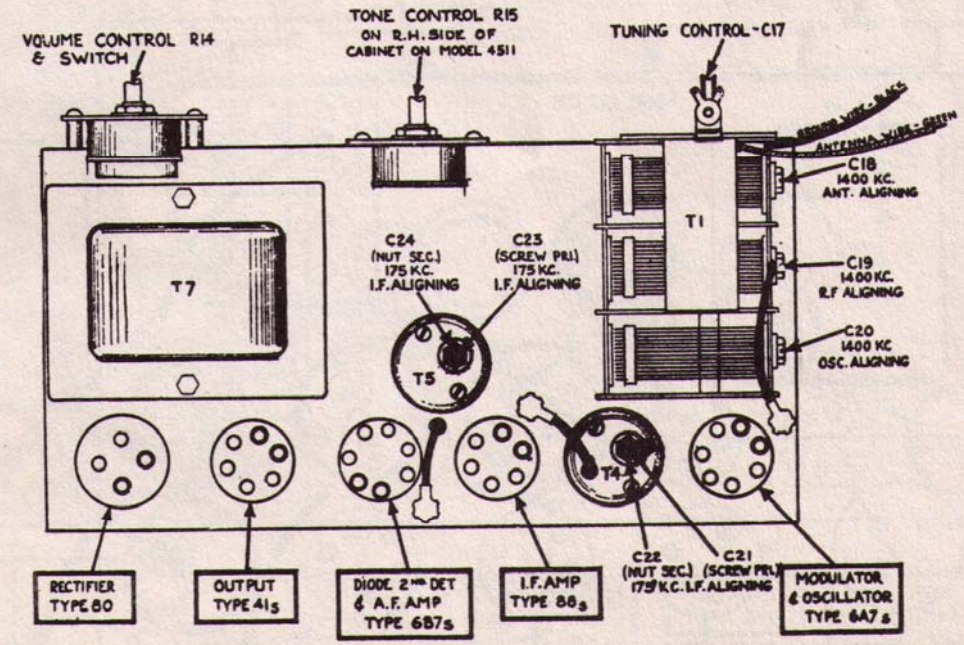


Top View—Types 4511, 4512, 4513 and 4514 Chassis
 Models 4511, 4512, 4513 and 4514

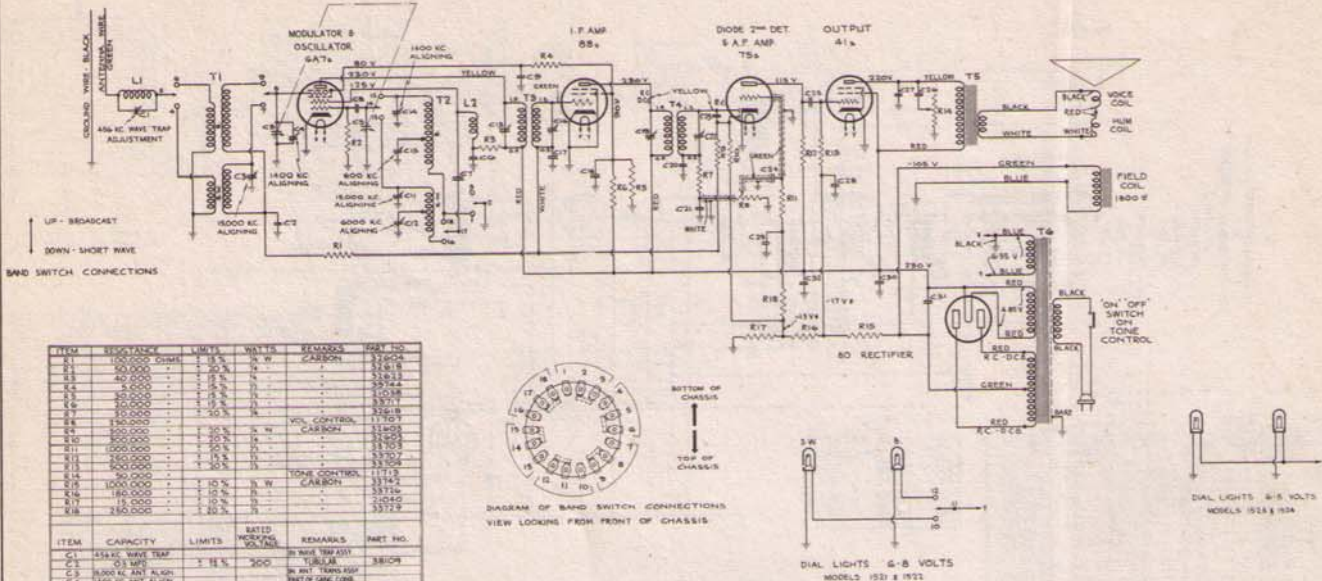

ITEM	DESIGNATION	LIMITS	WATTS	REMARKS	PART NO.
C1	15,000 KC. OSC. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C2	15,000 KC. OSC. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C3	15,000 KC. ANT. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C4	1400 KC. ANT. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C5	456 KC. WAVE TRAP	1.5% N.	0.5 W.	CARBON	322704
C6	456 KC. WAVE TRAP	1.5% N.	0.5 W.	CARBON	322704
C7	456 KC. WAVE TRAP	1.5% N.	0.5 W.	CARBON	322704
C8	456 KC. WAVE TRAP	1.5% N.	0.5 W.	CARBON	322704
C9	456 KC. WAVE TRAP	1.5% N.	0.5 W.	CARBON	322704
C10	456 KC. WAVE TRAP	1.5% N.	0.5 W.	CARBON	322704
C11	15,000 KC. OSC. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C12	6000 KC. OSC. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C13	6000 KC. OSC. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C14	1400 KC. ANT. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C15	600 KC. OSC. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C16	456 KC. I.F. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C17	456 KC. I.F. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C18	456 KC. I.F. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C19	456 KC. I.F. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C20	456 KC. I.F. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C21	456 KC. I.F. ALIGNING	1.5% N.	0.5 W.	CARBON	322704
C22	456 KC. I.F. ALIGNING	1.5% N.	0.5 W.	CARBON	322704


ITEM	CAPACITY	LIMITS	TESTED WORKING VOLTAGE	REMARKS	PART NO.
C1	15,000 KC. WAVE TRAP	1.5% N.	300	IN ANT. TRAP ASSY	38108
C2	15,000 KC. ANT. ALIGN.	1.5% N.	300	IN ANT. TRAP ASSY	38108
C3	1400 KC. ANT. ALIGN.	1.5% N.	300	IN ANT. TRAP ASSY	38108
C4	456 KC. WAVE TRAP	1.5% N.	300	IN I.F. TRAP ASSY	38108
C5	456 KC. WAVE TRAP	1.5% N.	300	IN I.F. TRAP ASSY	38108
C6	456 KC. WAVE TRAP	1.5% N.	300	IN I.F. TRAP ASSY	38108
C7	456 KC. WAVE TRAP	1.5% N.	300	IN I.F. TRAP ASSY	38108
C8	456 KC. WAVE TRAP	1.5% N.	300	IN I.F. TRAP ASSY	38108
C9	456 KC. WAVE TRAP	1.5% N.	300	IN I.F. TRAP ASSY	38108
C10	456 KC. WAVE TRAP	1.5% N.	300	IN I.F. TRAP ASSY	38108
C11	15,000 KC. OSC. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C12	6000 KC. OSC. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C13	6000 KC. OSC. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C14	1400 KC. ANT. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C15	600 KC. OSC. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C16	456 KC. I.F. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C17	456 KC. I.F. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C18	456 KC. I.F. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C19	456 KC. I.F. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C20	456 KC. I.F. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C21	456 KC. I.F. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108
C22	456 KC. I.F. ALIGN.	1.5% N.	300	IN I.F. TRAP ASSY	38108

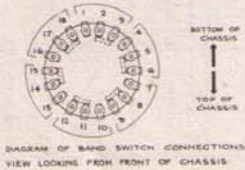


VOLTAGES SHOWN ARE APPROX. READINGS THAT SHOULD BE OBTAINED BETWEEN POINT WHERE VOLTAGE IS INDICATED AND GROUND (CHASSIS) WITH A 1000 OHMS PER VOLT VOLTMETER USING 150 VOLT RANGE. EXCEPT VOLTAGES THAT ARE MARKED * WHICH ARE ACTUAL VOLTAGES AND CANNOT BE MEASURED WITH ORDINARY VOLTMETER.

ITEM	DESCRIPTION	PART NO.
1	ANTENNA WIRE ASSY	21503
2	COIL WINDING TRANS. ASSY	21504
3	IF TRANS. ASSY	21505
4	IF TRANS. ASSY	21506
5	OUTPUT TRANS. ASSY	21507
6	POWER TRANS. ASSY	21508
7	POWER TRANS. ASSY	21509
8	K-6 SPEAKER ASSY	21510
9	K-6 SPEAKER ASSY	21511
10	WAVE TRAP ASSY	21512
11	IF CHROME ASSY	21513

Schematic Diagram—Type 4521 Chassis

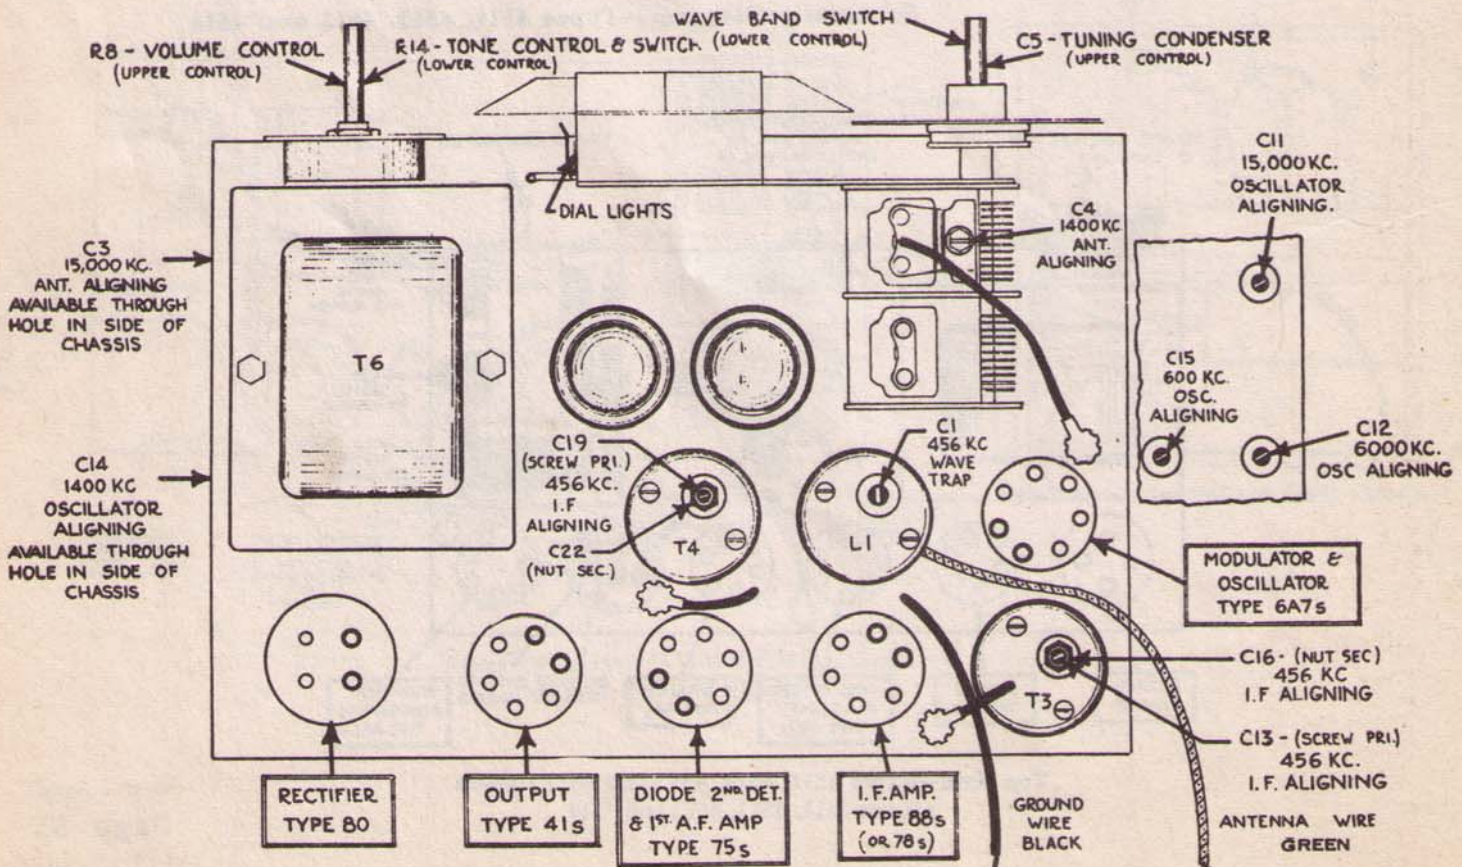

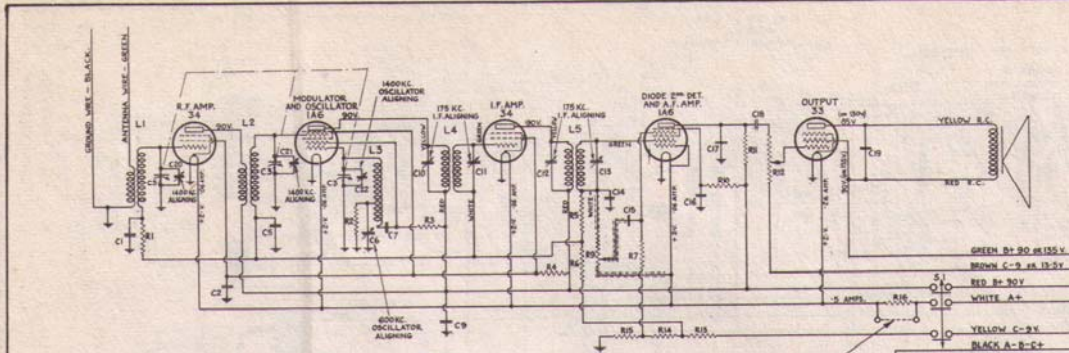

NOTE - VOLTAGES SHOWN ARE APPROX. READINGS THAT SHOULD BE OBTAINED WITH A 1000 OHMS PER VOLT VOLTMETER, BETWEEN POINT WHERE VOLTAGE IS INDICATED AND GROUND (CHASSIS). USE 250 VOLT RANGE OF METER.


NOTE - SHOCKING LINK ACROSS S1 IS TO BE USED ONLY WHEN USING 2 VOLT STORAGE BATTERY FOR FILAMENT SUPPLY.

ITEM	RESISTANCE	LIMITS	WATTS	TYPE	PART NO.
R1	30,000 OHMS	± 20%	1/4 W	CARBON	37617
R2	50,000	± 20%	1/4	"	37618
R3	10,000	± 20%	1/4	"	37619
R4	15,000	± 15%	1/4	"	21033
R5	500,000	± 20%	1/4	"	33709
R6	200,000	± 20%	1/4	"	27006
R7	1,000,000	± 20%	1/4	"	33703
R8					
R9	250,000	± 20%	FRONT SECTION	DUAL VOLUME CONTROL	11431-A
R10	1,000,000	± 20%	REAR SECTION	"	33746
R11	40,000	± 15%	1/4	"	53723
R12	50,000	± 15%	1/4	"	32615
R13	4,420	± 10%	1/4	"	32613
R14	145	± 10%	1/4	"	32614
R15	585	± 10%	1/4	"	32614
R16	55	± 5%		CANDORPH	38202

ITEM	CAPACITY	LIMITS	RATED WORKING VOLTAGE	TYPE	PART NO.
C1	.05 MFD	+20% -10%	200 V.	PAPER	38102
C2	1	+20% -10%	200 V.	"	38106
C3	3 GANG COND.		200 V.	"	11426
C4	.05 MFD	+20% -10%	200 V.	"	38102
C5	600KC. OSC. ALIGNING			TEHMER	4112-A
C6	600KC. OSC. ALIGNING		750 V.	MICA	34110
C7	.0005 MFD	± 10%	150 V.	ELECTROLYTIC	11511
C8	10	+20% -10%		"	"
C9	I.F. ALIGNING			"	"
C10				"	"
C11				"	"
C12				"	"
C13				"	"
C14				"	"
C15	.00025	± 10%	750 V.	MICA	34106
C16	.02	+20% -10%	400 V.	PAPER	28104
C17	.00025	± 10%	200 V.	"	38106
C18	.02	+20% -10%	750 V.	MICA	33903
C19	.0005	± 20%	400 V.	PAPER	28105
C20	600KC. OSC. ALIGNING		750 V.	MICA	34109
C21	600KC. I.F. ALIGNING			ON GANG COND.	"
C22	600KC. OSC. ALIGNING			"	"

ITEM	DESCRIPTION	PART NO.
L1	ANTENNA TRANSFORMER, ASSEM.	4042-A
L2	I.F. INTERSTAGE	4044-A
L3	OSCILLATOR COIL, ASSEM.	4041-A
L4	I.F. TRANSFORMER, ASSEM.	4038-A
L5	2ND I.F. TRANSFORMER	4040-A
S1	BATTERY SWITCH	11448-A
	SPEAKER ON MODEL 4541 - B "BEST"	11484-A
	SPEAKER " " " " " "	4542-B
	" " " " " "	11635-C
	" " " " " "	11448-B-A


Schematic Diagram—Types 4541-4542 Chassis

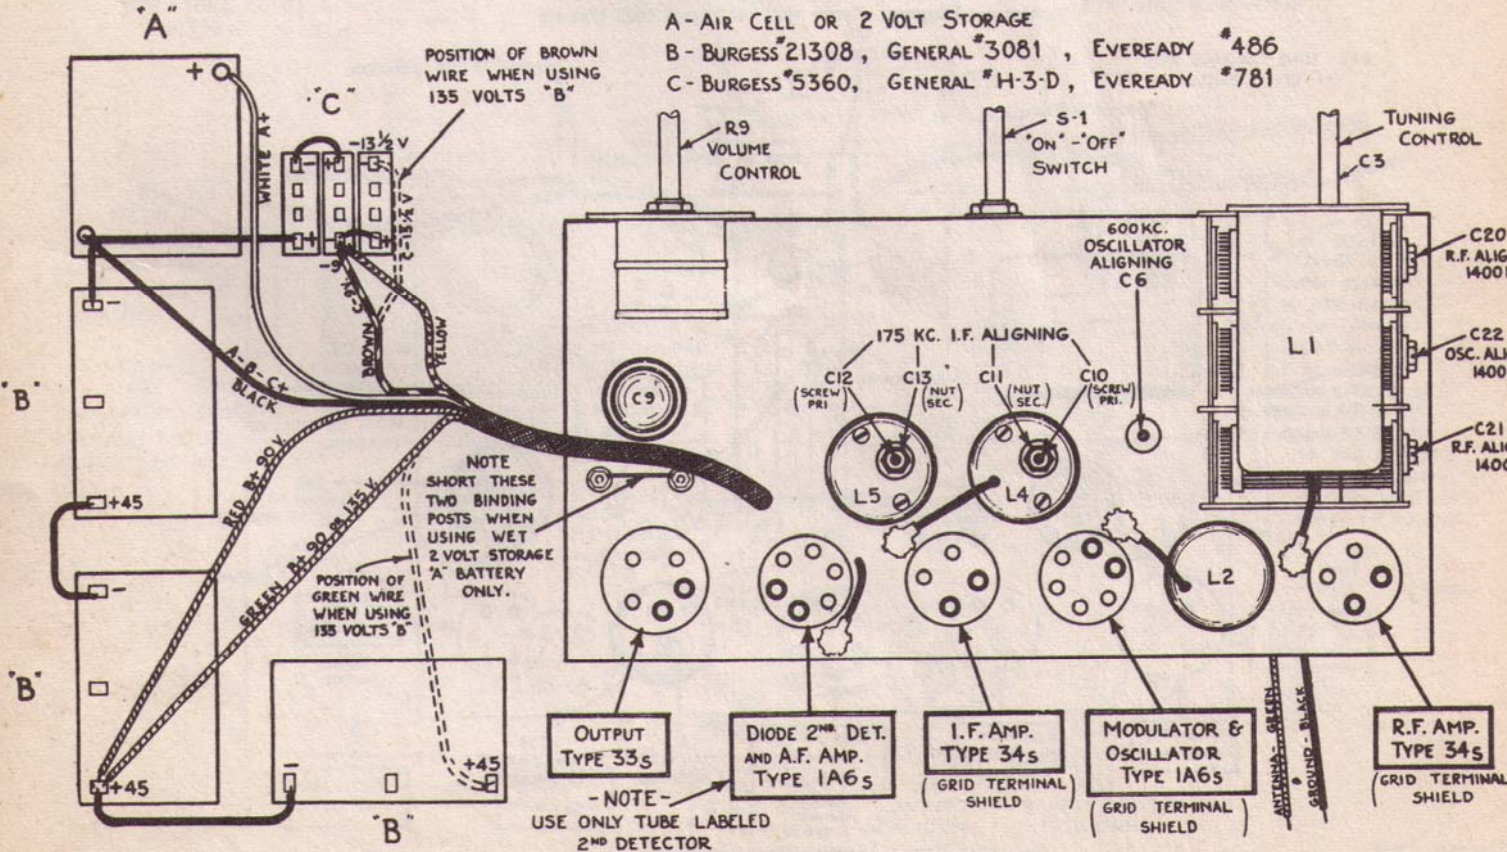

- A - AIR CELL OR 2 VOLT STORAGE
- B - BURGESS #21308, GENERAL #3081, EVEREADY #486
- C - BURGESS #5360, GENERAL #H-3-D, EVEREADY #781


- NOTE - USE ONLY TUBE LABELED 2ND DETECTOR

Top View—Types 4541-4542 Chassis
Models 4541 and 4542

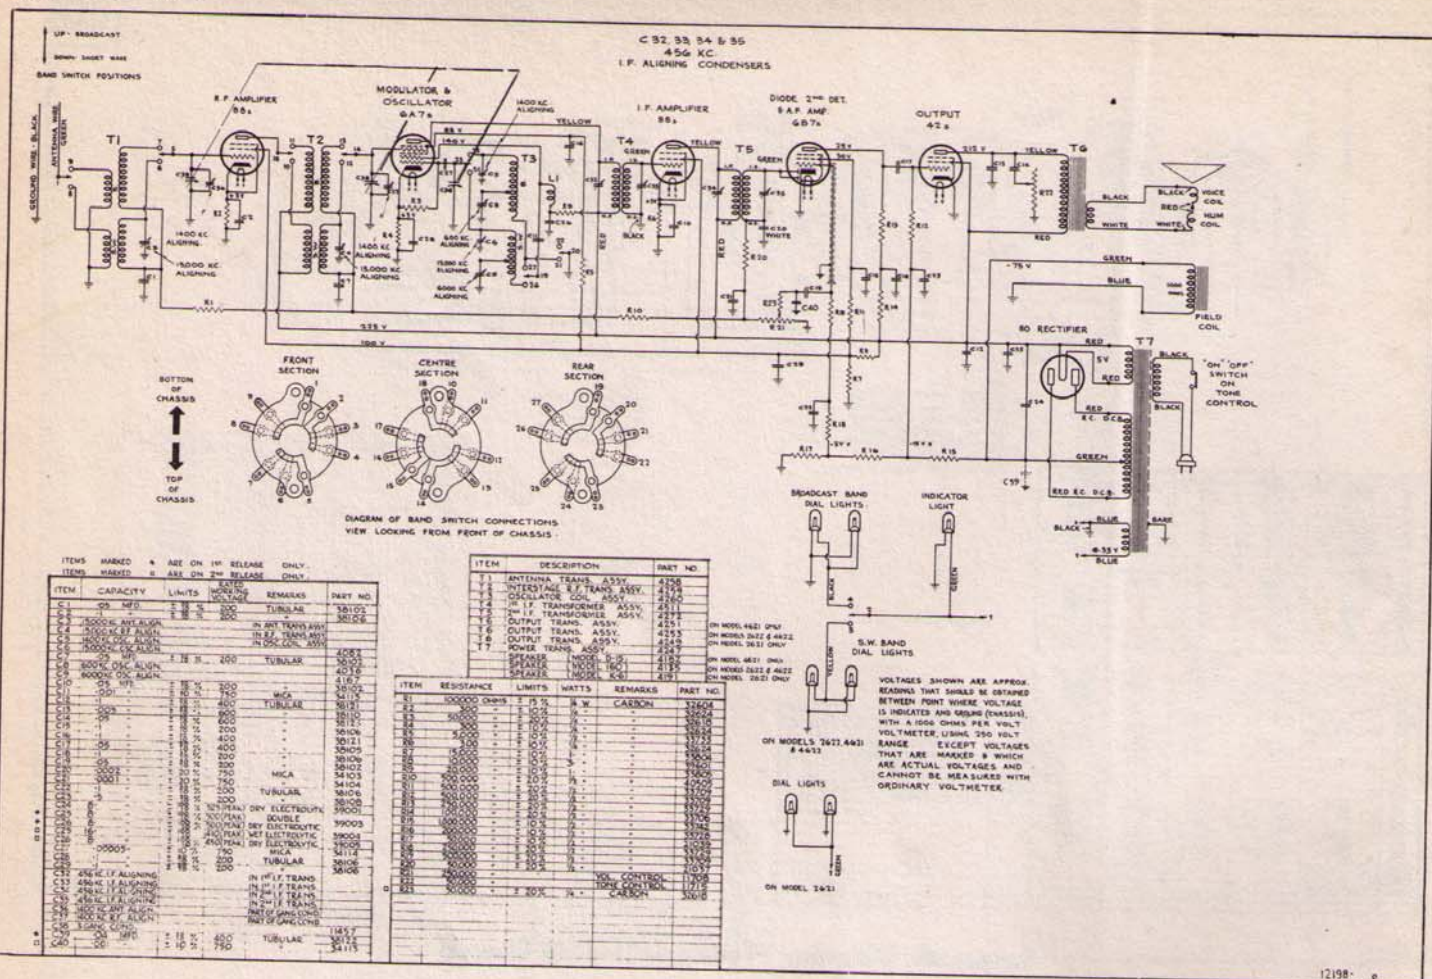


ITEM	CAPACITY	LIMITS	REMARKS	PART NO.
1	500 KC.	500	TUBULAR	38102S
2	500 KC.	500	TUBULAR	38102S
3	500 KC.	500	TUBULAR	38102S
4	500 KC.	500	TUBULAR	38102S
5	500 KC.	500	TUBULAR	38102S
6	500 KC.	500	TUBULAR	38102S
7	500 KC.	500	TUBULAR	38102S
8	500 KC.	500	TUBULAR	38102S
9	500 KC.	500	TUBULAR	38102S
10	500 KC.	500	TUBULAR	38102S
11	500 KC.	500	TUBULAR	38102S
12	500 KC.	500	TUBULAR	38102S
13	500 KC.	500	TUBULAR	38102S
14	500 KC.	500	TUBULAR	38102S
15	500 KC.	500	TUBULAR	38102S
16	500 KC.	500	TUBULAR	38102S
17	500 KC.	500	TUBULAR	38102S
18	500 KC.	500	TUBULAR	38102S
19	500 KC.	500	TUBULAR	38102S
20	500 KC.	500	TUBULAR	38102S
21	500 KC.	500	TUBULAR	38102S
22	500 KC.	500	TUBULAR	38102S
23	500 KC.	500	TUBULAR	38102S
24	500 KC.	500	TUBULAR	38102S
25	500 KC.	500	TUBULAR	38102S
26	500 KC.	500	TUBULAR	38102S
27	500 KC.	500	TUBULAR	38102S
28	500 KC.	500	TUBULAR	38102S
29	500 KC.	500	TUBULAR	38102S
30	500 KC.	500	TUBULAR	38102S
31	500 KC.	500	TUBULAR	38102S
32	500 KC.	500	TUBULAR	38102S
33	500 KC.	500	TUBULAR	38102S
34	500 KC.	500	TUBULAR	38102S
35	500 KC.	500	TUBULAR	38102S
36	500 KC.	500	TUBULAR	38102S
37	500 KC.	500	TUBULAR	38102S
38	500 KC.	500	TUBULAR	38102S
39	500 KC.	500	TUBULAR	38102S
40	500 KC.	500	TUBULAR	38102S
41	500 KC.	500	TUBULAR	38102S
42	500 KC.	500	TUBULAR	38102S
43	500 KC.	500	TUBULAR	38102S
44	500 KC.	500	TUBULAR	38102S
45	500 KC.	500	TUBULAR	38102S
46	500 KC.	500	TUBULAR	38102S
47	500 KC.	500	TUBULAR	38102S
48	500 KC.	500	TUBULAR	38102S
49	500 KC.	500	TUBULAR	38102S
50	500 KC.	500	TUBULAR	38102S


ITEM	DESCRIPTION	PART NO.
T1	ANTENNA TRANS. ASSY.	4258
T2	INTERMEDIATE F.F. TRANS. ASSY.	4259
T3	OSCILLATOR COIL ASSY.	4260
T4	1ST I.F. TRANSFORMER ASSY.	4261
T5	2ND I.F. TRANSFORMER ASSY.	4262
T6	OUTPUT TRANS. ASSY.	4263
T7	POWER TRANS. ASSY.	4264
T8	SPEAKER	4265
T9	SPEAKER	4266
T10	SPEAKER	4267
T11	SPEAKER	4268
T12	SPEAKER	4269
T13	SPEAKER	4270
T14	SPEAKER	4271
T15	SPEAKER	4272
T16	SPEAKER	4273
T17	SPEAKER	4274
T18	SPEAKER	4275
T19	SPEAKER	4276
T20	SPEAKER	4277
T21	SPEAKER	4278
T22	SPEAKER	4279
T23	SPEAKER	4280
T24	SPEAKER	4281
T25	SPEAKER	4282
T26	SPEAKER	4283
T27	SPEAKER	4284
T28	SPEAKER	4285
T29	SPEAKER	4286
T30	SPEAKER	4287
T31	SPEAKER	4288
T32	SPEAKER	4289
T33	SPEAKER	4290
T34	SPEAKER	4291
T35	SPEAKER	4292
T36	SPEAKER	4293
T37	SPEAKER	4294
T38	SPEAKER	4295
T39	SPEAKER	4296
T40	SPEAKER	4297
T41	SPEAKER	4298
T42	SPEAKER	4299
T43	SPEAKER	4300
T44	SPEAKER	4301
T45	SPEAKER	4302
T46	SPEAKER	4303
T47	SPEAKER	4304
T48	SPEAKER	4305
T49	SPEAKER	4306
T50	SPEAKER	4307

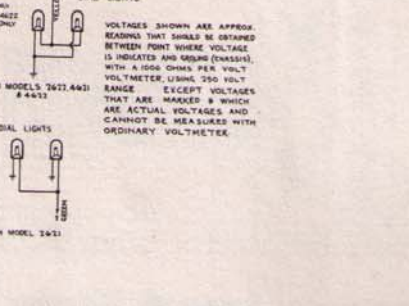


Schematic Diagram, Types 4621, 4622 and 4623 Chassis

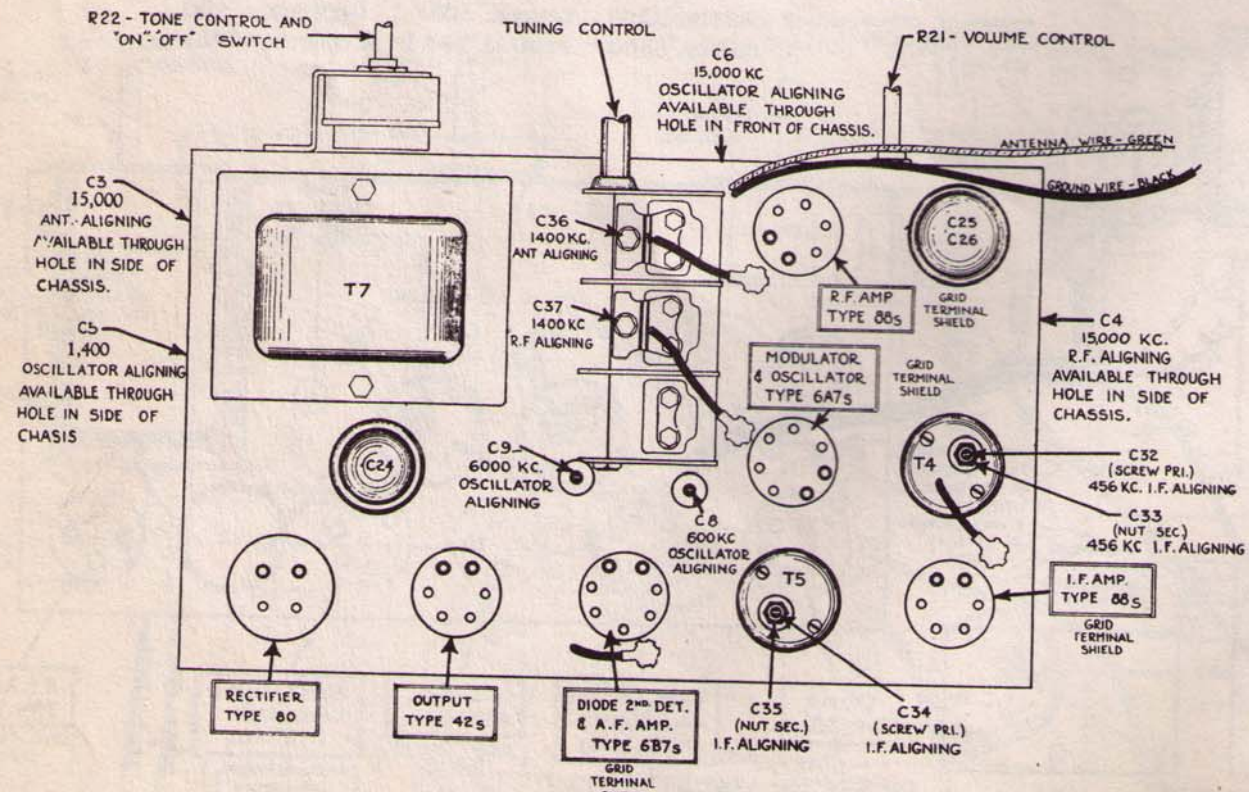



Top View—Types 4621, 4622 and 4623 Chassis
Models 4621, 4622 and 4623

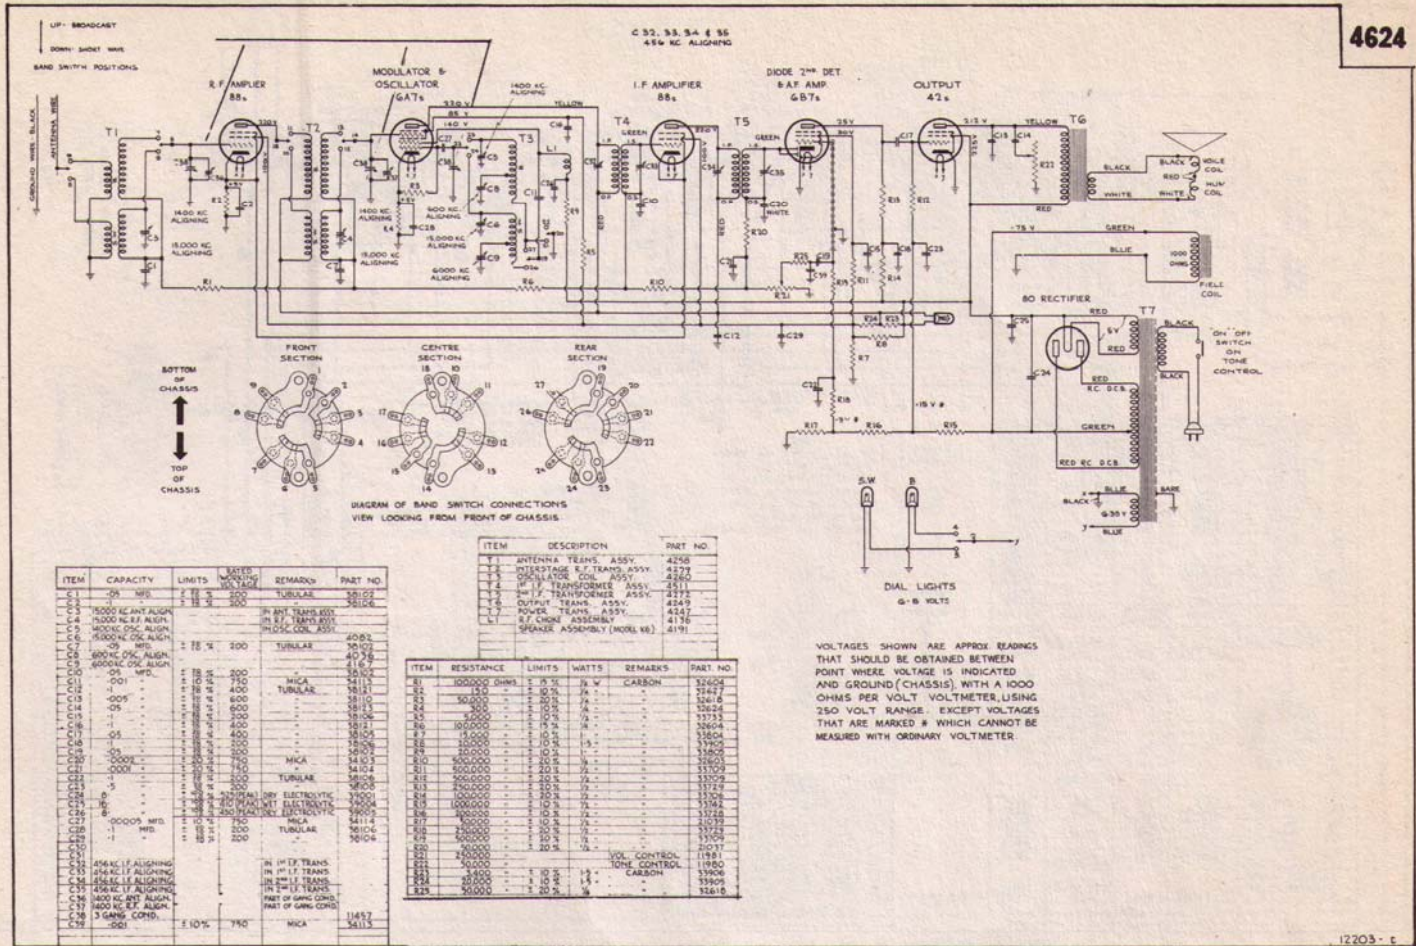


Schematic Diagram- Type 4624 Chassis Model 4624

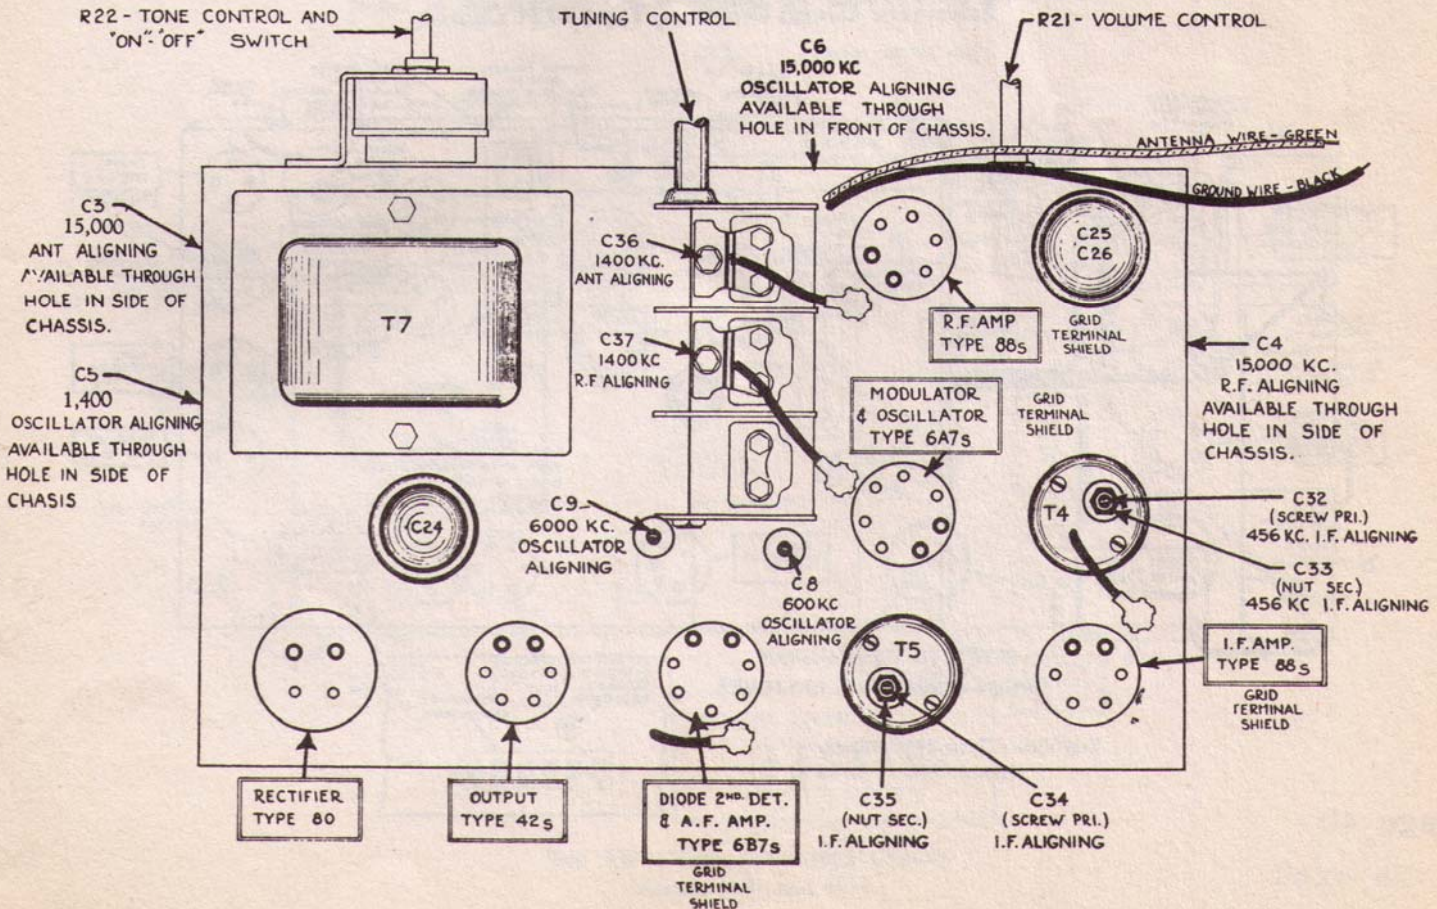


Top View-Type 4624 Chassis Model 4624

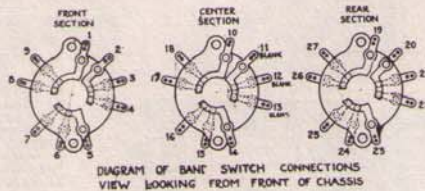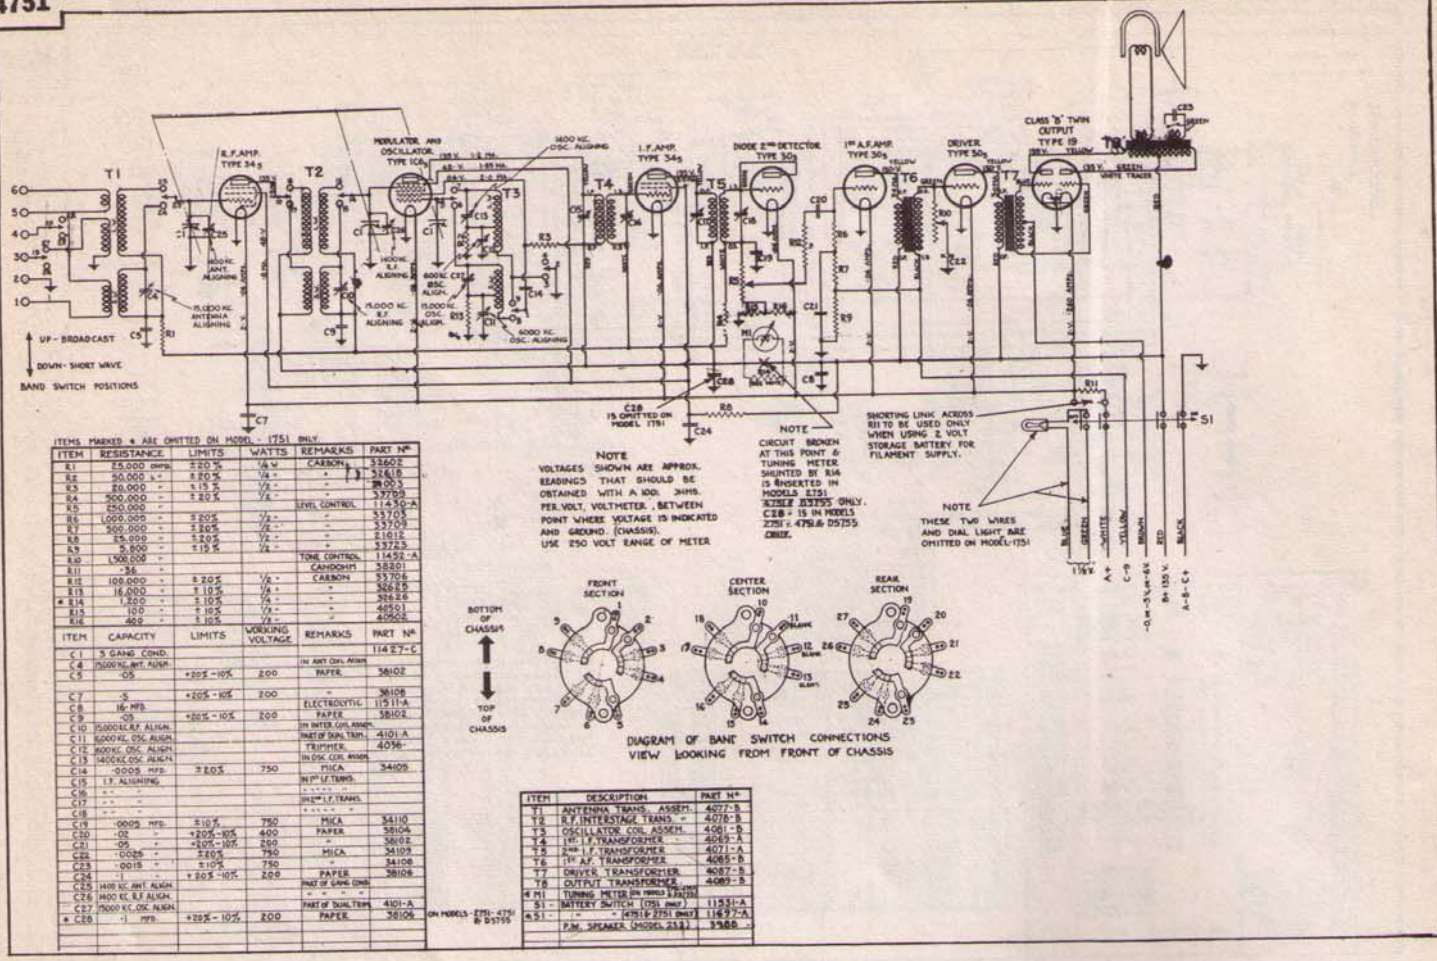


Schematic Circuit Diagram, Type 4751 Chassis

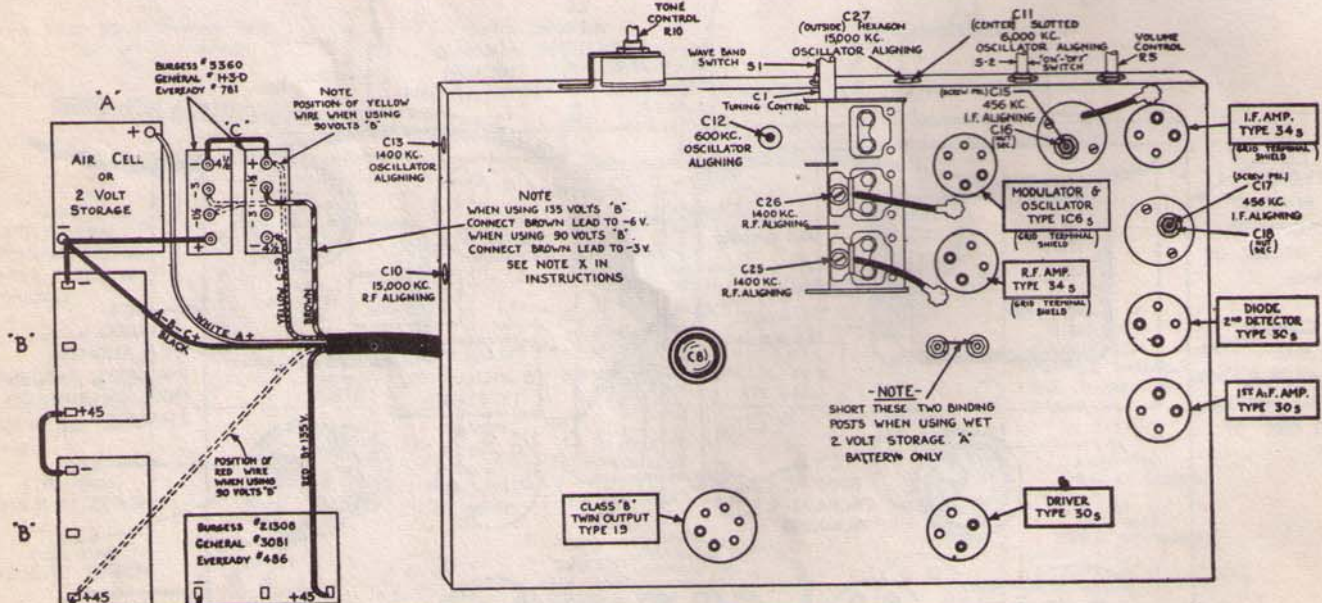

Top View—Type 4751 Chassis Model 4751

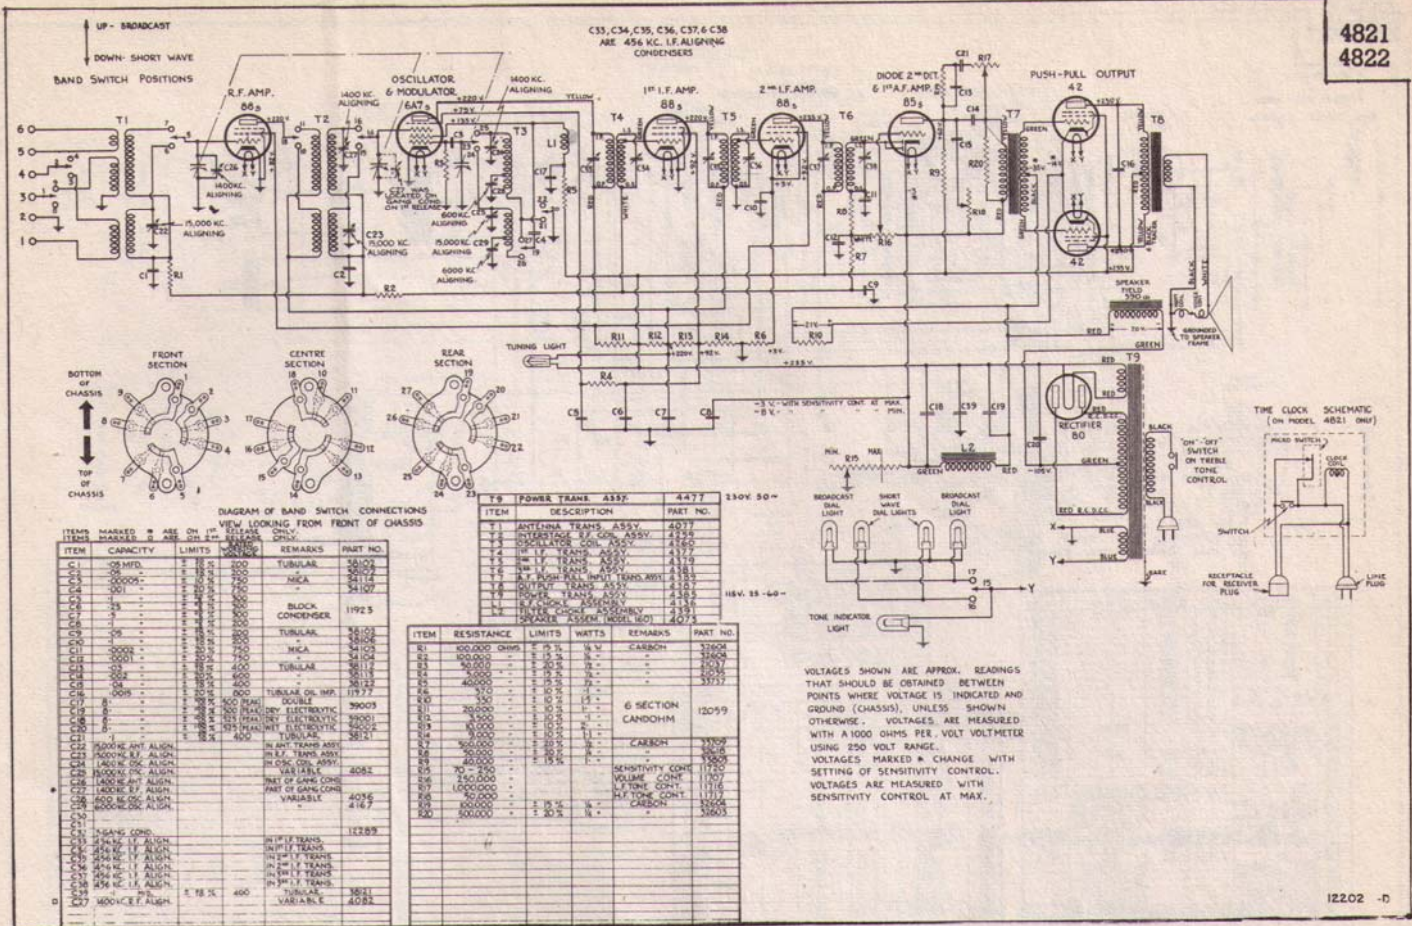

NOTE—Type 4822 Chassis identical but includes Stop-Start Clock.
Note: In late releases C27 is located on band switch in chassis.

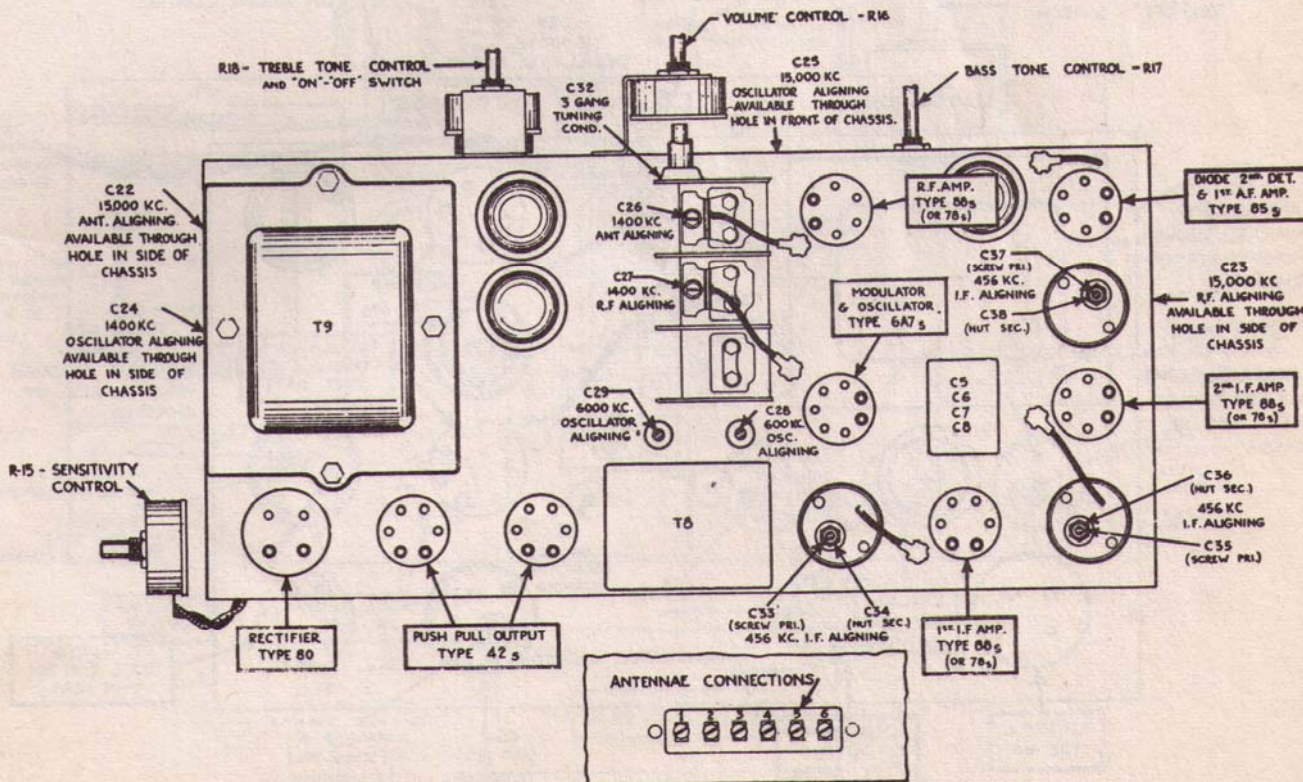

Top View Types 4821-4822 Chassis
 Models 4821 and 4822

C31, 32, 33 & 34
456 KC.
I.F. ALIGNING CONDENSERS

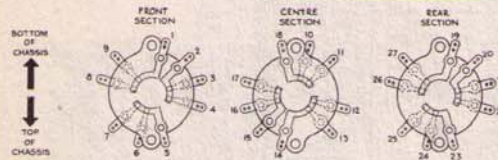
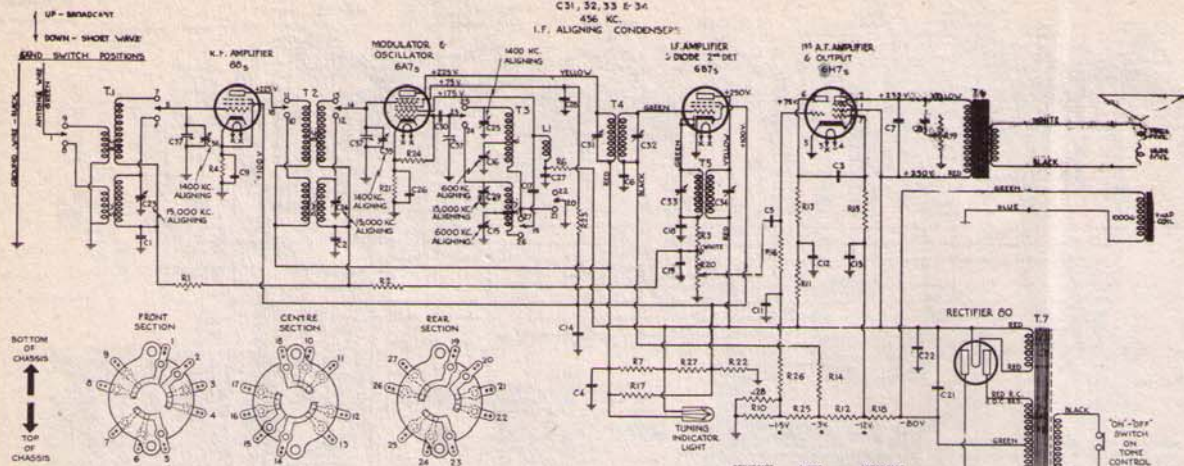


DIAGRAM OF BAND SWITCH CONNECTIONS
VIEW LOOKING FROM FRONT OF CHASSIS.


ITEM	CAPACITY	LIMITS	VALUES	REMARKS	PART NO.
C1	50 MFD.	1.5-30	5000	TUBULAR	4130
C2	500	10-100	5000	"	4130
C3	500	10-100	5000	"	4130
C4	500	10-100	5000	"	4130
C5	500	10-100	5000	"	4130
C6	500	10-100	5000	"	4130
C7	500	10-100	5000	"	4130
C8	500	10-100	5000	"	4130
C9	500	10-100	5000	"	4130
C10	500	10-100	5000	"	4130
C11	500	10-100	5000	"	4130
C12	500	10-100	5000	"	4130
C13	500	10-100	5000	"	4130
C14	500	10-100	5000	"	4130
C15	500	10-100	5000	"	4130
C16	500	10-100	5000	"	4130
C17	500	10-100	5000	"	4130
C18	500	10-100	5000	"	4130
C19	500	10-100	5000	"	4130
C20	500	10-100	5000	"	4130
C21	500	10-100	5000	"	4130
C22	500	10-100	5000	"	4130
C23	500	10-100	5000	"	4130
C24	500	10-100	5000	"	4130
C25	500	10-100	5000	"	4130
C26	500	10-100	5000	"	4130
C27	500	10-100	5000	"	4130
C28	500	10-100	5000	"	4130
C29	500	10-100	5000	"	4130
C30	500	10-100	5000	"	4130
C31	500	10-100	5000	"	4130
C32	500	10-100	5000	"	4130
C33	500	10-100	5000	"	4130
C34	500	10-100	5000	"	4130
C35	500	10-100	5000	"	4130
C36	500	10-100	5000	"	4130
C37	500	10-100	5000	"	4130
C38	500	10-100	5000	"	4130
C39	500	10-100	5000	"	4130
C40	500	10-100	5000	"	4130
C41	500	10-100	5000	"	4130
C42	500	10-100	5000	"	4130
C43	500	10-100	5000	"	4130
C44	500	10-100	5000	"	4130
C45	500	10-100	5000	"	4130
C46	500	10-100	5000	"	4130
C47	500	10-100	5000	"	4130
C48	500	10-100	5000	"	4130
C49	500	10-100	5000	"	4130
C50	500	10-100	5000	"	4130

ITEM	DESCRIPTIONS	PART NO.
T1	ANTENNA TURNS 250K	4130
T2	INTERSTAGE TURNS ASSY.	4130
T3	OSCILLATOR TURNS ASSY.	4130
T4	IF TURNS ASSY.	4130
T5	OUTPUT TURNS ASSY.	4130
T6	POWER TRANS. ASSY.	4130
T7	RECTIFIER	4130
T8	IF. COIL	4130
T9	IF. COIL	4130
T10	IF. COIL	4130
T11	IF. COIL	4130
T12	IF. COIL	4130
T13	IF. COIL	4130
T14	IF. COIL	4130
T15	IF. COIL	4130
T16	IF. COIL	4130
T17	IF. COIL	4130
T18	IF. COIL	4130
T19	IF. COIL	4130
T20	IF. COIL	4130
T21	IF. COIL	4130
T22	IF. COIL	4130
T23	IF. COIL	4130
T24	IF. COIL	4130
T25	IF. COIL	4130
T26	IF. COIL	4130
T27	IF. COIL	4130
T28	IF. COIL	4130
T29	IF. COIL	4130
T30	IF. COIL	4130



ITEM	RESISTANCE	LIMITS	VALUES	REMARKS	PART NO.
R1	5000 OHMS	1-10	5000	5W CARBON	4130
R2	5000	1-10	5000	"	4130
R3	5000	1-10	5000	"	4130
R4	5000	1-10	5000	"	4130
R5	5000	1-10	5000	"	4130
R6	5000	1-10	5000	"	4130
R7	5000	1-10	5000	"	4130
R8	5000	1-10	5000	"	4130
R9	5000	1-10	5000	"	4130
R10	5000	1-10	5000	"	4130
R11	5000	1-10	5000	"	4130
R12	5000	1-10	5000	"	4130
R13	5000	1-10	5000	"	4130
R14	5000	1-10	5000	"	4130
R15	5000	1-10	5000	"	4130
R16	5000	1-10	5000	"	4130
R17	5000	1-10	5000	"	4130
R18	5000	1-10	5000	"	4130
R19	5000	1-10	5000	"	4130
R20	5000	1-10	5000	"	4130
R21	5000	1-10	5000	"	4130
R22	5000	1-10	5000	"	4130
R23	5000	1-10	5000	"	4130
R24	5000	1-10	5000	"	4130
R25	5000	1-10	5000	"	4130
R26	5000	1-10	5000	"	4130
R27	5000	1-10	5000	"	4130
R28	5000	1-10	5000	"	4130
R29	5000	1-10	5000	"	4130
R30	5000	1-10	5000	"	4130

VOLTAGES SHOWN ARE APPROX. READINGS THAT SHOULD BE OBTAINED BETWEEN POINT WHERE VOLTAGE IS INDICATED AND GROUND (CHASSIS), WITH A 1000 OHMS PER VOLT VOLTMETER, USING 300 VOLT RANGE, EXCEPT VOLTAGES THAT ARE MARKED * WHICH CANNOT BE MEASURED WITH AN ORDINARY VOLTMETER.


12291

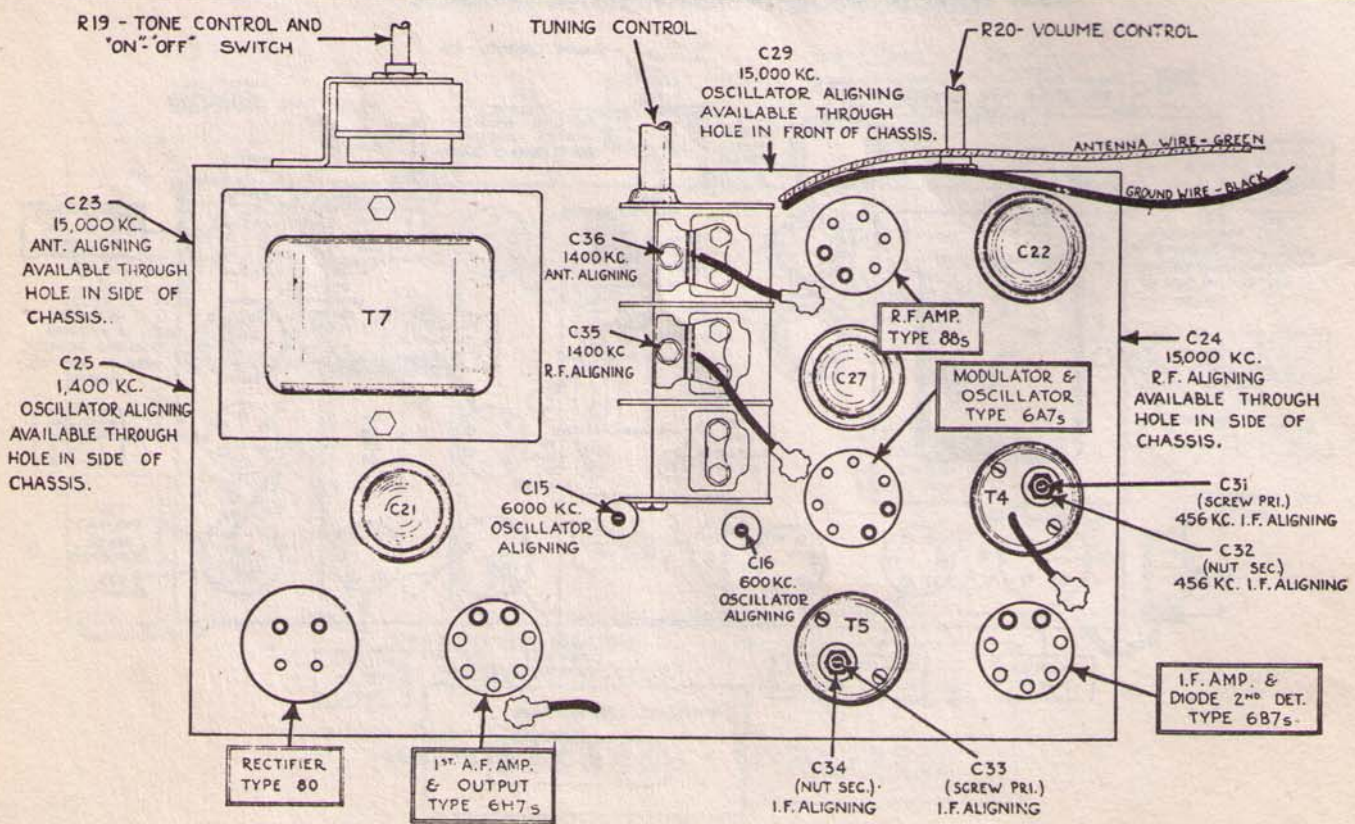

Top View—Type R5525 Chassis
Model R5525

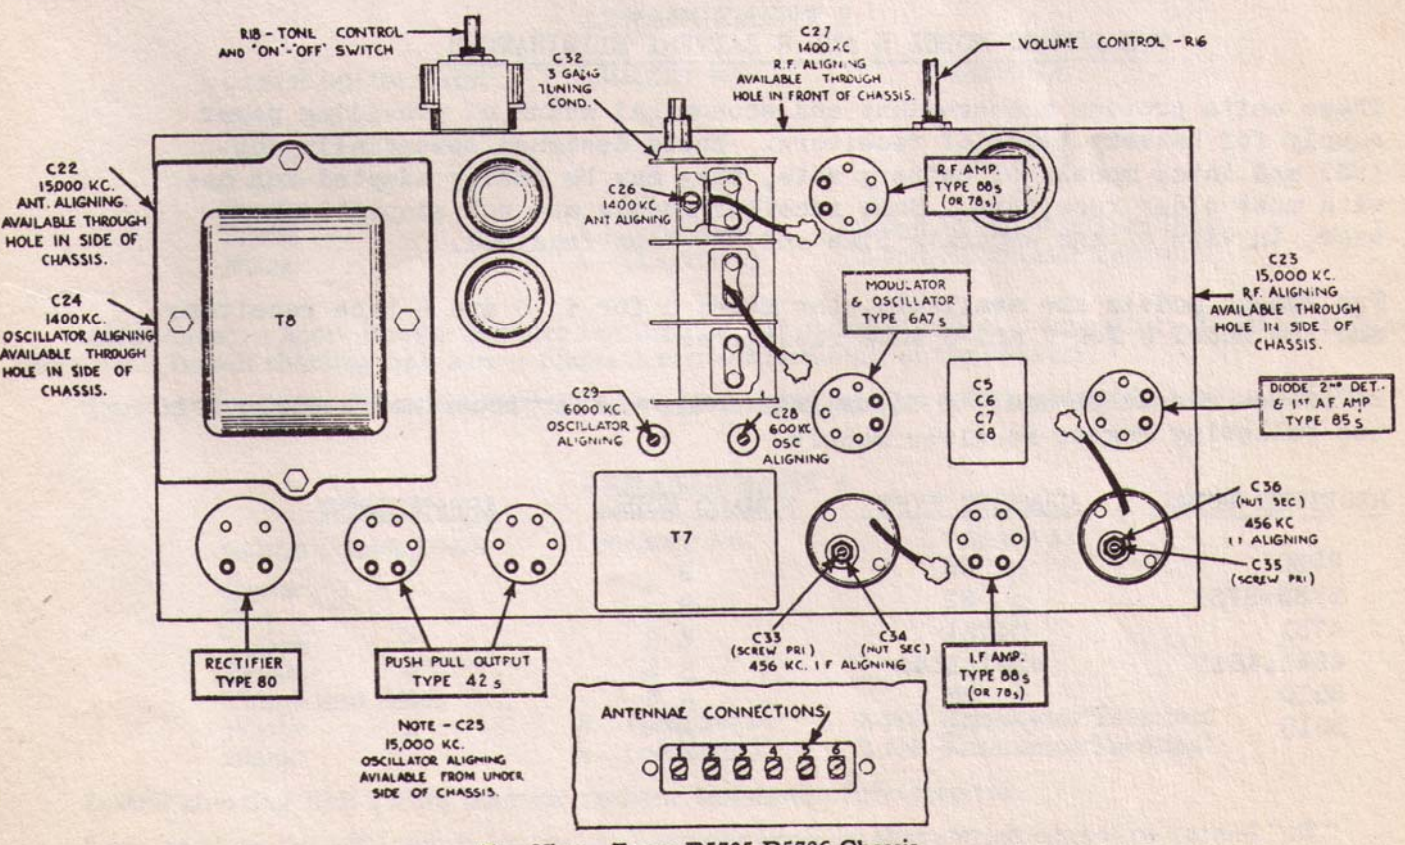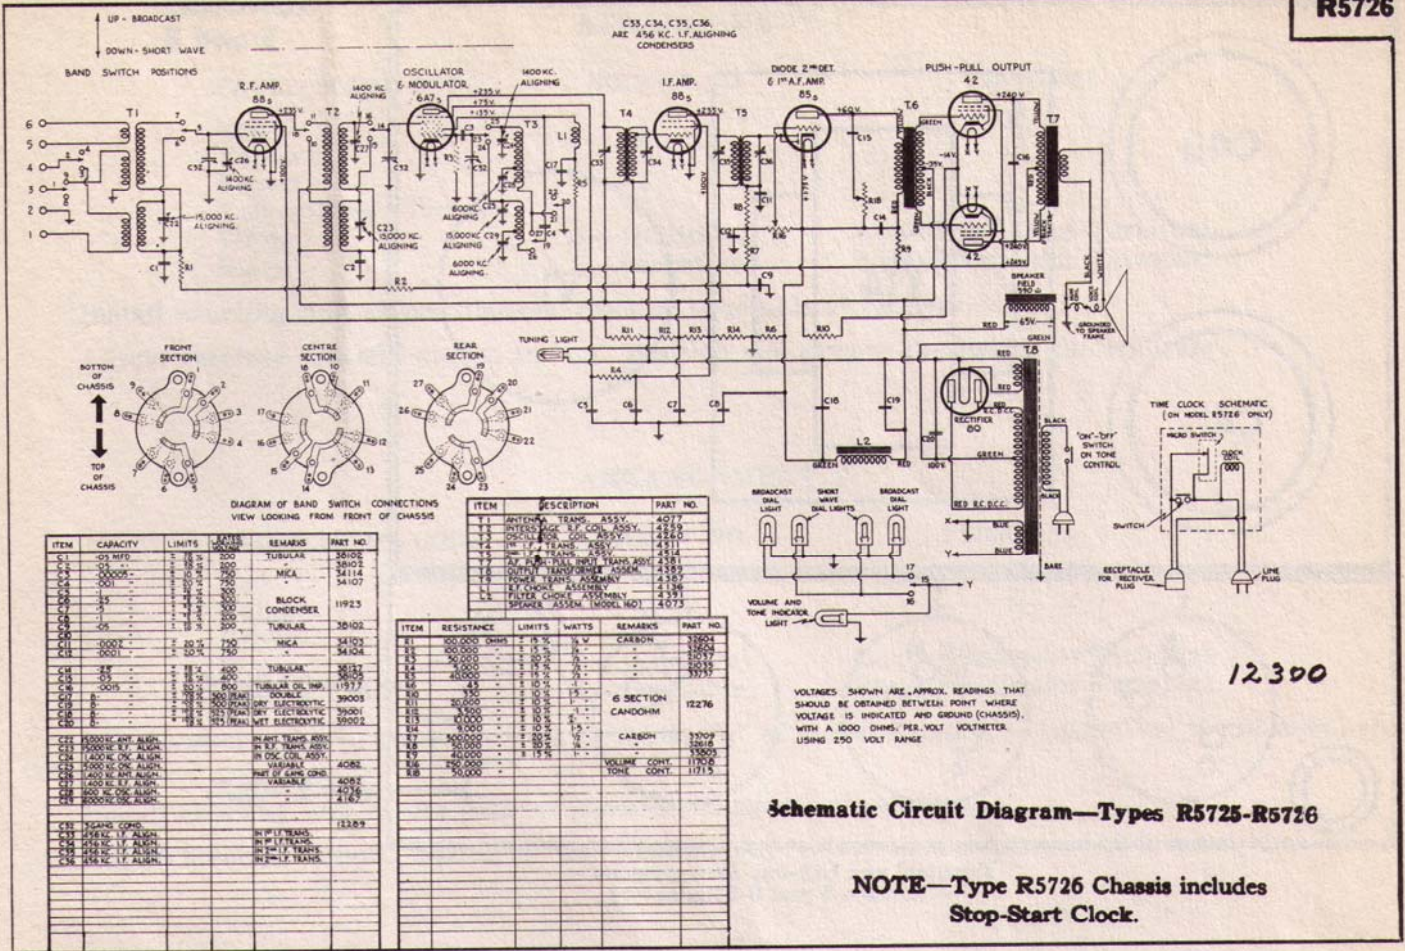

**ROMACO
5 and 8**

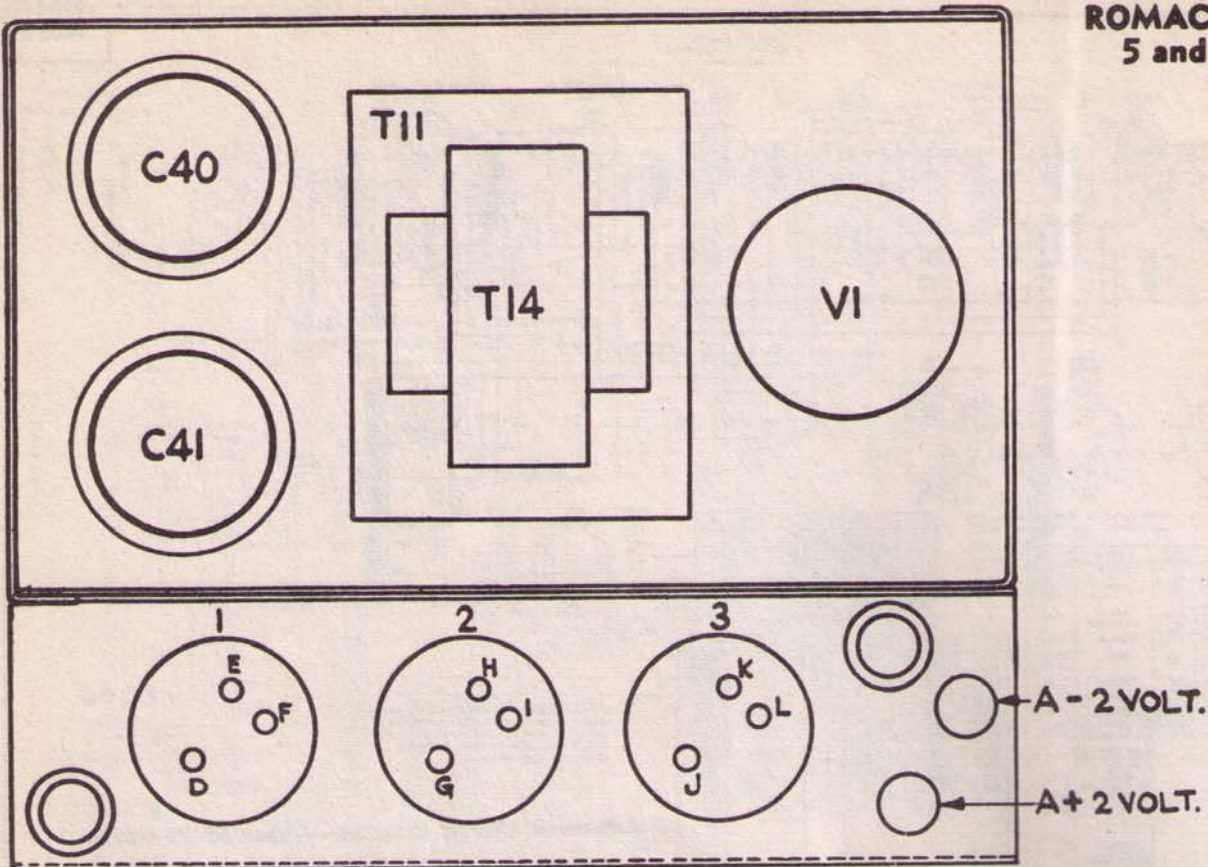

Terminal and Lay-out Arrangement—
—Romaco 5 and 8 Eliminator

THE ROMACO MODEL 5 AND 8 BATTERY ELIMINATORS

These units provide a convenient and economical means of providing power supply for battery types of receivers. While designed essentially for 1937 and later models of battery sets, they may be easily adapted for use with most older receivers. Some receiver models are not adaptable, however, in view of the separate Bias and "B" taps required.

Two Romaco models are available, the Model 5 for 4, 5 and 6 tube receivers and the Model 8 for 7 and 8 tube receivers.

Reference should be made to illustration above for proper connections for the following Rogers receiver models.

<u>RECEIVER MODEL</u>	<u>CHASSIS TYPE</u>	<u>ROMACO MODEL</u>	<u>ARRANGEMENT</u>
B730	22	8	1
B735-B736	22	8	1
4751	4751	8	2
4541,4542	4541,4542	5	3
B510	25	5	4
B515	25	5	4

ROMACO MODELS 5 and 8—Continued

ARRANGEMENT 1

CABLE COLOR CODE	SOCKET NO.	TERMINAL
Red	1	E
Yellow	2	G
Brown	2	I
Yellow-Black Tracer	3	L
White	A+ (positive)	2-volt Eliminator Terminal
Black	A- (negative)	2-volt Eliminator Terminal

Install shorting link across filament resistor terminals of receiver.

Adjust receiver "on-off" switch to "on" position and remove the switch control lever.

ARRANGEMENT 2

CABLE COLOR CODE	SOCKET NO.	TERMINAL
Red	1	E
Yellow	2	G
Brown	2	I
White	A+ (positive)	2-volt Eliminator Terminal
Black	A- (negative)	2-volt Eliminator Terminal

Also connect a short jumper between terminal "L" of socket 3 and A- (negative) 2-volt eliminator terminal.

Install shorting link across filament resistor terminals of receiver.

Adjust receiver "on-off" switch to "on" position and remove the switch control lever.

ARRANGEMENT 3

CABLE COLOR CODE	SOCKET NO.	TERMINAL
Red	1	E
Green	1	E
Yellow	2	G
Brown	2	G
White	A+ (positive)	2-volt Eliminator Terminal
Black	A- (negative)	2-volt Eliminator Terminal

Also connect a short jumper between terminal "L" of socket 3 and A- (negative) 2-volt eliminator terminal. Install shorting link across filament resistor terminals of the receiver.

Turn receiver "on-off" switch to "on" and remove knob, so that switch cannot be turned "off."

ARRANGEMENT 4

CABLE COLOR CODE	SOCKET NO.	TERMINAL
Green	1	E
Red	1	E
Yellow	2	G
Brown	2	G
Yellow and Black	3	L
White	A+ (positive)	2-volt Eliminator Terminal
Black	A- (negative)	2-volt Eliminator Terminal

Install shorting link across filament resistor terminals of the receiver.

Turn receiver "on-off" switch to "on" and remove knob, so that switch cannot be turned "off."

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

AUTO RADIO PARTS MISCELLANEOUS			BINDING POSTS Jacks - Plugs - Connectors Cont'd.		
Part No.	Model No.	Description	Part No.	Model No.	Description
IS $\frac{1}{2}$	918	Stud, Lock Washer.....	R11287	772A	Plug, Receptacle.....
N $\frac{1}{2}$	918	Stud, Hex. Nut.....	510-367	918	Plug, Tone Control.....
D510-27	918	Unit, Vibrator Comp.....	BULBS Dial and Tuning Light		
D-			R1403	90-200A-220 250-260- 400-400C- 420-480-490	Bulb, 3.8 Volt Dial Light.....
510-129	918	Crows Foot, Cable Coup.	R10105	451-551-561 641-642-646 741-742-841 832-833-831 951-861- 861A -862 261-772- 1161-1162	Bulb, 3 Volt Dial Light.
D-			R10105	1161-1162	Bulb, 3 Volt Tuning.....
510-134		Plate, Mounting.....	R11191	460-563A 563E-563F 563C-771 772-772A	Bulb, 6.3 Volt Dial..... light.....
D-			R11248	772A	Bulb, 3 Electrode Tun- A-Lite (Obsolete).....
510-140	918	Stud, Mounting.....	R11728	4751	Bulb, 2 Volt Dial Light.
D-			R11771	4621-4622 4821-4822 R5525-R5725 R5726	Bulb, 24 Volt Tuning light.....
510-141	918	Plate, Clamping.....	R12064	4621-4622 4821-8822 R5525-R5725 R5726	Bulb, 6.3 Volt Dial light (Black Tip).....
D-			510-211	918	Bulb, 6-8 Volt Dial light.....
510-150	918	Strap, Control Head.....	NOTE - While prices indicated are List, Special Net prices apply.		
D-			CABINET PARTS Knobs		
510-152	918	Bracket, Control Head...	P1217	831-832-833	Knob, Control.....
D-			P1218	831-832-833	Knob, Tuning.....
510-192	918	Crystal, Remote Con- trol Head.....	P1421-G	961	Knob, Tuning.....
D-			P1441-G	961	Knob, Control.....
510-293	918	Screw, Control Head Mounting.....	R1293	90-200A-220 250-260-400 400C-420- 480-490	Knob, Control.....
D-			R1294	90-200A-220 250-260-400 400C-420- 480-490	Knob, Tuning.....
510-298	918	Strap, Felt.....	R1297	90-200A-220 250-260-400 400C-420- 480-490	Knob, Trimmer.....
D-			R10124	741-742	Knob, Tuning and Control.....
510-349	918	Receptacle, Fuse.....	R10285	641-642	Knob, Tuning and Control.....
D-			R10305	646-841-951	Knob, Tuning and Control.....
510-268	918	Head, Remote Control Assem.....	R10533	451-551-661	Knob, Tuning and Control.....
D-					
513-309	918	Stud, Distributor Suppressor.....			
BALLASTS - VOLTAGE REGULATORS					
PA1054	831, 832, 833	Ballast, 7BP6 25-60 cycle.....			
R6-20	400,400C, 420,480, 490	Clarostat, 25 cycle.....			
4H-20	400400C 420,480, 490	Clarostat, 60 cycle.....			
BINDING POSTS Jacks - Plugs - Connectors					
R24-15	918	Plug, Speaker.....			
R3009	641-642 741-742	Post, Binding Assem.....			
R3216	261-646- 771-772- 772A-841-951	Post, Binding Assem.....			
R10005	883-742	Receptacle, Flush Mtg...			
R10111	641-642- 646-741- 742-841- 951	Plug, 4 Prong Speaker...			
R10117	261	Connector, Marr.....			
R10126	All Models	Plug, Line Cord.....			
R10720	261-1161- 1162-4822- R5726	Plug, Line Connector....			
R10721	261-1161- 1162-4822- R5726	Receptacle, Line Conn...			
R10913	1161-1162	Plug, 6-Prong, Filter Box.....			
R11120	661	Plug, 4 Prong Speaker...			
R11281	772A	Receptacle, Plug.....			
R11284	772A	Plug, Phone.....			

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

CABINET PARTS

Knobs - Cont'd.

Part No.	Model No.	Description	Part No.	Model No.	Description
R10885	261-561-771 772-772A- 861-861A- 862-462- 1161-1162	Knob, Small Combination..	R12141	4421-4422 4423-4424 4424-4521 4621-4622 4751	Knob, Switch.....
R10886	862-772- 1161-1162- 462	Knob, Large Combination..	R12172	4421-4422 4423-4424 4521	Knob, Tuning & Volume....
R10887	561-861- 861A-862- 771-1161- 1162	Knob, Control.....	R12209	4624	Knob, Control.....
R10952	563-563E- 563F-562- 562A-563C 4514-4511- 4821-4822- R5525-R5725- R5726	Knob, Tone & Suppressor Control.....	R12301	4822-R5726	Knob, Clock Door.....
R10973	Use with 10952 Knob	Spring, Knob Retaining...	R504-55	918	Knob, Tuning.....
R11097	371-563-562 4442	Knob, Tuning and Control.....	510-143	918	Knob, and Key Assy.....
R11135	563A-563C	Knob, Tuning and Control..	CABINET PARTS		
R11252	772A	Knob, Large Combination..	Escutcheon Plates		
R11261	772A-462	Knob, Small Combination..	R2194	400C	Plate, Concave Phone Switch.....
R11286	772A	Knob, Bank Selector.....	R10884	1161-1162	Window, S.W. Dial Light
R11313	563F	Knob, Tuning and Control..	R11109	562	Plate, Station Selector.
R11419	4542-4621- 4622-R5525 R5725-R5726 4751-4821- 4822 4542	Knob, Control.....	R11110	562	Plate, Volume Control...
R11581	4542	Knob, Switch with Indicator.....	R11142	371-563	Plate, Volume Control (Aluminum).....
R11608	4751	Knob, Tuning (First release only).....	R11143	371-563	Plate, Station Selector (Aluminum).....
R11610	4512-4513	Knob, Tuning and Volume..	R11228	563	Plate, Station Selector (Bronze).....
R11610	4421-4422 4423-4424 4521-4821 4822-R5525 R5725-R5726	Knob, Control.....	R11229	563	Plate, Volume Control (Bronze).....
R11645	4443-5441	Knob, Tuning and Control.....	R11240	563E	Plate, Station Selector.
R11869	4511-4514 4541	Knob, Tuning and Control.....	R11241	563E	Plate, Volume Control...
R119-1	4621-4622- 4821-4822- R5725-R5726 4751-R5525	Knob, Small Combination..	R11561	5441-4443	Plate, Station Selector.
R11902	4621-4622- 4821-4822- R5725-R5726 R5525-4751	Knob, Large Combination..	R11562	4541-5441- 4443	Plate, Volume Control...
R11903	Use on Fol- lowing Knobs- 10885-10886 10887-11252 11261-11286 11610-11645 11610-11419 12056-12209	Spring, Knob Retaining...	R11583	4421-4422- 4423-4424- 4513-4521 4621-4622- 4751-4821- 4822-R5575 R5725-R5726	Crystal, Dial.....
R11947	4541	Knob, Switch with Ind....	R11635	4542	Plate, Station Selector.
R12056	4624	Knob, Control.....	R11636	4442-4542	Plate, Volume Control...
			R11652	4442-4542	Plate, On & Off.....
			R11757	4511	Plate, Station Selector.
			R11758	4511	Plate, Volume Control...
			R11762	4512	Plate, Tuning Esc.....
			R11763	4512	Plate, Volume Esc.....
			R11767	4422	Plate, Esc.....
			R11829	4442	Plate, Station Selector.
			R11969	4421-4512- 4624	Plate, Crest (Rogers)
			R11970	4541	Plate, On & Off.....
			R11973	4541	Plate, Station Selector.
			R11222	4514	Plate, Station Selector.
			R11223	4514	Plate, Volume Control...
			CABLES		
			Speaker, Drive, Battery		
			P1034	831-832-833	Cable, Condenser Drive..
			R1276	90-200A- 220-250-260	Cable, Condenser Drive.. Per Ft. (Use R38601)..
			R3047	741-742	Cable, Speaker.....
			R3137	641-642-841 646-451-551	Cable, Speaker.....
				951	Cable, Speak.....
			R3519	261	Cable, Convertor Drive..
			R3522	261	Cable, Convertor Drive..
			R3607	261-462	Cable, Shielded Antenna.....

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

CABLES Speaker, Drive, Battery - Cont'd.			CONDENSERS Fixed By-Pass - Cont'd		
Part No.	Model No.	Description	Part No.	Model No.	Description
R3904	772A	Cable, Drive Assem.....	PL295	831-832-833	Cond., .5-.5 Mfd. Block..
R3924	462	Cable, Drive Pulley & Assem.....	PA1063	833	Cond., .5 Mfd. Block.....
R3925	462	Cable, Drive Assem.....	PL289	831-832-833	Cond., 1. Mfd. Block.....
R24701	All 2/c Models	Cable, 2 Conductor Line Per Ft.....	RL533	90-200A-220	Cond., 1 Mfd. 1000V Block.....
R33101	All Models Where Req.	Cable, Dial Drive (Phosphor Bronze) Per Ft.....	RL641	250-260	Cond., .002 Mfd. (M).....
R36301	563A-563C-462	Cable, Speaker.....	RL642	90-200A-220	Cond., .0005 Mfd. (M)....
R36302	4511-4512-4513-4514	Cable, Speaker.....	RL643	250-260-400	Cond., .00025 Mfd. (M)...
R36305	4421-4422-4423-4424-4513-4521-4621-4622-4751-R5725-R5726	Cable, Speaker, Per Ft...	R2081	400C-420	Cond., .5 Mfd. (M).....
R37201	772A	Cable, Special Speaker (4 Wire Flat)(Obsolete)	R2189	400C-480-490	Cond., 2. Mfd. 1000V Block.....
R40910	4442-4541-4542	Cable, 6 Wire Battery, Per Ft.....	R2285	420-400-400C	Cond., .1-.1-.1-.1 Mfd. Block.....
R38403	4751	Cable, Battery, Per Ft...	R2361	480-490	Cond., .1-.1-.1-.1-.1-.1 Mfd. Block.....
R38601	4421-4422-4423-4424-4513-4521-4621-4622-4751-R5525-R5725-R5726-4821-4822	Cable, (Linen) Condenser Drive, Per Ft.....	RL0059	400-400C-420	Cond., .5-.5 Mfd. Block..
R24-4	918	Cable, Speaker.....	RL0060	741-742	Cond., 1. Mfd. Block.....
510-139	918	Cable, Tone Control 30"...	RL0091	741-742	Cond., .04 Mfd. non-inductive.....
510-153	918	Cable, Tuning Control 30" (Flexible Drive)...	RL0120	646-661-641	Cond., .00025 Mfd. (M)
510-154	918	Cable, Volume Control 30" (Flexible Drive)...	RL0121	642-261-561-741-742-961	Cond., .005 Mfd. (M).....
510-162	918	Cable, Antenna (Shielded Loom).....	RL0122	641-642-646	Cond., .00025 Mfd. (M)...
510-232	918	Cable, Tuning Control 15" (Flexible Drive)...	RL0151	741-742	Cond., .00035 Mfd. (M)...
510-233	918	Cable, Volume Control 15" (Flexible Drive)...	RL0160	861-861A-862-1161-1162	Cond., .0001 Mfd. (M).....
510-264	918	Cable, Tone Control 10"...	RL0253	641-642-646	Cond., 1-1 Mfd. Block....
510-265	918	Cable, Tone Control 22"...	RL0254	641-642-646	Cond., .5-.5 Mfd. Block..
510-266	918	Cable, Volume Control 10 1/2" (Flexible Drive)...	RL0277	641-642-646	Cond., .5-.5 Mfd. Block (Vertical).....
510-267	918	Cable, Tuning Control 10" (Flexible Drive)...	RL0293	641-642	Cond., .1 Mfd. Block.....
510-279	918	Cable, Volume Control 22" (Flexible Drive)...	RL0295	641-642	Cond., .01 Mfd. Paper....
510-280	918	Cable, Tuning Control 22" (Flexible Drive)...	RL0374	841-951	Cond., 2.-.1-.1 Mfd.. Block.....
510-308	918	Cable, Battery Supply....	RL0375	841-951	Cond., .1-.1 Mfd. Block.....
P70733G	961	Cable, Battery.....	RL0376	841-951	Cond., 2.-.1-.5 Mfd. Block.....
NPN	661	Cable, Battery.....	RL0377	841-951	Cond., 2.-.1-.5-1. Mfd. Block.....
CONDENSERS Fixed By-Pass			RL0401	841	Cond., .002 Mfd. (M).....
PG101-G	961	Condenser, 2 Mfd.-200 V Block.....	RL0402	841	Cond., .002 Mfd. (M).....
G142	661	Condenser, 2 Mfd.-200 V. Block.....	RL0403	841	Cond., .0001 Mfd. (M)....
P1182	831-832-833	Cond., .001 Mfd. (M).....	RL0404	841	Cond., .0009 Mfd. (M)....
P1187	831-832-833	Cond., .00025 Mfd. (M)...	RL0407	451-551-646	Cond., .1 Mfd. (T).....
P1188	831-832-833	Cond., .002 Mfd. (M).....	RL0459	451-551	Cond., 3.-.1-.25-.5 Mfd. Block.....
			RL0496	451-551-951	Cond., .006 Mfd. (T).....
			RL0515	451-551-951	Cond., .1 Mfd. (T).....
			RL0593	All 563-562-771-772-772A	Cond., .005 Mfd. (T).....
			RL0658	951	Cond., .05 Mfd. (T).....
			RL0660	951	Cond., .02 Mfd. (T).....
			RL0661	951	Cond., .0005 Mfd. (M)....
			RL0667	951	Cond., .00005 Mfd. (M)...
			RL0862	561-661	Cond., .1 Mfd. (T).....
					300V.....

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

CONDENSERS

Fixed By-Pass - Cont'd.

Part No.	Model No.	Description	Part No.	Model No.	Description
R10863	All 563-562 371-861, 861A-862- 961-1161- 1162	Cond., .1 Mfd. (T) 200V..	R34103	All 563-371 771-772- 772A-4421- 4422-4423- 4424-4442- 4443-5441- 4511-4512- 4513-4514- 4521-4621- 4622-4624- R5525-R5725 R5726-4821- 4822	Cond., .0002 Mfd. (M)....
R10864	261-371-561 861-861A- 862-All 563 661-1161- 1162	Cond., .01 Mfd. (T) 500V.	R34104	All 563-371 771-772- 772A-4421- 4422-4423- 4424-4521- 4621-4622- 4624-4821- 4822-R5525- R5725-R5726	Cond., .0001 Mfd. (M)....
R10866	371-462-661 861-861A- 862-961-771 772-772A- 1161-1162	Cond., .05 Mfd. (T) 200V.	R34105	771-772- 772A-4751	Cond., .0005 Mfd. (M)....
R10867	861-861A- 862-1161- 1162	Cond., .05 Mfd. (T) 300V.	R34106	462	Cond., .00025 Mfd. (M)...
R10868	562-561-861 861A-862	Cond., .05 Mfd. (T) 500V.	R34107	371-4821- 4822-R5725- R5726	Cond., .001 Mfd. (M).....
R10870	561	Cond., .002 Mfd. (T) 500V.....	R34108	4751	Cond., .0015 Mfd. (M)....
R10871	861-861A- 862-1161- 1162	Cond., .0035 Mfd. (T) 200V.....	R34109	4541-4542- 4751	Cond., .0025 Mfd. (M)....
R10878	561-861- 861A-862	Cond., .1-.1-.1-.25-.5 Mfd. Block.....	R34110	4443-5441- 4541-4542- 4751	Cond., .0005 Mfd. (M)....
R10903	1161-1162	Cond., .1-.1-.1-.1-.1- .1-.25-.5 Mfd. Block.....	R34113	4421-4422- 4423-4424- 4521-4621- 4622-4624- R5525	Cond., .001 Mfd. (M).....
R10905	661-961- 1161-1162	Cond., .006 Mfd. (T) 300V	R34114	4421-4422- 4423-4424- 4521-4621- 4622-4624- R5525-R5725- R5726-4821 4822	Cond., .0005 Mfd. (M)....
R10975	371-562-All 563-771-772 772A	Cond., .03 Mfd. (T).....	R34201	561	Cond., .0012 Mfd. (M)....
R11101	562-661-961	Cond., .25 Mfd. (T) 500V.	R34202	861-861A- 862	Cond., .0001 Mfd. (M)....
R11139	371-All 563	Cond., .05 Mfd. (T) 400V.	R34203	561-861- 861A-862- 1161-1162	Cond., .00063 Mfd. (M)...
R11147	462	Cond., .1-.5-.25-.25 Mfd. Block.....	R34204	771-772- 772A	Cond., .00025 Mfd. (M)...
R11148	462	Cond., .05-.03-.005- .01-.03 Mfd. Block.....	R37901	4442-4443- 5441-4511- 4512-4513- 4514	Cond., .0001 Mfd. (M)....
R11196	771-772- 772A	Cond., 5. Mfd. 50V.....	R37902	4511-4512- 4513-4514	Cond., .0002 Mfd. (M)....
R11200	771-772- 772A	Cond., .1-.1-.1-.5-.25 Mfd. Block.....	R37903	4541-4542	Cond., .00025 Mfd. (M)...
R11222	371	Cond., .015 Mfd. (T) 400V.....	R38101	4511-4512- 4513-4514- 4521	Cond., .01 Mfd. (T) 200V.
R11923	4821-4822 R5726- R5725	Cond., .1-.1-.5-.25 Mfd. Block.....	R38102	4541-4542- 4621-4622- 4624-R5525- R5725-R5726 4751-4821- 4822	Cond., .05 Mfd. (T) 200V.
R11977	4821-4822 R5725- R5726	Cond., .0015 Mfd. 800V...	R38103	4442-4443- 5441	Cond., .003 Mfd. (T) 300V
R34001	261-561- 772-772A	Cond., .00067 Mfd. (M)...			
R34002	261-462-661 861-861A- 862-1161 1162	Cond., .0002 Mfd. (M)....			
R34003	261-861- 861A-862	Cond., .0001 Mfd. (M)....			
R34004	261	Cond., .0004 Mfd. (M)....			
R34005	261-661	Cond., .001 Mfd. (M).....			
R34006	261	Cond., .0015 Mfd. (M)....			
R34007	261-661	Cond., .002 Mfd. (M).....			
R34008	562-462	Cond., .0005 Mfd. (M)....			
R34101	261	Cond., .00067 Mfd. (M)....			

All prices subject to change without notice

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

CONDENSERS

Fixed By-Pass - Cont'd.

Part No.	Model No.	Description		Part No.	Model No.	Description
R38104	4541-4542-4751	Cond., .02 Mfd. (T) 400V.		510-100	918	Cond., .02 Mfd. 200V (T).
R38105	3441-4542-4621-4622-4624-R5525-R5725-918-R5726	Cond., .05 Mfd. (T) 400V.		510-101	918	Cond., .15 Mfd. 200V (T).
R38106	4421-4422-4423-4424-4442-5441-4511-4512-4513-4514-4542-4621-4622-4624-4751-R5525-4821-4822-4443	Cond., .1 Mfd. (T) 200V..		510-102	918	Cond., .01 Mfd. 400V (T).
R38107	4421-4422-4423-4424-4442-4443-5441-4521	Cond., .25 Mfd. (T) 200V.		510-103	918	Cond., .05 Mfd. 200V (T).
R38108	4442-4443-5441-4512-4514-4621-4622-4624-4751	Cond., .5 Mfd. (T) 2200V.		510-104	918	Cond., .1 Mfd. 400V (T)..
R38109	4421-4422-4423-4424-4511-4512-4513-4514-4521	Cond., .03 Mfd. (T) 200V.		510-112	918	Cond., .005 Mfd. (M).....
R38110	4421-4422-4423-4424-4511-4512-4513-4514-4521-4621-4622-4624-R5525	Cond., .005 Mfd. (T) 600V		510-122	918	Cond., .005 Mfd. 400V. (T).....
R38111	4421-4422-4423-4424-4521-4511-4512-4513-4514	Cond., .05 Mfd. (T) 600V.		510-159	918	Cond., .5 Mfd. Eliminator (Metal Case).....
R38112	4421-4422-4423-4424-4511-4512-4513-4514-4521-4821-4822	Cond., .03 Mfd. (T) 400V.		510-256	918	Cond., .00025 Mfd. (M)....
R38113	4821-4822	Cond., .002 Mfd. (T) 600V		510-284	918	Cond., .1-.1-.1-.25 Mfd. Block.....
R38120	4421-4422-4423-4424-4521	Cond., .5 Mfd. (T) 400V..		CONDENSERS Filter		
R38121	4421-4422-4423-4424-4512-4514-4521-R5525	Cond., .1 Mfd. (T) 400V..		G-156-G	661	Cond., 4 Mfd. 200 Volt...
R38122	4821-4822-4621-4622	Cond., .04 Mfd. (T) 400V.		PA1006	831-832-833	Cond., 3-3 Mfd. Filter...
R38123	4621-4622-4624-R5525	Cond., .05 Mfd. (T) 600V.		PA1007	831-832-833	Cond., 3 Mfd. Filter....
R38126	R5525	Cond., .01 Mfd. (T) 200V.		PA1008	831-832-833	Cond., 4 Mfd. Filter....
R38127	R5725-R5726	Cond., .25 Mfd. (T) 400V.		RI038	200A-220-420	Cond., 1/2 Mfd. Filter
510-24	918	Cond., .1 Mfd. (T) 400V..		RI039	200A-200	1000 V.....
510-98	918	Cond., .012 Mfd. 900V (T)		RI374	90-200A-220	Cond., 2 Mfd. Filter
510-99	918	Cond., .025 Mfd. 200V (T)		R2132	250-260	1000V.....
				R2132	480-490	Cond., 2.-2.-2.-2.-2.-.5 Mfd. Filter 1000V.....
				R2217	400-400C	Cond., 4.-4.-2.-2.-.5 Mfd., Filter 1000V.....
				R3042	420	Cond., 4.-4.-2.-.5 Mfd. Filter 1000V.....
				R3043	741-742	Cond., 4.-2.-2.-2. Mfd... Filter, 25 Cy.....
				R3136	641-642-646	Cond., 4.-2.-2. Mfd.....
				R3431	841-951.	Filter, 60 Cy.....
				RI0486	451-551	Cond., 8-8 Mfd. Filter Dry.....
				RI0786	451-551-561	Cond., 4-8 Mfd. Filter - in Can.....
				RI0787	861A-862-1161-1162	Cond., 4 Mfd. Filter....
				RI0904	561-861-861A-862-261-1161-1162	450V.....
				RI1146	462	Cond., 8 Mfd. Filter
				RI1149	462	500V.....
				RI1195	771-772-772A	Cond., 7-10 Mfd. Filter
				RI1511	4541-4542	500V.....
				RI1838	4751	Cond., 10-10 Mfd. Filter.
				RI9503	371-562-All	Cond., 8-16 Mfd. Filter..
				R39001	563-4511-4512-4513-4514	Cond., 8-8-8 Mfd. Filter
					951	1 Section 500V - 2 Section 450V.....
					4421-4422-4423-4424-4521-4621-4622-R5725-R5726-4821-4822	Cond., 16-Mfd. Filter
						150V.....
						Cond., 8-8 Mfd. Filter
						500V.....
						Cond., 8 Mfd. Filter
						600V.....
						Cond., 8 Mfd. Filter
						500V.....

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

CONDENSERS Filter - Cont'd.				CONDENSERS Variable Padding, Etc. - Cont'd.			
Part No.	Model No.	Description		Part No.	Model No.	Description	
R39002	R5525-R5725 R5726-4821-4822	Cond., 8 Mfd. Filter 525V.....		R3553	861-861A-862-1161-1162	Cond., Osc. Trimmer....	
R39003	4421-4422-4423-4424-4521-4621-4622-R5725-R5726-4821-4822	Cond., 8-8 Mfd. Filter 500V.....		R3730	562	Cond., 2nd I.F. Trimmer..	
R39004	4621-4622-4624-R5525	Cond., 16 Mfd. Filter 410V.....		R3856	371	Cond., 2nd I.F. Trimmer..	
R39005	R5525	Cond., 8 Mfd. Filter 475V.....		R4035	4443	Cond., Dual I.F. Trimmer.....	
510-38	918	Cond., 12 Mfd. 400V.....		R4036	4443-5441-4521-4621-4622-4624-R5525-4751-R5725-R5726-4821-4822	Cond., Osc. Aligning.....	
510-61	918	Cond., 8-16 Mfd. Filter..		R4082	4421-4422-4423-4424-4521-4621-4622-4624-R5525-R5725-R5726-4821-4822	Cond., 15000 K.C. Osc. Aligning.....	
CONDENSERS Variable Tuning							
PA1056	831-832-833	Cond., 4 Gang Tuning.....		R4101	4751	Cond., Osc. Aligning.....	
R3002	741-742	Cond., 5 Gang Tuning.....		R4112	4541-4542	Cond., Osc. Aligning.....	
R3180	841-951	Cond., 3 Gang Tuning.....		R4139	4443-5441	Cond., Antenna Aligning..	
R3223	646	Cond., 3 Gang Tuning.....		R4167	4421-4422-4423-4424-4521-4621-4622-4624	Cond., 6000 K.C. Osc. Aligning.....	
R3284	451-551	Cond., 2 Gang Tuning.....		R10995	462	Cond., Trimmer.....	
R3464	862-1162	Cond., 3 Gang Tuning.....		R11126	All 563	Cond., Double I.F. Trimmer.....	
R3484	861-1161-861A	Cond., 3 Gang Tuning		503-68	918	Cond., Osc. Aligning....	
R3625	261	Cond., 2 Gang Tuning.....		510-	918	Cond., I.F. Aligning.....	
R3734	562-563-371	Cond., 2 Gang Tuning.....		243			
R3756	771	Cond., 3 Gang Tuning.....		510-	918	Cond., 2nd I.F. Aligning.....	
R3761	563A-563C	Cond., 2 Gang Tuning.....		244			
R3805	772	Cond., 3 Gang Tuning.....		CHOKES Filter - Audio			
R3852	772A	Cond., 3 Gang Tuning.....		PA1004	831-832-833	Choke, Filter (Coil PA1030).....	
R3887	563E	Cond., 2 Gang Tuning.....		PA1030	831-832-833	Choke, Filter Coil.....	
R3912	563F	Cond., 2 Gang Tuning.....		R1071	90	Choke, Filter Coil.....	
R3918	462	Cond., 3 Gang Tuning.....		R1071A	200A	Choke, Output Coil.....	
R11424	4442	Cond., 3 Gang Tuning.....		R1420	200A	Choke, Output (Use Coil R1071A).....	
R11425	4443-5441	Cond., 3 Gang Tuning.....		R1450	90	Choke, Filter (Use Coil R1071).....	
R11426	4541-4542	Cond., 3 Gang Tuning.....		R1570A	480, 490	Choke, Filter Coil.....	
R11427	R5525-4751	Cond., 3 Gang Tuning.....		R1586	200A, 220	Choke, Filter (Coil R1590).....	
R11457	4621-4622-4624	Cond., 3 Gang Tuning.....		R1586A	(X)		
R11811	4511-4513	Cond., 3 Gang Tuning.....		(X)	250, 260	Choke, Filter (Coil R1590).....	
R11812	4512-4514	Cond., 3 Gang Tuning.....		R1590	200A, 220, 250, 400, 400C, 260 420	Choke, Filter Coil.....	
R11813	4421-4422-4423-4424-4521	Cond., 3 Gang Tuning.....		R1820	480, 490	Choke, Output Coil.....	
R12289	R5725-R5726	Cond., 3 Gang Tuning.....		R1946	400, 400C	Choke, Output (Coil R1947).....	
D-	4821-4822-			(X)			
510-78	918	Cond., 3 Gang Tuning.....		R1947	260, 400, 400C	Choke, Output Coil.....	
CONDENSERS Variable Padding, Etc.							
G111-G	661	Cond., 600-1000 MMFD- I.F. Trimmer.....	.80	R1971	480, 490	Choke, Output (Use Coil R1820)	
G127-G	661	Cond., 70-140 MMFD- I.F. Trimmer.....	.70	R2115	480, 490	Choke, Filter (Use Coil R1570A).....	
PA1018	831-832-833	Cond., Balancing.....	.35	(XX)			
PA1020	831-832-833	Cond., Antenna Trimmer...	.55				
R3006	741-742	Cond., Antenna Trimmer...	1.25				
R3189	841	Cond., I.F. Trimmer.....	.36				
R3210	841-951	Cond., Antenna Trimmer...	.50				
R3211	841-951	Cond., Osc. Trimmer.....	.65				
R3488	All 563-562 371-460-861 861A-862 1161-1162- 771-772A- 772	Cond., I.F. Trimmer.....	.35				

All prices subject to change without notice

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

CHOKES Filter - Audio			DIALS & SCALES Tuning			
Part No.	Model No.	Description	Part No.	Model No.	Description	
R2271 (XX)	400,400C, 420	Choke, Filter (use Coil R1590).....	PA101- G	961	Scale, Circular Dial.....	
R3019	741,742	Choke, Filter Coil.....	PA102- G	961	Scale, Clear Vision Dial.....	
R3020 (X)	741,742	Choke, Filter (Coil R3019).....	3B62-G	661	Scale, Dial.....	
R3125	641,642	Choke, Filter Coil.....	P1045	831-832-833	Scale, Dial.....	
R3126 (X)	641,642	Choke, Filter (Coil R3125).....	RI280	200A-220	Scale, Gold. Dial.....	
R3198	646,841,951	Choke, Filter Coil.....	R1651	90-250-260	Scale, Gold. Dial.....	
R3199 (X)	646,841,951	Choke, Filter (Coil R3198).....	R2186	400-400C- 420-480-490	Scale, Dial.....	
R3477	1161,1162	Choke, Filter Coil.....	R3005	641-642-741 742	Plate, Dial Scale and Hub.....	
R3478 (X)	1161,1162	Choke, Filter (Coil R3477).....	R3184	646-841-951	Plate, Dial Scale and Hub.....	
R4390	4821,4822 R5725,R5726	Choke, Filter Coil.....	R3507	561	Scale, Dial and Bracket Assem.....	
R4391 (X)	4821,4822 R5725,R5726	Choke, Filter (Coil R4390).....	R3535	861-861A 1161	Scale, Dial and Bracket.....	
510-32	918	Choke, Filter "B" Unit....	R3536	861-1162	Scale, Dial and Bracket.....	
			R3779	563A-563C	Scale, Dial and Drive Assem.....	
			R3835	771	Scale, Dial and Bracket.....	
			R3842	772	Scale, Combination and Bracket.....	
			R3895	772A	Scale, Broadcast Dial	
			R3913	563F	Scale, Dial Assem.....	
			R3926	462	Scale, Dial and Bracket Assem.....	
			R4460	4624	Scale, Dial and Drive Assem.....	
			RI0531	451-551	Scale, Dial.....	
			RI0747	561	Scale, Dial.....	
			RI1581	4751	Scale, Dial.....	
			RI1761	4512	Scale, Dial.....	
			RI1766	4421-4422	Scale, Dial.....	
			RI1773	4621-4622	Scale, Dial.....	
			RI1776	4821-4822	Scale, Dial.....	
			RI2153	4423-4424- 4521	Scale, Dial.....	
			RI2158	4513	Scale, Dial.....	
			RI2268	R5525	Scale, Dial.....	
			RI2278	R5725-R5726	Scale, Dial.....	
			RI2206	4624	Scale, Dial.....	
			510-360	918	Scale, Dial.....	

NOTE:-- (X) After Part No. - Supplied complete until existing stock runs out then coil only supplied.

(XX) After Part No. - Coil Only Supplied.

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

DRIVE PARTS Condenser & Silencer

Part No.	Model No.	Description		Part No.	Model No.	Description
P1036	831,832,833	Hook, Drive Cable.....		R10036	741,742	Disc Front, Friction.....
P1040	831,832,833	Pulley, Condenser Drive..		R10037	641,642,741	Spring, Drive Shaft.....
P1041	831,832,833,	Pulley, Condenser Drive			742	
		(Small).....		R10038	641,642,741	Washer, Cut.....
P1042	831,832,833	Pulley, Condenser Drive			742,646,841	
		(Large).....			951,861,	
P10224-	961	Pinion, Condenser Drive..			861A, 862,	
G					462,1161,	
R1275	90,200A,220	Plate, Condenser Drive		R10248	1162,771	Disc, Front Friction.....
	250,260	(Less Scale).....		R10317	641,642	Disc, Front Friction.....
R1279	90,200A,220	Plate, Cable Clamping....			646,841,951	
	250,260				462,861,	
R1998	480,490	Pulley, Drive With Pin...			861A,862,	
R1999	480,490	Pulley, Drive Less Pin...			563A,771,	
R3007	741,742	Shaft, Condenser Drive			772,772A,	
		Assem.....			1161,1162,	
R3131	641,642	Shaft, Condenser Drive			563C	
		Assem.....		R10325	646,841,951	Spring, Drive Shaft.....
R3181	646,841,951	Shaft, Condenser Drive			861,861A,	
		Assem.....			862,563A,	
R3508	561,861,	Plate, Vernier Drive			563C,771,	
	861A-862,	(Small).....			772,772A,	
	563A-563C				1161,1162,	
R3509	561	Shaft, Drive Assem.....			462	
R3517	261	Pulley, Converter Drive..		R10743	561,261,861	Bearing, Vernier Drive
R3518	261	Plate, Vernier Drive			861A,862,	Shaft.....
		(Less Point).....			1161,1162,	
R3529	861,861A,	Plate, Vernier Drive			563A,563C,	
	862,462,771	(Large).....			462	
	772,772A,			R10749	561,861,	Plate, Vernier Drive
	1161,1162				1161	Mounting.....
R3530	462,862,	Shaft, Drive Assem.....				
	1162,772,			R10755	462,1161,	Sleeve, Vernier Drive
	772A				1162	Shaft.....
R3531	861,861A-	Shaft, Drive Assem.....		R10756	862,772,	Disc, Front
	1161,771					Friction
					772A,462	5/8".....
R3773	563A,563C	Shaft, Drive Assem.....		R10757	862,772,	Washer, Cut.....
R3779	563A,563C	Drive, and Dial Assem....			772A,462	
R4095	4621,4622,	Plate, Drive and Hub		R10758	862,772	Spring, Drive Shaft.....
	R5525,R5725	Assem.....			772A,462	
	R5726,4821,			R10762	862,462	Screw, Drive Cable
	4822,4751					Spade.....
R4451	4423,4424	Plate, Vernier Drive.....		R10763	862,462	Anchor, Drive Cable.....
	4521			R11295	462	Pulley, Idler.....
R4460	4624	Plate, Drive and Hub		R12692	4511,4512	Shaft, Condenser Drive..
		Assem.....		R12695	4541,4542	Shaft, Condenser Drive...
R4485	4513	Plate, Drive Assem.....		R12697	4511,4512,	Cup, Ball Race.....
R4495	4624	Drive, Vernier Assem....			4541,4542	
R4497	4621,4622,	Drive, Vernier Assem....		R12698	4511,4512,	Spring, Ball Race
	4821,4822,				4541,4542	Tension.....
	R5525,R5725			R33004	4511,4512,	Ball, Planetary Drive...
	R5726				4541,4542	
R4698	4513	Drive, Vernier Assem....				

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

INDICATORS Brackets and Arms				MISCELLANEOUS PARTS - Cont'd.			
Part No.	Model No.	Description		Part No	Model No.	Description	
R1311	90-200A-220 250,260	Indicator, Window (Celluloid).....		R4067	4751,4821, 4822,R5525, R5725,R5726	Panel, Antenna Terminal..	
R3751	261,771,772	Indicator, Band Switch....		R4096	4751	Gear, Switch Drive (Steel).....	
R3892	772A	Indicator, Band Switch....		R4099	4751,4821, 4822,R5525, R5725,R5726	Bracket, and Spring for Indicator Arm.....	
R3893	772A	Indicator, Volume Control.....		R4100	4621,4622 4751,4821, 4822,R5525, R5725,R5726	Bracket, and Spring for Indicator Arm.....	
R3927	462	Indicator, Band Switch....		R4104	4821,4822, 4751,R5525, R5725,R5726	Lever, On & Off Switch...	
R4096	4751	Indicator, Arm for Switch.....		R4395	4821,4822, R5525,R5725 R5726	Arm, Band Switch Connecting.....	
R4097	4621,4622, 4751,4821, 4822,R5525,	Indicator, Tone Control Arm Assem.....		RL0099	641,642,646 741,742,841 951,1161, 1162	Plate, Speaker Plug Clamping.....	
R4098	4751,4821, 4822,R5525, R5725,R5726	Indicator, and Arm Assem. (L.H.).....		RL0114	All Models	Clip, Grind Control.....	
R4267	4621,4622,	Indicator, Volume Control Arm Assem.....		RL0135	741,742, 1161,1162	Clip, Fuse Mounting.....	
R4447	4423,4424 4521	Indicator, and Arm Assem.....		RL0152	741,742, 1161,1162	Fuse, 3 Amp.....	
RL0748	561	Pointer, Tuning Dial.....		RL0156	4751	Clamp, Battery Cable.....	
RL0760	261,862, 1161,1162	Pointers, Short Wave Scale.....		RL0206	741,742, 1161,1162	Fuse 1-1/2 Amp., N.Z. Only	
RL0761	861,861A, 1161,1162 462	Pointer, Tuning Dial.....		RL0209	741,742	Shaft, Dual Line Switch..	
RL0877	772	Lens & Bezel, Tuning Light.....		RL0370	4621,4622, 4624,4821, 4822,R5525, R5726,R5725	Bracket, Tone Control Mounting.....	
RL1553	4751	Pointers, Tuning Dial.....		RL0741	All Models	Clip, Tube Grounding.....	
RL1588	4511,4541, 4542	Pointers, Dial (Black)....		RL1061	562,563	Angle, Speaker Mounting..	
RL1601	4621,4622, R5525,R5725, R5726,4751, 4821,4822	Roller, Indicator Arm.....		RL1062	562,563, 4442,4541, 4542	Bracket, Volume Control Mounting.....	
RL1752	4624	Lens & Bezel, Tuning Indicator.....		RL1177	4511,4512, 4513,4514	Bracket, Volume Control Mounting.....	
RL1857	4421	Indicator, Hair Line (Celluloid).....		RL1560	4751	Gear, Switch Drive (Fibre).....	
RL1888	4512	Indicator, Hair Line (Celluloid).....		RL1572	4621,4622	Pulley, Pointer Drive....	
RL1918	3413,4621 4622	Pointer, Tuning Dial.....		RL1578	4621,4622	Shaft, Pointer Drive.....	
RL1919	R5525,R5725 R5726	Pointer, Tuning Dial.....		RL1731	4513,4521, 4621,4622, 4624,4821, 4822,R5525, R5725,R5726	Grommet, Dial Light Retaining.....	
RL1920	R5525,R5725 R5726,4821, 4822	Lens, Tuning Light.....		RL1847	4621-2-4, 4821-2	Cushion, Chassis Mtg., (Rubber).....	
RL2077	4624	Indicator, Hair Line (Celluloid).....		RL1907	4424,4521, 4621,4622, 4751,R5525, R5725,R5726	Clamp, Dial Crystal Retaining (Fibre).....	
RL2152	4423,4424, 4521	Pointer, Tuning Dial.....		RL1982	4421,4422, 4423,4424, 4521,4621, 4622,4751	Gasket, Dial Light Crystal.....	
RL2208	4624	Reflector, Tuning Light...		RL2058	4751	Bracket, Tone Control Mounting.....	
RL2237	4514	Pointer, Tuning Dial (Red).....		RL2076	4421,4422, 4423,4424, 4521	Bracket, Volume Control Mounting.....	
MISCELLANEOUS PARTS							
P1101	831,832,833	Cup, Damper Assem. & Rod.....	.75				
R3036	741,742	Bracket, Pilot Light Mounting.....	.15	RL1982	4421,4422, 4423,4424, 4521,4621, 4622,4751	Gasket, Dial Light Crystal.....	
R3095	741,742	Clip, Fuse Assem.....	.15				
R3104	641,642,646 451,551,741 742	Clip, Tube Grid.....	.10	RL2058	4751	Bracket, Tone Control Mounting.....	
R3130	641,642	Bracket, Pilot Light Mounting.....	.15	RL2076	4421,4422, 4423,4424, 4521	Bracket, Volume Control Mounting.....	
R3933	for use when replac- ing Clear Tubes with Spray Shielded....	Clip, Tube Grounding Spring.....	N/C				

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

MISCELLANEOUS PARTS - Cont'd.				PHONOGRAPH PARTS Miscellaneous - Cont'd.			
Part No.	Model No.	Description		Part No.	Model No.	Description	
RI2155	4521	Stud, Band Indicator Arm (Fibre).....		R2145	400C	Arm, Pick Up and Base....	
RI2375	4443,5441	Hinge, Door.....		R2208	400C	Head, Pick Up Assem.....	
RI2376	4443,5441	Catch, Cabinet Door.....		R3052	642,742	Pick Up, Head and Arm Assem.....	
RI2377	4443,5441	Strap, Carrying Handle...		R3077	742	Motor, Phono. Green	
RI2378	4443,5441	Clamp, Carrying Strap....		R3078	742	Flyer, 25 cy.....	
R28360	4443,5441	Cushion, Chassis Mtg., (Rubber).....		R3079	742,642	Motor, Phono. Green	
R32809	4821,4822, R5525,R5725 R5726	Grommet, Tuning Light Retaining.....		R10189	642,742	Flyer, 60 cy.....	
R33501	561,861-2, 1161-2	Bolts, Chassis Mounting..				Coil, Phono. Pick Up	
510-345918		Fuse, 10 Amp.....				Field.....	
						Screw, Needle Set.....	
METERS Line - Tuning				RESISTORS Variable - Wire Wound			
RI351	90,200A,220 250,260	Meter, A/C 0-4 Volts....		RI295B	220 (1st Release)	Control, Volume,100,000 Ohms.....	
RI1805	4751	Meter, Tuning Indicator..		RI376A	200A	Rheostat, 105 Ohms,Line..	
				RI489	90	Control, Volume 250,000 Ohms.....	
PHONOGRAPH PARTS Miscellaneous				RI490	90	Control, Osc. 100,000 Ohms.....	
PI313	833	Base, Pick Up (M176)....		RI644	250,260	Control, Osc. 100,000 Ohms.....	
PI347	833	Screw, Needle Clamp, (M1817).....		RI645	220	Control, Volume 100,000 Ohms.....	
PI459	833	Magnet, Pick Up (M415)...		RI806	250,260	Control, Volume 250,000 Ohms.....	
PI474	833	Spring, Pick Up Bronze, (M2105).....		R2016	400C,420	Control, Volume 150,000 Ohms.....	
PA1055	833	Head, Pick Up Arm, Comp..		R2017	400C,420	Control, Osc. 3000 Ohms.	
PA1066	833	Motor, Phono-Pacent, 60 cy.....		R2079	480,490	Control, Osc. 2000 Ohms Long Shaft.....	
PA1072	833	Motor, Phono-Pacent, 25 cy.....		R2321	480,490	Control, Volume 150,000 Ohms.....	
PA1107	833	Stop, Automatic.....		R2322	480,490	Control, Osc. 2000 Ohms Short Shaft.....	
PA1155	833	Switch, Automatic Stop, (M172).....		R3127	641,642	Control, Volume 2000 Ohms.....	
PA1175	833	Cable, Pick Up, Shielded, (M1415).....		RESISTORS Fixed - Wire Wound			
PA1176	833	Armature, Pick Up, (M178)		PH103-G	961	Resistor, .42 Ohm.....	
PA1210	833	Governor, Assem. Pacent, 25 cy.....		PH104-G	961	Resistor, .26 Ohm.....	
PA1211	833	Field, Pacent Motor, 25 cy.....		HL74-G	661	Resistor, .5 Ohm.....	
PA1217	833	Armature, Shaft Assem. 25 cy.....		PA1011	832,833	Resistor, Potential Divider (Jong).....	
PA1218	833	Gear, Spindle & Worm Assem.....		PA1043	831,832,833	Resistor, 6 Ohm Centre Tap.....	
PA1219	833	Armature, Shaft Assem. 60 cy.....		PA1044	831,832,833	Resistor, 60 Ohm Centre Tap.....	
PA1221	833	Governor, Assem. Pacent, 60 cy.....		PA1060	832,833	Resistor, Potential Divider (Short).....	
PA1225	642	Arm, Record Retaining....		PA1061	831	Resistor, Potential Divider.....	
PA1226	642	Spring, Flat Copper Trip Rod.....		RI133A	220,250,400 420,400C, 200A,220	Resistor, 400 Ohms.....	
PA1227	642	Rod, Trip Complete.....		RI135A	250,260,90, 400,400C, 420,480,490	Resistor, Det. Adj., 1.5 Ohms.....	
PA1238	642	Rod, Trip and Screw.....		RI336	90,250	Resistor, C-Bias (See Carbon Resistors)....	
PA1239	642	Screw, and Nut, Trip Trigger adjusting.....		RI336A	200A,200	Resistor, C-Bias 250-450 Ohms.....	
PA1242	642	Spring, Trip Trigger Steel.....		RI340A	90,200A,220 250	Resistor, B-Amp. 4400 Ohms.....	
PA1243	642	Trigger, & Wheel Assem...					
PA1252	642	Rod and Nut, Pick Up Cam Plate Actuating...					
PA1272	642	Arm and Trip, Record Retaining.....					
D3753	642,742	Governor, Assembly.....					

All prices subject to change without notice

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

RESISTORS Fixed - Wire Wound - Cont'd.			RESISTORS Variable - Carbon - Cont'd.			
Part No.	Model No.	Description	Part No.	Model No.	Description	
R1581	90,250,260 200A,220	Resistor, Power Rheostat Base, 105 Ohms.....	H159-G	661	Control, Tone, 150,000 Ohms.....	
R2018	420,400 400C,480,490	Resistor, Fixed Potentiometer, 400 Ohms	H160-G	661	Control, Volume & SW, 1 Meg. Ohms.....	
R2047	400C,400 420	Resistor, B Amp, 4000 Ohms.....	RL295A	R200	Control, Osc. 100,000 Ohms.....	
R2051	400C,400 420	Resistor, C-Bias, 675 Ohms.....	RL295B	R200	Control, Volume, 100,000 Ohms.....	
R2080	400C,400 420	Resistor, 750 Ohms.....	R3037	741	Control, Volume 5000 Ohms.....	
R2091	480,490	Resistor, 850 Ohms.....	R3038	742	Control,	
R2134	480,490	Resistor, 1500 Ohms.....	R3127	641	Double Vol. { 5000 Ohms 5000 Ohms ..	
R2166	400C,420 400	Resistor, 400 Ohms.....	R3212	646,841,951	Control, Tone 5000 - 10 Meg. Ohms.....	
R2214	480,490	Resistor, Potential Divider.....	R3214	551,646,841	Control, Volume & SW, 2500 Ohms.....	
R2263	400C,420, 400	Resistor, B-Amp., 8000 Ohms.....	R3253	451	Control, Volume & SW, 2500 Ohms.....	
R2280	400C,420, 400	Resistor, 650 Ohms, 20 Watt.....	R3381	951	Control, Volume & SW, 500,000 Ohms.....	
R2317	400C,420, 400	Resistor, C-Bias, 1425 Ohms.....	RL0836	561	Control, Volume, 10350 Ohms.....	
R2318	400C,420, 400	Resistor, B. Amp., 8000 Ohms.....	RL0837	561	Control, Tone & SW,..... 50,000 Ohms	
R2319	480,490	Resistor, 2500 Ohms.....	RL0838	861,861A 862,1161	Control, Volume, 250,000 Ohms.....	
R2364	480,490	Resistor, Potential Divider.....	RL0839	861,861A	Control, Tone & SW, 50,000 Ohms.....	
R2369	420,400C, 400	Resistor, Potential Divider.....	RL0840	1162	Control, Volume, 250,000 Ohms.....	
R3044	741,742	Resistor, Potential Divider.....	RL0841	862	Control, Tone & SW, 50,000 Ohms	
R3045	741,742	Resistor, Centre Tap.....	RL0842	1161	Control, Suppressor, 50,000 Ohms.....	
RL0252	741,742	Resistor, Potential Divider.....	RL0843	1162	Control, Suppressor, 50,000 Ohms.....	
RL0405	841,951	Resistor, Potential Divider.....	RL0907	1161	Control, Tone & SW, 500,000 Ohms.....	
RL0406	646	Resistor, Potential Divider.....	RL0908	1162	Control, Tone & SW, 500,000 Ohms.....	
RL0484	451,551	Resistor, Potential Divider.....	RL1035	861A	Control, Suppressor, 25,000 Ohms.....	
RL0902	1161,1162	Resistor, 7. Ohms.....	RL1099	562	Control, Volume & SW, 11,000 Ohms.....	
RL0906	1161,1162	Resistor, 15 Ohms.....	RL1117	563,562,563E 563F,371	Control, Tone, 50,000 Ohms.....	
RL0909	1161,1162	Resistor, Potential Divider.....	RL1132	563,563E	Control, Volume & SW, 500,000 Ohms.....	
RL1150	462	Resistor, Potential Divider.....	RL1133	563A,563C	Control, Volume, & SW, 500,000 Ohms.....	
RL1194	771,772, 772A	Resistor, Potential Divider.....	RL1134	563A,563C	Control, Tone, 50,000 Ohms.....	
RL1480	4443,5441	Resistor, 4-.50 Ohms.....	RL1152	462	Control, Tone & SW, 250,000 Ohms.....	
RL2059	4821,4822	Resistor, Potential Divider.....	RL1192	771	Control, Volume & SW, 250,000 Ohms.....	
RL2276	R5725,R5726	Resistor, Potential Divider.....	RL1193	771	Control, Tone, 1 Meg. Ohms.....	
R38201	4751,	Resistor, .36 Ohms.....	RL1198	772,772A	Control, Volume & SW., 250,000 Ohms.....	
R38202	4541,4542	Resistor, .55 Ohms.....	RL1199	772,772A	Control, Tone, 1 Meg. Ohms.....	
R38203	442,4443, 5441	Resistor, .6 Ohms.....	RL1202	462	Control, Volume, 250,000 Ohms.....	
RESISTORS Variable - Carbon						
PA1022	831,832	Control, Volume 50,000 Ohms.....				
PA1078	833	Control, Control, Volume { 50,000 50,000				
P91027 -G	961	Double Volume 500,000 Ohms.....				
P91031 -G	961	Control, Tone, 150,000 Ohms.....				

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

RESISTORS Variable - Carbon				RESISTORS Fixed - Carbon - Cont'd.			
Part No.	Model No.	Description		Part No.	Model No.	Description	
R11227	371	Control, Volume & SW, 6000 Ohms.....		R1198B	90,200A,220 250,260, 400C,420	Resistor, (1 W) 50,000 Ohms. (Replacing Lavite W.W.Resistor) ..	
R11273~	772A	Control, Tune-a-lite.....		R2553 R2554	Replacng 1336 C-Bias Resistor	Resistors, (1/2 W) 320 Ohms.....	
R11306	563F	Control, Volume & SW, 500,000 Ohms.....			Resistor, (1 W) 180 W-W Ohms.....		
R11428	4442	Control, Volume, 20,000 Ohms.....		R10119	741,742	Resistors, (2 W) 1200 Ohms.....	
R11429	4443,5441	Control, Volume, 50,000 Ohms.....		R21001	641,642,646 742	Resistors, (1/2 W) 800 Ohms.....	
R11430	4751	Control, Volume 250,000 Ohms.....		R21002	641,642,646 741,742,951	Resistors, (1/2 W) 10,000 Ohms.....	
R11431	4541,4542	Control, Dual Volume (250,000 Ohms.....		R21003	772A 641,642,646 741,742,841 4751	Resistor, (1/2 W) 20,000 Ohms.....	
R11452	4751	Control, Tone 1-1/2 Meg. Ohms.....		R21004	451,551,661, 562,741,742 841	Resistor, (1/2 W) 30,000 Ohms.....	
R11705	4511,4513	Control, Volume & SW, 250,000 Ohms.....		R21005	741,742	Resistor, (1/2 W) 125,000 Ohms.....	
R11706	4512,4514	Control, Volume & SW, 250,000 Ohms.....		R21006	451,551,561 641,642,741 742,951, 4443,5441, 4541,4542	Resistor, (1/2 W) 500,000 Ohms.....	
R11707	4421,4422, 4423,4424, 4521,4821, 4822	Control, Volume, 250,000 Ohms.....		R21007	741,742,961	Resistor, (1/2 W) 4 Meg. Ohm.....	
R11708	4621,4622, 5525	Control, Volume, 250,000 Ohms.....		R21008	641,642,646	Resistor, (1/2 W) 60 Ohms..	
R11713	R5725,R5726 4421,4422, 4423,4424, 4521	Control, Tone & SW, 50,000 Ohms.....		R21009	371,951	Resistor, (1/2 W) 2200 Ohms.....	
R11714	4511,4513	Control, Tone,50,000 Ohms.....		R21010	841,1161, 1162	Resistor, (1/2 W) 1000 Ohms.....	
R11715	4621,4622, R5525,R5725 R5726	Control, Tone & SW, 50,000 Ohms.....		R21011	841,951	Resistor, (1/2 W) 550 Ohms.	
R11716	4821,4822	Control, Bass Tone, 1 Meg. Ohm.....		R21012	261,4751	Resistor, (1/2 W) 25,000 Ohms.....	
R11717	4821,4822	Control, Treble Tone & SW, 50,000 Ohms.....		R21013	451,551, 561,951, 961,1161, 1162	Resistor, (1/2 W) 100,000 Ohms.....	
R11718	4411-4412	Control, Tone, 250,000 Ohms.....		R21014	451,551, 661,961,	Resistor, (1/2 W) 1 Meg. Ohm.....	
R11720	4821,4822	Control, Sensitivity, 70-250 Ohms.....		R21015	451,551, 561,661, 861,861A, 862,961 1161,1162	Resistor, (1/2 W) 50,000 Ohms.....	
R11745	4512,4514	Control, Tone, 50,000 Ohms.....		R21017	961	Resistor, (1/2 W) 40,000 Ohms.....	
R11980	4624	Control, Tone & SW, 50,000 Ohms.....		R21018	4442	Resistors, (1/2 W)300,000 Ohms.....	
R11981	4624	Control, Volume 250,000 Ohms.....		R21019	951	Resistors, (1/2 W)200,000 Ohms.....	
510-93	918	Control, Volume & SW 500,000 Ohms.....		R21020	462,961	Resistors,(1/2 W) 250,000 Ohms.....	
RESISTORS Fixed - Carbon				R21021	562,861, 861A,862, 1161,1162	Resistors,(1/2 W) 5000 Ohms.....	
H155-G	661	Resistor, 17,000 Ohms.....		R21024	861,861A, 862,1161, 1162	Resistors, (1/2 W) 400 Ohms.....	
PH101	961	Resistor, 4750 Ohms.....		R21025	261,661,961	Resistors,(1/2 W) 2 Meg. Ohms.....	
-G				R21026	561	Resistor, (1/2 W) 12,000 Ohms.....	
P1172	831,832, 833	Resistor, (1 W) 50,000 Ohms.....		R21030	562	Resistor, (1/2 W) 130,000 Ohms.....	
P1190	831,832, 833	Resistor, (1/2 W) 10,000 Ohms.....		R21033	4541,4542	Resistor, (1/2 W) 15,000 Ohms.....	
P1192	831,832,833	Resistor, (1/2 W) 250 Ohms.....					
P1199	831,832, 833	Resistor, (1/2 W) 2 Meg..... Ohms.....					
P1200	831,832, 833	Resistor, (1/2 W) 1000 Ohms.....					
P1219	833	Resistor, (1/2 W) 3000 Ohms.....					
P1330	833	Resistor, (1/2 W) 100,000 Ohms.....					

All prices subject to change without notice

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

RESISTORS Fixed - Carbon - Cont'd.

Part No.	Model No.	Description	Part No.	Model No.	Description
R21034	4511,4512, 4513,4514	Resistor, ($\frac{1}{2}$ W) 35,000 Ohms.....	R32615	4541,4542	Resistor, ($\frac{1}{2}$ W) 4420 Ohms.....
R21035	R5725,R5726 4821,4822	Resistor, ($\frac{1}{2}$ W) 5000 Ohms.....	R32616	4541,4542	Resistor, ($\frac{1}{2}$ W) 20,000 Ohms.....
R21037	4621,4622, 4624,4821, 4822,R5525	Resistor, ($\frac{1}{2}$ W) 50,000 Ohms.....	R32617	4541,4542	Resistor, ($\frac{1}{2}$ W) 30,000 Ohms.....
R21038	R5725,R5726 4421,4422, 4423,4424, 4521	Resistor, ($\frac{1}{2}$ W) 150,000 Ohms.....	R32618	4421,4422, 4423,4424, 4541,4542, 4621,4622 4624,4751, 4821,4822, R5525,R5725 R5726	Resistor, ($\frac{1}{2}$ W) 50,000 Ohms.....
R21039	4621,4622 4624	Resistor, ($\frac{1}{2}$ W) 50,000 Ohms.....	R32619	4442,4443, 5441	Resistor, ($\frac{1}{2}$ W) 2 Meg. Ohms.....
R21040	661,4421, 4422,4423, 4424,4521	Resistor, ($\frac{1}{2}$ W) 30,000 Ohms.....	R32620	4421,4422, 4423,4424,	Resistor, ($\frac{1}{2}$ W) 200,000 Ohms.....
R31101	562	Resistor, (1W)30,000 Ohms	R32623	4421,4422, 4423,4424, 4521	Resistor, ($\frac{1}{2}$ W) 40,000 Ohms.....
R31102	261	Resistor, (1W) 85,000 Ohms.....	R32624	4621,4622, 4624	Resistor, ($\frac{1}{2}$ W) 300 Ohms.
R31105	951	Resistor, (1 W) 2200 Ohms.....	R32625	4751	Resistor, ($\frac{1}{2}$ W) 16,000 Ohms.....
R31106	951	Resistor, (1 W) 330 Ohms..	R32626	4751	Resistor, ($\frac{1}{2}$ W) 1200 Ohms.....
R31802	772A	Resistor, (2 W) 600 Ohms..	R32627	4624	Resistor, ($\frac{1}{2}$ W) 150 Ohms.
R32202	261	Resistor, (1 W) 300,000 Ohms.....	R33628	R5525	Resistor, ($\frac{1}{2}$ W) 250,000 Ohms.....
R32203	261	Resistor, (1 W) 10,000 Ohms.....	R33701	861,861A, 862,1161, 1162	Resistor, ($\frac{1}{2}$ W) 25,000 Ohms.....
R32302	951	Resistor, ($\frac{1}{2}$ W) 250 Ohms..	R33702	All 563, 771,772, 772A, 861, 861A, 862, 1161,1162, 4443,5441	Resistor, ($\frac{1}{2}$ W) 50,000 Ohms.....
R32303	951	Resistor, ($\frac{1}{2}$ W) 20,000 Ohms.....	R33703	All 563, 562,861, 861A,862, 1161,1162, 4421,4422, 4423,4424, 4541,4542, R5525,4751, 4521	Resistor, ($\frac{1}{2}$ W) 1 Meg. Ohms.....
R32304	951	Resistor, ($\frac{1}{2}$ W) 10,000 Ohms.....	R33704	772A,861, 861A,862	Resistor, ($\frac{1}{2}$ W) 2 Meg. Ohms.....
R32601	951	Resistor, ($\frac{1}{2}$ W) 10,000 Ohms.....	R33705	861,861A 862,1161, 1162	Resistor, ($\frac{1}{2}$ W) 500,000 Ohms.....
R32602	861,861A, 862,1161, 4751,1162	Resistor, ($\frac{1}{2}$ W) 25,000 Ohms.....	R33706	462,All 563,861, 861A,862, 1161,1162, 4442,4443, 5441,4511, 4512,4513, 4514,4621, 4622,4624, R5525,4751	Resistor, ($\frac{1}{2}$ W) 100,000 Ohms.....
R32603	861,861A, 862,1161, 1162,4421, 4422,4423, 4424,4511, 4512,4513, 4514,4521, 4621,4622, 4821,4822	Resistor, ($\frac{1}{2}$ W) 500,000 Ohms.....	R33707	371,661,All 563,861,861A 862,771,772 772A,4421, 4422,4423, 4424,4511, 4512,4513, 4514,4521.	Resistor, ($\frac{1}{2}$ W) 250,000 Ohms.....
R32604	All 563,371 462,771,772 772A,1161, 1162,4442, 4443,5441, 4511,4512, 4513,4514, 4521,4621, 4622,R5525, R5725,R5726 4821,4822 1161,1162	Resistor, ($\frac{1}{2}$ W)100,000 Ohms.....			
R32605	1161,1162	Resistor, ($\frac{1}{2}$ W)400,000 Ohms.....			
R32606	771,772, 772A	Resistor, ($\frac{1}{2}$ W) 300,000 Ohms.....			
R32608	All 563, 4511,4512, 4513,4514, 4521	Resistor, ($\frac{1}{2}$ W) 400 Ohms..			
R32609	462,4421, 4422,4423 4424	Resistor, ($\frac{1}{2}$ W) 250,000 Ohms.....			
R32613	4541,4542	Resistor, ($\frac{1}{2}$ W) 445 Ohms.			
R32614	4541,4542	Resistor, ($\frac{1}{2}$ W) 885 Ohms..			

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

RESISTORS Fixed - Carbon - Cont'd.

Part No.	Model No.	Description	Part No.	Model No.	Description
R33708	561	Resistor, ($\frac{1}{2}$ W) 100 Ohms.....	R33801	861,861A, 862	Resistor, (1 W) 7000 Ohms.....
R33709	371,561,562 All 563,661 462,1161, 1162,4421, 4422,4423, 4424,4511, 4512,4513, 4514,4521, 4541,4542, 4621,4622, 4624,R5525, R5725,R5726 4821,4822	Resistor, ($\frac{1}{2}$ W) 500,000 Ohms.....	R33802	861,861A, 862	Resistor, (1 W) 300 Ohms.....
R33710	1161,1162	Resistor, ($\frac{1}{2}$ W) 75,000 Ohms.....	R33803	561,R5725, R5726,4821, 4822	Resistor, (1 W) 40,000 Ohms.....
R33711	561	Resistor, ($\frac{1}{2}$ W) 1000 Ohms.....	R33804	4621,4622, 4624	Resistor, (1 W) 15,000 Ohms.....
R33712	1161,1162	Resistor, ($\frac{1}{2}$ W) 1500 Ohms.....	R33805	4621,4622, 4624,R5525	Resistor, (1 W) 20,000 Ohms.....
R33713	562	Resistor ($\frac{1}{2}$ W) 200,000 Ohms.....	R33901	861,861A, 862	Resistor, ($\frac{1}{2}$ W) 15,000 Ohms.....
R33714	462,562	Resistor, ($\frac{1}{2}$ W) 300,000 Ohms.....	R33902	861,861A, 862	Resistor, ($\frac{1}{2}$ W) 250 Ohms.....
R33715	562	Resistor, ($\frac{1}{2}$ W) 10,000 Ohms.....	R33903	561,861, 861A,862	Resistor, ($\frac{1}{2}$ W) 50,000 Ohms.....
R33716	562	Resistor, ($\frac{1}{2}$ W) 600 Ohms..	R33904	772A	Resistor, ($\frac{1}{2}$ W) 4000 Ohms.....
R33717	All 563, 4421,4422, 4423,4424, 4511,4512, 4513,4514 4521	Resistor, ($\frac{1}{2}$ W) 20,000 Ohms.....	R33905	4624	Resistor, ($\frac{1}{2}$ W) 20,000 Ohms.....
R33718	371,All 563,661	Resistor, ($\frac{1}{2}$ W) 15,000 Ohms.....	R33906	4624	Resistor, ($\frac{1}{2}$ W) 3400 Ohms.....
R33719	All 563	Resistor, ($\frac{1}{2}$ W) 750,000 Ohms.....	R33907	R5525	Resistor, ($\frac{1}{2}$ W) 10,000 Ohms.....
R33720	371	Resistor, ($\frac{1}{2}$ W) 300 Ohms..	R33908	R5525	Resistor, ($\frac{1}{2}$ W) 30,000 Ohms.....
R33721	371	Resistor, ($\frac{1}{2}$ W) 130,000 Ohms.....	R36501	371	Resistor, (1/3 W) 250 Ohms.....
R33722	4442,4443, 5441	Resistor, ($\frac{1}{2}$ W) 16,000 Ohms.....	R36701	462,772, 772A, 4511, 4512,4513, 4514,771	Resistor, (1/8 W) 50,000 Ohms.....
R33723	4751	Resistor, ($\frac{1}{2}$ W) 5800 Ohms.....	R39601	4621,4622	Resistor, (3 W) 10,000 Ohms.....
R33725	4541,4542	Resistor, ($\frac{1}{2}$ W) 150,000 Ohms.....	R40501	4751	Resistor, (1/3 W) 100 Ohms.....
R33726	4421,4422, 4423,4424, 4511,4512, 4513,4514, 4521	Resistor, ($\frac{1}{2}$ W) 180,000 Ohms.....	R40502	4751	Resistor, (1/3 W) 400 Ohms.....
R33728	4621,4622, 4624,R5525	Resistor, ($\frac{1}{2}$ W) 200,000 Ohms.....	R40503	R5525	Resistor, (1/3 W) 300 Ohms.....
R33733	4621,4622, 4624,R5525	Resistor, ($\frac{1}{2}$ W) 5000 Ohms.....	R40504	R5525	Resistor, (1/3 W) 25,000 Ohms.....
R33737	R5725,R5726	Resistor, ($\frac{1}{2}$ W) 40,000 Ohms.....	R40505	R5525	Resistor, (1/3 W) 500,000 Ohms.....
R33742	4821,4822, 4421,4422, 4423,4424, 4511,4512, 4513,4514, 4621,4622, 4624,R5525	Resistor, ($\frac{1}{2}$ W) 100,000 Ohms.....	R40506	R5525	Resistor, (1/3 W) 60,000 Ohms.....
R33744	4421,4422, 4423,4424 4521	Resistor, ($\frac{1}{2}$ W) 5000 Ohms.....	510-85	918	Resistor, (2 W) 30,000 Ohms.....
R33746	4541,4542	Resistor, ($\frac{1}{2}$ W) 40,000 Ohms.....	510-86	918	Resistor, (1 W) 21,000 Ohms.....
			510-88	918	Resistor, ($\frac{1}{2}$ W) 9300 Ohms.....
			510-106	918	Resistor, ($\frac{1}{4}$ W) 10,000 Ohms.....
			510-107	918	Resistor, ($\frac{1}{4}$ W) 50,000 Ohms.....
			510-108	918	Resistor, ($\frac{1}{4}$ W) 450 Ohms.....
			510-109	918	Resistor, ($\frac{1}{4}$ W) 550 Ohms.....
			510-110	918	Resistor, ($\frac{1}{4}$ W) 100,000 Ohms.....
			510-111	918	Resistor, ($\frac{1}{4}$ W) 1 Meg. Ohms.....
			510-117	918	Resistor, ($\frac{1}{4}$ W) 775 Ohms.....
			510-118	918	Resistor, ($\frac{1}{4}$ W) 200,000 Ohms.....

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

RESISTORS Fixed - Carbon - Cont'd.			SOCKETS Tube and Insulators - Cont'd.			
PART No.	Model No.	Description	Part No.	Model No.	Description	
510-119	918	Resistor, (1/2 W) 300,000 Ohms.....	R10492	451,551,951	Socket, Tube Type 47.....	
510-120	918	Resistor, (1 W) 750 Ohms.....	R10508	451,551	Socket, Tube Type 24.....	
510-121	918	Resistor, (1/2 W) 20,000 Ohms.....	R10791	462,561,861	Socket, Tube 4 Pin.....	
510-321	918	Resistor, L-Type (Spark Plug Suppressor).....		861A,862,771,772,772A,1161,1162		
510-344	918	Resistor, L-Type (Distributor Suppressor).....	R10792	261,561,861,861A,862,1161,1162	Socket, Tube 5 Pin.....	
			R10793	261,462,562	Socket, Tube 6 Pin.....	
SHIELDS * Condenser - Coil - Tube - Chassis Base				All 563,561,771,772,772A,861,861A,862,1161,1162		
P1201	831,832,833	Shield, R.F.Coil.....	R11017	562	Socket, Tube 7 Pin.....	
P1148	831,832,833	Shield, Detector Tube Anti-Microphonic.....	R11100	562,All 563	Socket, Tube 5 Pin..... (Flat Side).....	
P20406-G	961	Shield, Tube, Large.....	R11140	371,462,All 563,771,772,772A	Socket, Tube 7 Pin.....	
P40420-G	961	Shield, Tube, Small.....	R11151	All 563	Socket, Tube 6 Pin.....	
B117-G	661	Shield, Tube, Small.....	R11434	4442,4443,5441,4541,4542,4751	Socket, Tube 4 Pin.....	
B175-G	661	Shield, Tube, Large.....		4421,4422,4423,4424,4442,4443,5441,4511,4512,4513,4514,4541,4542,4521,4621,4622,4624,R5525,R5725,R5726,4751,4621,4822		
R3040	741,742	Shield, Primary Switch Cover.....	R11482	4421,4422,4423,4424,4511,4512,4513,4514,4521,R5525,R5725,R5726	Socket, Tube 6 Pin.....	
R3569	1161,1162	Shield, Fuse Cover (Obsolete)		4821,4822		
R10062	641,642	Shield, R.F. Coil Cover...	R11483	4421,4422,4423,4424,4511,4512,4513,4514,4521,R5525,R5725,R5726	Socket, Tube 7 Pin.....	
R10097	741,742,451,551,646	Shield, Tube Top.....		4621,4622,4624		
R10098	451,551,646,741,742	Shield, Tube Bottom.....	R11507	4442,4443,5441,4541,4542	Socket, Tube 5 Pin.....	
R10256	641,642	Shield, Tube Top.....	R11508	4751	Socket, Tube 6 Pin.....	
R10352	841,951,1161,1162	Shield, Tube Top.....	R11622	4442	Socket, Tube 4 Pin.....	
R10882	561,562,All 563,371	Shield, Osc. Tube.....	R11883	4421,4422,4423,4424,4511,4512,4513,4514,4521,4621,4622,6424,R5525,R5726,4821	Socket, Tube 4 Pin.....	
R11454	4621,4622,4624	Shield, R.F.Coil Cover....		4822,4751		
R11467	4621,4622,4624	Shield, I.F.Coil Cover....	R11906	4621,4622,4624,4821,4822,R5525,R5725,R5726	Insulator, Tube Socket...	
R11807	4541,4542,4751	Shield, Resistor Cover....	502-14	918	Socket, Tube 6 Pin.....	
503-1	918	Shield, Tube.....	502-15	918	Socket, Tube 7 Pin.....	
510-28	918	Shield, Chassis Base.....				
SOCKETS Tube and Insulators						
R10006	646,741,742	Insulator, Tube Socket Type 24.....				
R10007	641,642,646,741,742	Socket, Tube Type 24.....				
R10008	641,642,646,741,742	Socket, Tube Type 80.....				
R10009	641,642,646,741,742	Socket, Tube Type 45.....				
R10010	641,642,646,741,742	Insulator, Tube Socket Type 80.....				
R10112	641,642,646,741,742	Socket, Speaker.....				
R10387	451,551,841,951	Socket, Tube Type 551.....				
R10388	841,951	Socket, Tube Type 27.....				
R10389	841	Socket, Tube Type 45.....				
R10390	451,551,841,951	Socket, Tube Type 80.....				
R10391	451,551,841,951	Insulator, Tube Socket....				
R10393	841,951	Socket, Speaker.....				

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

SOCKETS Tube and Insulators - Cont'd.				SOCKETS Dial and Tuning Lights - Cont'd.			
Part No.	Model No.	Description		Part No.	Model No.	Description	
503-20	918	Socket, Speaker.....		R3538	462,772, 1162	Socket, Assem. Dial Light,R.H.....	
510-295	918	Socket, Tone Control Cable.....		R3545	771,861, 861A,862, 1161	Socket, Assem. Dial Light, L.H.....	
SOCKETS Dial and Tuning Light				R3546	462,771, 772,861, 861A,862, 1162	Socket, Assem. Dial Light,R.H.....	
R1402	90,200A,220 256,260	Socket, Dial Light (Porcelain).....		R4090	4421,4422, 4423,4424, 4512,4521, 4621,4622, 4751,4821, 4822,R5525, R5725,R5726	Socket, Assem. Dial Light.....	
R3030	641,642	Socket, Assem. Dial Light.....		R4222	4624	Socket, Tuning Light....	
R3036	741,742	Socket, Assem. Dial Light.....		R4223	4513,4621, 4622	Socket, Dial Light.....	
R3186	646,841,951	Socket, Assem. Dial Light.....		R4411	4821,4822 R5525,R5726 R5725	Socket, Tuning Light....	
R3261	451,551, 563E,563F, 771,772, 772A	Socket, Dial Light.....		R4430	4624	Socket, Dial Light.....	
R3537	462,861, 861A,862, 771,772, 1161,1162	Socket, Assem. Dial Light,L.H.....		R4488	4514	Socket, Dial Light.....	

SPEAKERS DYNAMIC - ASSEMBLIES AND PARTS

Pt. No.	Chassis Model No.	Used on Speaker	Speaker Type	Description
M35				
P1103	832	P1103	G2	Cone and Voice Coil Assem.....
P1106	832,833.....	G2	G2 Speaker,Assem.....
P1111	832,833.....	P1106	D7	Jensen, Speaker Assem.....
P1149	832,833.....	P1106	D7	Coil, Speaker Field 2500 Ohms....
P1150	832.....	P1103	G2	Cone, and Frame Assem.....
P1152	832.....	P1103	G2	Cone, and Voice Coil Assem.....
P1187	832,833.....	P1106	D7	Coil, Speaker Field 2500 Ohm.....
R3048	741.....	3060	D8	Cone, Voice Coil Assem.....
R3060	741.....	D8	Coil, Field 2500 Ohms.....
R3062	741.....	3060	D8	Jensen, Speaker Assem.....
R3070	742.....	D8	Cone, and Frame Assem.....
R3072	742.....	3070..	D8	Magnavox, Speaker Assem.....
R3111	742.....	3070..	D8	Coil,Field 2500 Ohms.....
R3137	451,551,646,841,951..	3312..	D15.....	Cone, Frame Assem.....
		3241..	D15.....	Cable, Speaker Assem.....
		3401..	D15.....	
R3138	641,642.....	D10.....	Speaker, Assem. Less Field and Output Trans.....
R3139	641,642,646,841,951..	3356..	D9	Coil, Field 2500 Ohms.....
		3167..	D12.....	
		3241..	D15.....	
		3401..	D15.....	
R3163	641,642.....	3138..	D10, D11..	Cone, and Voice Coil Assem.....
R3167	641,642.....	D12.....	Speaker, Assem.....
R3169	641,642.....	3167..	D12.....	Cone, and Frame Assem.....
R3241	646,841.....	D15.....	Speaker, Assem. less Output.....
		Transformer.....
R3242	451,551,646,841,951..	3241..	D15.....	Cone, and Voice Coil Assem.....
	561,861A,862,563A,...	3312..	D15.....	
	460,1161,1162.....	3401..	D15.....	
		3548..	D15.....	
		3549..	D15.....	
		3565..	D15.....	
		3566..	D15.....	
		3575..	D15.....	
		3776..	D15.....	
		3921..	D15.....	

All prices subject to change without notice

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

SPEAKERS DYNAMIC - ASSEMBLIES AND PARTS - Cont'd.

Pt. No.	Chassis Model No.	Used on Speaker	Speaker Type	Description
R3243	451,551,646,841,951 561,861,861A,862, 563A,1161,1162,460...	3241	D15	Cone, & Frame Assem.
		3312	D15	
		3401	D15	
		3548	D15	
		3549	D15	
		3565	D15	
		3566	D15	
		3575	D15	
		3776	D15	
		3921	D15	
R3247	951,861,861A,862, 771,772	3356	D9	Cone, Voice Coil Assem.....
		3550	D9	
		3851	D9	
R3248	951,861,861A,862, 771,772.....	3356	D9	Cone, and Frame Assem.....
		3550	D9	
R3250	451,551.....	3851	D9	Coil, Field 1000 Ohms.....
R3254	451,551,561,861, 861A,862,1161,1162...	3312	D15.....	
R3312	451,551.....	3312	D15.....	Coil, Hum Bucking.....
		3548	D15	
R3314	451,551,561,646,841 951,861,861A,862, 563A,460,1161,1162, 4422,4423,400,4512, 4513,400C.....	3549	D15	Speaker, Assem. (Less Output Transformer)
		3566	D15	
		3566	D15	
		3575	D15	
		3776	D15	
		3921	D15	
		4182	D15	
		4193	D15	
		3549	D15.....	
		3241	D15	
		3312	D15	
		3401	D15	
		3404	D15	
		3548	D15	
		3549	D15	
R3348	561	3549	D15.....	Coil, Field 1850 Ohms.....
R3356	951	D9	Speaker, Complete with Output Transformer.....
R3401	951	D15.....	Speaker, Complete with Output Transformer.....
R3404	400,400C.....	D15.....	Speaker, To Replace Magnetic Type on 400,400C Chassis, (Complete with Output Transformer.....
R3528	861.....	3548	D15.....	Coil, Field 1400 Ohms (Single Speaker Model).....
R3548	861	D15.....	Speaker Assem. less Output Transformer (On Single Speaker Model Only).....
R3549	561	D15.....	Speaker Assem. Less Output Transformer.....
R3550	861A,862.....	D9	Speaker, Assem. (Twin Speaker Model Only) Complete with Output Transformer.....
R3565	1161,1162.....	3566	D15.....	Coil, Field 910 Ohms.....
R3566	1161,1162.....	D15.....	Speaker, Assem. (Twin Speaker Model Only.) Less Output Transformer.....
R3567	1161,1162.....	3568	D9	Coil, Field 5000 Ohms
R3568	1161,1162.....	D9	Speaker, Assem. Less Output Trans....
R3574	861A,862,772A.....	3884	D9	Coil, Field 700 Ohms
		3550	D9	
		3575	D15	
		3885	D9	
R3575	861A,862.....	D15.....	Speaker, Assem. Less Output Transformer.....
R3608	1161,1162.....	3568	D9.....	Cone, and Frame Assem.....
R3612	771,772.....	3851	D9	Coil, Field 625 Ohms.....

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

SPEAKERS DYNAMIC - ASSEMBLIES AND PARTS - Cont'd.

Pt. No.	Chassis Model No.	Used on Speaker	Speaker Type	Description
R3721	562,563A,563C.....	3739	T1	Coil, Field 2000 Ohms
R3739	562,563,563E,563F,563D.....	T1	Speaker, Assem. with Output Transformer.....
R3764	563A,563C.....	3776	D15	Coil, Field 2000 Ohms.....
R3776	563A,563C.....	D15	Speaker, Assem. Less Output Transformer.....
R3851	771,772.....	D9	Speaker, Assem. Less Output.....
R3866	371	T1	Speaker, Assem. with Output Transformer.....
R3884	772A.....	D9	Speaker, Assem. with Output Transformer.....
R3885	772A	3884	D9	Cone & Frame Assembly.....
R3921	462	D15.....	Speaker, Assem. less Output Transformer.....
R3922	462	3921	D15	Coil, Field 500 Ohms.....
R3964	4514.....	T5.....	Speaker, Assem. with Output Transformer.....
R3966	4514.....	4964	T5.....	Cone, and Voice Coil Assem.....
R3970	4511	K6	Speaker, Assem. with Output Transformer.....
R3972	4511,4624,4421,4424,4521	{ 3970 4191 4181	K6 K6 K6	Cone, and Voice Coil Assem.....
R4070	4821,4822,R5725,R5726.....	4073	160.....	Coil, Field 590 Ohms.....
R4073	4821,4822,R5725,R5726.....	160.....	Speaker, Assem. Less Output Transformer.....
R4125	4622,R5525	4135	160	Coil, Field 1000 Ohms.....
R4135	4622,R5525	160	Speaker, Assem. with Output Transformer.....
R4166	4514	3964	T5	Coil, Field 2000 Ohms.....
R4181	4421,4424,4521.....	K6	Speaker, Assem. with Output Transformer.....
R4182	4621.....	D15	Speaker, Assem. with Output Transformer.....
R4184	4422,4423,4512,4513,4621	4193 4182	D15..... D15.....	Cone, and Voice Coil Assem.....
R4191	4624.....	K6	Speaker, Assem. with Output Transformer.....
R1493	4422,4423,4512,4513.....	D15.....	Speaker, Assem. with Output Transformer.....
R4214	4821,4822,R5725,R5726.....	{ 4070 4135	160 160	Panel, Terminal.....
R4276	4511.....	3970	K6	Coil, Field 2000 Ohms.....
R4277	4421,4424,4521.....	4181	K6	Coil, Field 1800 Ohms.....
R4278	4624.....	4191	K6	Coil, Field 1000 Ohms.....
R4280	4422,4423,4621,4512,4513.....	{ 4193 4182	D15 D15	Coil, Hum Bucking.....
R4281	4422,4423,4512,4513.....	4193 4182	D15..... D15.....	Coil, Field 1800 Ohms..... Coil, Field 1000 Ohms.....
R4283	4621.....	4182	D15.....	Cone, Voice Coil and Spider Assem.....
R4293	4622,R5525,R5725,R5726,4821,4822.....	{ 4070 4135	160 160	Cone, Voice Coil and Spider Assem.....
R4294	4622,R5525,R5725,R5726,4821,4822.....	{ 4070 4135	160 160	Cone, Voice Coil and Spider Assem.....
R4300	4421,4424,4521,4624.....	{ 4181 4191	K6 K6	Coil, Hum Bucking.....
R9502	371,562,563,563E,563F,563D.....	{ 3739 3866	T1 T1	Coil, Hum Bucking..... Cone, Voice Coil Assem.....

All prices subject to change without notice

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

SPEAKERS DYNAMIC - ASSEMBLIES AND PARTS - Cont'd.

Pt. No.	Chassis Model No.	Used on Speaker	Speaker Type	Description
R10437	451,551,561,646,841 951,861,861A,862, 563A,460,1161,1162, 4422,4423,4512,4513 563C,400,400C.....	3241	D15	Gasket, Cone Mounting.....
		3312	D15	
		3401	D15	
		3404	D15	
		3548	D15	
		3549	D15	
		3565	D15	
		3566	D15	
		3575	D15	
		3776	D15	
		3921	D15	
		4182	D15	
		4193	D15	
R10440	451,551,561,861, 861A,862,1161,1162...	3312	D15	Ring, Bucking Coil Retaining (Brass).....
		3548	D15	
		3549	D15	
		3566	D15	
		3241	D15	
R10441	451,551,561,646,841 951,861,861A,862, 563A,460,1161,1162, 4422,4423,4512,4513, 563C,400,400C.....	3312	D15	Felt, Baffle Pad, (4 Req'd).....
		3401	D15	
		3404	D15	
		3548	D15	
		3549	D15	
		3565	D15	
		3566	D15	
		3575	D15	
		3776	D15	
		3921	D15	
		4182	D15	
		4193	D15	
		3241	D15	
R10443	451,551,561,646,841 951,861,861A,862, 563A,563C,460,1161, 1162,4422,4423,4512 4513,400,400C,771, 772,772A	3401	D15	Spider, Cone.....
		3404	D15	
		3548	D15	
		3549	D15	
		3565	D15	
		3566	D15	
		3575	D15	
		3776	D15	
		3921	D15	
		4182	D15	
		4193	D15	
		3356	D9	
		3550	D9	
3851	D9			
3885	D9			
R10453	951,861A,862A,1161 1162,771,772A,772	3356 3550 3851 3885	D9 D9 D9	Felt, Baffle, Pad, (4 Req'd).....
R10454	951,861A,862A,1161, 1162,771,772,772A	3356 3550 3851 3885	D9 D9	Gasket, Cone Mounting.....
R11090	562,563,563E,563F, 371,563D	3739 3866	T1 T1	Gasket, Cone Mounting.....
R11417	4511,4624,4421, 4424,4521	3970 4181 4191	K6 K6	Gasket, Cone Mounting.....
R11418	4511,4624,4421, 4424,4521	3970 4181 4191	K6 K6	Gasket, Baffle
R11528	4622,R5525,R5725, R5726,4821,4822	4070 4135	160 160	Gasket, Baffle

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

SPEAKERS DYNAMIC - ASSEMBLIES AND PARTS - Cont'd.

Pt. No.	Chassis Model No.	Used on Speaker	Speaker Type	Description
RL1979	4514.....	3964	T5	Panel, Terminal
D17-12	918	24-1	D24.....	Coil, Field 5.5 Ohms.....
D24-1	918	D24.....	Speaker, and Output Transformer..
D24-11	918	24-1	D24.....	Cone, and Voice Coil Assem.....

SPEAKERS - P.M. DYNAMIC - ASSEMBLIES AND PARTS

NPN	961	3620	PM1.....	Cone, and Voice Coil Assem.....
MPN	661	3860	PM2.....	Cone, and Voice Coil Assem.....
R3620	961	PM1.....	Speaker, Assem.....
R3860	661	PM2.....	Speaker, Assem.....
R3988	4751.....	PM252....	Speaker,
R3991	4751.....	3988	PM252....	Cone, and Voice Coil Assem.....
R4214	4751.....	3988	PM252....	Panel, Terminal.....
RL1526	4751.....	3988	PM252....	Shroud, Cotton (Dust Proof).....
RL1528	4751.....	3988	PM252....	Gasket, Baffle.....

SPEAKERS MAGNETIC - ASSEMBLIES AND PARTS

RL1404	90,200A,260.....	Unit, Baldwin Speaker.....
R2210	400,400C.....	2210	Timmons..	Speaker, Timmons.....
R2431	400,400C.....	2210	Timmons..	Motor, Assem.....
R2432	400,400C.....	2210	Timmons..	Cone, Assem.....
RL1484	4443,5441,4541.....	Best.....	Speaker, 6" Assem.....
RL1623	4442,4542.....	11484	Best.....	Speaker, 8" Assem.....
RL2292	4443,5441,4541.....	11623	Best.....	Cone, Assem.....
RL2293	4442,4542.....	11484	Best.....	Cone, Assem.....
RL2294	4443,4442,5441,.....	11623	Best.....	Coil, Voice Assem.....
	4541,4542.....	11484	Best.....	
RL2364	4442,4443,5441,4541,.....	11623	Best.....	Apex, (Cone Ring).....
	4542.....	11484	Best.....	
RL2365	4442,4443,5441,4541,.....	11623	Best.....	Armature, Assem.....
	4542.....	11484	Best.....	
RL2367	4442,4443,5441,4541,.....	11623	Best.....	Rod, Cone Drive.....
	4542.....	11484	Best.....	
RL2368	4442,4443,5441,4541,.....	11623	Best.....	Rod, Dampning.....
	4542.....	11484	Best.....	
RL2369	4442,4443,5441,4541,.....	11623	Best.....	Magnet, Field.....
	4542.....	11484	Best.....	Gasket, Baffle.....
RL2371	4443,4541,5441.....	11623	Best.....	Gasket, Baffle.....
RL2372	4442,4542.....	11623	Best.....	

SWITCHES

Battery - Phone - Line - Band, Sensitivity

Part No.	Model No.	Description		Part No.	Model No.	Description
P1505	831,832,833	Switch, On & Off Line....	.85	R4074	4751	Switch, On & Off
PA1062	833	Switch, Phono Radio.....	1.50			Battery.....
P1520-G	961	Switch, On & Off		R4140	R5525	Switch, Band Selector...
		Battery.....	1.50	R4257	4621,4622	Switch, Band Selector...
RL555	90,200A,220			R4374	4821,4822	Switch, Band Selector...
	250,260,400			R4500	4624	Switch, Band Selector...
	400C,420	Switch, On & Off Line....	.75	R4528	R5725,R5726	Switch, Band Selector...
R2190	400C	Switch, Phono Radio.....	.75	RL0011	741,742	Switch, Primary.....
R3041	741,742	Switch, Line and Tone		RL0129	741,742	Switch, On & Off Line
		Control.....	1.50			(Slotted).....
R3046	742	Switch, Phono Radio.....	1.25	RL0876	1161,1162	Switch, Cycle Change....
R3056	742	Switch, Automatic Phono		RL1423	4443,5441	Switch, On & Off
		Motor.....	2.25			Battery.....
R3143	641,642	Switch, Line and Local-		RL1448	4541,4542	Switch, On & Off
		Distance.....	1.50			Battery.....
R3958	261,771,772	Switch, Band Selector....	7.00	RL1537	4442	Switch, On & Off
	772A					Battery.....

All prices subject to change without notice

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

SWITCHES				TRANSFORMERS			
Battery - Phono - Line - Band, Sensitivity - Cont'd.				Power - Filament - Cont'd.			
Part No.	Model No.	Description		Part No.	Model No.	Description	
R11697	4751	Switch, On & Off Battery..		R3221	646	Transformer, Power 25-	
R11814	4421,4422,	Switch, Band Selector.....		R3222	646	60 cy. Coil.....	
510-189	4423,4424	Switch, Tone Control.....		(X)		Transformer, Power 25-	
	918			R3280	451	60 cy. (Coil R3221)....	
						Transformer, Power	
				R3281	451	Coil 25-60 cy.....	
				(X)		Transformer, Power 25-	
				R3302		60 cy. (Coil R3280)....	
						Transformer Power Coil	
						25 60 cycle.....	
				R3305	646	Transformer, Power	
						Coil 230 v. -50 cy.	
				R3306	646	Transformer, Power 230-	
				(X)		v. -50 cy. (Coil R3305)	
				R3307	841	Transformer, Power Coil	
						230 v. -50 cy.....	
				R3308	841	Transformer, Power 230	
				(X)		v. -50 cy. (Coil R3307)	
				R3309	451	Transformer, Power Coil	
						230 v. -50 cy.....	
				R3310	451	Transformer, Power 230	
				(X)		v. -50 cy. (Coil R3309)	
				R3383	951	Transformer, Power Coil	
						25-60 cy.....	
				R3384	951	Transformer, Power 25-	
				(X)		60 cy. (Coil R3383)....	
				R3402	551	Transformer, Power Coil	
						25-60 cy.....	
				R3403	551	Transformer, Power 25-	
				(X)		60 cy. (Coil R3302)....	
				R3438	551	Transformer, Power 230	
						v. -50 cy. Coil.....	
				R3439	551	Transformer, Power 230	
				(X)		v. -50 cy. (Coil R3438)	
				R3455	951	Transformer, Power 230	
				(X)		v. 50 cy (Coil R3456)	
				R3456	951	Transformer, Power 230	
						v. -50 cy. Coil.....	
				R3466	561	Transformer, Power 25-	
				(X)		60 cy. (Coil R3467)....	
				R3467	561	Transformer, Power Coil	
						25-60 cy.....	
				R3468	861,861A,	Transformer, Power 25-	
				(X)	862	60 cy. (Coil R3469)....	
				R3469	861,861A,	Transformer, Power Coil	
					862	25-60 Cy.....	
				R3472	1161,1162	Transformer, Power 25-	
				(X)		60 cy. (Coil R3473)....	
				R3473	1161,1162	Transformer, Power Coil	
						25-60 cy.....	
				R3526	261	Transformer, Filament	
				(X)		(Coil R3527).....	
				R3527	261	Transformer, Filament	
						Coil.....	
				R3629	561	Transformer, Filament	
				(X)		230 v. -50 cy. (Coil	
						R3630).....	
				R3630	561	Transformer, Power	
						Coil 230 v. -50 cy.....	
				R3631	861,861A,	Transformer, Power 230-	
				(X)	862	v. -50 cy. (Coil R3632).	
				R3632	861,861A,	Transformer, Power Coil	
					862	230 v. -50 cy.....	
				R3705	1161,1162	Transformer, Power 230-	
				(X)		v. -50 cy. (Coil R3706).	
				R3706	1161,1162	Transformer, Power 230-	
						v. -50 cy. Coil.....	
				R3732	562,563A,	Transformer, Power 25-	
				(X)	563	60 cy. (Coil R3733)....	
				R3733	562,563,	Transformer, Power Coil	
					563A	25-60 cy.....	

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

TRANSFORMERS Power - Filament - Cont'd.

Part No.	Model No.	Description	Part No.	Model No.	Description
R3790	563C,563D	Transformer,Power Coil 230 v.-50 cy.....	D510-301	918	Transformer, Power Coil Only.....
R3791 (X)	563C,563D	Transformer,Power 230- v.-50 cy. (Coil R3790)..	NOTE: - (X)After Part No. - Supplied only as Complete assemblies until existing stock runs out then coil only supplied. (XX)After Part No. - Coil Only Available		
R3794	462	Transformer,Power Coil 25-60 cy.....			
R3795 (X)	462	Transformer,Power 25-60 cy. (Coil R3794).....	TRANSFORMERS R.F.Coil and R.F.Choke Assemblies, Etc.		
R3823	771,772	Transformer, Power Coil 25-60 cy.....			
R3824 (X)	771,772	Transformer, Power 25- 60 cy. (Coil R3823).....	NPN	661	Transformer, R.F. Antenna.....
R3846	771,772	Transformer, Power Coil 25-60 cy.....	NPN	661	Transformer, R.F. Interstage.....
R3847 (X)	771,772	Transformer,Power 25- 60 cy. (Coil R3846).....	NPN	661	Transformer, R.F. Osc....
R3854	371	Transformer,Power Coil 25-60 cy.....	PE106-G	961	Choke, R.F.Filament.....
R3855 (X)	371	Transformer,Power 25- 60 cy. (Coil R3854)	PE107-G	961	Choke, Osc. Series.....
R3881	563E,563F	Transformer,Power Coil 25-60 cy.....	PE109-G	961	Transformer, R.F. Interstage.....
R3882 (X)	563E,563F	Transformer,Power 25- 60 cy. (Coil R3881).....	PE110-G	961	Transformer, R.F.Antenna..
R3905	772A	Transformer, Power Coil 25-60 cy.	PE111-G	961	Transformer, R.F.Osc.....
R3906 (X)	772A	Transformer, Power 25- 60 cy. (Coil R3905).....	PA1016	831,832,833	Transformer, R.F.....
R3910	462	Transformer, Power Coil 230 v.-50 cy.....	PA1017	831,832,833	Transformer, R.F.Antenna..
R3911 (X)	462	Transformer, Power 230 v.-50 cy. (Coil R3910)	PA1038	831	Choke, Hum Assem.
R4131	4511,4512, 4513,4514	Transformer, Power 25- 60 cy.....	R1304	200A,220	Transformer,R.F.Antenna..
R4132 (X)	4511,4512 4513,4514	Transformer, Power 25- 60 cy. (Coil R4131).....	R1305	200A,220	Transformer,R.F.....
R4246	4621,4622, 4624,R5525	Transformer, Power Coil 25-60 cy.....	R1635	250,260	Transformer,R.F.Antenna..
R4247 (X)	4621,4622, 4624,R5525	Transformer,Power 25-60 cy. (Coil R4246).....	R1636	250,260	Transformer, R.F.....
R4304	4421	Transformer,Power Coil 230 v.-50 cy.....	R2034	400C,420, 400	Transformer, R.F. Antenna.....
R4305 (X)	4421	Transformer,Power 230 v. 50 cy. (Coil R4304).....	R2035	400,420, 400C	Transformer, R.F.....
R4333	4421,4422, 4423,4424	Transformer, Power Coil 25-60 cy.....	R2087	480,490	Transformer,R.F.Antenna..
R4334 (X)	4421,4422, 4423,4521, 4522	Transformer,Power 25-60 cy. (Coil R4333).....	R2088	480,490	Transformer, R.F.....
R4384	4821,4822, R5725,R5726	Transformer,Power Coil 25-60 cy.....	R2254	480,490	Choke, R.F.....
R4385 (X)	4821,4822, R5725 R5726	Transformer,Power Coil 25-60 cy. (Coil R4384)	R3011	641,642,741 646,742 741,742	Transformer, R.F.Antenna
R4409	4621,4622, 4624,R5525	Transformer,Power Coil 230 v.-50 cy.....	R3012	741,742	Transformer, R.F.....
R4410 (X)	4621,4622, 4624,R5525	Transformer, Power 230 v. 50 cy. (Coil R4409).....	R3035	451,551,641 642,646,741 742,841,951	Choke, R.F. Assem.....
R4476	4821,4822	Transformer,Power Coil 230+v.-50 cy.....	R3039	741,742	Choke, Broad Band Assem..
R4477 (X)	4821,4822	Transformer,Power 230 v. -50 cy. (Coil R4476)....	R3128	641,642,646	Transformer,R.F. Antenna..
R4480	4511,4512, 4513,4514	Transformer, Power Coil 230 v.-50 cy.....	R3204	841,951	Transformer, R.F. Interstage.....
R4481 (X)	4511,4513 4512,4514	Transformer,Power 230 v. -50 cy. (Coil R4490)....	R3205	841,951	Transformer, R.F. Osc....
D510-31(X)	918	Transformer,Power (Coil D510-301).....	R3206	841,951	Transformer, R.F.Antenna..
			R3285	451,551	Transformer, R.F. Interstage.....
			R3286	451	Transformer, R.F.Antenna..
			R3392	451,551	Choke, Broad Band Assem..
			R3399	551	Transformer, R.F.Antenna..
			R3498	561	Transformer, R.F.Antenna..
			R3499	561	Transformer, R.F. Interstage.....
			R3500	561	Transformer, R.F.Osc.....
			R3501	861,861A, 862,1161, 1162	Transformer, R.F.Antenna..
			R3502	861,861A, 862,1161, 1162	Transformer, R.F.Inter- stage.....
			R3503	861,861A 862,1161, 1162	Transformer, R.F.Osc.....
			R3505	561	Transformer, R.F.Antenna Primary.....

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

TRANSFORMERS R.F.Coil and R.F.Choke Assembly, Etc. - Cont'd.

Part No.	Model No.	Description	Part No.	Model No.	Description
R3515	561,861, 861A,862, 1161,1162	Transformer, Image Suppressor.....	R4258	4421,4422, 4423,4424, 4521,4621, 4622,4624, R5525	Transformer,R.F.Antenna..
R3541	261	Transformer,R.F.Antenna..	R4259	4621,4622, 4624,4821, 4822,R5525	Transformer,R.F. Interstage.....
R3542	261	Transformer,R.F.Osc.....			
R3543	261	Coil, Wave Trap Inductance.....	R4260	R5725, R5726	Transformer,R.F.Osc.....
R3544	261	Choke,R.F.Assem.....			
R3551	561,562,771 772,772A, 4443,5441, 4442	Choke,R.F.Assem.....	R12321	4421,4422, 4423,4424, 4521,4621, 4622,4624, 4821,4822, R5525,R5725	Coupler, Doublet and Zeppelin Antenna.....
R3727	562	Transformer,R.F.Osc.....			
R3728	562	Transformer,R.F. Antenna.....	510-34	918	Choke, R.F. "A" Unit.....
R3729	371,562, A11 563, 771,772, 772A	Transformer, R.F. Antenna Primary.....	510-36	918	Choke, R.F. "B" Unit.....
	A11 563		510-75	918	Transformer,R.F.Antenna
R3771	A11 563	Transformer, R.F. Antenna	510-76	918	Transformer,R.F. Detector.....
R3772	A11 563	Transformer,R.F.Osc.....	510-77	918	Transformer,R.F.Osc.....
R3837	771,772, 772A	Transformer,R.F.Primary..	510- 160	918	Choke, R.F. "A" Unit.....
R3838	771,772 772A	Transformer,R.F.Antenna..			
R3839	771,772 772A	Transformer, R.F. Interstage.....			
R3840	771,772, 772A	Transformer,R.F.Osc.....			
R3862	371	Transformer,R.F.Osc.....			
R3867	371	Transformer,R.F.Antenna			
R3868	563,562,371, 563E,563F	Antenna, Wire (25' on bobbin).....			
R3785	462	Transformer,R.F.Antenna Primary.....			
R3786	462	Transformer,R.F.Primary..			
R3787	462	Transformer,R.F.Antenna..			
R3788	462	Transformer,R.F. Interstage.....			
R3789	462	Transformer,R.F.Osc.....			
R3985	371,563, 4421,4422, 4423,4424, 4442,4521	Trap, Wave Assem.....			
R4018	4442	Transformer, R.F.Antenna.			
R4019	4442	Transformer, R.F. Osc.....			
R4020	4443,5441	Transformer,R.F.Osc.....			
R4041	4541,4542	Transformer,R.F.Osc.....			
R4042	4541,4542	Transformer,R.F.Antenna..			
R4044	4541,4542	Transformer,R.F. Interstage.....			
R4077	4751,4821 4822,R5725 R5726	Transformer,R.F.Antenna..			
R4078	4751	Transformer,R.F. Interstage.....			
R4081	4751	Transformer,R.F.Osc.....			
R4136	4421,4422, 4423,4424, 4521,4621, 4622,4624, 4821,4822 R5525,R5725 R5726	Choke, Osc. Plate.....			
R4170	4511,4512 4513,4514	Transformer, R.F.Antenna			
R4171	4511,4512 4513,4514	Transformer,R.F.Osc.....			
R4172	4511,4512 4513,4514	Transformer, Pre-selector			

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

TRANSFORMERS Audio - Input - Output - Pickup

Part No.	Model No.	Description	Part No.	Model No.	Description
R773A	90,200A,200 220,250,260 400,400C, 420	Transformer, Audio Coil Only.....	R3265 (X) R3282	951 451,551,561	Transformer, Input (Coil R3421)..... Transformer, Output Coil Only.....
R182F (X)	90,200A,220 250,200,260 420,400 400C	Transformer, Audio 1st and 2nd (Coil R773).....	R3283 (X) R3413	451,551,561 951	Transformer, Output (Coil R3282)..... Transformer, Output Coil Only.....
PA1002 (X)	831,832	Transformer, 1st Audio (Coil PA1031).....	R3414 (X)	951	Transformer, Output (Coil R3413).....
PA1003 (X)	831,832	Transformer, Double Audio (Coil PA1034, Coil PA1035).....	R3421	951	Transformer, Input Coil Only.....
-PA1031	831,832	Transformer, 1st Audio Coil only.....	R3422	951	Transformer, Input Use R3265
PA1034	831,832,833	Transformer, Input Coil Only.....	R3470 (X) R3471	861 861	Transformer, Output (Coil R3471)..... Transformer, Output Coil Only.....
PA1035	831,832	Transformer, Output Coil Only.....	R3474	1161,1162	Transformer, Output (Coil R3475).....
PA1068	833	Transformer, Output Coil Only.....	R3475	1161,1162	Transformer, Output Coil Only.....
PA1071	833	Transformer, 1st Audio Coil Only.....	R3476 (X)	1161,1162	Transformer, Input (Coil R3477).....
PA1073 (X)	833	Transformer, 1st Audio (Coil PA1071).....	R3477	1161,1162	Transformer, Input Coil Only.....
PA1074 (X)	833	Transformer, Double Audio Coil PA1034, Coil PA1068).....	R3572	861A,862 1161,1162	Transformer, Output Coil Only.....
R1716	480,490	Transformer, Audio Coil for Part No. 1890.....	R3573 (X)	861A,862 1161,1162	Transformer, Twin Speaker, Output (Coil R3472).....
R1888	480,490	Transformer, Audio Coil for Pt. No. 2300.....	R3584	1161,1162	Transformer, Tuning Light Reactor.....
R1890 (X)	480,490	Transformer, Audio (Short Spacer)(Coil R1716).....	R3654	961	Transformer, Output Coil Only.....
R2300 (X)	480,490	Transformer, Audio (Long Spacer)(Coil R1888).....	R3655	961	Transformer, Output (Coil R3654).....
R3018	741,742	Transformer, Input Coil Only.....	R3676 (X)	661,961	Transformer, Input Coil Only.....
R3021 (X)	741,742	Transformer, Input (Coil 3018).....	R3677 (X)	661,961	Transformer, Input (Coil R3676).....
R3027	741	Transformer, Output, Jensen Coil Only.....	R3722 (X)	563,563E, 562,563F 371	Transformer, Output (Coil R3723).....
R3028 (X)	741	Transformer, Jensen Out- put (Coil R3027).....	R3723	563,563E, 562,563F, 371	Transformer, Output Coil Only.....
R3069	742	Transformer, Output Coil Only Magnavox.....	R3762	563A,563C	Transformer, Output Coil Only.....
R3073 (X)	742	Transformer, Magnavox Output (Coil R3069).....	R3763 (X)	563A,563C	Transformer, Output (Coil R3762).....
R3121	641,642	Transformer, Output Coil Only.....	R3782	661	Transformer, Output Coil Only.....
R3122 (X)	641,642	Transformer, Output (Coil R3121).....	R3783 (X)	661	Transformer, Output (Coil R3782).....
R3123	641,642, 646	Transformer, Input Coil Only.....	R3827	771,772	Transformer, Output Coil Only.....
R3124	641,642	Transformer, Input (Use R3217).....	R3828 (X)	771,772	Transformer, Output (Coil R3827).....
R3200	841	Transformer, Input Coil Only.....	R3829	771,772	Transformer, Input Coil Only.....
R3201 (X)	841	Transformer, Input (Coil R3200).....	R3830	771,772	Transformer, Input, Use R3201.....
R3202	646	Transformer, Output Coil Only.....	R3897	772A	Transformer, Output Coil Only.....
R3203 (X)	646	Transformer, Output (Coil R3202).....	R3898	772A	Transformer, Output, Crackle Finish (Coil R3897).....
R3217 (X)	646	Transformer, Input (Coil R3123)	R3899	772A	Transformer, Coupling Coil Only.....
R3235	841	Transformer, Output Coil Only.....			
R3236 (X)	841	Transformer, Output (Coil R3235)			

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

TRANSFORMERS Audio - Input - Output - Pickup - Cont'd.

Part No.	Model No.	Description	Part No.	Model No.	Description
R3900 (X)	772A	Transformer, Coupling (Coil R3899).....	R4248	4421,4424, 4521,4624	Transformer, Output Coil Only.....
R3916	462	Transformer, Output Coil Only.....	R4249 (X)	4421,4424 4521,4624	Transformer, Output (Coil R4248).....
R3917	462	Transformer, Output (Coil R3916).....	R4250	4622,R5525, 4422,4423, 4512,4514, 4621	Transformer, Output Coil Only.....
R4023	4442,4443, 5441	Transformer, Audio Coil Only.....	R4251 (X)	4422,4423 4512,4514 4621	Transformer, Output (Coil R4248).....
R4024 (X)	4442,4443, 5441	Transformer, Audio Stage (Coil R4023).....	R4253	4622,R5525	Transformer, Output (Coil R4250).....
R4084	4751	Transformer, Audio Coil Only.....	R4386	4821,R5725 4822,R5726	Transformer, Output Coil Only.....
R4085 (X)	4751	Transformer, Audio (Coil R4084).....	R4387 (X)	4821,R5725 4822,R5726	Transformer, Output (Coil R4386).....
R4086	4751	Transformer, Driver Coil Only.....	R4388	4821,R5725 4822,R5726	Transformer, Input Coil Only.....
R4087 (X)	4751	Transformer, Driver (Coil R4086)	R4389 (X)	4821,R5725 4822,R5726	Transformer, Input (Coil R4388).....
R4088	4751	Transformer, Output Coil Only.....	D17-6	918	Transformer, Output Coil Only.....
R4089 (X)	4751	Transformer, Output (Coil R4088).....	D17-9 (X)	918	Transformer, Output (Coil D17-6).....
R4134 (X)	4514	Transformer, Output (Coil R4250).....	NOTE:	(X) After Part No. - Supplied only as complete assemblies until existing stock runs out then coil only supplied.	
R4198	4511,4513	Transformer, Output Coil Only.....			
R4199 (X)	4511,4513	Transformer, Output (Coil R4198).....			

I.F. TRANSFORMER ASSEMBLY AND REPLACEMENT COIL DATA

1 PART NO. ASSEM.	2 SEE NOTE	3 STAGE	4 CHASSIS USED ON	5 COIL NO.	6 SEE NOTE
3193	X	1st	841	3191
3194	X	2nd	841	3192
3388	1st & 2nd	951	3331	X
3389	X	3rd	951	3393	X
3489	X	1st	861,861A,862.	3493	X
3490	X	2nd	861,861A,862.	3494	X
3491	X	1st	561	3495	X
3492	X	2nd	561	3496	X
3570	X	1st	1161,1162	3577	X
3571	X	2nd	1161,1162	3494	X
3744	X	1st	562	3726	X
3745	X	2nd	562	3724	X
3766	X	1st	All 563	3765	X
3809	X	1st	460,771,772,772A.	3825	X
	2nd	All 536	3767	X
	2nd	460	3810	X
	2nd	771,772,772A.	3833	X
3834	X	2nd	371	3765	X
3857	X	1st	371	3858	X
3859	X	2nd	371	4025
4026	X	1st	4442,4443,5441.	4027
4028	X	2nd	4442,4443,5441.	4037
4038	X	1st	4541,4542	4039
4040	X	2nd	4541,4542	4025
4069	X	1st	4751.	4025
4071	X	2nd	4751.	4173
4174	X	1st	4511,4512,4513,4514	4175	X
4176	X	2nd	4511,4512,4513,4514	4153	X
4271	X	1st	4621,4622	4153	X
4272	X	2nd	4621,4622,4624.	4153	X
4339	X	1st	4421,4422,4423,4424	4340
4341	X	2nd	4421,4422,4423,4424	4153	X
4342	X	1st	4521.	4153	X
4343	X	2nd	4521.	4376	X
4377	X	1st	4821,4822	4378	X
4379	X	2nd	4821,4822	4380
4381	X	3rd	4821,4822		

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

I.F. TRANSFORMER ASSEMBLY AND REPLACEMENT COIL DATA - Cont'd.

1 PART NO. ASSEM.	2 SEE NOTE	3 STAGE	4 CHASSIS USED ON	5 COIL NO.	6 SEE NOTE
4511	X	1st	4621,4624,R5525,4622,R5725,R5726.
4513	X	2nd	R5525
4514	X	2nd	R5725,R5726
	1st	918	510-16	X
	2nd	918	510-18	X
PE112	X	1st	961

Column #1 - I.F. Transformers and Trimmer Assem. by Part No.
 Column #2 - I.F. Transformer Complete Assemblies which will be supplied until existing stock runs out.
 Column #6 - I.F. Transformer Coils marked (X) can be supplied and others not marked will be stocked as soon as assemblies run out.

TRANSFORMERS Intermediate Frequency

Part No.	Model No.	Description	Part No.	Model No.	Description
PE112	961	Transformer, 1st I. F. Assy.....	R3765	371, All 563	Transformer, 1st I. F. Coil Only.....
PE113	961	Transformer, 2nd I.F. Assy.....	*R3766	All 563	Transformer, 1st I.F. Assy.....
R3191	841	Transformer, 1st I.F. Coil Only.....	R3767	All 563	Transformer, 2nd I.F. Coil Only.....
R3192	841	Transformer, 2nd I. F. Coil Only.....	*R3809	462, 771, 772 772A	Transformer, 1st I. F. Assy.....
*R3193	841	Transformer, 1st I. F. Assy.....	R3810	462	Transformer, 2nd I. F. Coil Only.....
*R3194	841	Transformer, 2nd I. F. Assy.....	R3825	462, 771, 772 772A	Transformer, 1st I. F. Coil Only.....
R3331	951	Transformer, 1st and 2nd Coil Only.....	R3833	771, 772, 772A	Transformer, 2nd I. F. Coil Only.....
*R3388	951	Transformer, 1st and 2nd Assy.....	*R3834	771, 772, 772A	Transformer, 2nd I. F. Assy.....
*R3389	951	Transformer, 3rd I. F. Assy.....	*R3857	371	Transformer, 1st I. F. Assy.....
R3393	951	Transformer, 3rd I.F. Coil Only.....	R3858	371	Transformer, 2nd I. F. Coil Only.....
*R3489	861, 861A, 862	Transformer, 1st I.F. Assy.....	*R3859	371	Transformer, 2nd I. F. Assy.....
*R3490	861, 861A, 862	Transformer, 2nd I. F. Assy.....	R4025	4442, 4443, 4751, 5441	Transformer, 1st I. F. Coil Only.....
*R3491	561	Transformer, 1st I.F. Assy.....	*R4026	4442, 4443 5441	Transformer, 1st I. F. Assy.....
*R3492	562	Transformer, 2nd I. F. Assy.....	R4027	4442, 4443 5441	Transformer, 2nd I. F. Coil Only.....
R3493	861, 861A, 862	Transformer, 1st I. F. Coil Only.....	*R4028	4442, 4443 5441	Transformer, 2nd I. F. Assy.....
R3494	861, 861A, 862, 1161, 1162	Transformer, 2nd I. F. Coil Only.....	R4037	4541, 4542	Transformer, 1st I. F. Coil Only.....
R3495	561	Transformer, 1st I. F. Coil Only.....	*R4038	4541, 4542	Transformer, 1st I. F. Assy.....
R3496	561	Transformer, 2nd I. F. Coil Only.....	R4039	4541, 4542	Transformer, 2nd I. F. Coil Only.....
*R3570	1161, 1162	Transformer, 1st I. F. Assy.....	*R4040	4541, 4542	Transformer, 2nd I. F. Assy.....
*R3571	1161, 1162	Transformer, 2nd I. F. Assy.....	*R4069	4751	Transformer, 1st I. F. Assy.....
R3577	1161, 1162	Transformer, 1st I. F. Coil only.....	*R4071	4751	Transformer, 2nd I. F. Assy.....
R3724	562	Transformer, 1st I.F. Coil Only.....	R4142	4621, 4622, 4624	Transformer, 2nd I. F. Coil Only.....
R3726	562	Transformer, 2nd I. F. Coil Only.....	R4153	4421, 4422, 4424, 4423, 4521, 4621, 4622, 4624	Transformer, 1st I. F. Coil Only.....
*R3744	562	Transformer, 2nd I. F. Assy.....	R4173	4511, 4513, 4512, 4514	Transformer, 1st I. F. Coil Only.....
*R3745	562	Transformer, 1st I. F. Assy.....			

All prices subject to change without notice

ROGERS REPLACEMENT PARTS

All parts listed are genuine factory tested replacement parts

TRANSFORMERS Intermediate Frequency - Cont'd.

Part No.	Model No.	Description		Part No.	Model No.	Description
*R4174	4511,4512, 4513,4514	Transformer, 1st I. F. Assy.....		R4378	4821,4822	Transformer, 2nd I. F. Coil Only.....
R4175	4511,4512, 4513,4514	Transformer, 2nd I. F. Coil Only.....		*R4379	4821,4822	Transformer, 2nd I. F. Assy.....
*R4176	4511,4512, 4513,4514	Transformer, 2nd I. F. Assy.....		R4380	4821,4822	Transformer, 3rd I. F. Coil Only.....
*R4271	4621,4622	Transformer, 1st I. F. Assy. (Use R4511).....		*R4381	4821,4822	Transformer, 3rd I. F. Assy.....
*R4272	4621,4622 4624	Transformer, 2nd I. F. Assy.....		*R4511	4621,4622, 4624,R5525, R5725,R5726	Transformer, (Iron Core) 1st I. F. Assy.....
*R4339	4421,4422, 4423,4424	Transformer, 1st I. F. Assy.....		*R4514	R5525	Transformer, (Iron Core) 2nd I. F. Assy.....
R4340	4421,4422, 4423,4424	Transformer, 2nd I. F. Coil Only.....		*R4514	R5725,R5726	Transformer, (Iron Core) 2nd I. F. Assy.....
*R4341	4421,4422, 4423,4424	Transformer, 2nd I. F. Assy.....		510-16	918	Transformer, 1st I. F. Coil and Shield.....
*R4342	4521	Transformer, 1st I. F. Assy.....		510-18	918	Transformer, 2nd I. F. Coil and Shield.....
*R4343	4521	Transformer, 2nd I. F. Assy.....		NPN	661	Transformer, 1st I. F. Assy.....
R4376	4821,4822	Transformer, 1st I. F. Coil Only.....		NPN	661	Transformer, 2nd I. F. Assy.....
*R4377	4821,4822	Transformer, 1st I. F. Assy.....				

*NOTE:- Refer to Coil Data Table, Page 74.