

Scott HORNER

THE INFORMATION CONTAINED  
IN THE TECHNICAL MANUAL  
PERTAINS TO THE MACHINE  
BEARING THE FOLLOWING  
SERIAL NUMBER

1275

**TECHNICAL MANUAL**  
**SP & WP REPRODUCERS**

**INTERNATIONAL TAPETRONICS CORPORATION**

2425 South Main Street Bloomington, Illinois 61701 Telephone: 309-828-1381

# TECHNICAL MANUAL

(890-0001-000)

## REPRODUCERS

### SP SERIES

MONO, SINGLE CUE	826-0001-000
STEREO, SINGLE CUE	826-0002-000
MONO, THREE CUE	826-0003-000
STEREO, THREE CUE	826-0004-000
MONO, HI-SPEED CUE	826-0005-000
STEREO, HI-SPEED CUE	826-0006-000

### WP SERIES

MONO, SINGLE CUE	826-0011-000
STEREO, SINGLE CUE	826-0012-000
MONO, THREE CUE	826-0013-000
STEREO, THREE CUE	826-0014-000
MONO, HI-SPEED CUE	826-0015-000
STEREO, HI-SPEED CUE	826-0016-000

© Copyright 1975 International Tapetronics Corporation.

Made under one or more of the following patents:  
3,800,323 3,801,043 3,801,329 3,833,925 3,865,719  
other patents pending

# TABLE OF CONTENTS

# SP & WP SERIES REPRODUCERS

	PAGE
<b>SECTION I INTRODUCTION</b>	
A. General description.....	1-1
B. Specifications.....	1-1
<b>SECTION II INSTALLATION AND OPERATION</b>	
A. Unpacking.....	2-1
B. Installation.....	2-1
C. External connections—audio.....	2-1
D. External connections—control.....	2-1
E. Controls and indicators.....	2-1
F. Motor on-off control switch.....	2-2
G. Operating procedures.....	2-2
<b>SECTION III PRINCIPLES OF MECHANICAL OPERATION</b>	
A. Head assembly.....	3-1
B. Capstan drive.....	3-1
C. Pressure roller linkage.....	3-1
<b>SECTION IV MECHANICAL ADJUSTMENTS</b>	
A. General mechanical information.....	4-1
B. Capstan shaft (motor) position.....	4-1
C. Pressure roller/capstan pressure-coarse solenoid adjustment.....	4-1
D. Pressure roller/capstan pressure-fine solenoid adjustment.....	4-2
E. Solenoid damping.....	4-2
F. Right cartridge guide.....	4-2
G. Left cartridge guide.....	4-2
H. Tape guide adjustment.....	4-3
I. Head height adjustment.....	4-3
J. Cartridge corner post adjustment.....	4-4
K. Monophonic head azimuth adjustment.....	4-4
L. Stereo system head azimuth adjustment.....	4-5
M. Head replacement.....	4-7
<b>SECTION V MECHANICAL DRAWINGS</b>	
Top view.....	Fig. 5-1 5-1
Front view.....	Fig. 5-2 5-1
Rear view.....	Fig. 5-3 5-2
Bottom view.....	Fig. 5-4 5-2
Deck assembly, exploded view.....	Fig. 5-5 5-3
Track locations.....	Fig. 5-6 5-3
Capstan shaft locator gauge.....	Fig. 5-7 5-4
Capstan shaft location.....	Fig. 5-8 5-4
Linkage chain—pin location.....	Fig. 5-9 5-4
Solenoid plunger—clevis position.....	Fig. 5-10 5-4
Pressure roller shaft location.....	Fig. 5-11 5-5
Pressure roller—capstan pressure.....	Fig. 5-12 5-5
Tape guide position.....	Fig. 5-13 5-5
Head zenith adjustment.....	Fig. 5-14 5-5
Head height adjustment.....	Fig. 5-15 5-6
Cartridge corner post positioning.....	Fig. 5-16 5-6
<b>SECTION VI MECHANICAL PARTS LIST</b>	6-1

**SECTION VII PRINCIPLES OF ELECTRICAL OPERATION**

A. General information ..... 7-1  
B. Solenoid power supply..... 7-1  
C. Low voltage power supply ..... 7-1  
D. Control Circuitry ..... 7-1  
E. Cue Circuitry ..... 7-2  
F. Program Play Circuitry..... 7-2  
G. High Speed Cue Circuitry..... 7-3

**SECTION VIII ELECTRICAL ADJUSTMENTS**

A. Controls..... 8-1

**SECTION IX TEST CARTRIDGES AND USES**

A. Preventive maintenance..... 9-1  
B. Test cartridges..... 9-1  
C. Use of Test Cartridges ..... 9-1

**SECTION X ELECTRICAL DRAWINGS**

Sample remote control schematic ..... Fig. 10-1 10-1  
Program amplifier card parts location..... Fig. 10-2 10-2  
Cue detector card parts location..... Fig. 10-3 10-3  
Hi-speed cue detector card ..... Fig. 10-4 10-4  
Utility circuit board parts location ..... Fig. 10-5 10-4

**SECTION XI ELECTRICAL PARTS LIST**

A. Chassis ..... 11-2  
B. Utility board—SP series..... 11-2  
C. Utility board—WP series..... 11-2  
D. Program reproduce amplifier card ..... 11-2  
E. Cue tone detector card..... 11-3  
F. Hi-speed cue detector card..... 11-4

**SECTION XII MAINTENANCE SCHEDULE**

A. General..... 12-1  
B. Mechanical maintenance—reproducers..... 12-1  
C. Mechanical maintenance—recorders..... 12-1  
D. Electrical maintenance—reproducers..... 12-1  
E. Electrical maintenance—recorders ..... 12-1

**SECTION XIII WARRANTY**

**SECTION XIV ELECTRICAL SCHEMATICS**

SP-WP Reproducers  
SP-WP Reproducers with Hi-Speed Cue

## SECTION I

### INTRODUCTION

### SP & WP SERIES REPRODUCERS

#### A. GENERAL DESCRIPTION

International Tapetronics Corporation's magnetic cartridge tape Reproducers are designed to meet or exceed the NAB standards for cartridge tape recording and reproducing. The SP & WP series Reproducers are available in either monophonic or stereophonic configurations. All reproducers are furnished with primary (1 kHz) cue capabilities while the secondary (150 Hz) and tertiary (8 kHz) cue detectors are optional. Also optional is the Hi-Speed Cue feature which permits the rapid advance of the tape to the next cue tone.

The SP series is designed to function exclusively as a reproducer and accepts both the NAB type A and NAB type B cartridges. The WP series accepts the NAB types A, B and C cartridges and can be used alone as a Reproducer or with a RA series Recording Amplifier. The RP series combines these two units on a single front panel.

The printed circuit electronics include the latest silicon solid-state diodes, transistors, and integrated circuits. The regulated power supply is an integrated circuit in a plug-in TO-3 case. The program amplifiers have NAB equalization and transformer coupled outputs.

The cue tone detectors utilize reliable L-C networks and provide relay contact output information. Upon the conclusion of the audio, the Reproducer continues to advance the tape until a 1 kHz primary cue tone is detected, whereupon the 1 kHz cue detector stops the tape drive mechanism.

The Secondary Cue Tone (150 Hz) Detector, when the machine is so equipped, can be used for such functions as the indication of the "end-of-message." This is necessary in automated systems to start the next machine and can be useful in live operations to keep the operator "on cue" for inserts, tags, or the beginning of the next material. The presence of the secondary cue tone is indicated by the brightening of the front panel and remote "Run" (Start) Lamp.

In machines with the Hi-Speed Cue option, detection of the 150 Hz cue tone automatically places the Reproducer in the "fast run" mode and advances the tape to the next cue tone at four times the normal speed.

#### B. SPECIFICATIONS

Power:	117 volts AC, 60 Hz, 70 watts; other voltage and frequency variations are available on special order.
Tape Speed:	7½ inches per second; direct drive, hysteresis-synchronous, capstan motor with electrolyzed shaft and instrument-type, permanently lubricated ball bearings.

The Tertiary Cue Tone (8 kHz) Detector, also optional, can be used to supply information in automated systems or for auxiliary switching such as the control of slide projectors in television. Presence of the tertiary cue tone is indicated by the illumination of the front panel and remote "Ready" (Stop) Lamps.

A full-swing pressure roller is connected to the actuating solenoid by a mechanically simple chain linkage with a screw adjustment for pressure roller/capstan pressure. Air damping of the solenoid is adjustable with a needle valve. The direct-capstan, 450 RPM (375 RPM in 50 Hz models), hysteresis synchronous drive motor with an electrolyzed shaft provides optimum tape drive. A 450/1800 RPM (375/1500 in 50 Hz models) is used in units with the Hi-Speed Cue feature.

The precision head assembly consists of three independent tape guides and micro-adjust head mounting blocks with screw adjustments for height, zenith, and azimuth.

Several other features improve the ease and reliability of operation and serviceability. The ITC Reproducer is fully operative when partially or fully removed from its slide-out case to facilitate cleaning, maintenance and adjustment. Locking connectors are supplied for audio output and remote control. Socket connectors for head cables provide plug-in connection at the head and at the cue tone and audio amplifiers.

The head and track configuration of ITC Reproducers is in accordance with the NAB Standards. The magnetic tape head nearest the capstan shaft is head A, the reproducing head. Head B is a "dummy" which is installed to maintain constant tension on the tape, minimize wow and flutter and tape skew. On the WP series head B is a recording head when the Reproducer is connected to a RA series recording Amplifier.

On mono machines, the upper track is the program channel and the lower track is the cue channel. On stereo units, the upper track is the left program channel, the center track is the right program channel, and the lower track is the cue channel. A graphic comparison of the mono and stereo track configuration is shown in Figure 5-6.

Wow and Flutter: 0.2% or less, NAB Un-weighted.

Timing Accuracy: 0.1% or better

Audio Output: +12 dBm before clipping; normally +4 dBm: 600 ohms balanced. May be strapped for 150 ohms.

Distortion: 2% or less, record to playback at 0 VU record level, 400 Hz.

Noise: 55 dB or better below reference of 400 Hz at 3% THD, monophonic. 50 dB or better below reference of 400 Hz at 3% THD, stereophonic.

Cross Talk Between Channels: Better than 50 dB at 1 kHz

Frequency Response:  $\pm 2$  dB from 50 to 15,000 Hz

Equalization: NAB. Adjustable to compensate for head wear.

Cue Signals: NAB primary cue, 1 kHz, standard. Secondary cue, 150 Hz, and tertiary cue, 8 kHz, optional. External information when tone is sensed furnished as relay contact closure.

Playback Time: SP Series: 2 seconds to 16 minutes, NAB size A and B cartridges.  
 WP Series: 2 seconds to 31 minutes, NAB size A, B, and C cartridges.

Start Time: 0.1 second, at minimum solenoid damping.

Stop Time: 0.1 second, at minimum solenoid damping.

Ambient Temperature: 55 degrees C, 131 degrees F, maximum

Remote Control: All controls and indicators

Mounting: Table top mounting with rack mounting adapters optional

Dimensions: SP Series: 8½" width, 5¼" height (add 3/8" for feet), 11" depth.  
 WP Series: 17¼" width, 5¼" height (add 3/8" for feet), 11" depth.

Weight: SP Series: 23 pounds  
 WP Series: 28 pounds

Head Configuration: NAB (provided with reproduce and dummy head only; except WP Series supplied with recording head when purchased with an RA Series Recording Amplifier)

## SECTION II

### INSTALLATION AND OPERATION

### SP & WP SERIES REPRODUCERS

#### A. UNPACKING

Remove the reproducer from the shipping carton and inspect the unit for damage. All packing material must be retained if a claim for shipping damage is to be filed; and, therefore, should be kept on hand until installation has been completed in case concealed damage is discovered. If shipping damage is found, contact ITC for assistance in the filing of claims.

#### B. INSTALLATION

The ITC Reproducers are supplied in cases prepared for table top mounting. Adapter angle brackets, hardware and instructions for mounting in a 19 inch rack are supplied as an option.

To provide adequate ventilation in rack installations, vertical spacing between Reproducers and other equipment should be from 1¾" to 3½" depending on the temperature inside the closed rack.

#### C. EXTERNAL CONNECTIONS—AUDIO

Audio output connections are made on the six pin socket J2. The mating plug is supplied. Terminal information is provided below.

Terminal	CONNECTOR J-2	Function
1	Monophonic Shield (Ground)	(left channel stereo)
3	Monophonic Audio Output	(left channel stereo +)
5	Monophonic Audio Output	(left channel stereo -)
2	Right Channel Stereo Shield	(Ground)
4	Right Channel Stereo Audio Output	(+)
6	Right Channel Stereo Audio Output	(-)

Socket and terminal locations are shown in Section V, Figure 5-3.

The impedance of the audio output is normally 600 ohms. A 150 ohm output can be achieved by changing the transformer wires on connector J2 as noted on the schematic diagram.

In stereophonic systems, proper phasing of the audio connections must be observed.

#### D. EXTERNAL CONNECTIONS—CONTROL

Remote Control connections are provided on the fifteen pin socket J1. A mating plug is supplied for this purpose and terminal information is provided as follows:

Terminal	CONNECTOR J-1	Function
1	Ground	
2	Remote Start (Run Ground)—Normally Open Switch	
3	Remote Start (Ready Ground)—Normally Open Switch	
4	Remote Stop (Ready Ground)—Normally Open Switch	
5	Remote Stop (Stop Ground)—Normally Open Switch	
6	Remote Run Lamp Ground Circuit	
7	Remote Ready Lamp Ground Circuit	
8	+24 Volts	
9-10	Sec. Cue Relay (Normally Closed)	
10-11	Secondary Cue Relay Contact (Normally Open)	
12-13	Tertiary Cue Relay Contacts (Normally Open)	
14-15	Cue Audio—Unbalanced Audio Output from Cue Preamplifier; High Impedance (Terminate with 10K ohms or greater)	

Socket and terminal locations are shown in Section V, Figure 5-3.

Ground switching is employed for all remote control functions. Normally open, momentary action switches are utilized for both the remote START and STOP functions. A sample remote control schematic is shown in Figure 10-1.

If necessary, the normally open stop circuit can be replaced with a normally closed circuit by removing the jumper installed inside the machine between pins 3 and 4 on J1 and installing a remote, normally closed switch in its place.

#### E. CONTROLS AND INDICATORS

Each of the Reproducers (SP/WP) have the following associated control switches and indicators:

**POWER LAMP**  
The Power Indicator Lamp shows that the Reproducer is connected to an AC power source. (Should a power switch be required, the Power Indicator Lamp may be replaced with a switch as shown on the schematic diagram.)

**CARTRIDGE SWITCH**  
Two cartridge-sensing Micro Switches are installed on all single deck cartridge machines. These switches are designated as S1 in Figure 5-1. The switch located nearest the deck may be used as an on/off switch for the capstan motor. As supplied from the

factory, a strap across the switch places the motor in the "Run" mode when source voltage is applied to the Reproducer. The removal of the strap will place the motor in the "Run" mode only when a cartridge is placed in the Reproducer.

The Micro Switch located furthest from the deck provides a "Ready" indication to the Reproducer's control circuit and illuminates the indicator lamp located in the Stop Switch (on front panel) when a cartridge is placed in the Reproducer. The "Ready" cartridge switch must be operated in order for the tape transport to be started.

#### START SWITCH

The Start Switch (green) is used to energize the transport's pressure roller solenoid and put the tape in motion. The indicator lamp in the Start Switch shows that the machine is in a "Run" condition. Location is shown in Figure 5-2.

#### STOP SWITCH

The Stop Switch (yellow) can be pressed to stop the tape drive system. (Remember that unless a cartridge stops automatically, it will not be properly cued for the next play.) The indicator lamp in the Stop Switch shows that a cartridge has been properly loaded and the machine is "Ready" to be started.

### F. MOTOR ON-OFF CONTROL SWITCH

Two cartridge-sensing micro switches are installed on all machines. The switch located nearest the deck, when utilized, will serve as an on/off switch for the capstan motor.

It is the customer's option as to whether this switch is actually used. As supplied from the factory, a strap across the switch negates the action of the switch and causes the motor to run continuously (as long as AC is applied to the machine). This mode of operation would be recommended for most installations. The motor is designed for continuous duty operation, and the instrumentation-type bearings in the motor will last longer if they are not subjected to the stresses of frequent expansion and contraction caused by starting and

stopping the motor. Having the motor run continuously offers a second advantage in that a cartridge can be started instantly after being placed in the machine without having to wait the few seconds it takes for the motor to come up to speed.

In those installations where the cartridge machine is not frequently used, or where the machine builds up substantial heat because of poor ventilation or high ambient temperature, it may be desirable to allow the motor to remain off when a cartridge is not in place. This may be accomplished by removing the strap that is across the terminals of the motor control micro switch. (Refer to the schematic.)

**NOTE:** It is normal for a frequently used machine to feel quite warm to touch. Both the motor and the solenoid will generate heat when frequently or continuously used. This is normal and represents a problem only if the machine receives little or no ventilation or the ambient temperature is quite high.

### G. OPERATING PROCEDURES

To play a tape cartridge:

1. Insert a properly recorded tape cartridge into the right-hand side of the cartridge slot.
2. Check to see that the Ready Lamp (Stop Switch) is illuminated, indicating that the cartridge has been properly inserted and that the Reproducer is "Ready" for operation.
3. Press the Start Switch momentarily. The tape drive system will be started, and the tape motion will continue until the primary (1 kHz) cue tone automatically stops the machine or until the Stop Switch is pressed.



## SECTION III

### PRINCIPLES OF MECHANICAL OPERATION

### SP & WP SERIES REPRODUCERS

#### A. HEAD ASSEMBLY

The micro-adjust head assembly used on SP and WP Reproducers includes three tape guides constructed of non-magnetic material. The positioning of these tape guides is pre-set at the factory, but may be field adjusted if required. The head mounting bracket is of very sturdy construction with the azimuth pivot point located directly behind the center of the heads in both a vertical and horizontal plane. This feature permits azimuth adjustment without disturbing the zenith adjustment. The head assembly includes the provision for locking each head in position after adjustment, and the head mounting arrangement permits rapid head replacement when required.

Reliability, maintenance and performance is improved through the use of heads with a metal face and a hyperbolic front contour. The shape and material reduce the need for cleaning and relieve the problems sometimes caused by pressure pads.

#### B. CAPSTAN DRIVE

The proper drive of tape in a cartridge is much more difficult than in reel and other types of tape equipment. SP and WP Reproducers are designed and constructed to overcome the difficulties of cartridge tape drive. In a cartridge, the tape pulls from the center and winds back on the outside of an endless loop of tape. Therefore, the tape must slip upon itself as the cartridge plays. This slipping action does not occur at an even rate, and the tape tends to jerk as it pulls from the center of the hub. In addition, the tape is coated with a lubricant which reduces drive friction. One means of improving the drive would be to use a larger diameter pressure roller, but this is not possible since there is insufficient clearance in the bottom of the cartridge for a larger roller. Another approach—the one used in ITC equipment—is to use a capstan shaft with the largest diameter possible. This results in the

use of a 450 RPM (375 RPM in 50 Hz models) direct-drive capstan motor with an electrolyzed shaft. The hysteresis-synchronous, direct-drive motor has a constant speed since there are no belts or pulleys to introduce speed variables.

With a large capstan, directly driven, constant tape drive can be achieved if the tape is not permitted to slip between the pressure roller and the capstan. This problem is counteracted by machining the capstan shaft to a very high polish and then blasting it with aluminum oxide particles. The result is a finish with a random-rough pattern which provides the positive tape drive demanded of professional cartridge machines. An electrolyzing process hardens the roughened pattern and prevents the finish from wearing. The life of the shaft finish should be approximately five years.

#### C. PRESSURE ROLLER LINKAGE

A chain and sprocket converts the reciprocating action of a powerful solenoid into the rotating action required to bring the pressure roller into contact with the capstan. This design is both reliable and efficient and provides more than adequate torque. Greater turning torque must be exerted as the pressure roller comes into contact with the capstan, and the required torque curve is achieved through proper shaping of the solenoid plunger. Correct pressure roller/capstan pressure is achieved by adjusting the screw which attaches the chain assembly to the solenoid plunger. This mechanical assembly has a design life in excess of a million operations.

Extremely quiet mechanical operation is achieved through the use of an air-damped solenoid. The speed and the resultant noise of the assembly is controlled by a needle valve at the rear of the solenoid.

The design of the SP and WP Series Reproducers results in long life, dependable operation, and a minimum of maintenance.

## SECTION IV

### MECHANICAL ADJUSTMENTS

### SP & WP SERIES REPRODUCERS

#### A. GENERAL MECHANICAL INFORMATION

ITC Tape Cartridge Reproducers have been designed to provide reliable, rugged mechanics which require a minimum of simplified adjustments.

The sequence in which mechanical adjustments are completed, however, is important. Therefore, if a complete check of all mechanical adjustments is required, start at the beginning of this section and check and/or adjust the deck as instructed—from Capstan Shaft (Motor) Position to Head Azimuth Adjustment.

Head Adjustments, outlined last in this section, may be made without having completed the deck adjustments covered first in this section.

The alignment gauges mentioned in this section are optionally available from ITC.

#### B. CAPSTAN SHAFT (MOTOR) POSITION

While the adjustment procedure outlined below will normally be required only if the motor has been removed, a check for proper positioning of the capstan should be part of the regular maintenance schedule.

1. Remove the rubber pressure roller and place the round steel Capstan Shaft Locator Gauge on the pressure roller shaft of the deck as shown in Figure 5-7.
2. Loosen the motor mounting screws and manually press the steel Capstan Shaft Locator Gauge against the capstan shaft.
3. While squeezing the steel gauge and the capstan shaft together, position the capstan shaft as shown in Figure 5-8. The steel tool must lie flat against the capstan shaft to make the pressure roller shaft parallel with the capstan shaft.

The slight offset between the two shafts allows the tape to come into contact with the capstan shaft before the pressure roller to minimize wow and flutter and to slightly “wrap” around the capstan shaft for better pull.

4. Tighten the motor mounting screws and re-check the adjustment.
5. Replace the rubber pressure roller on its shaft. The steel washer goes on the bottom and the nylon washer goes on the top just under the retainer clip.

#### C. PRESSURE ROLLER/CAPSTAN PRESSURE—COARSE SOLENOID ADJUSTMENT

This adjustment is made at the factory and should not normally have to be repeated unless a

parts replacement (solenoid, solenoid plunger, linkage chain, clevis, or cross-shaft clamp) has been made in the solenoid linkage assembly. If there is no specific reason for making this adjustment, skip ahead to part “D” of Section IV.

1. Check to see that the steel roll pin protruding from the cross-shaft clamp is inserted between the eleventh and twelfth (counting from the clevis) connector pins in the linkage chain as shown in Figure 5-9.
2. Loosen the clevis locknut and rotate the solenoid plunger and the locknut until the Pressure Roller Compression Tool will fit snugly between the shoulder of the clevis and the locknut as shown in Figure 5-10. The locknut must be finger tight against the plunger. If the tool is not available, the space between the clevis and the locknut should be .2812 (9/32) inch.
3. Remove the capstan motor plug from the socket and actuate the cartridge sensing micro switch by pushing a piece of folded cardboard or other material between the switch's actuator arm and plunger (Figure 5-1).
4. Press the front panel START switch to energize the solenoid; loosen the screws in the cross-shaft clamp (Figure 5-1). Adjust the clamp screws so that the clamp is snug on the shaft but can be moved with a small amount of force.
5. Remove the rubber pressure roller and adjust the pressure roller shaft so that the Pressure Roller Compression Gauge fits snugly between the left side of the slot in the deck and the pressure roller shaft as shown in Figure 5-11.
6. Place the steel Capstan Shaft Locator Gauge on the pressure roller shaft, press it tight against the capstan shaft (see Figure 5-7), and tighten the screws in the cross-shaft clamp. If the Capstan Locator Gauge is not available, place a rubber pressure roller on the shaft, press it against the capstan until the rubber is depressed approximately 1/32 of an inch where it makes contact with the capstan shaft, and tighten the screws in the cross-shaft clamp. Pressure is applied by pushing plunger into solenoid, this will keep this linkage taut.
7. Remove the Capstan Shaft Locator Gauge and check the adjustment made in Step 5 above.
8. Replace the rubber pressure roller on its

shaft. The steel washer goes on the bottom and the nylon washer goes on the top just under the retainer clip.

9. Replace the capstan motor plug in the socket.

#### D. PRESSURE ROLLER/CAPSTAN PRESSURE – FINE SOLENOID ADJUSTMENT

This adjustment will normally be required only after parts replacement; but for best results, a check of the pressure roller/capstan pressure should be on the routine maintenance schedule.

1. Using the Pressure Roller Compression Gauge, check the distance between the capstan shaft and the pressure roller shaft. The tool should advance to the first “step” and stop as shown in Figure 5-12.
2. If adjustment is required, loosen the clevis locknut and rotate the solenoid plunger as follows (Figure 5-1):
  - a. To increase the pressure, rotate the solenoid plunger so that it penetrates deeper into the solenoid (clockwise as viewed from the front panel). This will increase the pull of the solenoid on the plunger and, therefore, the pressure roller/capstan pressure will be increased. The plunger must not “bottom out” to the seat of the solenoid.
  - b. To decrease the pressure, rotate the plunger counterclockwise as viewed from the front panel.
3. Tighten the clevis locknut when the proper pressure has been achieved. (If proper adjustment cannot be attained, complete the coarse adjustment outlined in part “C” of Section IV before repeating the fine adjustment.)

#### E. SOLENOID DAMPING

The air damping of the solenoid is controlled by the adjustment of the set screw at the rear end of the solenoid seat. The speed of the solenoid operation is proportional to the speed at which air is allowed to move through the small hole on the underside of the solenoid seat. The noise of the solenoid operation shares the same relationship.

The adjustment procedure outlined below in no way affects pressure roller/capstan pressure as in some machines of older design. See Figure 5-1 for parts location.

1. Loosen the locknut on the Solenoid Damping Set Screw.
2. Turn the Damping Screw clockwise to reduce, or counterclockwise to increase, the speed of the solenoid operation. The average length of time for the solenoid to retract is 0.1 sec.

3. Check the adjustment by inserting a cartridge and starting the Reproducer. Repeat the adjustment as required.
4. Tighten the locknut.

#### F. RIGHT CARTRIDGE GUIDE

The right cartridge guide controls the cartridge positioning in relation to the heads, capstan shaft, and pressure roller shaft. Proper location of this cartridge guide is essential to proper operation of the machine. The right cartridge guide is properly positioned at the factory and should not normally require adjustment.

The adjustment procedure is outlined below:

1. Loosen the right cartridge guide mounting screws and insert a cartridge into the deck.
2. Adjust the cartridge so that the pressure roller shaft is centered in the “keyhole” in the cartridge.
3. Position the cartridge guide 1/64 of an inch from the cartridge and at a right angle with the front edge of the deck.
4. Tighten the cartridge guide mounting screws.
5. Press the start switch and, with the cartridge playing, check to see that the cartridge is free to move approximately 1/64 of an inch in and out and from left to right. If the cartridge is tight in the machine, re-check all mechanical adjustments.

#### G. LEFT CARTRIDGE GUIDE

The left cartridge guide is intended to help guide the cartridge into the machine and prevent damage to a head due to improper loading. When NAB type B (or C in the WP Series) cartridges are used, the left cartridge guide must be removed.

The adjustment procedure is outlined below:

1. With a cartridge in the machine, position the end of the left cartridge guide nearest the front panel approximately 1/8 of an inch from the cartridge and snug down the mounting screw nearest the front panel.
2. Position the end of the left cartridge guide nearest the head assembly approximately 1/32 of an inch from the cartridge.
3. Tighten both mounting screws.

*The left cartridge guide should not come into contact with the cartridge when the cartridge has been properly inserted into the machine. Its purpose is to simply guide the cartridge into place — not to hold it there.*

## H. TAPE GUIDE ADJUSTMENT

The Reproducer has three independent tape guides to provide the maximum of tape guidance outside of the cartridge. The left tape guide has been specially formed to provide clearance for the corner post in the cartridge.

For optimum performance, not only should a check for proper tape guide positioning be made, as outlined below; but, also the positioning of the corner post in the cartridges should be checked and adjusted as shown in Figure 5-16.

The adjustment procedure is outlined below:

1. Check the positioning of each tape guide by advancing the Tape Height Gauge into the tape guide as shown in Figure 5-13. The gauge should advance fully into the tape guide, without friction, while resting flat on the deck—not tilted as shown by the dashed line (or its opposite) in Figure 5-13. The tape height gauge should be demagnetized so that it will not effect the “heads.”
2. If adjustment is required, loosen the two tape guide mounting screws.
3. Keeping the Tape Height Gauge flat on the deck, position the tape guide as shown in Figure 5-13.
  - a. Keep the tape guides as close to the head as possible without coming into contact with the head mounting blocks or any parts mounted on these blocks.
  - b. Keep the tape guides vertical. Normally, the bottom edge of the tape guide's mounting surface should rest on or very near the surface of the deck plate.
4. Tighten the tape guide mounting screws and re-check the adjustment.
5. Check and adjust as required the other tape guides.

The slot in the tape guide is .249 inch wide. (Actual tape width is  $.246 \pm .002$  inch.) The width of this slot can also be properly gauged with the Tape Height Gauge. The arm on the gauge should advance fully into the slot without friction, but there should be no room for noticeable movement of the tool in the slot.

Adjustments obtained with the Tape Height Gauge should be accurate to less than .001 of an inch—much better than that obtained with most inexpensive optical devices.

## I. HEAD HEIGHT ADJUSTMENT

The magnetic tape head nearest the capstan shaft is head A, the reproducing head. Head B in the SP series and independent WP series is a “dummy” which is installed to maintain constant tension on the tape and minimize wow and flutter. On the WP series, head B is a recording head when the Reproducer is connected to a RA series Recording Amplifier.

The adjustment procedure outlined below should be followed in positioning both the reproducing and recording heads. Only coarse height and zenith adjustments are required for a “dummy” head when used in position B. See Figure 5-1 for the location of the adjustment screws.

1. Loosen the Lock Screw L by turning it counterclockwise approximately four complete turns.
2. Course Height: Adjust the Front Height Screw FH until the top of the upper head track (pole piece) is  $9/16$  of an inch above the deck surface.
3. Course Zenith: Adjust the Rear Height Screw RH until the face of the head is perpendicular with the surface of the deck. Position the Tape Height Gauge (or any gauge known to be square) on the deck surface and move it against the face of the head as shown in Figure 5-14. The gauge used should be demagnetized before using for adjustment. Be careful to avoid scratching the face of the head. When the head is perpendicular, the face of the head and the “square” will be flush.
4. Fine Height and Zenith: This adjustment is made by using a strip of white “leader” tape or a piece of recording tape from which the oxide has been removed. (Shellac thinner, flux remover or a similar solvent will loosen the oxide which can then be wiped off the transparent base.) A test cartridge may also be used for this adjustment (refer to Section IX).
  - a. Position the transparent tape across the face of the heads as the tape would be positioned if a cartridge was being played. See Figure 5-15. Check to see that the tape is not being distorted (wrinkled) where it makes contact with the tape guides and attach it to one of the tape guide support blocks with adhesive tape to free one hand for adjustments.

- b. Alternately adjust Height Screws FH and RH to position the top of the upper head track (pole piece) so that it is even with the upper edge of the tape, and to position the bottom of the lower head track (pole piece) so that it is even with the lower edge of the tape. Screws FH and RH should be adjusted by equal amounts in the same direction.
- c. Re-check the zenith of the head as instructed in Step 3 above.
- d. Remove the transparent tape.

## J. CARTRIDGE CORNER POST ADJUSTMENT

The ITC head assembly includes three tape guides – the maximum number of tape guides which can be used with NAB type A cartridges. Even with carefully adjusted tape guides, the tracking of the tape as it passes across the recording and reproducing heads can be adversely affected by improper positioning of the corner post in most cartridges. See Figure 5-16.

After the tape has been pulled up out of the center of the endless loop, the cartridge corner post must bring the tape down to the proper height to pass across the heads. If the corner post is too high, the tape will be traveling “downhill” as it encounters the first tape guide and recording head. By the time the tape reaches the reproducing head, it will normally be brought into the proper position; but, in the worse case, tracking across the reproducing head can also be adversely affected by an improperly positioned cartridge corner post.

For optimum results, the tape must travel in a perfect horizontal path through the tape guides and across the heads. When the tape travels “downhill,” as in the example cited above, the azimuth positioning of the recording head would be different from that of the reproducing head. In fact, the azimuth positioning of the recording head would vary from cartridge to cartridge if positioning of the cartridge corner posts is not properly maintained.

Several cartridge manufacturers now offer cartridges with vernier adjustments for vertical positioning of the corner post. In older cartridges, proper position can be achieved by using the ITC Tape Height Gauge as shown in Figure 5-16.

1. Place the cartridge and the Tape Height Gauge on a flat surface and advance the

gauge between the upper and lower flanges as shown in Figure 5-16. The gauge should advance between the flanges without friction while resting flat on the surface, but there should be no room for noticeable vertical movement of the gauge between the flanges.

2. If adjustment is required, remove the top from the cartridge and raise the upper portion of the corner post from the cartridge base.
3. Sparingly apply a small amount of a general purpose cement to the inside of the corner post mounting hole in the cartridge base.
4. Keeping the Tape Height Gauge flat on the surface, press the corner post into the base until the gauge fits snugly between the two flanges as shown in Figure 5-16.
5. Remove the excess cement and re-check the corner post positioning before replacing the top cover.

## K. MONOPHONIC HEAD AZIMUTH ADJUSTMENT

Before attempting these adjustments, insure that the mechanical adjustments of the tape guides as outlined in Section 4-H, and the adjustment of height and zenith of both the Record and Reproduce heads (or Reproduce and “dummy” in Reproduce only machines) as outlined in Section 4-I are correct.

1. Reproduce Head Azimuth Adjustment:
  - a. Connect a 600 ohm load to the output terminals. Connect a VTVM across this load.
  - b. Insert a 15 kHz Standard Azimuth Alignment Tape and start the machine.
  - c. Adjust the azimuth screw A (refer to Figure 5-1 for location) of the reproduce head to produce maximum output level.
  - d. Carefully tighten lock screw L, observing the VTVM to insure that no change in output level occurs.
2. Record Head Azimuth Adjustment: It is reminded that changes in azimuth to the Master Record head can result in azimuth errors in all the Reproduce machines within a system unless the resultant azimuth is carefully checked against each of these Reproducers. Any change of azimuth of the record head should be attempted

ONLY AFTER all mechanical adjustments are carefully checked and the Master Reproduce head is aligned to the 15 kHz Standard Azimuth Alignment Tape as above.

- a. Select an erased 3½ minute cartridge which has had the corner post properly adjusted (Refer to Section 4-J) and is known to have consistently good operating characteristics.
- b. Connect a 600 ohm load to the Reproducer output terminals. Connect a VTVM across this load.
- c. Connect an audio generator to the Recorder input terminals. Set the input and Record Level to -10 dbm.
- d. Start the Recorder and adjust the azimuth screw A on the record head to produce maximum output level.
- e. Carefully tighten lock screw L, observing the VTVM to insure that no change in output level occurs.

#### L. STEREO SYSTEM HEAD AZIMUTH ADJUSTMENT

Two track stereo recording-reproducing results are subject to several contributing mechanical inaccuracies which can cause phase shift in simultaneously monitored reproducer outputs. In stereo systems these phase shifts are generally not perceptible in the final reproduction; however, in cases where monophonic “dubbing” or channel summing is desired, phase shifts can result in serious amplitude variations or drop-out at the higher frequencies. Most common causes of these problems are:

1. Lateral displacement of the heads with respect to each other within the head case.
2. Improper azimuth of the heads with respect to each other (record head to play head on any reproducer in a system).
3. Improper tape guidance (skew) either within the cartridge or through the tape guide system.

International Tapetronics has attempted to provide the best features possible to assist in the proper guidance of tape outside of the cartridge. Three adjustable tape guides, heavy-duty adjustable head mounts, and the use of “dummy” heads in Repro-

duce only machines, lend to consistent guidance of the tape through the head assembly. Adjustment procedures for cartridge corner posts in Section IV-J and gauges made available for this purpose are other measures taken by ITC to assist the discriminate in maintaining the best possible stereo performance from this equipment. The following test and adjustments do not preclude the many possible techniques for measuring phase shift, but provide the basis for satisfactory results using a minimum of equipment and skill.

##### 1. Master Reproduce Head Azimuth:

- a. Connect 600 ohm loads to both left and right channel outputs. Connect a VTVM to the left channel output. Insert a FULL TRACK 400 Hz reference “0” level tape and start the machine. Set left gain control R111 for 0 DBM output. Now connect the VTVM to the right channel output and adjust right gain control R 130 for 0 DBM output.
- b. Insert a 15 kHz FULL TRACK azimuth alignment tape and carefully adjust playhead azimuth screw A for a maximum reading on the VTVM. Observe the mechanical position of the azimuth screw.
- c. Move the VTVM to the left channel output. Now move azimuth screw A a small amount in either direction and observe the VTVM reading as an increasing or decreasing output. Continue moving the screw in the direction that produces increasing output until a maximum reading is obtained.
- d. Observe direction and amount that the screw was turned to obtain maximum reading on the left output with respect to the previous setting for maximum on the other channel. Set screw A to the midpoint between these settings to obtain AVERAGE azimuth for the two channels.
- e. Connect the horizontal input of any scope so equipped to the right channel output. Insert a FULL TRACK FREQUENCY ALIGNMENT TAPE and start the machine. Adjust the horizontal gain, if provided on the scope to a suitable amplitude. Remove the horizontal input.

- f. Connect the vertical input to the same right channel output and adjust the vertical gain to provide a deflection equal to that of the horizontal above.
- g. Now connect the horizontal input to the left channel output. Run the tape to the 400 Hz section. A pattern such as Figure 1 should now appear. If not, reverse the two leads of the horizontal input. This pattern represents the "0" or near "0" phase shift pattern of the system.
- h. Allow the tape to run to the 5 kHz section and observe if phase shift has occurred. (Refer to Figures 2 through 4.) If phase shift has occurred, adjust the azimuth screw A to correct this phase shift in the exact reverse rotation to which it has occurred. (This means

that if the pattern was increasing clockwise from 0 shift as frequency increased, screw A should be turned in such a way to cause scope display to rotate CCW back to the "0" position.)

- i. Now allow the tape to continue through the various frequencies observing the scope display to insure that no 180° reversals occur. At 15 kHz final adjustment of screw A can be made to provide best average phase shift. It is normal for shift "jitters" of several degrees to occur at the highest frequencies, so setting should be based on best results. It is desirable to run the tape several times, observing that phase reversals do not occur at any frequency. Tighten lock screw L and observe that no change occurs.

0 PHASE SHIFT

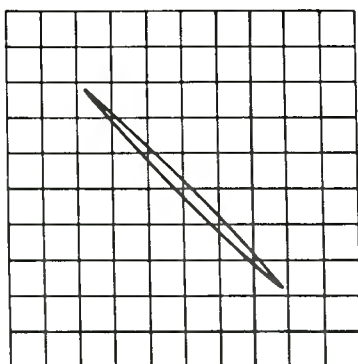


FIG. 1

45° PHASE SHIFT

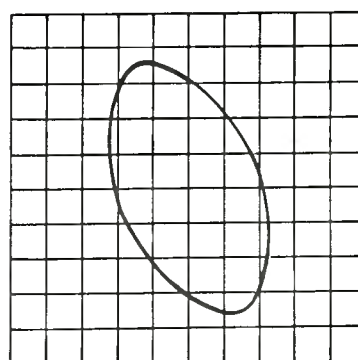


FIG. 2

90° OR 270° SHIFT

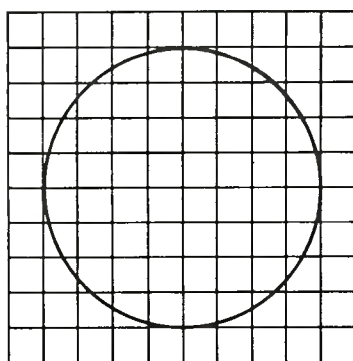


FIG. 3

180° PHASE SHIFT

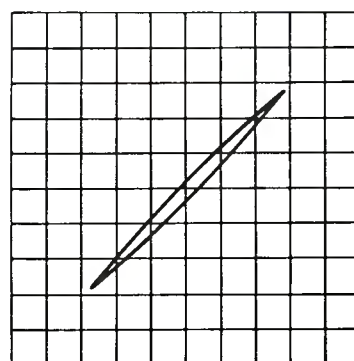


FIG. 4

2. Master Record Head Azimuth:
  - a. Select a 3½ minute cartridge that is known to have consistently good operating characteristics and proper adjustment of the corner post.
  - b. Connect a 15 kHz tone to both channel inputs on the recorder. (Observe phase relationship of these inputs.) Set the input and Record levels to -10 dbm.
  - c. Start the recorder and adjust the azimuth screw A on the record head for maximum amplitude of the display on the scope. (The scope gains may be adjusted in equal amounts to increase amplitude of the display if necessary.)
  - d. Sweep the dial on the tone source slowly to 400 Hz and observe phase rotation on the scope display. If 180° reversals occur, adjust screw A (of the record head only) at 5 kHz to produce "0" phase shift. Repeat the 400 Hz to 15 kHz sweep and adjust as necessary to remove phase reversals and provide best average phase shifts at 15 kHz. Tighten lock screw L and observe that no change occurs.
3. Other Reproduce Head Azimuth: It is important to realize that all reproducers within a system must be azimuth aligned to the master recorder. To implement this

it is necessary to prepare a test cartridge recorded on the master recorder each time any adjustment to this recorder is performed. This cartridge is in turn used to align EACH reproducer in the system, using the technique outlined in paragraph one above.

#### M. HEAD REPLACEMENT

The ITC Reproducers utilize the no-mount type heads to provide quick and easy installation.

1. Loosen the two screws in the head mounting strap.
2. Remove the old head and insert a new one. (The side of the head with the printing on it should be positioned up.)
3. Align the rear edge of the head case so that it is flush with the rear edge of the head mounting strap.
4. Tighten the screws in the head mounting strap.
5. Reconnect the head cable. The locator slot in the head socket of mono units must be on the top side to prevent a reversal of the program and cue channels. See the schematic diagram for the color code of the head lead arrangement used on stereo units.



SECTION V

MECHANICAL DRAWINGS

SP & WP SERIES REPRODUCERS

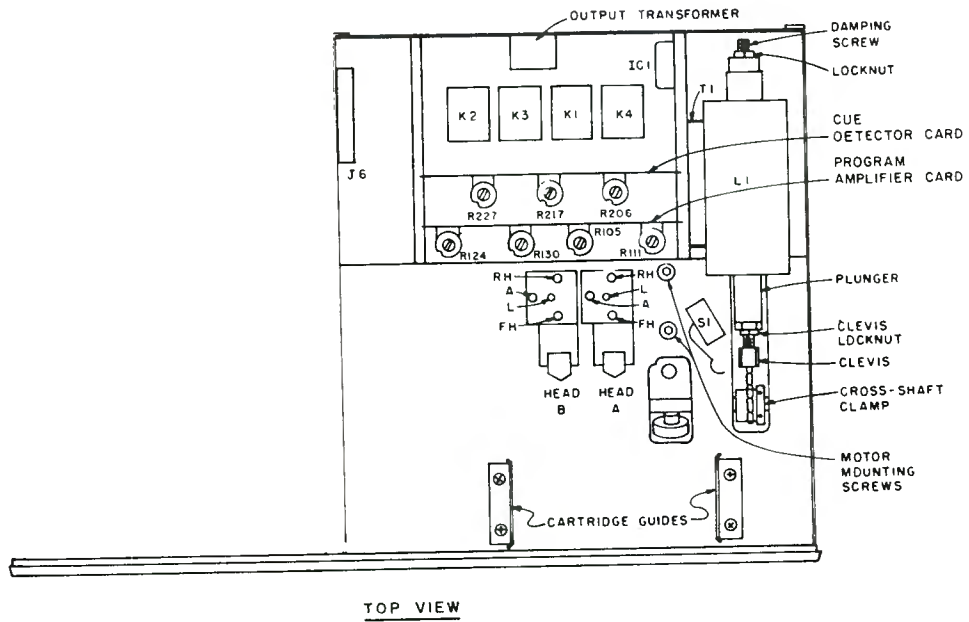


FIGURE 5-1



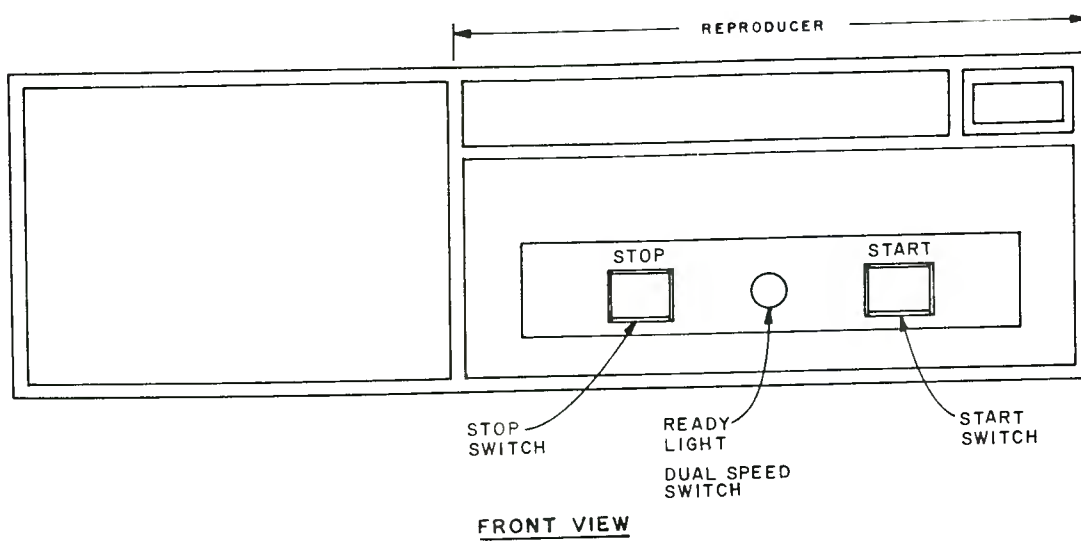


FIGURE 5-2

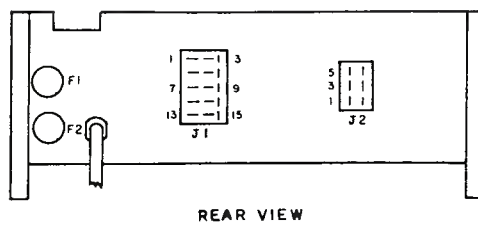

REAR VIEW

FIGURE 5-3

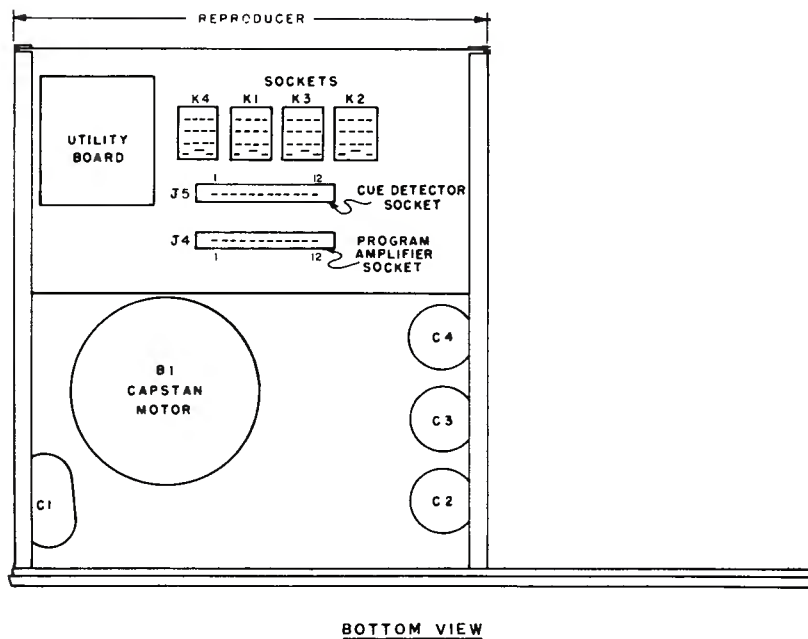

BOTTOM VIEW

FIGURE 5-4

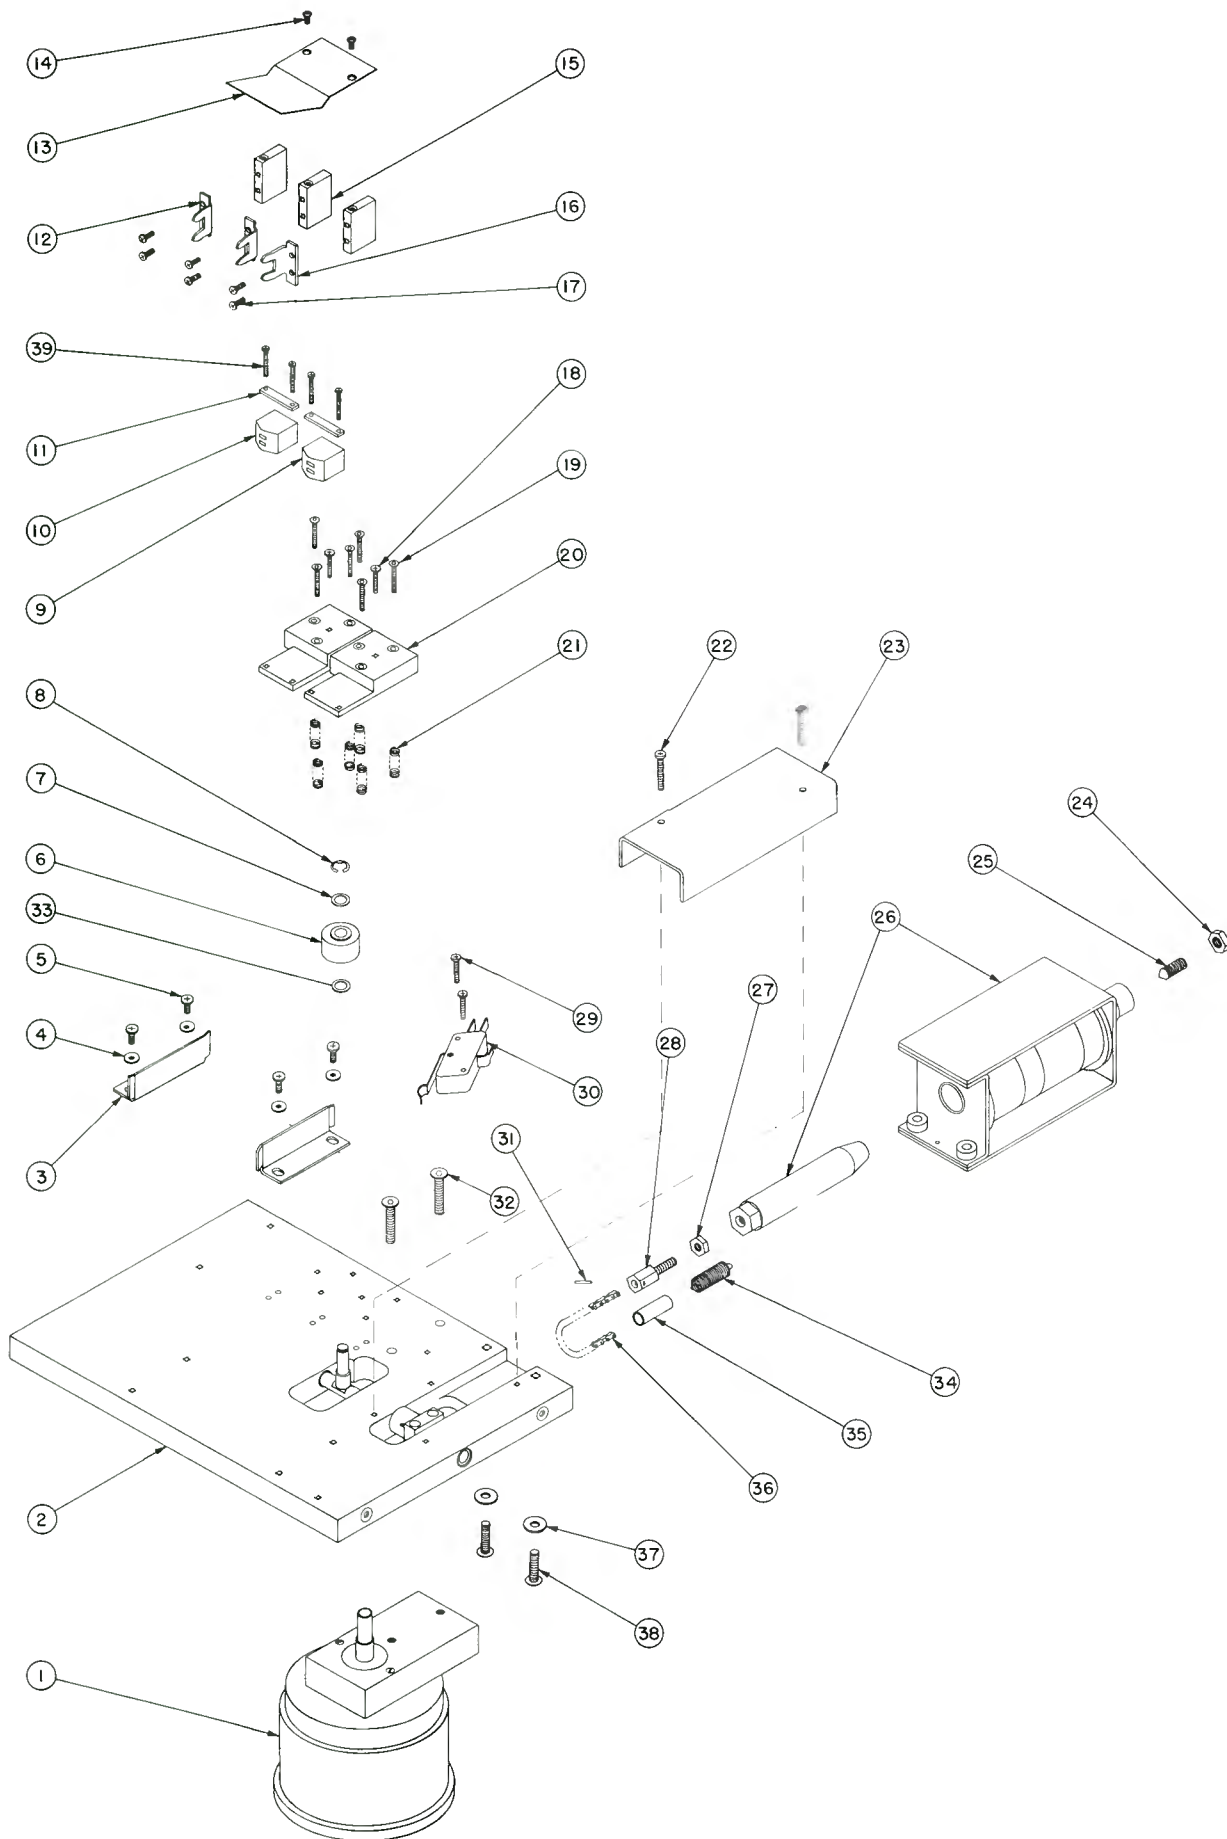


FIGURE 5-5

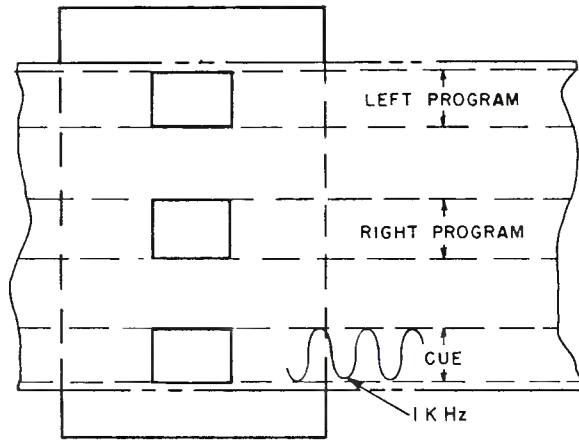
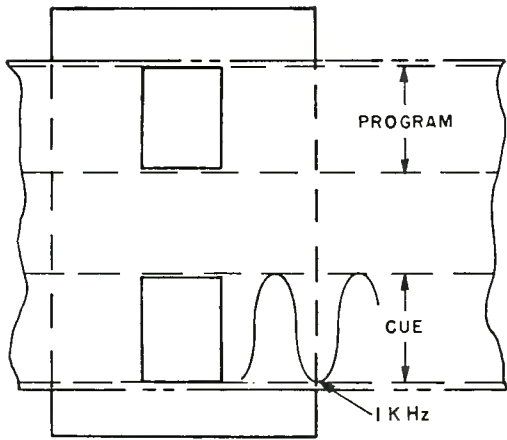


FIGURE 5-6

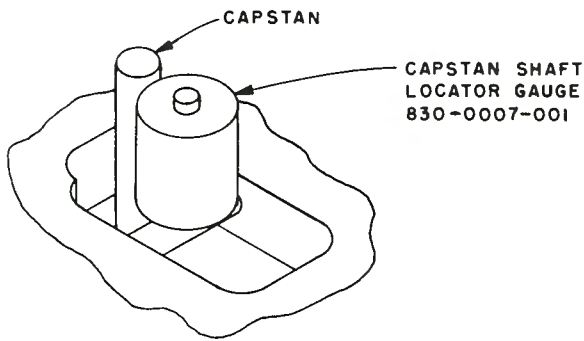


FIGURE 5-7

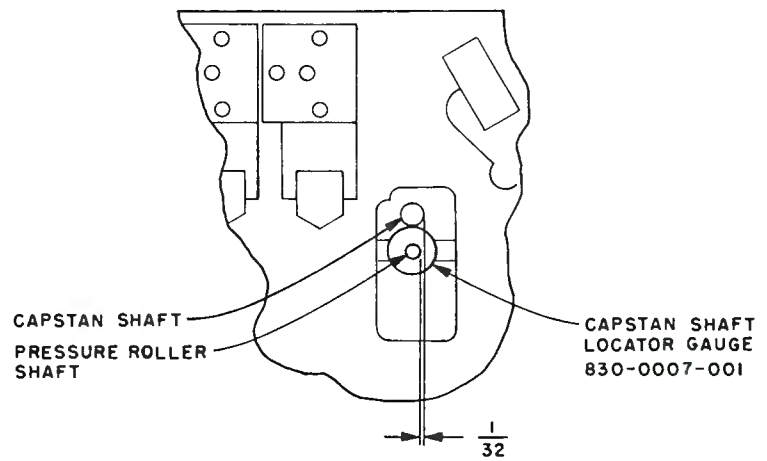


FIGURE 5-8

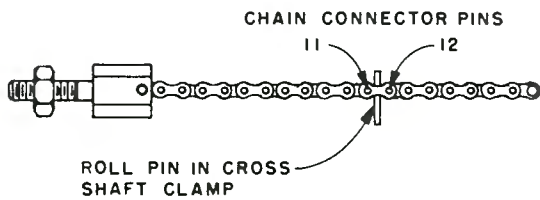


FIGURE 5-9

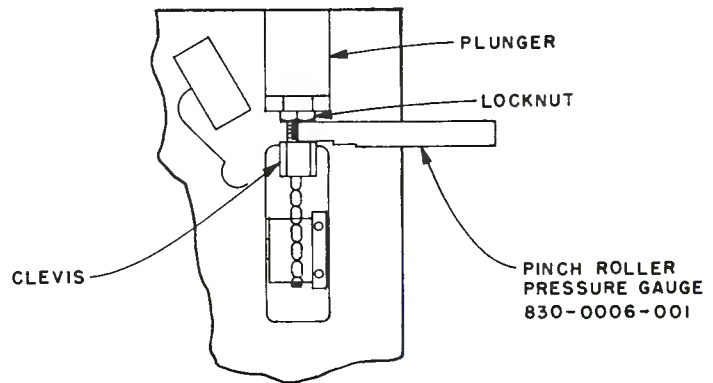


FIGURE 5-10

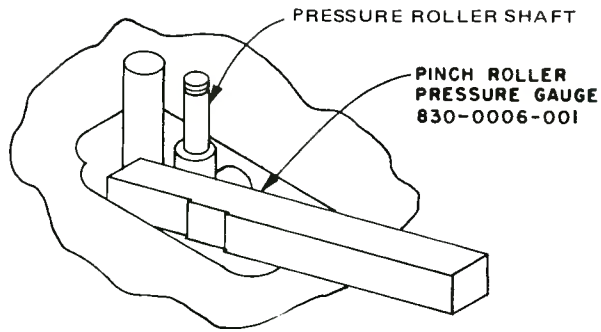


FIGURE 5-11

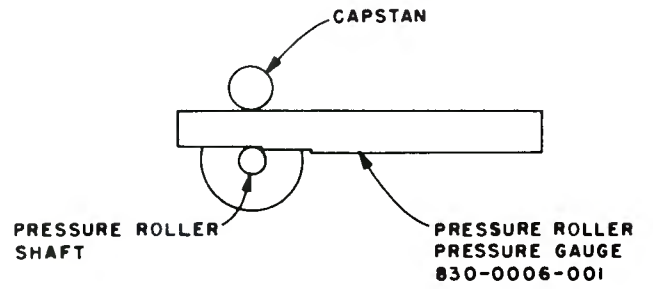


FIGURE 5-12

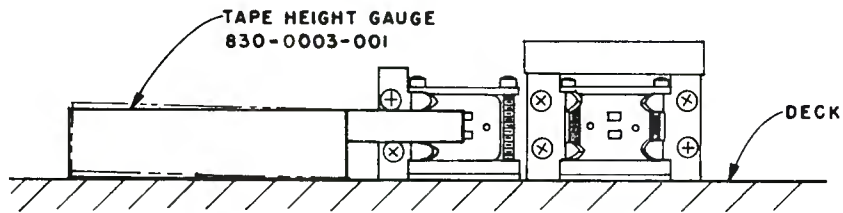


FIGURE 5-13

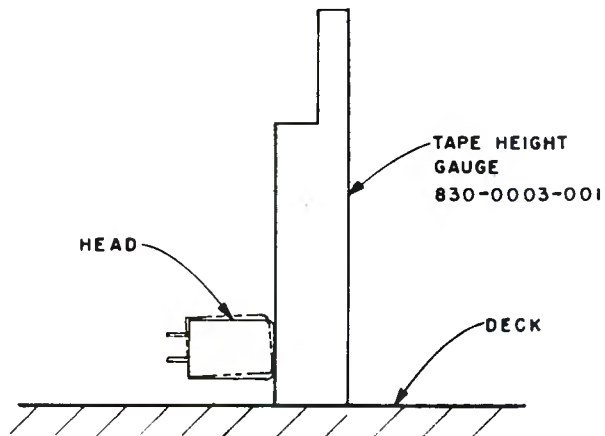


FIGURE 5-14

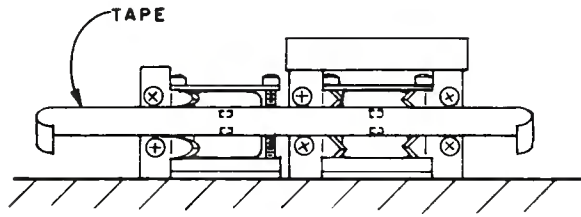


FIGURE 5-15

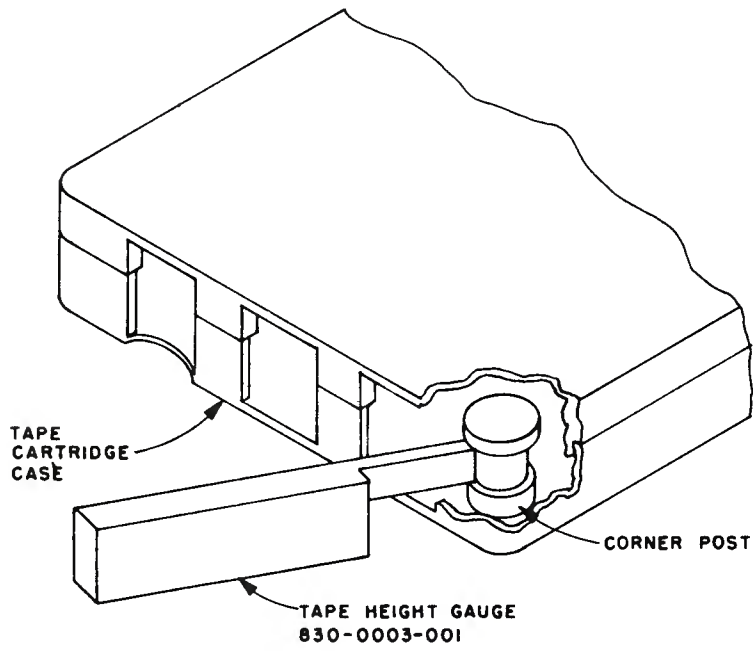


FIGURE 5-16

## SECTION VI

### MECHANICAL PARTS LIST

### SP & WP SERIES REPRODUCERS

(See Figure 5-5)

Item	Part Number	Description	Item	Part Number	Description
1	451-0001-010	Motor, Capstan, 450 RPM, 117V, 60 Hz	18	350-0415-000	Screws, Head Block Locking (two)
	451-0005-010	Motor, Capstan, 450/ 1800 RPM, 60 Hz, Hi-Speed Cue	19	353-0001-000	Screws, Head Block Azimuth and Height (six)
	451-0006-010	Motor, Capstan, 375 RPM, 115V, 50 Hz	20	253-0035-002	Blocks, Head Mounting (two)
	451-0007-010	Motor, Capstan 375/ 1500 RPM, 117V, 50 Hz, Hi-Speed Cue	21	301-0003-001	Springs, Compression, Head Block Support (six)
2	267-0001-014	Deck, SP Series	22	350-0422-000	Screws, Solenoid Plunger Cover Mtg. (two)
	267-0001-034	Deck, WP Series	23	265-0011-011	Cover, Solenoid Plunger
3	272-0001-001	Guides, Cartridge (two)	26	477-0006-002	Solenoid Coil and Plunger
4	360-0601-000	Washers (four)	27	370-1001-000	Nut, Lock, Clevis Screw
5	350-0604-000	Screws, Cartridge Guide Mtg. (four)	28	264-0001-001	Clevis, Screw (Solenoid Linkage)
6	291-0003-001	Pressure Roller	29	350-0420-000	Screws, Micro Switch Mtg., (two)
7	359-0006-000	Washer, mylar	30	392-0001-000	Switch, Micro (two)
8	289-0002-000	Clip, retainer	31	282-0001-001	Pin, Roll
9	504-0002-000	Head, Mono Reproduce, Nortronics, PB2H7KNO	32	353-0004-000	Screws, Motor Mounting
	504-0004-000	Head, Stereo Reproduce, Nortronics, PB3Q7KNO	33	360-1005-000	Washer, steel
10	504-0001-000	Head, Dummy	34	301-0005-000	Spring, Expansion, Solenoid Linkage Return
	504-0003-000	Head, Mono Record, Nortronics, PB2H4RNO (on WP Series only when used with recording amp)	35	441-0004-010	Tubing
	504-0005-000	Head, Stereo Record, Nortronics, PB3Q4RNO (on WP Series only when used with recording amp)	36	277-0001-001	Chain, Solenoid Linkage
11	303-0001-001	Straps, Head Mounting (two)	37	360-1003-000	Washers (two)
12	272-0003-001	Guide, Tape, Left (one)	38	353-0003-000	Screws, Solenoid Mounting (two)
13	301-0001-011	Spring, Cartridge Hold-Down	39	350-0307-000	Screws, Head Mtg. (four)
14	350-0402-000	Screws, Cartridge Spring Mtg. (two)	<b>MISCELLANEOUS MECHANICAL PARTS</b>		
15	304-0001-001	Supports, Tape Guide (three)	311-0009-000	Foot, plastic	
16	272-0002-002	Guides, Tape, Center and Right (two)	830-0003-001	Gauge, Tape Height	
17	350-0403-000	Screws, Tape Guide Mtg. (six)	830-0006-001	Gauge, Pressure Roller Pressure	
			830-0007-001	Gauge, Capstan Shaft Locator	

## SECTION VII

### PRINCIPLES OF ELECTRICAL OPERATION

### SP & WP SERIES REPRODUCERS

#### A. GENERAL INFORMATION

This section of the manual describes the electronic circuitry and the way in which it works. The symbol designations referred to are used on the schematic diagram for the SP/WP Reproducers. The WP Reproducer is designed so that it may be used in conjunction with a recording amplifier. The SP Reproducer is designed as a play only device with no recorder interconnect circuitry supplied.

#### B. SOLENOID POWER SUPPLY

Diodes CR1, CR2, CR3, and CR4 are a full wave bridge rectifier which furnishes 110 volts DC to the solenoid power supply filter. The dual section filter consists of R1, R9, and the two sections of C2. The diodes and resistors are located on the Utility Power Supply board (see Figure 5-4 for the board location) while the filter capacitors are mounted on the under side of the deck (see Figure 5-4). The output of 110 volts DC (under load) is switched by the parallel contacts 7 and 11 / 8 and 12 of control relay K1. A network consisting of C13 and R17 is across the coil of solenoid L1 for transient protection when power is removed.

#### C. LOW VOLTAGE POWER SUPPLY

Transformer T1 provides low voltage AC (with the center tap grounded) to diodes CR6 and CR7, a full wave rectifier that supplies the input to the regulated power supply. Capacitor C3 acts as an input filter. The diodes and resistors of this power supply are mounted on the Utility Power Supply board (see Figure 5-4 for the board location) while the filter capacitors are located on the under side of the deck (see Figure 5-4).

IC1 is the regulated power supply. (See Figure 5-1 for location.) The output of this power supply is +24 volts. The regulated power supply is protected by F1, a fast acting ½ ampere fuse. The output of the regulated power supply is represented on the schematic diagram by a triangle which is common to all other points on the schematic shown with a like symbol. R3 and C4 provide decoupling and additional filtering for the program amplifier card.

The case of IC1 is insulated from the chassis by a mica washer to prevent hum loops. To provide maximum heat dissipation, the mica washer is coated on both sides with thermal conductive agent and IC1 is held firmly in place with two mounting screws.

#### D. CONTROL CIRCUITRY

The chassis control circuitry is furnished with power by the low voltage DC power supply and utilizes ground switching. At all times other than when a primary (1 kHz) cue tone is being detected, positive voltage is routed from the low voltage DC power supply through R215 and CR205 on the cue card to control relay, K1. When a cartridge has been properly inserted in the deck, the cartridge sensing micro switch S1 closes furnishing ground information through contacts 2 and 10 on relay K1 and pin 2 on J5 to the stop cue tone protection circuit on the cue card, the action of which is described under Cue Circuitry. This same "ready" ground is furnished through CR8 and R4 to illuminate I3, the "ready" lamp, and through R5 to a remote "ready" lamp. See Figure 5-4 for the location of the control relays and the Utility Power Supply Board.

The ground furnished through S1 is routed to S3, the Stop Switch, through pin 4 on J1 to a remote stop switch, through the jumper installed between pins 3 and 4 on J1 to S2, the Start Switch, and through pin 3 on J1 to a remote start switch. On the WP Series the ground arriving at the Start Switch is also made available to a recording amplifier through pin 18 on J6 and through contacts 9 and 1 on K1 and pin 15 on J6.

With conditions described above, pressing the Start Switch presents a ground to pin 13, the coil of K1, the control relay, which energizes and holds itself energized by closing contacts 5 and 9. Contacts 1 and 9 open removing the "ready" ground from the recording amplifier. Contacts 2 and 10 open removing the "ready" ground from the stop tone cue protection circuit and the Ready lamps. Contacts 6 and 10 close providing a ground through R6 to a remote run lamp and to the audio squelch to turn on the audio. Parallel contacts 7 and 11 / 8 and 12 close completing the circuit to energize the solenoid.

When a primary (1 kHz) cue tone is detected, transistor Q203 turns on and takes the junction of R215 and CR205 to ground, removing the positive holding voltage from K1.

Pressing S3, the Stop Switch, accomplishes the same thing with a normally open, momentary action switch which eliminates the disadvantages of a series stop circuit. If for any reason a series remote stop circuit is required, the normally open stop circuit can be replaced with a normally closed circuit by removing the jumper installed inside the machine between pins 3 and 4 on J1



and installing a remote, normally closed switch in its place.

When a secondary (150 Hz) cue tone is sensed, relay K2 is energized. A contact closure is then provided on pins 10 and 11 of J1 by parallel contacts 5 and 9 / 6 and 10. The closure of contacts 8 and 12 shorts out dropping resistor R7 providing a brighter illumination of the Run Lamp as an indication of 150 Hz cue tone detection. Contacts 7 and 11 short out R6 in the remote run lamp circuit.

Relay K3 is energized when a 8 kHz tone is detected. A contact closure is provided on pins 12 and 13 of J1 by parallel contacts 5 and 9 / 6 and 10. The closure of contacts 8 and 12 provides an indication of the 8 kHz cue tone detection by returning the ground to the Ready Lamp circuit. Diode CR8 functions as a blocking diode and prevents this ground from being presented to the stop cue tone protection circuit.

## E. CUE CIRCUITRY

The plug-in Cue Detector card is located in the second position at the rear of the deck assembly. The 1 kHz Primary Cue detector and the optional 150 Hz and 8 kHz detectors when so equipped are designed to operate from tones as specified in the NAB Standards.

Transistors Q210 and Q211 are the equalized preamplifier stages which provide essentially equal voltage for each of the normal level cue tones to the common signal bus of the three detectors (when so equipped).

Diodes CR201 and CR202 act as a signal limiter to prevent the signal bus from exceeding the detector input maximum level of approximately .5 volts. This bus is also supplied to the remote socket J1 (Pin 15) and to the recorder meter circuits via J6 (Pin 2) of WP Series Reproducers.

The 1 kHz Primary Cue section contains a stop cue tone protection circuit which prevents the machine from being stopped by a 1 kHz tone for approximately two seconds after the unit is started. While the reproducer is sitting idle with a cartridge inserted (cartridge sensing micro switch S1 closed), capacitor C206 is discharged through R204, CR203, contacts 2 and 10 of relay K1, and S1 to ground. When the reproducer is started, the discharge path is opened by relay K1; and C206 begins to be charged by the 24 volt DC power supply through resistor R203. While C206 is charging, the base of Q201 is clamped sufficiently close to ground to prevent operation of the 1 kHz detector. When C206 is charged to approximately 11 volts, diode CR204 is reverse biased and the clamp is removed.

In the 1 kHz Primary Cue Section, a series resonant circuit consisting of L201, C208 and C209 provides a low impedance regenerative cir-

cuit for Q201 at 1 kHz, while attenuating frequencies more than a few percent above or below 1 kHz. Transistor Q202 is a zero bias signal rectifier which amplifies positive current pulses present at its base. R212, R213 and C210 act as the rectifier load and coupling network to switching transistor Q203. This configuration also acts to filter out any transients that may be present on incoming signals. Q203 diverts current flow from relay coil K1 during the cue tone and causes it to de-energize and stop the tape drive.

The operation of the 150 Hz Secondary and 8 kHz Tertiary Cue sections is, in principle, the same — except that the tuned circuit is designed for the respective frequency. Since no tone protection is provided in these circuits, the 150 Hz and 8 kHz detectors are free to operate at any time. Switching transistors Q209 and Q206, when conducting, operate relays K2 and K3 respectively.

NOTE: The NAB standards specify that the Primary Cue tone oscillator generate a tone of 925 Hz to 1075 Hz. Many older cartridge recorders produce a stop cue tone that is well outside these tolerances.

A broad-band cue detector is supplied in ITC single cue tone machines. This broad-band cue detector will pass a wide range of frequencies which permits proper cueing of cartridges recorded on older machines. The broad-band characteristics will cause no problem as long as only single cue tone operation is used. Components C220 and C221 provide the broad-band operation.

The broad-band detector can be changed to the narrow band mode (1 kHz  $\pm$  75 Hz) by removing the white wire strap that is on top of the detector PC card. In addition, it may be necessary to increase the gain of the detector by turning the sensitivity control clockwise. (The detector has about 10 dB less gain in the narrow band mode.)

## F. PROGRAM PLAY CIRCUITRY

The program play amplifier is located on the plug-in PC Card immediately to the rear of the deck assembly. Single monophonic or dual stereophonic amplifiers of identical design are on the same card, depending upon machine design.

Transistors Q101 and Q102 are the high stability equalized pre-amplifier stages. Adjustable AC feedback equalization is employed to improve input impedance. These components are C104, R104 and R105 in the L. Channel amplifier. Out-

put from these stages is coupled through the electronic attenuator IC101 to the gain control R111. Audio is muted by IC101 in all but the run mode. Transistors Q103 and Q104 are conventional voltage amplifiers, each with local AC feedback employed. The output is connected via edge pin 1 to the balanced output transformer T2. Output impedance is normally 600 ohms but may be changed to 150 ohms by re-connection of the secondary wires. Refer to the schematic notes.

### G. HIGH SPEED CUE CIRCUITRY (WHEN SO EQUIPPED)

The function of the Hi-Speed option on the Reproducer is to automatically produce a high speed run mode of the capstan motor when an end of message tone (150 Hz) is detected or when the dual speed switch (Figure 5-2) is pressed. The Reproducer will remain in the "fast" run mode until a stop tone (1 kHz) is detected or the stop switch (Figure 5-2) is pressed. While the Reproducer is in the "fast" run mode, the 1 kHz tone becomes approximately 4 kHz and the 150 Hz tone becomes approximately 600 Hz. The Reproducer can only be placed in high speed operation during the "run" mode because contacts (6 / 10) of K1 are closed only during this mode. During the high speed operation of the Reproducer the power indicator light is "OFF," indicating this state of operation.

During the normal run mode capacitor C9 is charged to +24 volts and remains at this steady state until an end of message tone (150 Hz) energizes relay K2. Relay K2 then places one side of C9 at ground potential and discharges the capacitor. When the end of message tone terminates, the relay K2 returns to the normal run position and the capacitor C9 charges through the coil of the relay K4. This energizes K4 which switches the capstan motor into the fast mode. By changing the windings then poles 1 and 2 and paralleling the run capacitor C1 with C16 the charge time of C9, R13 allows K2 to return to the normal run position creating a hold circuit for K4 through pins (7 / 11) of K4, pins (4 / 12) of K2, and pins (6 / 10) of K1. The fast run mode remains until a cue tone (1 kHz) is detected and stops the tape drive.

Two transistors Q101 and Q102 and their associated components are added to the utility card (figure 10-5). Q101 is the lamp inverter to turn off I4 during the fast mode. Q102 is on during the fast mode and operates as the 1 kHz broadbanding switch, and to inhibit the Secondary and Tertiary tone detectors.

The Hi-Speed Cue Card is substituted in the same card location and connector wiring for the standard cue card. The pre-amplifier and limiter components and those associated with the optional 150 Hz and 8 kHz detectors are similar to the description of the standard circuit described in Paragraph E of this section. The 1 kHz Primary Cue detector is entirely of different design and operates as follows:

The 1 kHz cue gain control R206 adjusts the operation of the detector from full off to approximately -10 dB lower than normal recorded tone level.

Transistor Q201 is a dual purpose tuned amplifier. During the normal mode L201 provides a tuned circuit for the emitter at 1 kHz and attenuates all frequencies more than a few percent above or below this frequency. During the fast mode the emitter of Q201 is re-generated to ground thru C230, edge connector pin 8 and transistor Q102. This causes the amplifier to be broadbanded to frequencies above 1 kHz. Capacitor C221 provides a roll off above 4 kHz to reduce the response to the 8 kHz tone when used.

Transistor Q202 operates as a zero bias rectifier and current amplifier. C210 acts as the ripple filter. When DC voltage rises to +12 volts or higher CR208 conducts to the base of Q203 which turns on and diverts current from relay K1 and causes the tape drive to stop.

L204 and C228 form a series resonant circuit tuned to approximately 600 Hz. The capacitive reactance of C228 causes an increasing E drop at all frequencies 600 Hz and lower and is coupled thru R245 to the base of Q212, which is connected across C210. This causes frequencies 600 Hz and lower to be inhibited from operation of the 1 kHz cue detector.

## ELECTRICAL ADJUSTMENTS

## SP &amp; WP SERIES REPRODUCERS

## A. CONTROLS

The various electrical controls listed below are adjusted at the factory to provide optimum operation of the ITC Reproducer. At the time of installation, the only control which may require adjustment is Program Level.

A good maintenance schedule will include periodic checks (weekly or monthly, depending upon the operational requirements) of the machine's electronics. Remember to demagnetize the heads and check their mechanical adjustments first. Minor adjustment of the electronic controls may be required to compensate for normal head wear, but the need for large adjustments may indicate need for head replacement, or failure which requires further testing. See Figure 5-1 for the location of the electronic controls.

1. **Program Level:** The output level of the program amplifier(s) is factory adjusted to produce 0 dBm when reproducing a NAB standard reference level tape, 400 Hz. R111 is the control for mono reproducers, and the left channel of stereo units. R130 is the right channel control on stereo units. When outputs below -10 DBM are required, the addition of an external pad should be considered to maintain optimum signal to noise ratio.
2. **Program Equalization:** The equalization of the program amplifier(s) is factory adjusted to meet the NAB specifications when reproducing a Standard Frequency Response tape. The control(s) may be adjusted to compensate for normal head wear and for variations in heads when replacement is required. R105 is the control for mono units, and the left channel of stereo units. R124 is the right channel control for stereo units. Adjustment of the equalization controls should not be attempted until the reproduce head has been properly azimuth aligned using the procedure outlined in Section 4-K (Section 4-L for stereo) of this manual. Following this procedure, the equalization control should be adjusted to provide the flattest response to the Standard Frequency Response Tape.
3. **Primary (1 kHz) Cue Sensitivity:** The sensitivity of the 1 kHz Primary Cue Detector is increased by turning R206 in the clockwise direction. This control should be adjusted to the point of just responding to the 1 kHz tones recorded on a test tape at 8 dB lower than NAB Cue Level.
4. **Secondary (150 Hz) Cue Sensitivity:** The sensitivity of the 150 Hz Secondary Cue Detector is increased by turning R227 in the clockwise direction. This control should be adjusted to the point of just responding to the 150 Hz tones recorded on a test tape at 8 dB lower than NAB Secondary Cue Level.
5. **Tertiary (8 kHz) Cue Sensitivity:** The sensitivity of the 8 kHz Tertiary Cue Detector is increased by turning R217 in the clockwise direction. This control should be adjusted to the point of just responding to the 8 kHz tones recorded on a test tape at 8 dB lower than NAB Tertiary Cue Level.

## TEST CARTRIDGES AND USES

## SP &amp; WP SERIES REPRODUCERS

## A. PREVENTIVE MAINTENANCE

Preventive maintenance of the electrical adjustments should be done on monthly schedule. Each installation should be equipped with a primary test cartridge such as the NAB Standard Test Tape.

Should a primary test cartridge be used to test several tape transports on a monthly basis, the short wave length sensitivity will be degraded by repeated playing. The proper handling and storing of the Primary Test Cartridge, and proper cleaning of heads and tape guides will minimize signal loss. The best method to preserve a primary test cartridge is to record your own test cartridges as outlined below and compare them with the primary test cartridge every six months. It is important that all test cartridges contain the same type of tape that is used for normal recording.

## B. TEST CARTRIDGES

1. **Test Cartridge No. 1:** Carefully align the reproducer to the Primary Test Cartridge for azimuth and level. Verify the proper adjustment of the recorder electronics and the recording head azimuth. Select a properly erased cartridge of known good guidance. Record a 15 kHz azimuth tone at -10 dB level for 30 seconds. Follow this tone with 400 Hz, 10 kHz, 5 kHz, 2500 Hz, 1 kHz, 250 Hz, 100 Hz and 50 Hz tones at -10 dB level and 5 seconds duration. The last tone should be 400 Hz at 0 dB level of 20 seconds duration. This tape can now be used for day to day response tests as a second generation standard.
2. **Test Cartridge No. 2:** (Refer to the recorder instructions for adjusting the level of the tone oscillators.) Temporarily connect the cue head to the properly calibrated program amplifier input. With an erased tape, adjust these tone oscillator levels to 8 dB below normal. The program amplifier will play at -7.6 dB for 1 kHz, -1.9 dB for 150 Hz and -17.4 dB for 8 kHz. Record each tone at an interval of approximately 5 seconds at this level. Set this tape aside. With another tape, return the tone oscillators to their proper settings (+0.4 dB for 1 kHz, +6.1 dB for 150 Hz, and -9.4 dB for 8 kHz). The -8 dB tone tape may now be used as required to adjust the tone detector levels to just reliably operate at the -8 dB from normal tone level setting.
3. **Test Cartridge No. 3:** Using a long cartridge, record a single 1 kHz cue tone on the cue track. Accurately time this car-

tridge in several machines. Average the playing time and mark the exact time on the rear of this cartridge.

If a frequency counter is available, record a 12 kHz tone on the program track at -10 dB. Play this cartridge in two or more tape transports and measure the frequency of the tone. Average the measurements and mark the frequency on the rear of the cartridge.

4. **Test Cartridge No. 4:** This cartridge is to be used for the height adjustment of the heads during the run mode. The cartridge has the pressure pads removed and the top section is cut out to allow observation of the tape travel across the heads. Since the pressure pads are removed, the tape travel across the cartridge face must be checked to be sure it is parallel with the base of the case.

## C. USE OF TEST CARTRIDGES

1. **Mechanical Head Adjustment:** Place test cartridge No. 4 in the tape transport and check the tape travel across the tape heads. (Refer to Figure 5-15.) If the tape travel is incorrect, perform adjustment in accordance with Section 4-F, G, H, and I.
2. **Program Playback Level:** The output level of the program amplifier is factory adjusted for 0 DBM when reproducing the NAB Standard Reference Level Tape, 400 Hz. Test cartridge No. 1 may be used to adjust this level as required. Refer to Section 8-1 for these adjustments.
3. **Program Playback Equalization:** Equalization of the program amplifier(s) is adjusted for flattest response. Test cartridge No. 1 may be used to adjust this response when necessary. It is cautioned not to attempt this adjustment until reproduce head azimuth adjustment of Section 4-K or L is performed.
4. **Cue Detector(s) Sensitivity:** Test cartridge No. 2 is used to make adjustments as required. Refer to Section 8-3, 4, and 5 for these adjustments.
5. **Machine Speed Tests:** Test cartridge No. 3 is used for the periodic speed test. Insert this cartridge in the machine and measure the running time. If the running time is outside the 0.1% specification, refer to the mechanical adjustments in Section 4 and perform these as necessary to restore proper timing.

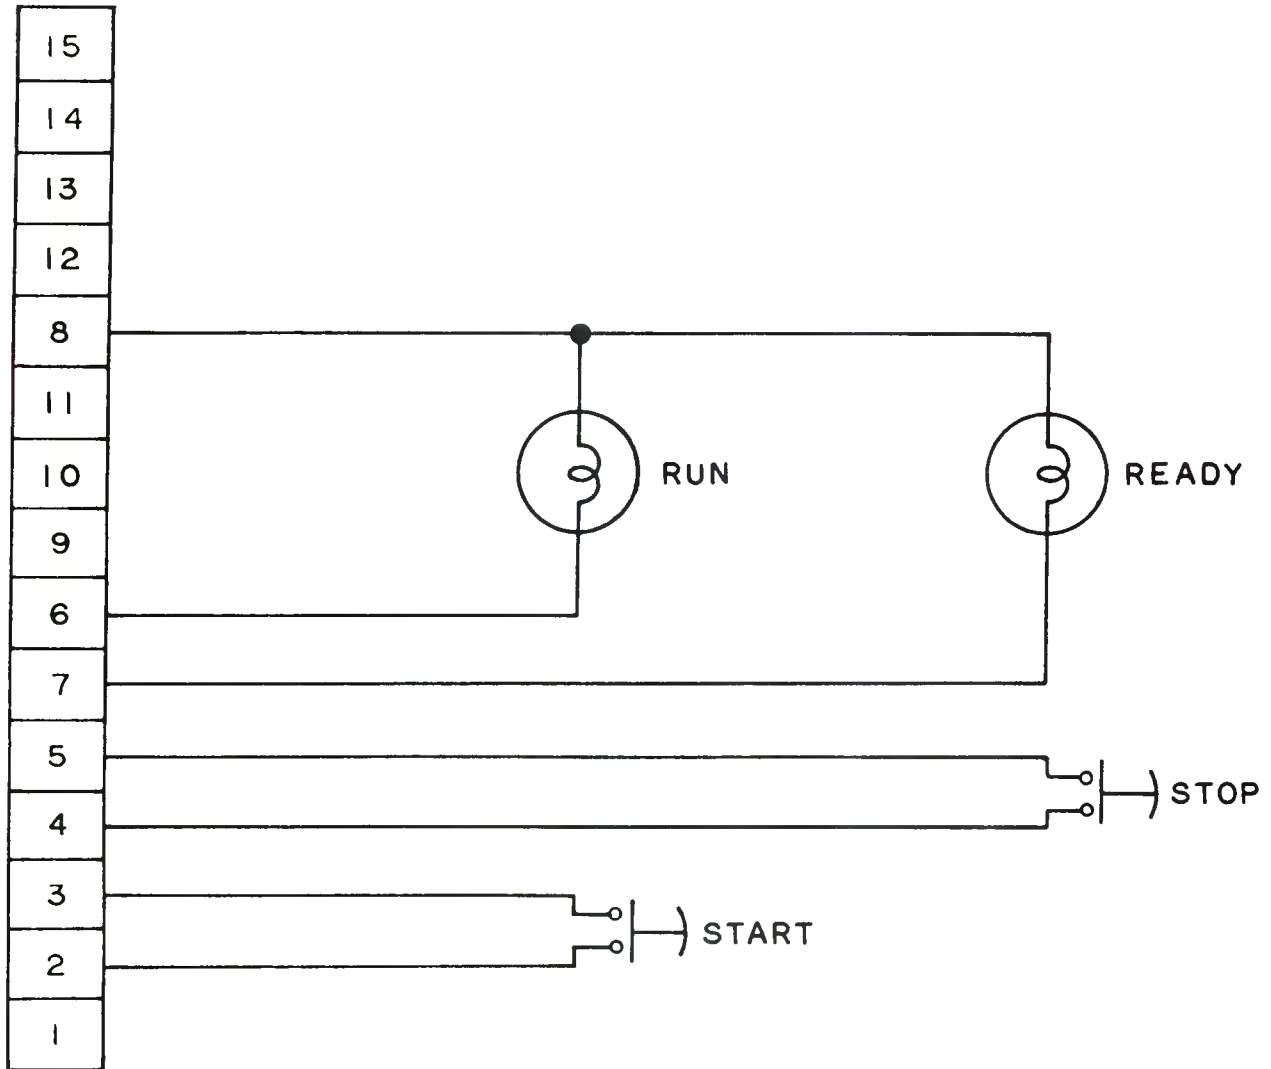


FIGURE 10-1

SAMPLE REMOTE CONTROL SCHEMATIC

# PROGRAM AMPLIFIER CARD

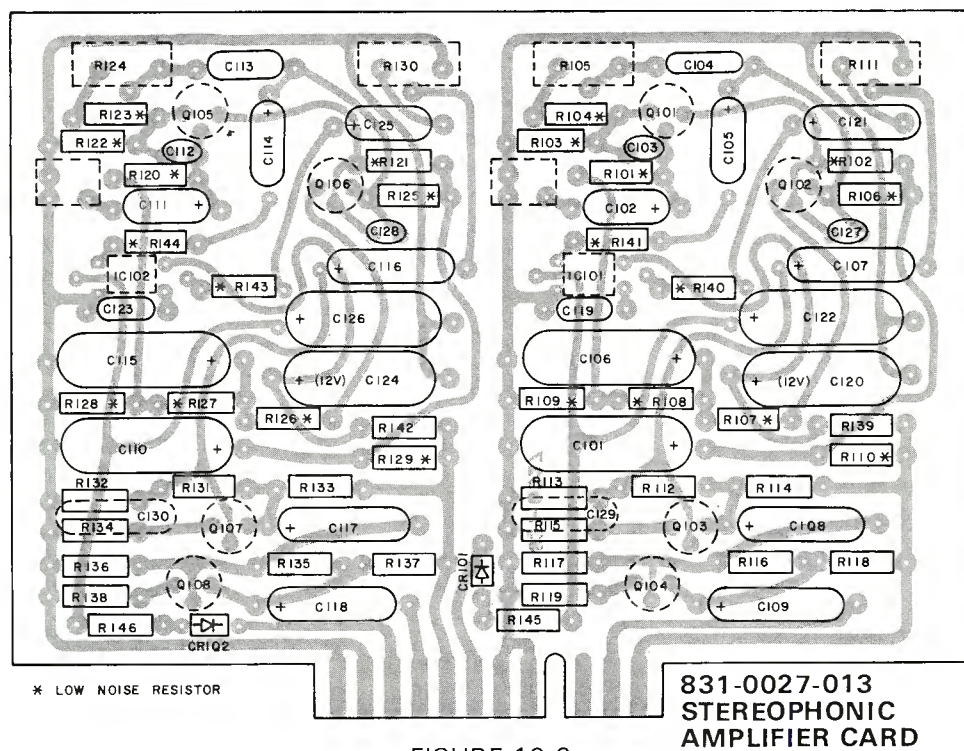
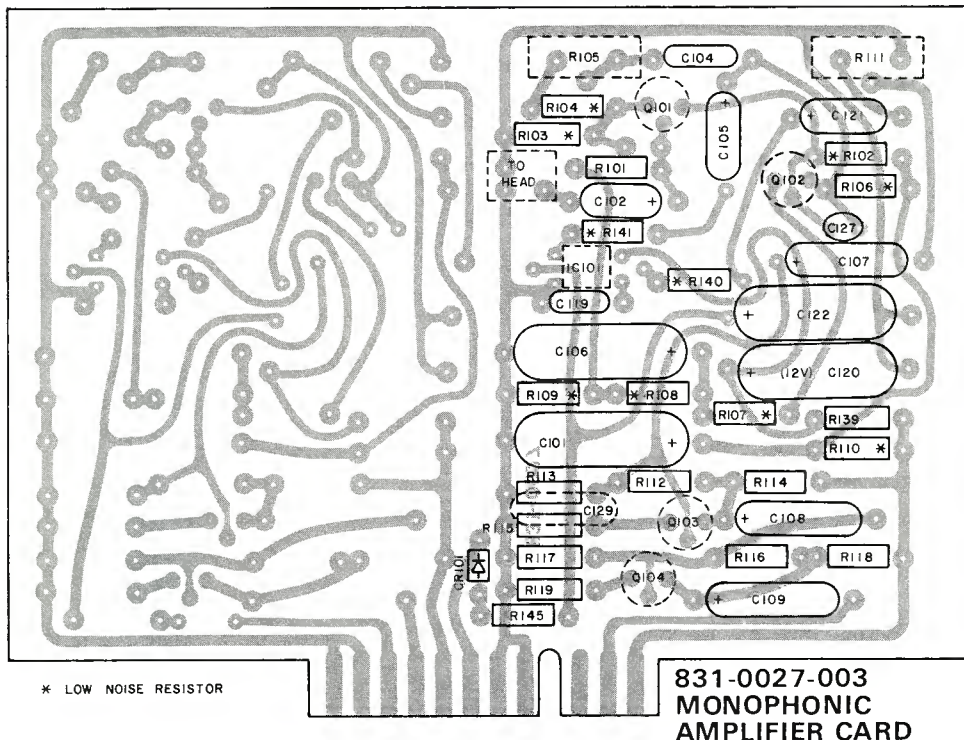


FIGURE 10-2

# CUE DETECTOR CARD




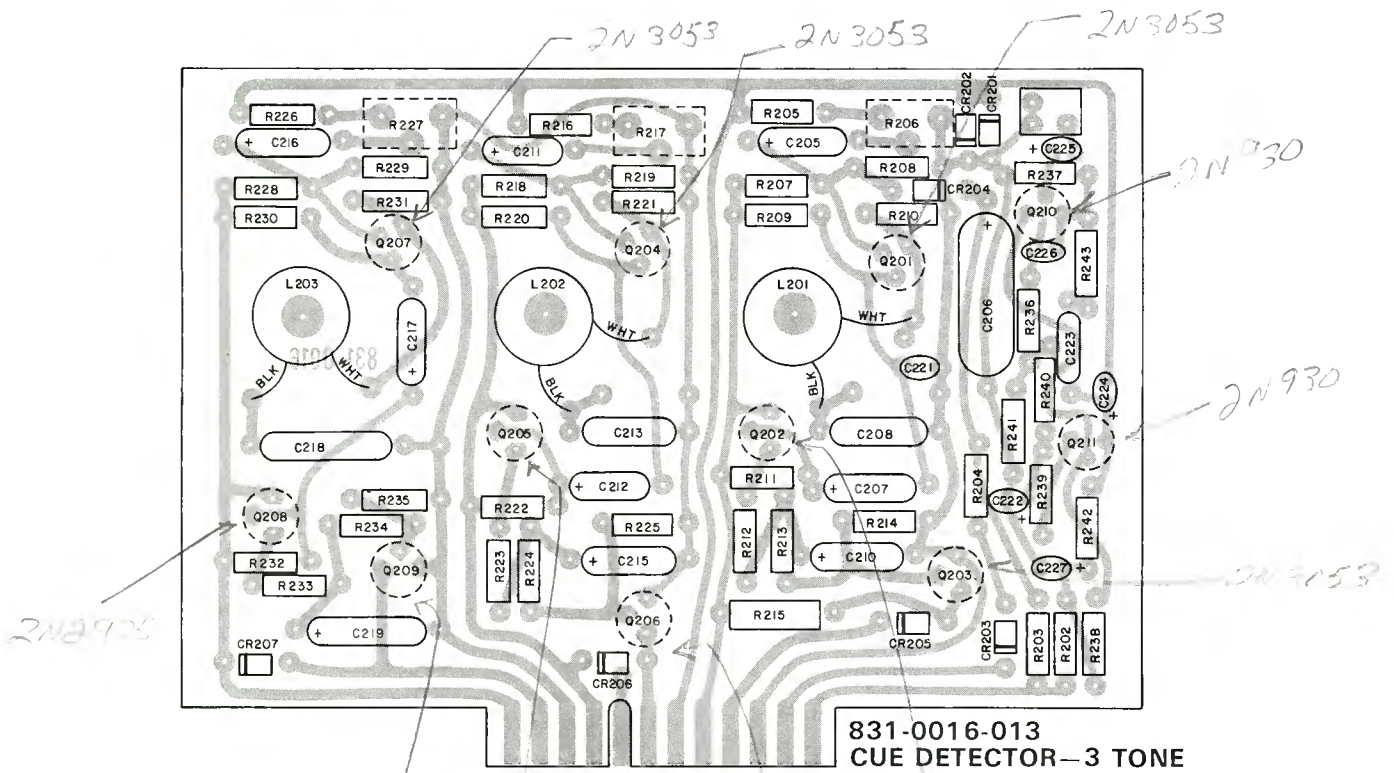


FIGURE 10-3

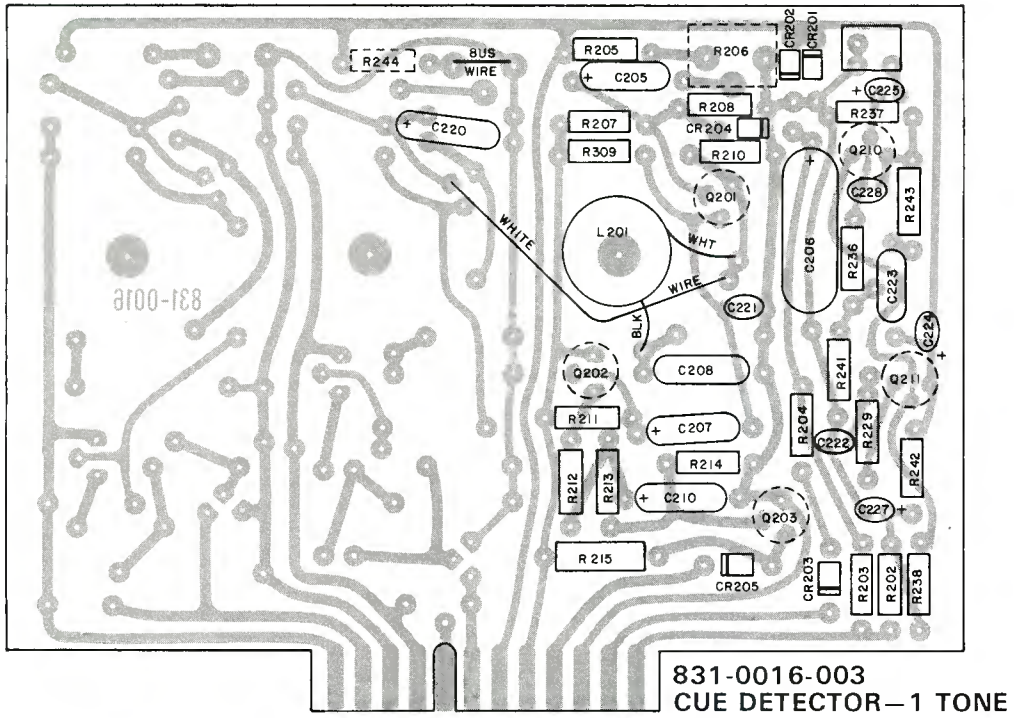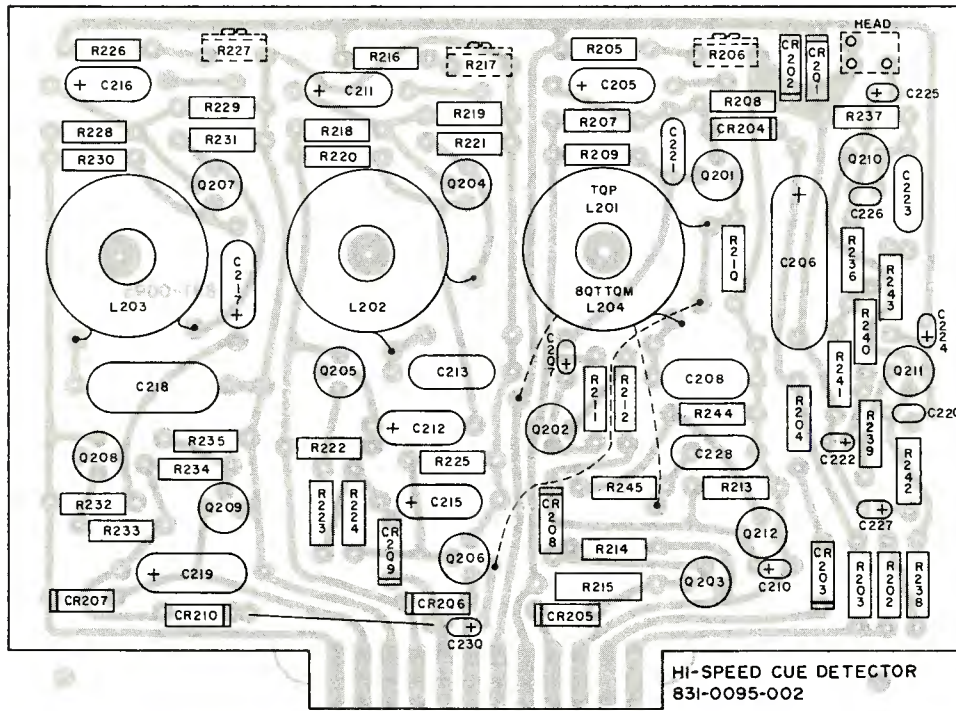

HI-SPEED CUE DETECTOR  
FIGURE 10-4

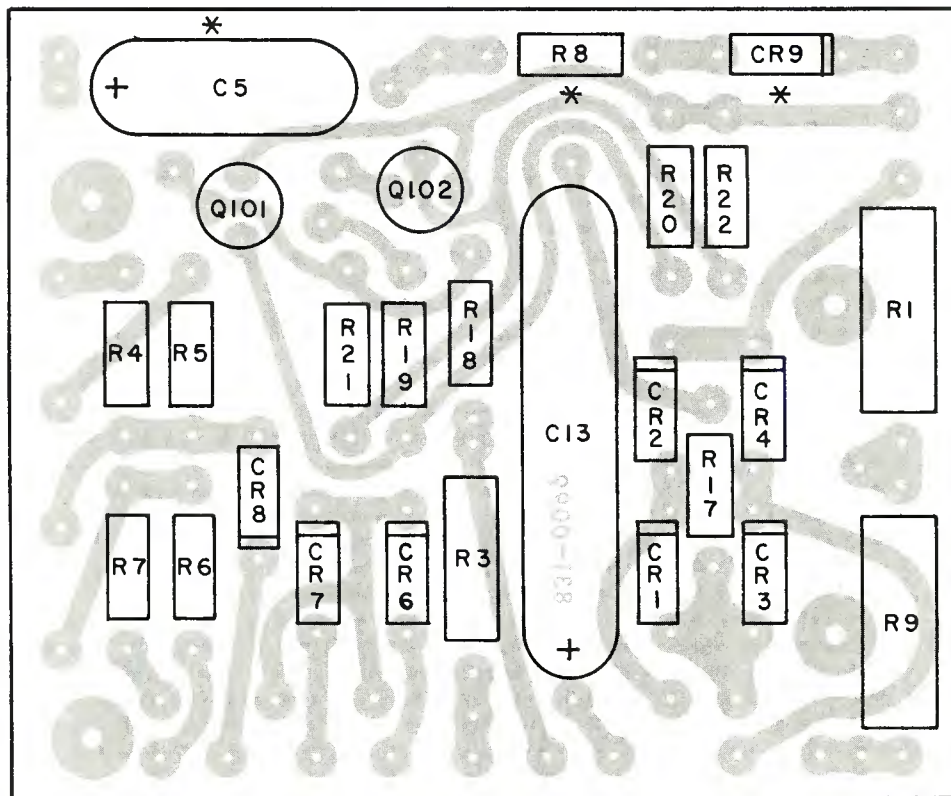

\*USED ON WP-RP SERIES ONLY

UTILITY BOARD  
831-0099  
FIGURE 10-5



## SECTION XI

### ELECTRICAL PARTS LIST

### SP & WP SERIES REPRODUCERS

#### A. CHASSIS

Symbol	Part Number	Description	Symbol	Part Number	Description
<b>MOTORS</b>			<b>INDUCTIVE DEVICES</b>		
B1	451-0001-010	Capstan, 450 RPM, 110 V., 60 Hz	L1	477-0006-002	Solenoid, 110 VDC
	451-0005-010	Capstan, 450/ 1800 RPM, 110 V., 60 Hz (Hi-Speed Cue)	L2	504-0002-000	Head, Mono Reproduce, Nortronics, PB2H7KNO (2001)
	451-0006-010	Capstan, 500 RPM, 110 V., 50 Hz		504-0004-000	Head, Stereo Reproduce, Nortronics, PB3Q7KNO (5701)
	451-0007-010	Capstan, 375/ 1500 RPM, 110 V., 50 Hz (Hi-Speed Cue)	L3	504-0001-000	Head, Dummy, Nortronics
				504-0003-000	Head, Mono Record, Nortronics, PB2H4RNO (2003) (When used with a Recording Amplifier)
<b>CAPACITORS</b>				504-0005-000	Head, Stereo Record, Nortronics, PB3Q4RNO (5703) (When used with a Recording Amplifier)
C1	683-0001-000	1.5 mfd, 370 VAC (for 60 Hz motor)	<b>RESISTORS</b>		
	683-0004-000	3.0 mfd, 370 VAC (for Hi-Speed Cue, 60 Hz motor)	R11	626-0215-000	10 ohms, ½ watt, 5% (Hi-Speed Cue)
	683-0003-000	2.0 mfd, 370 VAC (for 50 Hz motors)	R12	626-0215-000	10 ohms, ½ watt, 5% (Hi-Speed Cue)
C2	698-0003-000	100/ 100 mfd, 250 V.	R13	626-0231-000	47 ohms, ½ watt, 5% (Hi-Speed Cue)
C3	698-0001-000	1000 mfd, 50 V.	R14	626-0215-000	10 ohms, ½ watt, 5%
C4	698-0001-000	1000 mfd, 50 V.	R15	626-0215-000	10 ohms, ½ watt, 5% (Hi-Speed Cue)
C5	696-0078-000	100 mfd, 12 V. (WP Series)	R16	626-0215-000	10 ohms, ½ watt, 5% (Hi-Speed Cue)
C6	686-0001-000	.1 mfd, 500 V. (Hi-Speed Cue)	<b>SWITCHES</b>		
C7	686-0001-000	.1 mfd, 500 V. (Hi-Speed Cue)	S1	392-0001-000	Micro (Cartridge Sensing)
C9	696-0122-000	50 mfd, 25 V. (Hi-Speed Cue)	S2	391-0002-000	Push-Button (Start)
C10	686-0001-000	.1 mfd, 500 V. (Hi-Speed Cue)	S3	391-0002-000	Push-Button (Stop)
C11	686-0001-000	.1 mfd, 500 V. (Hi-Speed Cue)	S4	391-0006-000	Push-Button (Hi-Speed Cue)
C12	686-0001-000	.1 mfd, 500 V. (Hi-Speed Cue)	S5	392-0001-000	Micro (Cartridge Sensing—Motor)
<b>DIODE</b>			<b>TRANSFORMERS</b>		
CR10	575-0007-000	1N4005	T1	526-0001-000	Power, SP Series
<b>FUSES</b>				526-0002-000	Power, WP Series
F1	417-0001-000	½ ampere, 3AG	T2	532-0001-000	Audio, +14 dBm
F2	417-0002-000	1 ampere, slow-blow, 3AG	T3	532-0001-000	Audio, +14 dBm (Stereo)
<b>LAMPS</b>			<b>MISCELLANEOUS</b>		
I1	415-0002-000	Power Indicator, 110 V. (Not used in Hi-Speed Cue models)	311-0003-000	Strain Relief, AC Power Cord	
I2	415-0001-000	No. 327, 28 V. (Run)	433-0001-000	Cord, AC Power	
I3	415-0001-000	No. 327, 28 V. (Ready)	418-0001-000	Holder, Fuse	
I4	415-0001-000	No. 327, 28 V. (Hi-Speed Cue)	507-0001-010	Head Lead Assembly, Mono Play	
<b>INTEGRATED CIRCUIT</b>			507-0002-010	Head Lead Assembly, Stereo Play Left	
IC1	605-0007-000	Regulated Power Supply, 24 VDC, 1 ampere, 7824KC, TO3	507-0003-010	Head Lead Assembly, Stereo Play Cue	
<b>SOCKETS</b>			507-0004-010	Head Lead Assembly, Stereo Play Right	
J1	380-0004-000	15 Pin (Control)	507-0001-000	Head Lead Assembly, Mono Record (WP Series)	
J2	380-0003-000	6 Pin (Audio)	507-0002-000	Head Lead Assembly, Stereo Record Left (WP Series)	
J3	380-0001-000	3 Pin (Motor)	507-0003-000	Head Lead Assembly, Stereo Record Cue (WP Series)	
	380-0007-000	6 Pin (Motor—Hi-Speed Cue)	507-0004-000	Head Lead Assembly, Stereo Record Right (WP Series)	
J4	380-0002-000	12 Pin Card Edge (Program)	487-0001-000	Sockets, Relay	
J5	380-0002-000	12 Pin Card Edge (Cue)	613-0002-000	Socket, TO-3 Transistor (For IC1)	
J6	380-0008-000	18 Pin (WP Series—Interconnect)	378-0003-000	Plug, 15 Pin (Control)	
<b>RELAYS</b>			378-0002-000	Plug, 6 Pin (Audio)	
K1	480-0001-000	4 PDT, 24 V. (1 kHz)	378-0001-000	Plug, 3 Pin (Motor)	
K2	480-0001-000	4 PDT, 24 V. (150 Hz)	378-0007-000	Plug, 6 Pin (Motor—Hi-Speed Cue)	
K3	480-0001-000	4 PDT, 24 V. (8 kHz)			
K4	480-0001-000	4 PDT, 24 V. (Hi-Speed Cue)			

**B. SP — UTILITY BOARD (831-0029-003)  
(w/ Hi-Speed Cue—831-0029-023)**

Symbol	Part Number	Description
<b>CAPACITORS</b>		
C13	696-0164-000 696-0155-000	20 MF, 150 V. 2 MF, 150 V. (Hi-Speed Cue)

<b>DIODES</b>		
CR1	575-0007-000	1N4005
CR2	575-0007-000	1N4005
CR3	575-0007-000	1N4005
CR4	575-0007-000	1N4005
CR6	575-0007-000	1N4005
CR7	575-0007-000	1N4005
CR8	575-0007-000	1N4005

<b>RESISTORS</b>		
R1	628-0116-000	75 ohms, 5 watt, 5%
R3	626-0439-000	100 ohms, 1 watt, 10%
R4	626-0239-000	100 ohms, ½ watt, 5%
R5	626-0239-000	100 ohms, ½ watt, 5%
R6	626-0239-000	100 ohms, ½ watt, 5%
R7	626-0239-000	100 ohms, ½ watt, 5%
R9	628-0116-000	75 ohms, 5 watt, 5%
R17	626-0231-000	47 ohms, ½ watt, 5%

**C. WP — UTILITY BOARD (831-0029-013)  
(w/ Hi-Speed Cue—831-0029-033)**

<b>CAPACITORS</b>		
C13	696-0164-000 696-0155-000	20 MF, 150 V. 2 MF, 150 V. (Hi-Speed Cue)

<b>DIODES</b>		
CR1	575-0007-000	1N4005
CR2	575-0007-000	1N4005
CR3	575-0007-000	1N4005
CR4	575-0007-000	1N4005
CR6	575-0007-000	1N4005
CR7	575-0007-000	1N4005
CR8	575-0007-000	1N4005
CR9	575-0007-000	1N4005

<b>RESISTORS</b>		
R1	628-0116-000	75 ohms, 5 watt, 5%
R3	626-0439-000	100 ohms, 1 watt, 10%
R4	626-0239-000	100 ohms, ½ watt, 5%
R5	626-0239-000	100 ohms, ½ watt, 5%
R6	626-0239-000	100 ohms, ½ watt, 5%
R7	626-0239-000	100 ohms, ½ watt, 5%
R8	626-0231-000	47 ohms, ½ watt, 5% (WP Series)
R9	628-0116-000	75 ohms, 5 watt, 5%
R17	626-0231-000	47 ohms, ½ watt, 5%

**D. PROGRAM REPRODUCE AMPLIFIER CARD  
MONO 831-0027-003  
STEREO 831-0027-013**

<b>CAPACITORS</b>		
C101	696-0124-000	100 mfd, 25 V.
C102	696-0114-000	5 mfd, 25 V.
C103	677-0001-000	100 pfd, 300 V.
C104	681-0046-000	.01 mfd, 200 V.
C105	696-0114-000	5 mfd, 25 V.
C106	696-0124-000	100 mfd, 25 V.
C107	696-0117-000	10 mfd, 25 V.

Symbol	Part Number	Description
C108	696-0117-000	10 mfd, 25 V.
C109	696-0117-000	10 mfd, 25 V.
C119	681-0032-000	.00068 mfd, 200 V.
C120	696-0202-000	450 mfd, 12 V.
C121	696-0114-000	5 mfd, 25 V.
C122	696-0122-000	50 mfd, 25 V.
C127	677-0001-000	100 pfd, 300 V.
C129	681-0050-000	.022 mfd, 200 V.

**CAPACITORS (STEREO ONLY)**

C110	696-0124-000	100 mfd, 25 V.
C111	696-0114-000	5 mfd, 25 V.
C112	677-0001-000	100 pfd, 300 V.
C113	681-0046-000	.01 mfd, 200 V.
C114	696-0114-000	5 mfd, 25 V.
C115	696-0124-000	100 mfd, 25 V.
C116	696-0117-000	10 mfd, 25 V.
C117	696-0117-000	10 mfd, 25 V.
C118	696-0117-000	10 mfd, 25 V.
C123	681-0032-000	.00068 mfd, 200 V.
C124	696-0202-000	450 mfd, 12 V.
C125	696-0114-000	5 mfd, 25 V.
C126	696-0122-000	50 mfd, 25 V.
C128	677-0001-000	100 pfd, 300 V.
C130	681-0050-000	.022 mfd, 200 V.

**TRANSISTORS**

Q101	590-0013-000	2N5089
Q102	590-0013-000	2N5089
Q103	590-0017-000	2N5816
Q104	590-0017-000	2N5816

**TRANSISTORS (STEREO ONLY)**

Q105	590-0013-000	2N5089
Q106	590-0013-000	2N5089
Q107	590-0017-000	2N5816
Q108	590-0017-000	2N5816

**RESISTORS**

R101	626-0311-000	100 K ohms, ½ watt, 5%
R102	630-0311-000	100 K ohms, ½ watt, 5%, Lo Noise
R103	630-0249-000	100 ohms, ½ watt, 5%, Lo Noise
R104	626-0275-000	3.3 K ohms, ½ watt, 5%
R105	636-0002-000	Variable, 10 K ohms, ¼ watt, (L. Equalization)
R106	630-0287-000	10 K ohms, ½ watt, 5%, Lo Noise
R107	630-0259-000	680 ohms, ½ watt, 5%, Lo Noise
R108	630-0283-000	6800 ohms, ½ watt, 5%, Lo Noise
R109	630-0267-000	1500 ohms, ½ watt, 5%, Lo Noise
R110	630-0295-000 630-0293-000	22 K ohms, ½ watt, 5%, Lo Noise 18 K ohms, ½ watt, 5%, Lo Noise
R111	636-0002-000	Variable, 10 K ohms, ¼ watt, (L. Level)
R112	626-0307-000	68 K ohms, ½ watt, 5%
R113	626-0287-000	10 K ohms, ½ watt, 5%
R114	626-0271-000	2.2 K ohms, ½ watt, 5%
R115	626-0251-000	330 ohms, ½ watt, 5%
R116	626-0295-000	22 K ohms, ½ watt, 5%
R117	626-0279-000	4700 ohms, ½ watt, 5%
R118	626-0259-000	680 ohms, ½ watt, 5%
R119	626-0231-000	47 ohms, ½ watt, 5%
R139	626-0263-000	1 K ohms, ½ watt, 5%
R140	626-0271-000	2.2 K ohms, ½ watt, 5%
R141	626-0303-000	47 K ohms, ½ watt, 5%
R145	626-0267-000	1500 ohms, ½ watt, 5%

Symbol	Part Number	Description
<b>RESISTORS (STEREO ONLY)</b>		
R120	626-0311-000	100 K ohms, ½ watt, 5%
R121	630-0311-000	100 K ohms, ½ watt, 5%, Lo Noise
R122	630-0249-000	100 ohms, ½ watt, 5%, Lo Noise
R123	626-0275-000	3.3 K ohms, ½ watt, 5%
R124	636-0002-000	Variable, 10 K ohms, ¼ watt, (Right Equal)
R125	630-0287-000	10 K ohms, ½ watt, 5%, Lo Noise
R126	630-0259-000	680 ohms, ½ watt, 5%, Lo Noise
R127	630-0283-000	6800 ohms, ½ watt, 5%, Lo Noise
R128	630-0269-000	1800 ohms, ½ watt, 5%, Lo Noise
R129	630-0293-000	18 K ohms, ½ watt, 5%, Lo Noise
R130	636-0002-000	Variable, 10 K ohms, ¼ watt, (Right Level)
R131	626-0307-000	68 K ohms, ½ watt, 5%
R132	626-0287-000	10 K ohms, ½ watt, 5%
R133	626-0271-000	2.2 K ohms, ½ watt, 5%
R134	626-0251-000	330 ohms, ½ watt, 5%
R135	626-0295-000	22 K ohms, ½ watt, 5%
R136	626-0279-000	4700 ohms, ½ watt, 5%
R137	626-0259-000	680 ohms, ½ watt, 5%
R138	626-0231-000	47 ohms, ½ watt, 5%
R142	626-0231-000	1 K ohms, ½ watt, 5%
R143	626-0271-000	2.2 K ohms, ½ watt, 5%
R144	626-0303-000	47 K ohms, ½ watt, 5%
R146	626-0267-000	1500 ohms, ½ watt, 5%

#### MISCELLANEOUS

IC101	606-0003-000	MFC 6040
IC102	606-0003-000	MFC 6040 (Stereo Only)
CR101	575-0007-000	IN4005
CR102	575-0007-000	IN4005 (Stereo Only)

### E. CUE TONE DETECTOR CARD

**1 TONE 831-0016-003**  
**3 TONE 831-0016-013**

#### CAPACITORS

C205	696-0114-000	5 mfd, 25 V.
C206	696-0124-000	100 mfd, 25 V.
C207	696-0114-000	5 mfd, 25 V.
C208	681-0054-000	.047 mfd, 200 V.
C209		Selected to tune the detector to 1 kHz.
C210	696-0114-000	5 mfd, 25 V.
	681-0058-000	.1 mfd, 200 V. (Hi-Speed Cue)
C211	696-0114-000	5 mfd, 25 V. (8 kHz)
C212	696-0114-000	5 mfd, 25 V. (8 kHz)
C213	681-0081-000	.015 mfd, 200 V. (8 kHz)
C214		Selected to tune the detector to 8 kHz.
C215	696-0110-000	1 mfd, 25 V. (8 kHz)
C216	696-0114-000	5 mfd, 25 V. (150 Hz)
C217	696-0114-000	5 mfd, 25 V. (150 Hz)
C218	685-0003-000	2.2 mfd, 250 V. (150 Hz)
C219	696-0117-000	10 mfd, 25 V. (150 Hz)
C220	696-0114-000	5 mfd, 25 V. (1 kHz only) Single Tone
C221	686-0002-000	.025 mfd, 100 V.
C222	694-0002-000	10 mfd, 20 V.
C223	681-0046-000	.01 mfd, 200 V.
C224	694-0003-000	4.7 mfd, 35 V.
C225	694-0004-000	.47 mfd, 35 V.
C226	677-0001-000	100 pfd, 300 V.
C227	694-0002-000	10 mfd, 20 V.

#### DIODES

CR201	575-0002-000	IN462
CR202	575-0002-000	IN462
CR203	575-0007-000	IN4005
CR204	575-0007-000	IN4005
CR205	575-0007-000	IN4005
CR206	575-0007-000	IN4005 (Three Tone Only)
CR207	575-0007-000	IN4005 (Three Tone Only)

Symbol	Part Number	Description
<b>INDUCTORS</b>		
L201	511-0002-000	Toroid, 500 mh
L202	511-0005-000	Toroid, 20 mh (8 kHz)
L203	511-0002-000	Toroid, 500 mh (150 Hz)

#### TRANSISTORS

Q201	590-0001-000	2N3053
Q202	590-0014-000	2N2905
Q203	590-0001-000	2N3053
Q204	590-0001-000	2N3053 (8 kHz)
Q205	590-0014-000	2N2905
Q206	590-0001-000	2N3053 (8 kHz)
Q207	590-0001-000	2N3053 (150 Hz)
Q208	590-0014-000	2N2905 (150 Hz)
Q209	590-0001-000	2N3053 (150 Hz)
Q210	590-0011-000	2N930
Q211	590-0011-000	2N930

#### RESISTORS

R202	626-0255-000	470 ohms, ½ watt, 5%
R203	626-0283-000	68 K ohms, ½ watt, 5%
R204	626-0239-000	100 ohms, ½ watt, 5%
R205	626-0263-000	1 K ohms, ½ watt, 5%
R206	636-0002-000	Variable, 10 K ohms, ¼ watt (1 kHz sensitivity)
R207	626-0291-000	15 K ohms, ½ watt, 5%
R208	626-0291-000	15 K ohms, ½ watt, 5%
R209	626-0275-000	3.3 K ohms, ½ watt, 5%
R210	626-0279-000	4.7 K ohms, ½ watt, 5%
R211	626-0271-000	2.2 K ohms, ½ watt, 5%
R212	626-0263-000	1 K ohms, ½ watt, 5%
R213	626-0279-000	4.7 K ohms, ½ watt, 5%
R214	626-0279-000	4.7 K ohms, ½ watt, 5%
R215	626-0448-000	240 ohms, 1 watt, 10%
R216	626-0291-000	15 K ohms, ½ watt, 5%
R217	636-0002-000	Variable, 10 K ohms, ¼ watt (8 kHz sensitivity)
R218	626-0291-000	15 K ohms, ½ watt, 5% (8 kHz)
R219	626-0291-000	15 K ohms, ½ watt, 5% (8 kHz)
R220	626-0275-000	3.3 K ohms, ½ watt, 5% (8 kHz)
R221	626-0279-000	4.7 K ohms, ½ watt, 5% (8 kHz)
R222	626-0271-000	2.2 K ohms, ½ watt, 5% (8 kHz)
R223	626-0263-000	1 K ohms, ½ watt, 5% (8 kHz)
R224	626-0279-000	4.7 K ohms, ½ watt, 5% (8 kHz)
R225	626-0279-000	4.7 K ohms, ½ watt, 5% (8 kHz)
R226	626-0239-000	100 ohms, ½ watt, 5% (150 Hz)
R227	636-0002-000	Variable, 10 K ohms, ¼ watt (150 Hz sensitivity)
R228	626-0291-000	15 K ohms, ½ watt, 5% (150 Hz)
R229	626-0291-000	15 K ohms, ½ watt, 5% (150 Hz)
R230	626-0275-000	3.3 K ohms, ½ watt, 5% (150 Hz)
R231	626-0279-000	4.7 K ohms, ½ watt, 5% (150 Hz)
R232	626-0271-000	2.2 K ohms, ½ watt, 5% (150 Hz)
R233	626-0263-000	1 K ohms, ½ watt, 5% (150 Hz)
R234	626-0279-000	4.7 K ohms, ½ watt, 5% (150 Hz)
R235	626-0279-000	4.7 K ohms, ½ watt, 5% (150 Hz)
R236	626-0311-000	100 K ohms, ½ watt, 5%
R237	626-0235-000	68 ohms, ½ watt, 5%
R238	626-0287-000	10 K ohms, ½ watt, 5%
R239	626-0239-000	100 ohms, ½ watt, 5%
R240	626-0271-000	2.2 K ohms, ½ watt, 5%
R241	626-0259-000	680 ohms, ½ watt, 5%
R242	626-0271-000	2.2 K ohms, ½ watt, 5%
R243	626-0303-000	47 K ohms, ½ watt, 5%
R244	626-0287-000	10 K ohms, ½ watt, 5% (single tone only)

## F. HIGH SPEED CUE DETECTOR CARD 831-0095-002

The parts listed in this section are used exclusively in the Hi-Speed Cue Detector Cards. Other parts are common to the Standard Cue Tone Detector Card and are listed in Section E.

### • CAPACITORS

C205	696-0110-000	1 MF, 25 V., Electrolytic
C207	694-0005-000	1 MF, 35 V., Tantalum
C210	694-0002-000	10 MF, 20 V., Tantalum
C220	677-0003-000	300 pf, 100 V., Mica
C221	681-0040-000	.0033 MF, 200 V., Mylar

### RESISTORS

R205	626-0279-000	4.7 K ohms, ½ watt, 5%
R213	626-0303-000	47 K ohms, ½ watt, 5%
R236	626-0319-000	220 K ohms, ½ watt, 5%
R237	626-0233-000	56 ohms, ½ watt, 5%
R239	626-0235-000	68 ohms, ½ watt, 5%
R240	626-0261-000	820 ohms, ½ watt, 5%
R241	626-0251-000	330 ohms, ½ watt, 5%

### TRANSISTORS

Q212	590-0017-000	2N5816
------	--------------	--------

### DIODES

CR208	577-0001-000	1N4742, 12 V., Zener
CR209	575-0007-000	1N4005
CR210	575-0007-000	1N4005

## SECTION XII

### MAINTENANCE SCHEDULE

### SP & WP SERIES REPRODUCERS

#### A. GENERAL

International Tapetronics has designed the reproducers and recorders with excellent reliability and minimum maintenance as primary design goals. Simplicity and mechanical strength are important factors in reducing mechanical maintenance. Electronic dependability is assured through the use of negative feedback and other techniques which stabilize circuits which are subjected to widely varying ambient conditions.

#### B. MECHANICAL MAINTENANCE—REPRODUCERS

1. Weekly Maintenance
  - a. Clean the capstan and pressure roller with a cloth dipped in alcohol. Remove all traces of lubricant and oxide from both the capstan and pressure roller.
  - b. Clean the head with a cotton swab dipped in a head cleaning solution.
2. Monthly Maintenance
  - a. Check speed of unit. Since the capstan motor is a 450 RPM, direct drive, hysteresis synchronous device, there are no belts, pulleys, or flywheel assembly to cause speed variables. The bearings in this motor are permanently sealed ball bearings which need no lubrication. Any effort to lubricate the motor bearings will result in oil seeping into the motor windings.

To check the speed of the unit, play test cartridge number 4 (see Section IX). the playing time should not vary more than .4 seconds in 3½ minutes. If a frequency counter is available, the 12 kHz tone should not vary more than 24 Hz (0.2%).

- b. Check the pressure roller using an ITC pressure roller gauge 830-0006-001 (see Section IV-D).
- c. Check head alignment (see Section IV-J).

#### C. MECHANICAL MAINTENANCE—RECORDERS

1. Clean the record head as described for the reproduce head.
2. Check head alignment as described for the reproduce head.

#### D. ELECTRICAL MAINTENANCE—REPRODUCERS

The electrical maintenance is to be conducted monthly and takes the form of measuring electrical parameters and making corrective adjustments if required.

Using the test cartridges and procedures outlined in Section VIII, check the reproducer cue sensitivity, program play level and equalization.

#### E. ELECTRICAL MAINTENANCE—RECORDERS

1. Head zenith adjustment should be conducted monthly for optimum performance of the recorder. This adjustment is described in Section IV-J.
2. The bias trap (L401) on the program amplifier printed circuit board should be checked monthly to obtain the overall response capabilities of the recorder. The adjustment is described in Section VII-2.
3. Record equalization as described in Section VII-3 should be checked monthly to assure the optimum response from the recorder.

## **SECTION XIII**

### **WARRANTY**

International Tapetronics Corporation (ITC) warrants to Purchaser that the equipment sold is free of defects of workmanship or material and conforms to the specifications referred to or set out herein. This warranty, applying only to the original user, extends from date of shipment for a period of two years. No claim shall be maintained hereunder unless written notice is received by Seller within thirty days after the discovery of the facts giving rise to the claim. The sole or exclusive liability of Seller for breach of warranty shall be to refund the purchase price of the item sold, or at its option, to replace or repair the item or part concerned FOB its factory, or such other place as it may designate. ITC's liability shall arise only if Purchaser causes the defective part or item to be delivered to ITC for inspection upon ITC's request at Purchaser's expense. This warranty shall not be effective if the alleged defect is due to maltreatment, exposure, excessive moisture or any other use of the equipment other than the use for which the manufacturer prescribed.

No warranties expressed or implied shall be applicable to any equipment sold hereunder, and the foregoing shall constitute the Buyer's sole right and remedy under the agreements in this paragraph contained. In no event shall International Tapetronics Corporation have any liability for consequential damages, or for loss, damage, or expense directly or indirectly arising from the use of the products, or any inability to use them either separate or in combination with other equipment or materials, or from any other cause.

ITC's warranty is given solely to the original user and only to the extent above described. No dealer or agent is authorized to make any other or additional guaranty or warranty.

# ADDENDUM

## PROGRAM REPRODUCE AMPLIFIER FOR SP, WP, RP, RPD, & 3D MACHINES

831-0094-003 (Mono)  
831-0094-013 (Stereo)

### General Description

The Program Reproduce Amplifier shown in the Technical Manual has been replaced with a new amplifier circuit bearing ITC part number 831-0094-003 (mono) or 831-0094-013 (stereo). The new amplifier offers improved sonic performance, passive squelching and increased reliability.

All interconnect wiring to the 831-0094 printed circuit board (via J4) remains as represented in the Technical Manual. However, one jumper wire has been added from the Program Reproduce Amplifier edge connector, J4, Pin 3 to the Detector card edge connector, J5, Pin 5. This jumper supplies 24 volts to the squelch devices (LDR 101 and LDR 102) on the Program Reproduce Amplifier P.C. card.

### Circuit Description

The 831-0094-003 (mono) and 831-0094-013 (stereo) Program Reproduce Amplifiers are provided to amplify and contour the signal supplied by the reproduce tape head.

On stereo units the Left Channel and Right Channel are identical. Therefore, the description on the following page references components in the Left Channel Only.

## Circuit Description (continued)

The input signal is coupled from the reproduce tape head to the first stage via coupling capacitor C102. Transistors Q101 and Q102 serve as a pre-amplifier which is stabilized to prevent performance variations. DC Feedback is supplied to the base of Q101 from the emitter of Q102 via R101, R107, and R108. AC feedback from the collector of Q102 to the emitter of Q101 (C105, R105, and R104) determines the frequency response of the amplifier. Variable "equalization" is provided by potentiometer R105. C103 and C104 are included for high frequency (RF) rejection.

The output of the pre-amplifier is AC coupled (C107) to the Light Dependent Resistor, LDR 101, which functions as a squelching device. LDR 101 and R113 form a signal voltage divider circuit. The resistance of LDR 101 is controlled by the internal lamp element's brilliance. In this application, the lamp is either fully "on" or "off" as determined by relay K1. With the deck in the run mode, a ground path is supplied to LDR 101 via contacts 6 and 10 of relay K1. Hence, the resistance element of LDR 101 exhibits minimum resistance and the potential across R113 is at its maximum value.

Signal from R113 is again AC coupled (C108) to the base of Q103, a common emitter amplifier stage, with the biasing resistor, R114, connected between the collector and base for DC and temperature stability. The collector output of Q103 is AC coupled (C109) to the base of driver transistor Q104. Q104 supplies drive current for complimentary amplifiers Q105 and Q106. Transistors Q104, Q105, and Q106 are direct coupled with local feedback provided by R119. The output stage (Q105 and Q106) is AC coupled (C111) to Pin 2 of J4.



PARTS LIST

831-0094-003 (Mono)  
831-0094-013 (Stereo)


<u>Component</u> (LC-RC)	<u>ITC Part Number</u>	<u>Description</u>
R101, R129	630-0311-000	Resistor, 100K ohm 1/2 watt 5%
R102, R125	630-0303-000	Resistor, 47K ohm 1/2 watt 5%
R103, R126	630-0247-000	Resistor, 220 ohm 1/2 watt 5%
R104, R127	630-0269-000	Resistor, 1.8K ohm 1/2 watt 5%
R105, R128	636-0002-000	Potentiometer, 10K ohm 1/4 watt
R113, R137	"	"
R106, R130	630-0271-000	Resistor, 2.2K ohm 1/2 watt 5%
R117, R141	"	"
R121, R145	"	"
R107, R131	630-0251-000	Resistor, 330 ohm 1/2 watt 5%
R118, R142	"	"
R108, R132	630-0267-000	Resistor, 1.5K ohm 1/2 watt 5%
R109, R133	630-0255-000	Resistor, 470 ohm 1/2 watt 5%
R110, R134	630-0285-000	Resistor, 8.2K ohm 1/2 watt 5%
R111, R135	630-0295-000	Resistor, 22K ohm 1/2 watt 5%
R120, R144	"	"
R112, R136	630-0258-000	Resistor, 620 ohm 1/2 watt 5%
R114, R138	630-0307-000	Resistor, 68K ohm 1/2 watt 5%
R115, R139	630-0287-000	Resistor, 10K ohm 1/2 watt 5%
R116, R140	"	"
R119, R143	630-0315-000	Resistor, 150K ohm 1/2 watt 5%
R122, R146	630-0252-000	Resistor, 360 ohm 1/2 watt 5%
R123, R147	630-0231-000	Resistor, 47 ohm 1/2 watt 5%
R124, R148	630-0223-000	Resistor, 22 ohm 1/2 watt 5%
C101, C112	696-0124-000	Capacitor, Electrolytic 100MFD, 25V
C102, C113	696-0114-000	Capacitor, Electrolytic 5MFD, 25V
C107, C118	"	"
C108, C119	"	"
C103, C114	677-0001-000	Capacitor, Silver Mica 100PFD 300V
C104, C115	"	"
C105, C116	681-0048-000	Capacitor, Paper .015 MFD 200V
C106, C117	696-0078-000	Capacitor, Electrolytic 100 MFD 12V
C109, C120	694-0003-000	Capacitor, Tantalum 4.7 MFD 35V
C110, C121	694-0007-000	Capacitor, Tantalum 47 MFD 20V
C111, C122	696-0201-000	Capacitor, Electrolytic 220 MFD 25V
C123, C124	681-0050-000	Capacitor, Paper .022 MFD 200V

PARTS LIST (cont.)


<u>Component</u>	<u>ITC Part Number</u>	<u>Description</u>
Q101, Q107	590-0013-000	Transistor, 2N5089
Q102, Q108	"	"
Q103, Q109	590-0017-000	Transistor, 2N5816
Q104, Q110	"	"
Q105, Q111	"	"
Q106, Q112	590-0018-000	Transistor, 2N5817
LDR101	650-0003-000	LDR, Sigma, 301-T1-12B1
LDR102	"	"

Miscellaneous Parts


(3/6)	282-0002-000	Pin, Terminal, P.C.
(1)	325-0094-003	P.C. Card, Mono
(1)	325-0094-013	P.C. Card, Stereo
(12)	613-0001-000	Socket, Transistor

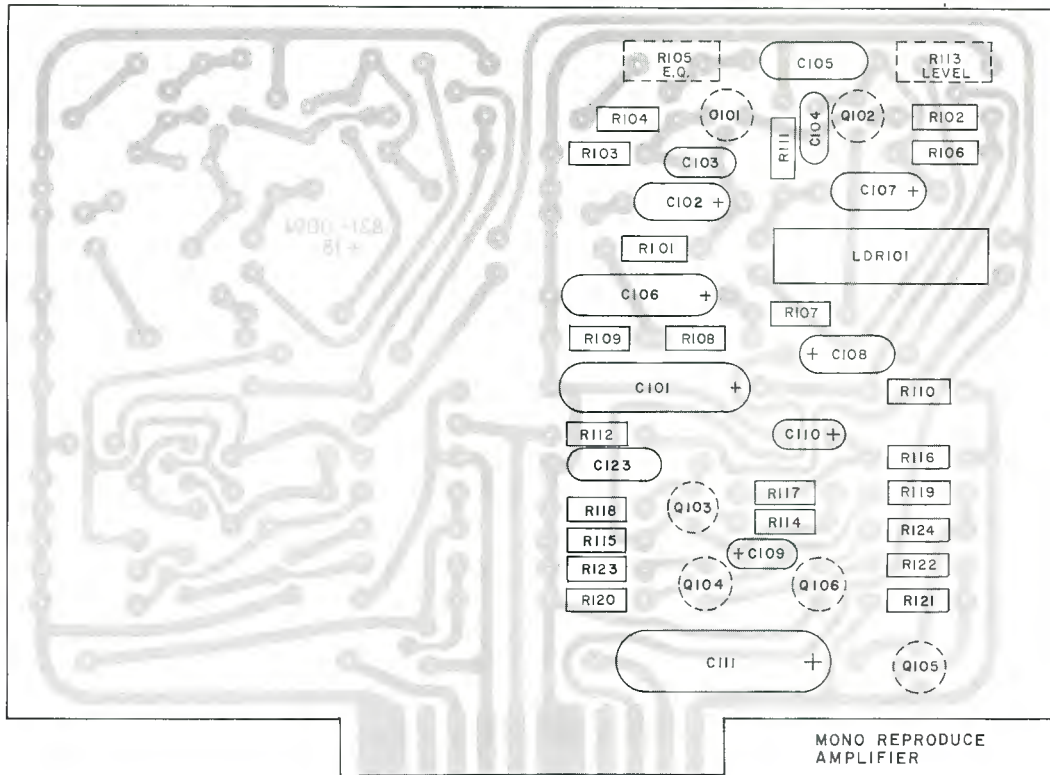

MONO REPRODUCE  
AMPLIFIER  
831-0094-003

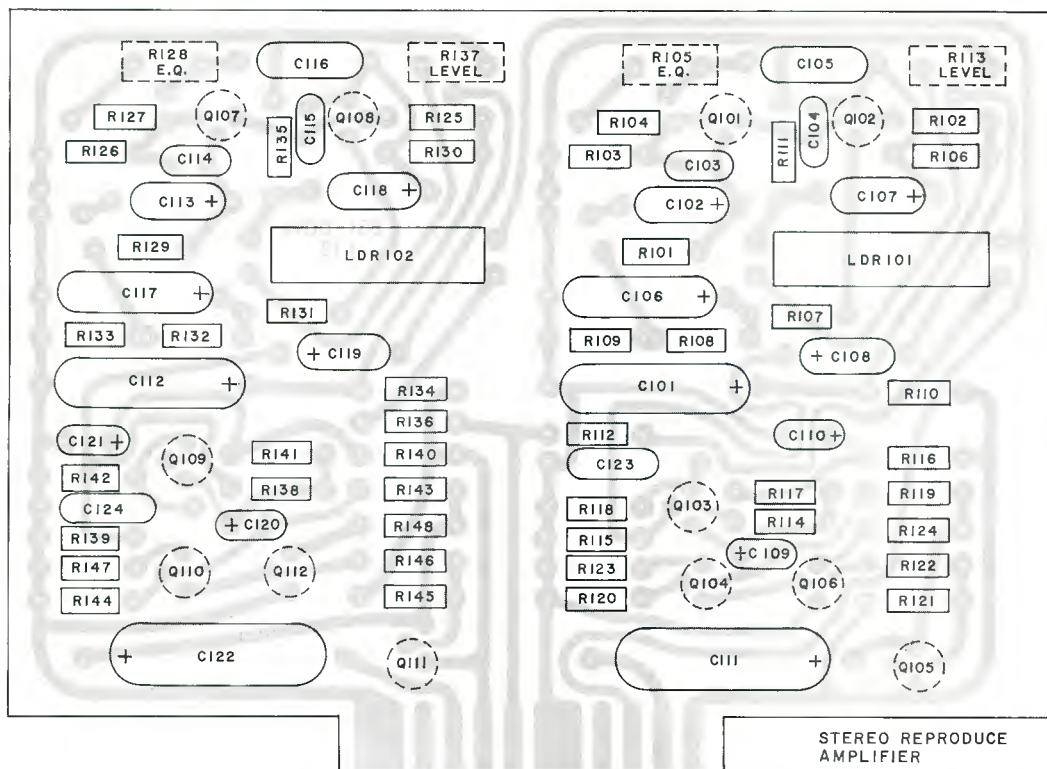

STEREO REPRODUCE  
AMPLIFIER  
831-0094-013

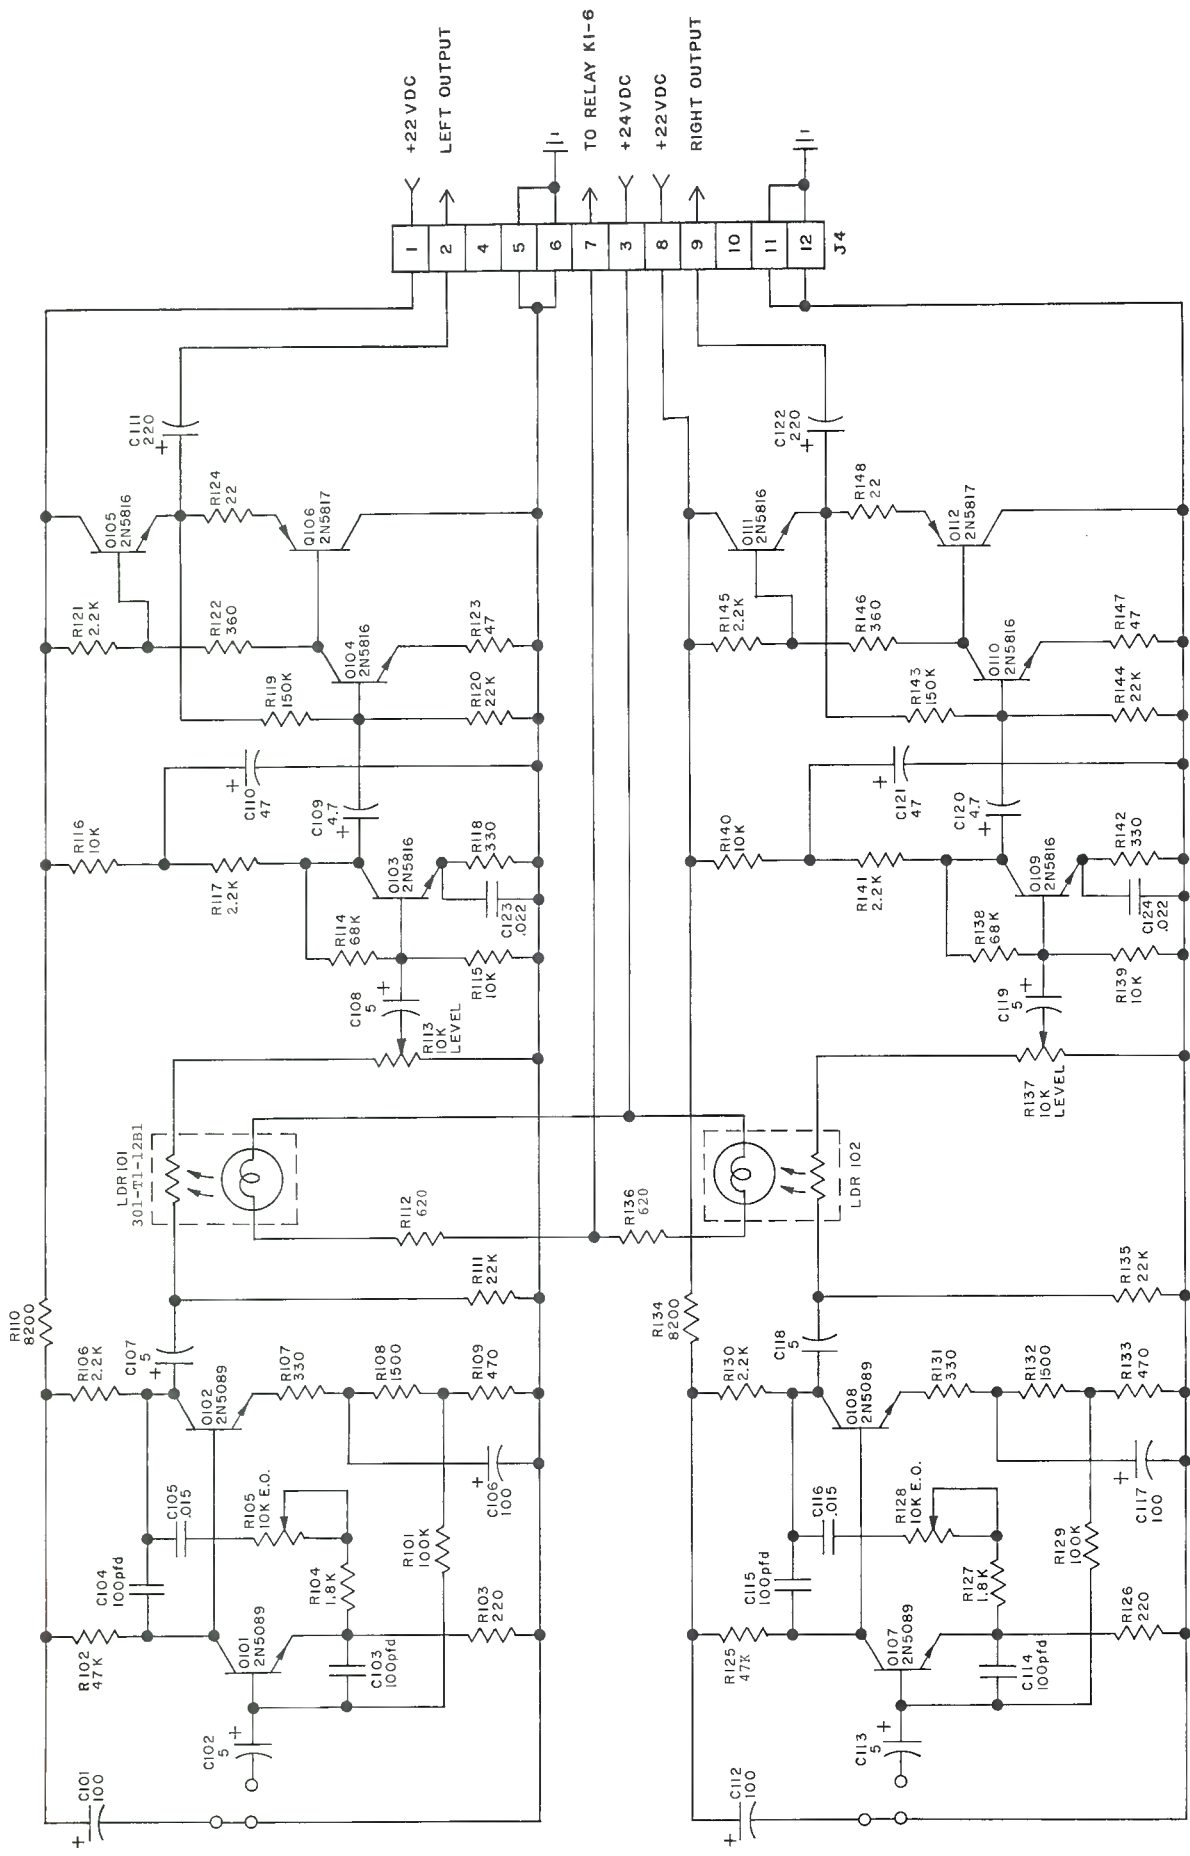

TITLE		SCHEMATIC - SP, WP, 3D	
		+ 18dBm REPRODUCE AMP	
INTERNATIONAL		893-0064-003	
TAPETRONICS		DRAWING NUMBER	
CORPORATION		REV.	
BLOOMINGTON, ILL. 61701			

# ADDENDUM

## AUDIO INPUT PAD FOR RP, RPD, RA AND WRA SERIES RECORDING AMPLIFIERS

831-0072-003 (MONO)  
831-0072-013 (STEREO)

### GENERAL DESCRIPTION

The International Tapetronics Corporation RP, RPD, RA and WRA Series recording amplifiers are now supplied with a user selectable audio input pad. This pad will provide either a 600 ohm balanced input (nominal 6 dB loss) or a 15K ohm balanced, bridging input (nominal 30 dB loss). Either option is obtainable by making jumper connections on the audio input card.

### IMPEDANCE SELECTION

The six pin audio input plug is a portion of the audio input pad. After removing the machine from its case, access to the pad may be gained by removing the two 6-32 screws which secure the plug to the chassis.

#### A. 600 ohm Connections

As supplied from the factory, the machine is set for a 600 ohm balanced audio input. The following jumper connections should be observed. (Refer to attached drawing for jumper locations).

Jumper between:

1. "A" and "C"
2. "E" and "D"
3. "H" and "I"
4. "J" and "L"
5. "N" and "O" (right channel stereo only)
6. "Q" and "P" (right channel stereo only)
7. "S" and "T" (right channel stereo only)
8. "V" and "W" (right channel stereo only)

B. 15K ohm Connections

A 15K ohm balanced, bridging audio input may be selected by the user. Reposition or remove the jumpers as listed below. (Refer to attached drawing for jumper locations).

1. Remove jumpers between:



- a. "A" and "C"
- b. "E" and "D"
- c. "H" and "I"
- d. "J" and "L"
- e. "N" and "O" (right channel stereo only)
- f. "Q" and "P" (right channel stereo only)
- g. "S" and "T" (right channel stereo only)
- h. "V" and "W" (right channel stereo only)

2. Install jumpers between:


- a. "B" and "I"
- b. "F" and "L"
- c. "M" and "T"
- d. "R" and "W"

Following audio input impedance selection, the audio input pad should be secured to the chassis using the 6-32 hardware. Return the chassis to the case and install the audio and remote control connectors.

**AUDIO INPUT PAD SCHEMATIC**  
(JUMPERED FOR 600 OHM BALANCED INPUT)

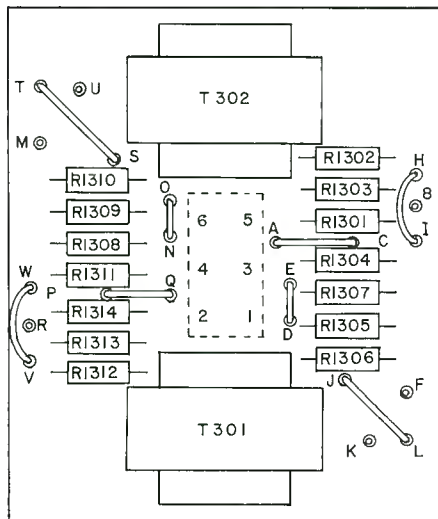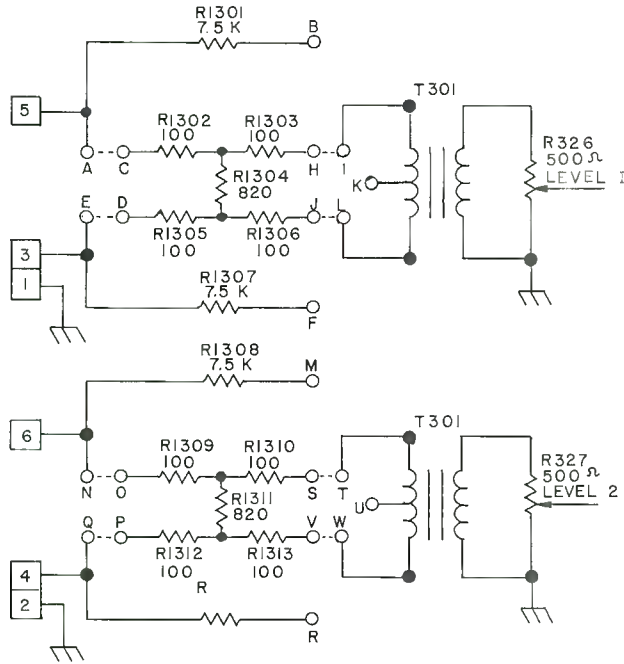

600 OHM  
BALANCED INPUT  
JUMPER LOCATIONS

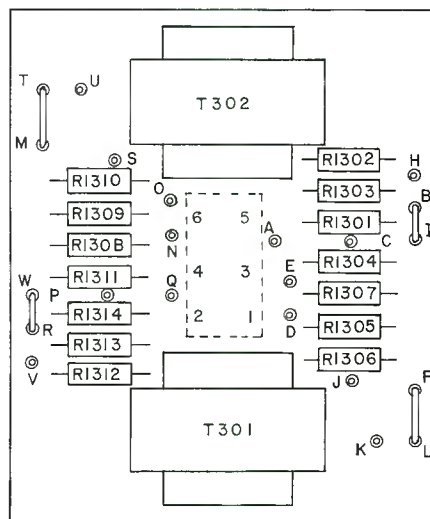

15 K OHM  
BRIDGING INPUT  
JUMPER LOCATIONS

**AUDIO INPUT PAD PICTORIALS**  
831-0072-003 MONO  
B31-0072-013 STEREO

2425 South Main  
 Post Office Box 241  
 Bloomington, Illinois 61701

INTERNATIONAL TAPETRONICS CORPORATION  
 MAINTENANCE PARTS PRICE LIST  
 SP, WP, & 3D SERIES REPRODUCERS  
 RP SERIES RECORDER/REPRODUCERS  
 RA & WRA SERIES RECORDING AMPLIFIERS

January 1, 1979  
 Telephone: 309-828-1381

<u>ITEM NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
<u>ELECTRONIC PARTS</u>			
1	391-0002-000	Switch, Pushbutton (Dialco - 513-0110-001)-lens not included, see items 4-9	\$ 7.90
2	391-0003-000	Switch, Pushbutton, "STOP" (Red - for 3D models only)	2.10
3	392-0001-000	Switch, Snap (Micro - V3L1183-D8)	1.75
4	404-0006-000	Lens, Yellow (Dialco - 303-3476)	1.70
5	404-0007-000	Lens, Green (Dialco - 303-3472)	1.70
6	404-0007-010	Lens, Green, engraved "START"	2.50
7	404-0008-010	Lens, Red, engraved "REC"	2.50
8	404-0009-010	Lens, Blue, engraved "SEC"	2.50
9	404-0010-010	Lens, White, engraved "TER"	2.50
10	415-0001-000	Lamp, Switch, #327 (for Dialco)	.65
11	415-0002-000	Lamp, Power Indicator Assy, 110 VAC (Leecraft 32-1311T)	2.50
12	504-0001-000	Head, Dummy	2.00
13	504-0002-000	Head, Monophonic, (Two Channel) Reproduce (Nortronics LP-B2H7k)	40.00
14	504-0003-000	Head, Monophonic, (Two Channel) Record (Nortronics LP-B2H4R)	40.00
15	504-0004-000	Head, Stereophonic, (Three Channel) Reproducer (Nortronics LP-B3Q7K)	120.00
16	504-0005-000	Head, Stereophonic, (Three Channel) Record (Nortronics LP-B3Q4R)	120.00
17	504-0011-000	Head, Erase/Record, (Two Channel)	
18	507-0001-010	(Nortronics PA2H44R) - for program delay models only	65.00
19	507-0001-000	Cable, Head SP/WP/RP Mono Play	6.50
		Cable, Head RP/3D Mono Record	6.50

JA/LC/11-22-78



20	507-0001-020	Cable, Head 3D Mono Play	6.50
21	507-0002-010	Cable, Head SP/WP Stereo Play (Left Channel)	5.10
22	507-0003-010	Cable, Head SP/WP Stereo Play (Right Channel)	5.10
23	507-0004-010	Cable, Head SP/WP Stereo Play (Cue)	5.10
24	507-0002-000	Cable, Head RP Stereo Record (Left Channel)	5.10
25	507-0004-000	Cable, Head RP Stereo Record (Right Channel)	5.10
26	507-0003-000	Cable, Head RP Stereo Record (Cue)	5.10
27	507-0002-020	Cable, Head 3D Stereo Play (Left Channel)	6.50
28	507-0004-020	Cable, Head 3D Stereo Play (Right Channel)	6.50
29	507-0003-020	Cable, Head 3D Stereo Play (Cue)	6.50
30	507-0002-030	Cable, Head 3D Stereo Record (Left channel)	5.10
31	507-0004-030	Cable, Head 3D Stereo Record (Right Channel)	5.10
32	507-0003-030	Cable, Head 3D Stereo Record (Cue)	5.10
33	554-0002-000	Meter, VU Scale (Modutec)	26.40
34	575-0001-000	Diode, 1N295	.65
35	575-0007-000	Diode, 1N4005 (replaces all diodes except IN462 & 1N295)	.65
36	581-0001-000	SCR, 2N5061 (replaces C6F and MCl906-2)	.75
37	590-0001-000	Transistor, NPN 2N3053	.75
38	590-0013-000	Transistor, NPN 2N5089	.50
39	590-0014-000	Transistor, NPN 2N2905	.75
40	590-0011-000	Transistor, NPN 2N930	.60
41	590-0017-000	Transistor, NPN 2N5816	.60
42	590-0018-000	Transistor, PNP 2N5817	.60
43	601-0001-000	Transistor, Unijunction, 2N4870	1.30
44	605-0007-000	IC, Series Voltage Regulator (7824KCT03)	4.95
45	650-0003-000	LDR, SIGMA 301-T1-12B1	2.50
46	480-0001-000	Relay, 4 PDT, 24 VDC	7.40
47	698-0001-000	Capacitor, 1000 MFD 50 V CAN	2.75
48	698-0003-000	Capacitor, DUAL 100 MFD 250 VDC CAN	2.85
49	698-0004-000	Capacitor, DUAL 1000 MFD 50 VDC CAN	4.05
50	683-0001-000	Capacitor, Motor Capstan, 1.5 MFD 370 VAC	3.30
51	683-0003-000	Capacitor, Motor Capstan, 2.0 MFD 370 VAC	5.85

PC CARDS

1	831-0029-003	PC Card, SP Utility Power Supply	17.20
2	831-0094-003	PC Card, Program Reproduce Amplifier, Mono, +18 dBm	45.90
3	831-0094-013	PC Card, Program Reproduce Amplifier, Stereo +18 dBm	79.00
4	831-0016-003	PC Card, Single Tone Cue Detector, 1 kHz	54.75
5	831-0016-013	PC Card, Three Tone Cue Detector, 1 kHz, 150 Hz & 8 kHz	102.85
6	831-0095-003	PC Card, Hi-Speed Cue Tone Detector, 1 kHz, 150 Hz & 8 kHz	118.75
7	831-0029-013	PC Card, WP Utility Power Supply	20.00
8	831-0069-003	PC Card, Recording Amplifier, Monophonic	57.55
9	831-0069-013	PC Card, Recording Amplifier, Stereophonic	98.40
10	831-0006-003	PC Card, Cue Oscillator, 1 kHz	40.50
11	831-0006-013	PC Card, Cue Oscillator, 1 kHz, 150 Hz & 8 kHz	72.00
12	831-0007-003	PC Card, Bias Oscillator, Monophonic	48.00
13	831-0007-013	PC Card, Bias Oscillator, Stereophonic	56.60
14	831-0106-013	PC Card, Recorder Control	48.90
15	831-0106-003	PC Card, Recorder Control, hi-speed cue models only	57.15
16	831-0009-003	PC Card, Meter Switch, Monophonic	24.00
17	831-0009-013	PC Card, Meter Switch, Stereophonic	28.95
18	831-0072-023	PC Card, Audio Input pad, Monophonic	27.70
19	831-0072-033	PC Card, Audio Input pad, Stereophonic	41.00
20	831-0030-003	PC Card, 3D Utility Power supply	35.90
21	831-0012-003	PC Card, 12 Conductor Test Extender	14.00
22	831-0013-003	PC Card, 15 Conductor Test Extender	14.00
23	831-0014-003	PC Card, 18 Conductor Test Extender	15.00
24	831-0044-003	PC Card, IGM Cue Tone Detector	115.00
25	831-0021-003	PC Card, IGM Recorder Control	55.00

MECHANICAL PARTS

1	258-0003-001	Case, SP Series, complete	32.00
2	258-0006-001	Case, WP & RP Series, complete	39.00
3	272-0001-001	Guide, Cartridge (either left or right)	.50
4	272-0002-002	Guide, Tape (right and center)	1.25
5	272-0003-001	Guide, Tape (left)	1.50
6	282-0001-001	Pin, Roll (solenoid chain connector)	.25
7	878-0008-000	Level Control Extender Shaft and Knob	4.00

8	284-0001-000	Plug, Hole (recording amplifier input level)	.25
9	301-0001-011	Spring, Cartridge Hold-Down	1.05
10	301-0004-011	Spring, Cartridge Hold-Down for 3D top deck only	1.05
11	301-0005-000	Spring, Solenoid Return (for round solenoid)	.25
12	451-0053-020	Motor, Capstan with Plug (60 Hz, 117 VAC) - for SP/WP/RP models only (SA1-2A)	230.00
13	451-0003-020	Motor, Capstan with Plug, (60 Hz, 117 VAC) - for 3D models only (SA1-3A)	285.00
14	451-0005-020	Motor, Capstan with Plug (60 Hz, 117 VAC) - for 7 1/2 - 30 IPS hi-speed cue SP/WP/RP models only (SA1-4A)	265.00
15	830-0003-001	Gauge, Tape Height	16.00
16	830-0006-001	Gauge, Pressure Roller Pressure	7.50
17	830-0007-001	Gauge, Shaft Locator	22.00
18	477-0006-002	Solenoid, Assy with Plunger (front mount)	36.00
19	832-0001-000	Solenoid, Clevis Assy with Chain	9.45
20	297-0004-001	Shield, Head Hum	3.00
21	251-0018-001	Bearing, 3D Series Top Capstan (SA)	25.00
22	253-0045-001	Block, 3D Series Top Capstan	7.00

KITS/MISCELLANEOUS PARTS

1	878-0026-000	Lamp, Cartridge 28 V, Yellow, "READY", Clip & Washer (3D Series only)	3.50
2	878-0012-000	Pressure Roller Replacement Kit (includes clip & washers)	5.20
3	878-0010-000	150 Hz Cue Tone Detector Parts Kit	29.50
4	878-0011-000	150 Hz Cue Tone Oscillator Parts Kit	15.00
5	878-0048-000	8 kHz Cue Tone Detector Parts Kit	29.50
6	878-0049-000	8 kHz Cue Tone Oscillator Parts Kit	15.00
7	878-0013-000	Gauge Kit, Tape Height, Pressure Roller Pressure, Capstan Shaft Locator	40.00
8	177-0046-000	Wrench, Allen 7/64" (for 3D Series front panel & pressure roller cross-shaft clamp screws)	.25
9	860-0001-000	Switcher, Audio - 3 channel (mono or stereo)	140.00
10	830-0009-010	Auxiliary Start Pulse Circuit	10.50
11	878-0009-000	Audio Mixing Circuit, Three Input/Single Output	20.00
12	878-0041-000	Test Extender Kit for SP/RP/WP/3D/WRA (includes 3 PC cards)	40.00

13	878-0043-000	Kit for Stereophonic Conversion of SP/WP Series mono machine -- play only	230.00
14	878-0055-003	Program Amplifier Mono Replaces 831-0027-003	45.90
15	878-0055-013	Program Amplifier, Stereo, Replaces 831-0027-013	79.00
16	878-0044-000	Kit for Stereophonic conversion of 3D Series mono machine	690.00
17	878-0031-000	IC Series Regulator Replacement Kit (replaces 605-0001-000 with a 605-0007-000)	9.00
18	878-0042-000	3D Series Top Capstan Bearing Kit with block (SA)	32.00
19	432-0001-000	Cable, Three Deck to WRA Recording Amplifier	65.00
20	378-0002-000	Plug, Cable, 6 pin male (audio output)	1.75
21	378-0003-000	Plug, Cable, 15 pin male (Reproduce remote)	2.95
22	378-0004-000	Plug, Cable, 18 pin male (Recorder remote)	3.00
23	380-0009-000	Socket, Cable, 6 pin female (Recorder audio)	1.95
24	890-0001-000	Book, Instruction SP/WP	5.00
25	890-0002-000	Book, Instruction RA/WRA	4.00
26	890-0004-000	Book, Instruction 3D	5.00
27	890-0009-000	Book, Instruction RP	5.00

All prices are subject to change without notice.

The above price list is provided for our customers' convenience, as those commonly used parts are readily available from our parts stock for maintenance and repair. Because our selling price is based on actual costs, you may find some items can be purchased at a lower cost from an electronics house than from International Tapetronics Corporation.

All pricing above is U.S. Domestic only. Prices will vary outside of U.S. Territory.

Minimum Order: \$15.00

2425 South Main  
 Post Office Box 241  
 Bloomington, Illinois 61701

INTERNATIONAL TAPETRONICS CORPORATION

July 1, 1974

MAINTENANCE PARTS PRICE LIST  
 SP, WP, & 3D SERIES REPRODUCERS  
 RP SERIES RECORDER/REPRODUCERS  
 RA & WRA SERIES RECORDING AMPLIFIERS

Telephone: 309-828-1381

<u>ITEM NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
1	391-0002-000	Switch, Pushbutton (Dialco - 513-0110-001) - lens not included, see items 4-9	\$ 6.67
2	391-0003-000	Switch, Pushbutton, "STOP" (Switchcraft - 903) - for 3D models only	
3	392-0001-000	Switch, Snap (Micro - V3L1183-D8)	1.24
4	404-0006-000	Lens, Yellow (Dialco - 303-3476)	1.18
5	404-0007-000	Lens, Green (Dialco - 303-3472)	1.47
6	404-0007-010	Lens, Green, engraved "START"	1.47
7	404-0008-010	Lens, Red, engraved "REC"	2.00
8	404-0009-010	Lens, Blue, engraved "SEC"	2.00
9	404-0010-010	Lens, White, engraved "TER"	2.00
10	415-0001-000	Lamp, Switch, #327 (for Dialco)	2.00
11	415-0002-000	Lamp, Power Indicator Assy, 110 VAC (Leecraft 32-131IT)	.79
12	415-0003-000	Lamp, Cartridge, 28 v, Yellow (3D only)	1.29
13	504-0001-000	Head, Dummy	1.65
14	504-0002-000	Head, Monophonic, (Two Channel) Reproduce (Nortronics 2001)	1.50
15	504-0003-000	Head, Monophonic, (Two Channel) Record (Nortronics 2003)	25.20
16	504-0004-000	Head, Stereophonic, (Three Channel) Reproducer (Nortronics 5701)	25.80
17	504-0005-000	Head, Stereophonic, (Three Channel) Record (Nortronics 5703)	94.50
18	504-0011-000	Head, Erase/Record, (Two Channel) (Nortronics PA2H44R) - for program delay models only	94.50
19	507-0001-010	Cable, Head SP/WP/RP Mono Play	80.00
20	507-0001-020	Cable, Head 3D Mono Play	5.22
21	554-0002-000	Meter, VU Scale (Modutec)	5.70
22	575-0001-000	Diode, 1N295	19.29 .45

23	575-0007-000	Diode, 1N4005 (replaces all diodes except 1N462 & 1N295)	.66
24	581-0001-000	SCR, 2N5061 (replaces C6F and MCL906-2)	.83
25	590-0001-000	Transistor, NPN 2N3053	1.09
26	590-0013-000	Transistor, NPN 2N5089	.98
27	590-0014-000	Transistor, NPN 2N2905	2.70
28	590-0011-000	Transistor, NPN 2N930	1.50
29	601-0001-000	Transistor, Unijunction, 2N4870	.75
30	605-0007-000	IC, Series Voltage Regulator (7824KCT03)	9.75
31	606-0002-000	IC, Four Stage Amplifier, Recording Amplifier (RCA CA3052)	
32	606-0003-000	IC, Audio Attenuator (Motorola MFC 6040)	4.56
33	480-0001-000	Relay, 4 PDT, 24 VDC	2.18
34	532-0001-010	Transformer, Audio, 15 inch leads	7.40
35	532-0001-020	Transformer, Audio, PC Card Mount	5.64

PC CARDS

1	831-0029-003	PC Card, SP Utility Power Supply	12.78
2	831-0027-003	PC Card, Program Reproducer Amplifier, Monophonic	33.54
3	831-0027-013	PC Card, Program Reproducer Amplifier, Stereophonic	61.59
4	831-0016-003	PC Card, Single Tone Cue Detector, 1 kHz	39.78
5	831-0016-013	PC Card, Three Tone Cue Detector, 1 kHz, 150 Hz & 8 kHz	71.94
6	831-0043-003	PC Card, Hi-Speed Cue Tone Detector, 1 kHz, 150 Hz & 8 kHz	83.64
7	831-0029-013	PC Card, WP Utility	15.15
8	831-0042-003	PC Card, Recording Amplifier, Monophonic	33.96
9	831-0042-013	PC Card, Recording Amplifier, Stereophonic	68.58
10	831-0006-003	PC Card, Cue Oscillator, 1 kHz	31.74
11	831-0006-013	PC Card, Cue Oscillator, 1 kHz, 150 Hz & 8 kHz	57.48
12	831-0007-003	PC Card, Bias Oscillator, Monophonic	36.96
13	831-0007-013	PC Card, Bias Oscillator, Stereophonic	42.30
14	831-0008-003	PC Card, Recorder Control	39.96
15	831-0008-013	PC Card, Recorder Control, hi-speed cue models only	37.32
16	831-0009-003	PC Card, Meter Switch, Monophonic	18.75
17	831-0009-013	PC Card, Meter Switch, Stereophonic	23.01
18	831-0059-003	PC Card, Audio Pad, Monophonic	10.32
19	831-0059-013	PC Card, Audio Pad, Stereophonic	16.62
20	831-0030-003	PC Card, 3D Utility Power Supply	26.34
21	831-0012-003	PC Card, 12 Conductor Test Extender	12.00
22	831-0013-003	PC Card, 15 Conductor Test Extender	12.00
23	831-0014-003	PC Card, 18 Conductor Test Extender	12.00
24	831-0044-003	PC Card, IGM Cue Tone Detector	96.00
25	831-0021-003	PC Card, IGM Recorder Control	60.50

MECHANICAL PARTS

1	258-0003-001	Case, SP Series, complete	18.54
2	258-0006-001	Case, WP & RP Series, complete	28.98
3	272-0001-001	Guide, Cartridge (either left or right)	1.68
4	272-0002-002	Guide, Tape (right and center)	1.52
5	272-0003-001	Guide, Tape (left)	1.72
6	282-0001-001	Pin, Roll (solenoid chain connector)	.05
7	284-0001-000	Plug, Hole (recording amplifier level)	.10
8	301-0001-011	Spring, Cartridge Hold-Down	.96
9	301-0004-011	Spring, Cartridge Hold-Down for 3D top deck only	.96
10	301-0002-001	Spring, Solenoid Return (for rectangular solenoid)	.25
11	301-0005-000	Spring, Solenoid Return (for round solenoid)	.25
12	451-0001-020	Motor, Capstan with Plug (60 Hz, 117 VAC) - for SP/WP/RP models only	210.00
13	451-0003-020	Motor, Capstan with Plug, (60 Hz, 117 VAC) - for 3D models only	250.00
14	451-0005-020	Motor, Capstan with Plug (60 Hz, 117 VAC) - for 7½-30 IPS hi-speed cue SP/WP/RP models only	226.00
15	830-0003-001	Gauge, Tape Height	10.00
16	830-0006-001	Gauge, Pressure Roller Pressure	5.00
17	830-0007-001	Gauge, Shaft Locater	10.00
18	477-0006-002	Solenoid, Assy with Plunger (front mount)	31.50
19	832-0001-000	Solenoid Clevis Assy with Chain	5.32
20	297-0004-001	Shield, Head Hum	2.40

KITS/MISCELLANEOUS PARTS

1	878-0026-000	Lamp, Cartridge 28 v, Yellow, "READY", Clip & Washer (3D Series only)	1.86
2	878-0012-000	Pressure Roller Replacement Kit (includes clip & washers)	3.65
3	878-0010-000	150 Hz Cue Tone Detector Parts Kit	24.60
4	878-0011-000	150 Hz Cue Tone Oscillator Parts Kit	13.02
5	878-0013-000	Gauge Kit, Tape Height, Pressure Roller Pressure, Capstan Shaft Locater	25.00
6	177-0046-000	Wrench, Allen 7/64" (for 3D front panel series & pressure roller cross-shaft clamp screws)	.25
7	865-0004-000	NAB Test Cartridge #3	16.50
8	878-0016-000	Front Panel, Azimuth Adjustment Kit	100.00
9	860-0001-000	Switcher, Audio - 3 Channel (mono or stereo)	95.00
10	830-0009-010	Auxiliary Start Pulse Circuit	10.50
11	878-0009-000	Audio Mixing Circuit, Three Input/Single Output	10.00
12	878-0029-000	Top Bearing Kit, 3D Series, with block	9.35

13	878-0020-000	3D Series Top Capstan Bearing Kit, without block	4.25
14	878-0031-000	IC Series Regulator Replacement Kit, (replaces 605-0001-000 with a 605-0007-000)	9.75

50 HZ/234 VAC MOTORS/SOLENOIDS

1	451-0006-020	Motor, Capstan with Plug (117 VAC, 50 Hz) - for SP/WP/RP models	270.00
2	451-0039-020	Motor, Capstan with Plug (234 VAC, 50 Hz) - for SP/WP/RP models	270.00
3	451-0007-020	Motor, Capstan with Plug (117 VAC, 50 Hz) - for 7½-30 IPS hi-speed cue SP/WP/RP models	294.00
4	451-0008-020	Motor, Capstan with Plug (117 VAC, 50 Hz) - for 3D models	320.00
5	451-0040-020	Motor, Capstan with Plug (234 VAC, 50 Hz) - for 3D models	320.00
6	477-0011-002	Solenoid, including coil and plunger (234 VAC equipment)	41.00
7	415-0008-000	Lamp, power indicator 220 VAC	1.80

All prices are subject to change without notice.

The above price list is provided for our customers' convenience, as these commonly used parts are readily available from our parts stock for maintenance and repair. Because our selling price is based on our actual costs, you may find some items can be purchased at a lower cost from an electronics house than from INTERNATIONAL TAPETRONICS CORPORATION.





# INTERNATIONAL TAPETRONICS CORPORATION

P. O. BOX 241 2425 SOUTH MAIN STREET BLOOMINGTON, ILLINOIS 61701

## PACKING LIST

750



### MACHINES

\_\_\_ REEL-TO-REEL



\_\_\_ R-R RECROD AMPLIFIER

\_\_\_ 5D

\_\_\_ PD-II

\_\_\_ RA

\_\_\_ RP

\_\_\_ SP

\_\_\_ 3D

WP

\_\_\_ WRA

\_\_\_ ESL-IV

### INSTRUCTION BOOKS

\_\_\_ PD-II

\_\_\_ RA

\_\_\_ WRA

750



\_\_\_ REEL-TO-REEL



\_\_\_ R-R RECORD AMPLIFIER

\_\_\_ SP

WP

\_\_\_ RP

\_\_\_ 3D

\_\_\_ ESL-IV

### QTY

\_\_\_ 3-PIN PLUG XLR

\_\_\_ 3-PIN SOCKET XLR

6-PIN PLUG

15- PIN PLUG

\_\_\_ 18- PIN PLUG

\_\_\_ 6-PIN SOCKET

\_\_\_ 10-32 PANEL SCREWS

\_\_\_ #10 NYLON WASHERS

\_\_\_ #10 HEX NUTS

\_\_\_ ALLEN WRENCH

\_\_\_ EXTENDER KNOBS

\_\_\_ EXTRA HOLE PLUGS

\_\_\_ FLYWHEEL

\_\_\_ INTERCONNECT CABLE

\_\_\_ RUBBER REEL RETAINERS

\_\_\_ 10 1/2" REEL

\_\_\_ NAB "B" CARTRIDGE

MAINTENANCE PRICE PARTS LIST


PACKED BY

Addenda  
811-0055-000

ITC'S 831-0027-000 PC CARD PROGRAM REPRODUCE AMPLIFIER USED IN ITC  
RP, SP, WP, AND 3-D SERIES CARTRIDGE MACHINES.

The 831-0027-000 Program Amplifier Card which is shown in the instruction book has been updated to an 831-0094-000 Program Amplifier Card. A schematic and pictorial diagram are attached of the new style card showing the circuit components and their location. In addition to this card, there has been one jumper wire added on the machine itself. This wire goes from pin #3 of J4, which is the amplifier card edge connector, to pin #5 of J5. This provides plus 24 volts to the LDR's which are used as squelch devices in this particular amplifier.

If you have any questions about the updating to the amplifier card or need further information, you can call the TECHNICAL SERVICE DEPARTMENT at ITC and we'll be more than happy to answer you questions.

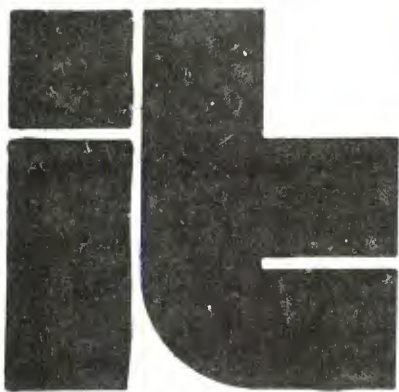


**INTERNATIONAL TAPETRONICS CORPORATION**


2425 South Main Street, Bloomington, Illinois 61701 Telephone: 309-828-1381

07227KDW


811-0055-000

TITLE SCHEMATIC - SP. WP. 3D  
 REPRODUCE AMP.  
 INTERNATIONAL  
 TAPETRONICS  
 CORPORATION  
 ELIZABETH, N.J. 07112  
 DRAWING NUMBER 693-0064-003  
 REV.

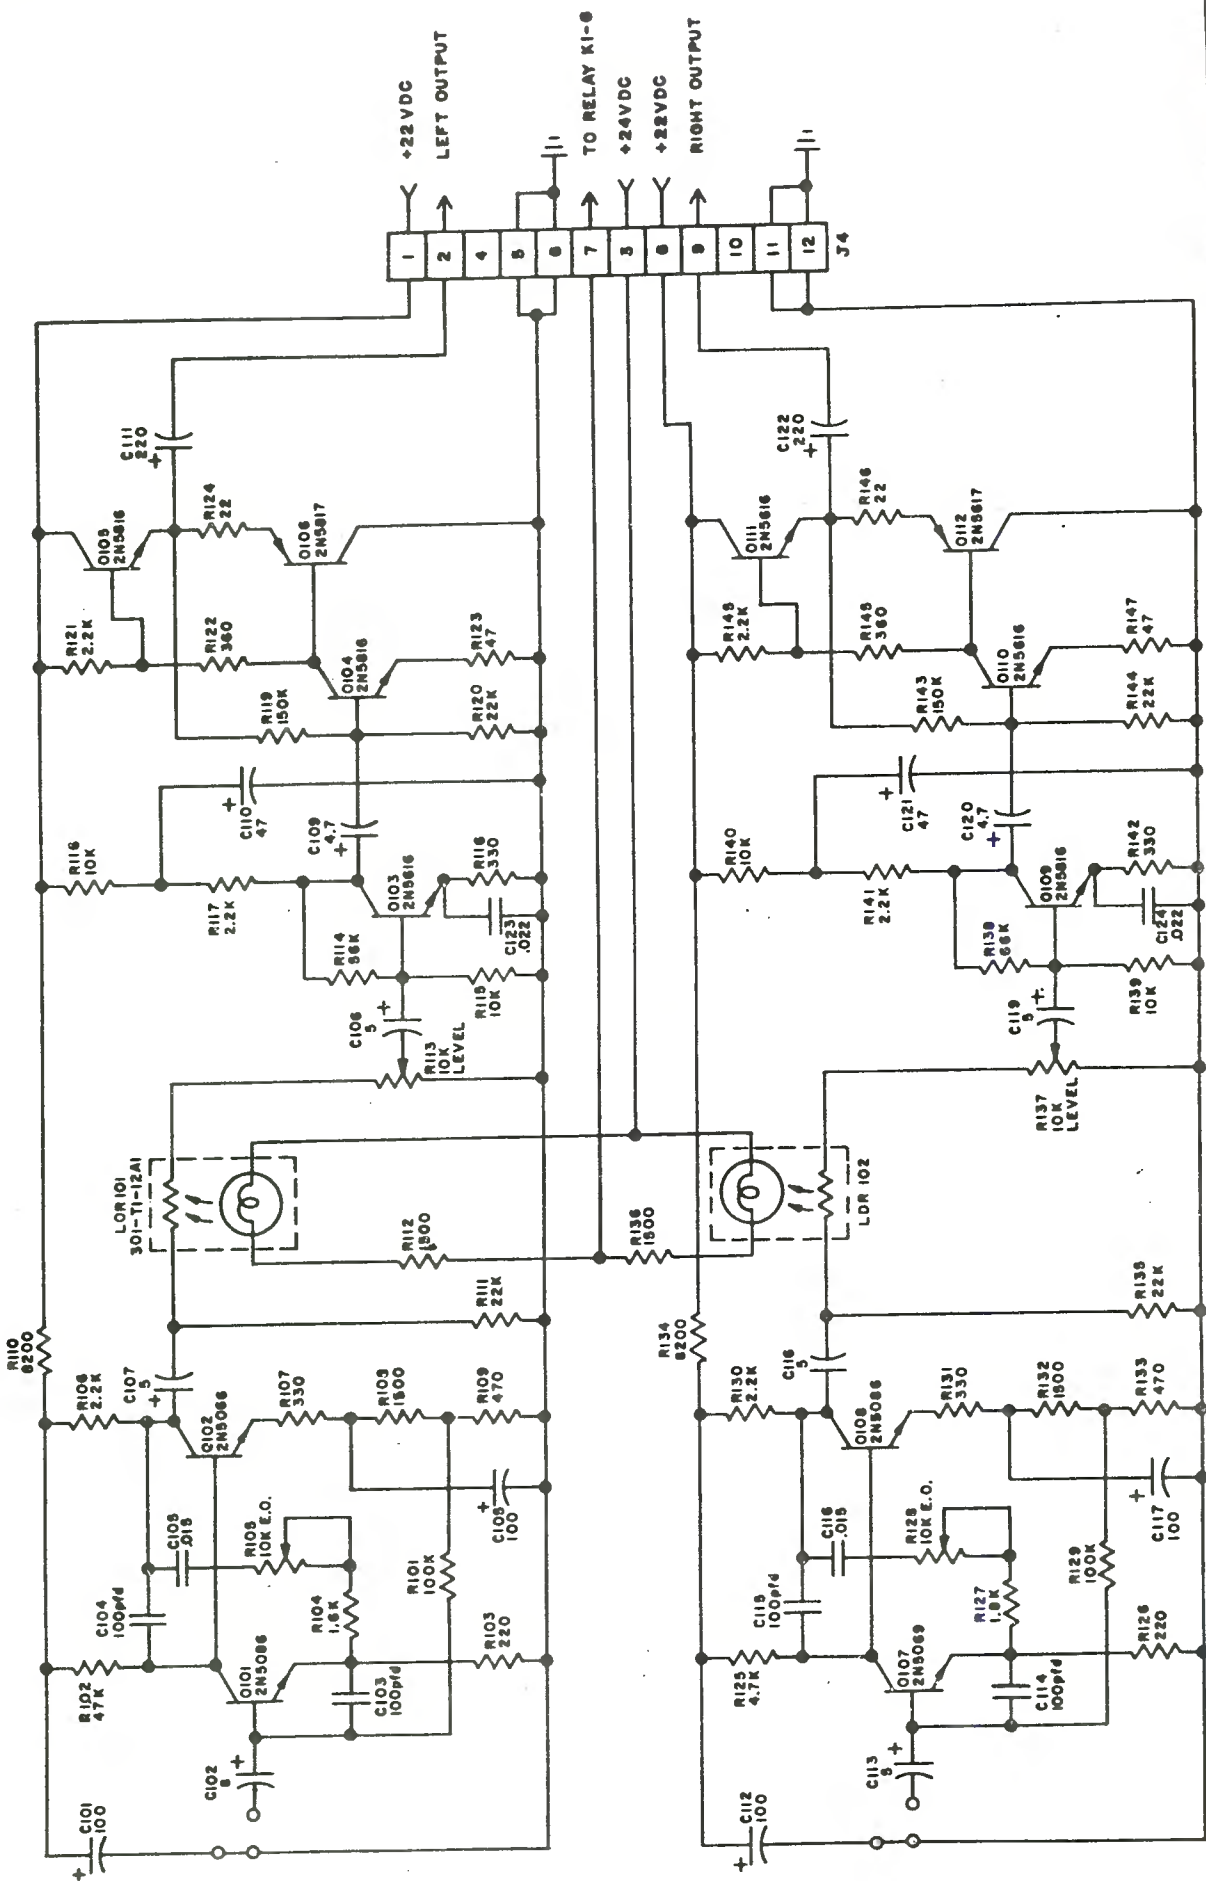

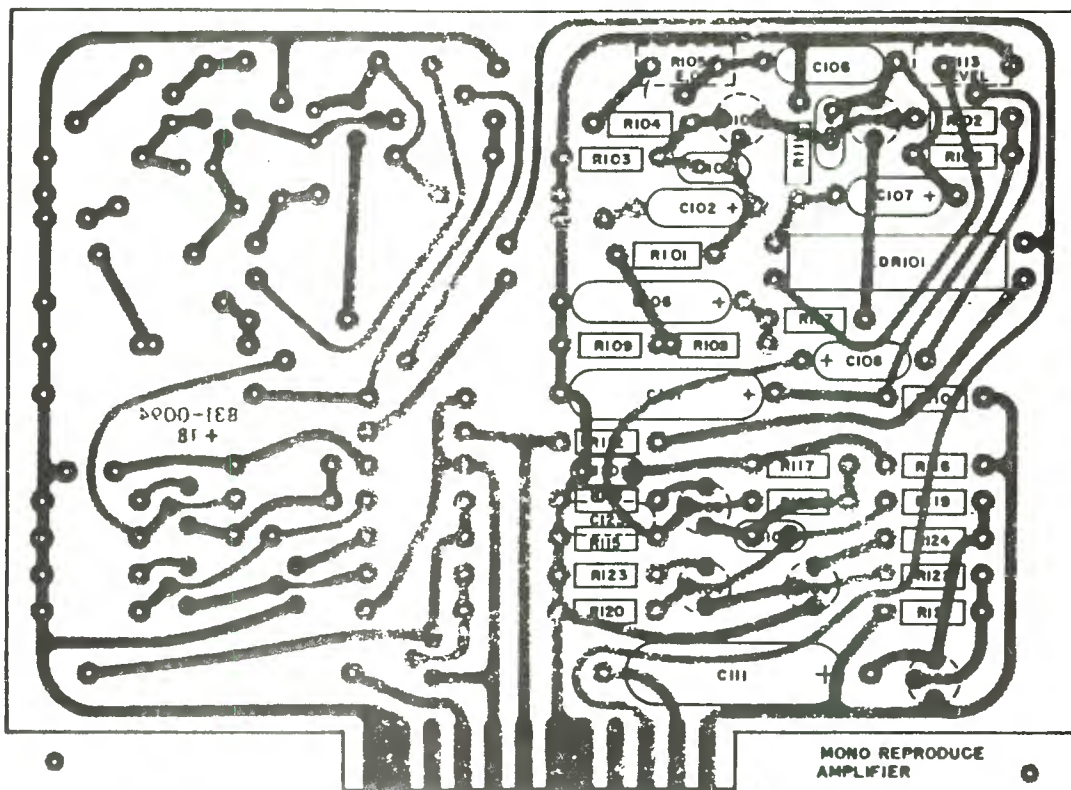

MONO REPRODUCE  
AMPLIFIER  
831-0094-003

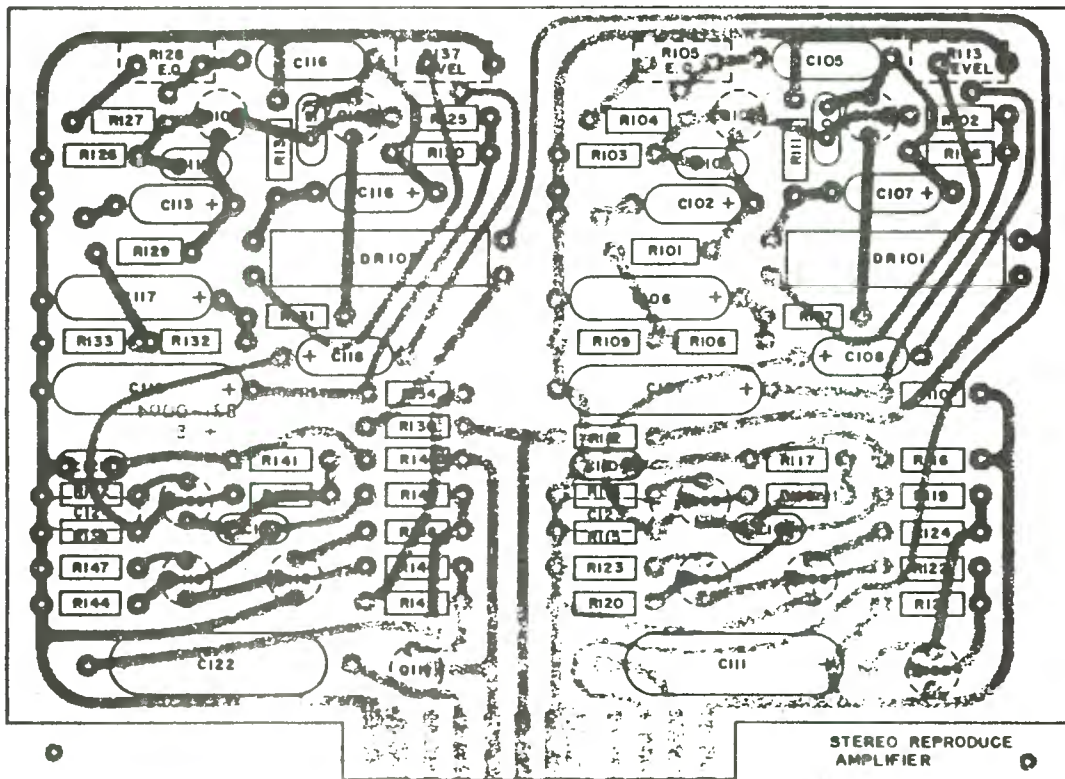

STEREO REPRODUCE  
AMPLIFIER  
831-0094-013

2425 South Main  
Post Office Box 241  
Bloomington, Illinois 61701

INTERNATIONAL TAPETRONICS CORPORATION  
MAINTENANCE PARTS PRICE LIST  
SP, WP, & 3D SERIES REPRODUCERS  
RP SERIES RECORDER/REPRODUCERS  
RA & WRA SERIES RECORDING AMPLIFIERS

January 1, 1978  
Telephone: 309-828-1381

<u>ITEM NO.</u>	<u>PART NUMBER</u>	<u>DESCRIPTION</u>	<u>PRICE</u>
<u>ELECTRONIC PARTS</u>			
1	391-0002-000	Switch, Pushbutton (Dialco - 513-0110-001)-lens not included, see items 4-9	\$ 7.85
2	391-0003-000	Switch, Pushbutton, "STOP" (Red - for 3D models only)	2.10
3	392-0001-000	Switch, Snap (Micro - V3L1183-D8)	1.65
4	404-0006-000	Lens, Yellow (Dialco - 303-3476)	1.65
5	404-0007-000	Lens, Green (Dialco - 303-3472)	1.65
6	404-0007-010	Lens, Green, engraved "START"	2.40
7	404-0008-010	Lens, Red, engraved "REC"	2.40
8	404-0009-010	Lens, Blue, engraved "SEC"	2.40
9	404-0010-010	Lens, White, engraved "TR"	2.40
10	415-0001-000	Lamp, Switch, #327 (for Dialco)	.65
11	415-0002-000	Lamp, Power Indicator Assy, 110 VAC (Leecraft 32-1311T)	2.25
12	415-0003-000	Lamp, Cartridge, 28 V, Yellow (3D Only)	3.50
13	504-0001-000	Head, Dummy	2.00
14	504-0002-000	Head, Monophonic, (Two Channel) Reproduce (Nortronics LP-B2H7k)	37.20
15	504-0003-000	Head, Monophonic, (Two Channel) Record (Nortronics LP-B2H4R)	37.80
16	504-0004-000	Head, Stereophonic, (Three Channel) Reproducer (Nortronics LP-B3Q7K)	113.40
17	504-0005-000	Head, Stereophonic, (Three Channel) Record (Nortronics LP-B3Q4R)	114.15
18	504-0011-000	Head, Erase/Record, (Two Channel) (Nortronics PA2H44R) - for program delay models only	86.50
19	507-0001-010	Cable, Head SP/WP/RP Mono Play	6.50
20	507-0001-000	Cable, Head RP/3D Mono Record	6.50

21	507-0001-020	Cable, Head 3D Mono Play	6.50
22	507-0002-010	Cable, Head SP/WP Stereo Play (Left Channel)	5.10
23	507-0003-010	Cable, Head SP/WP Stereo Play (Right Channel)	5.10
24	507-0004-010	Cable, Head SP/WP Stereo Play (Cue)	5.10
25	507-0002-000	Cable, Head RP Stereo Record (Left Channel)	5.10
26	507-0004-000	Cable, Head RP Stereo Record (Right Channel)	5.10
27	507-0003-000	Cable, Head RP Stereo Record (Cue)	5.10
28	507-0002-020	Cable Head 3D Stereo Play (Left Channel)	6.50
29	507-0004-020	Cable Head 3D Stereo Play (Right Channel)	6.50
30	507-0003-020	Cable Head 3D Stereo Play (cue)	6.50
31	507-0002-030	Cable Head 3D Stereo Record (Left Channel)	5.10
32	507-0004-030	Cable Head 3D Stereo Record (Right Channel)	5.10
33	507-0003-030	Cable Head 3D Stereo Record (Cue)	5.10
34	554-0002-000	Meter, VU Scale (Modutec)	26.40
35	575-0001-000	Diode, 1N295	.65
36	575-0007-000	Diode, 1N4005 (replaces all diodes except 1N462 & 1N295)	.65
37	581-0001-000	SCR, 2N5061 (replaces C6F and MC1906-2)	1.15
38	590-0001-000	Transistor, NPN 2N3053	.75
39	590-0013-000	Transistor, NPN 2N5089	.50
40	590-0014-000	Transistor, NPN 2N2905	.75
41	590-0011-000	Transistor, NPN 2N930	.60
42	601-0001-000	Transistor, Unijunction, 2N4870	1.30
43	605-0007-000	IC, Series Voltage Regulator (7824KCT03)	4.95
44	480-0001-000	Relay, 4 PDT, 24 VDC	7.40
45	532-0001-010	Transformer, Audio, 15 inch leads	9.05
46	532-0001-020	Transformer, Audio, PC Card Mount	9.40
47	698-0001-000	Capacitor, 1000 MFD 50 V CAN	2.35
48	698-0003-000	Capacitor, DUAL 100 MFD 250 VDC CAN	2.85
49	698-0004-000	Capacitor, DUAL 1000 MFD 50 VDC CAN	4.05
50	683-0001-000	Capacitor, Motor Capstan, 1.5 MFD 370 VAC	3.30
51	683-0003-000	Capacitor, Motor Capstan, 2.0 MFD 370 VAC	5.85

PC CARDS

1	831-0029-003	PC Card, SP Utility Power Supply	17.20
2	831-0094-003	PC Card, Program Reproduce Amplifier, Mono, +18 dBm	45.90
3	831-0094-013	PC Card, Program Reproduce Amplifier, Stereo +18 dBm	79.00
4	831-0016-003	PC Card, Single Tone Cue Detector, 1 KHz	54.75
5	831-0016-013	PC Card, Three Tone Cue Detector, 1 KHz, 150 Hz & 8 KHz	102.85
6	831-0095-003	PC Card, Hi-Speed Cue Tone Detector, 1 KHz, 150 Hz & 8 KHz	118.75
7	831-0029-013	PC Card, WP Utility Power Supply	20.00
8	831-0069-003	PC Card, Recording Amplifier, Monophonic	57.55
9	831-0069-013	PC Card, Recording Amplifier, Stereophonic	98.40
10	831-0006-003	PC Card, Cue Oscillator, 1 KHz	40.50
11	831-0006-013	PC Card, Cue Oscillator, 1 KHz, 150 Hz & 8 KHz	72.00
12	831-0007-003	PC Card, Bias Oscillator, Monophonic	48.00
13	831-0007-013	PC Card, Bias Oscillator, Stereophonic	56.60
14	831-0106-013	PC Card, Recorder Control	48.90
15	831-0106-003	PC Card, Recorder Control, hi-speed cue models only	57.15
16	831-0009-003	PC Card, Meter Switch, Monophonic	24.00
17	831-0009-013	PC Card, Meter Switch, Stereophonic	28.95
18	831-0072-023	PC Card, Audio Pad, Monophonic	27.70
19	831-0072-033	PC Card, Audio Pad, Stereophonic	41.00
20	831-0030-003	PC Card, 3D Utility Power Supply	35.90
21	831-0012-003	PC Card, 12 Conductor Test Extender	13.00
22	831-0013-003	PC Card, 15 Conductor Test Extender	13.00
23	831-0014-003	PC Card, 18 Conductor Test Extender	14.00
24	831-0044-003	PC Card, IGM Cue Tone Detector	115.00
25	831-0021-003	PC Card, IGM Recorder Control	55.00

MECHANICAL PARTS

1	258-0003-001	Case, SP Series, complete	30.40
2	258-0006-001	Case, WP & RP Series, complete	38.10
3	272-0001-001	Guide, Cartridge (either left or right)	.50
4	272-0002-002	Guide, Tape (right and center)	1.25
5	272-0003-001	Guide, Tape (left)	1.50
6	282-0001-001	Pin, Roll (solenoid chain connector)	.25

7	284-0001-000	Plug, Hole (recording amplifier level)	.25
8	301-0001-011	Spring, Cartridge Hold-Down	.95
9	301-0004-011	Spring, Cartridge Hold-Down for 3D top deck only	.95
10	301-0005-000	Spring, Solenoid Return (for round solenoid)	.25
11	451-0053-020	Motor, Capstan with Plug (60 Hz, 117 VAC) - for SP/WP/RP models only (SA1-2A)	210.00
12	451-0003-020	Motor, Capstan with Plug, (60 Hz, 117 VAC) - for 3D models only (SA1-3A)	265.00
13	451-0005-020	Motor, Capstan with Plug (60 Hz, 117 VAC) - for 7½-30 IPS hi-speed cue SP/WP/RP models only(SA1-4A)	240.00
14	830-0003-001	Gauge, Tape Height	15.00
15	830-0006-001	Gauge, Pressure Roller Pressure	6.00
16	830-0007-001	Gauge, Shaft Locator	20.00
17	477-0006-002	Solenoid, Assy with Plunger (front mount)	36.00
18	832-0001-000	Solenoid Clevis Assy with Chain	9.45
19	297-0004-001	Shield, Head Hum	4.40
20	251-0018-001	Bearing, 3D Series Top Capstan (SA)	24.00
21	253-0045-001	Block, 3D Series Top Capstan	10.00

KITS/MISCELLANEOUS PARTS

1	878--0026-000	Lamp, Cartridge 28 v, Yellow, "READY", Clip & Washer (3D Series only)	3.50
2	878--0012-000	Pressure Roller Replacement Kit (includes clip & washers)	5.20
3	878-0010-000	150 Hz Cue Tone Detector Parts Kit	29.50
4	878-0011-000	150 Hz Cue Tone Oscillator Parts Kit	15.00
5	878-0048-000	8 kHz Cue Tone Detector Parts Kit	29.50
6	878-0049-000	8 kHz Cue Tone Oscillator Parts Kit	15.00
7	878-0013-000	Gauge Kit, Tape Height, Pressure Roller Pressure, Capstan Shaft Locator	36.00
8	177-0046-000	Wrench, Allen 7/64" (for 3D front panel series & pressure roller cross-shaft clamp screws)	.25
9	860-0001-000	Switcher, Audio - 3 Channel (mono or stereo)	140.00
10	830-0009-010	Auxiliary Start Pulse Circuit	10.50
11	878-0009-000	Audio Mixing Circuit, Three Input/Single Output	15.00



12	878-0043-000	Kit for Stereophonic Conversion of SP/WP Series mono machine -- play only	225.00
13	878-0055-003	Program Amplifier, Mono Replaces 831-0027-003	45.90
14	878-0055-013	Program Amplifier, Stereo, Replaces 831-0027-013	79.00
15	878-0044-000	Kit for Stereophonic conversion of 3D Series mono machine	675.00
16	878-0031-000	IC Series Regulator Replacement Kit (replaces 605-0001-000 with a 605-0007-000)	10.80
17	878-0042-000	3D Series Top Capstan Bearing Kit with block (SA)	34.00
18	432-0001-000	Cable, Three Deck to WRA Recording Amplifier	50.00
19	378-0002-000	Plug, Cable, 6 pin male (audio output)	1.75
20	378-0003-000	Plug, Cable, 15 pin male (Reproduce remote)	2.95
21	378-0004-000	Plug, Cable, 18 pin male (Recorder remote)	3.00
22	380-0009-000	Socket, Cable, 6 pin female (Recorder audio)	1.95

50 Hz/234 VAC MOTORS/SOLENOIDS

1	451-0006-020	Motor, Capstan with Plug (117 VAC, 50 Hz) - for SP/WP/RP models (SA1-2B)	210.00
2	451-0056-020	Motor, Capstan with Plug (117 VAC, 50 Hz) - for 7½-22½ IPS hi-speed cue SP/WP/RP models (SA1-4B)	240.00
3	451-0008-020	Motor, Capstan with Plug (117 VAC, 50 Hz) - for 3D models (SA1-3B)	265.00
4	477-0011-002	Solenoid, including coil and plunger (234 VAC equipment)	35.65
5	415-0008-000	Lamp, power indicator 220 VAC	4.10

All prices are subject to change without notice.

The above price list is provided for our customers' convenience, as those commonly used parts are readily available from our parts stock for maintenance and repair. Because our selling price is based on actual costs, you may find some items can be purchased at a lower cost from an electronics house than from International Tapetronics Corporation.

All pricing above is U.S. Domestic only. Prices will vary outside of U.S. Territory.


ADDENDUM  
RA, WRA, AND RP SERIES  
CARTRIDGE EQUIPMENT


The original recorder control PC Boards (part numbers 831-0008-003 - Single Speed Units and 831-0008-013- High Speed Cue) have been replaced with part numbers 831-0106-013 for single speed units and 831-0106-003 for High Speed Cue models.

The updated circuit will provide better performance from the ITC Recorder equipped models. The new PC Board directly replaces the original PC Board and therefore circuit connections to the board edge connector remain the same.

Changes in the schematic diagram are shown on page 2 of this Addendum. Page 3 is a parts overlay of the new printed circuit board, which replaces Figure 5-7 on page 5-4 of the RA-WRA series Technical Manual (located in the rear half of this manual).


INTERNATIONAL TAPETRONICS CORPORATION

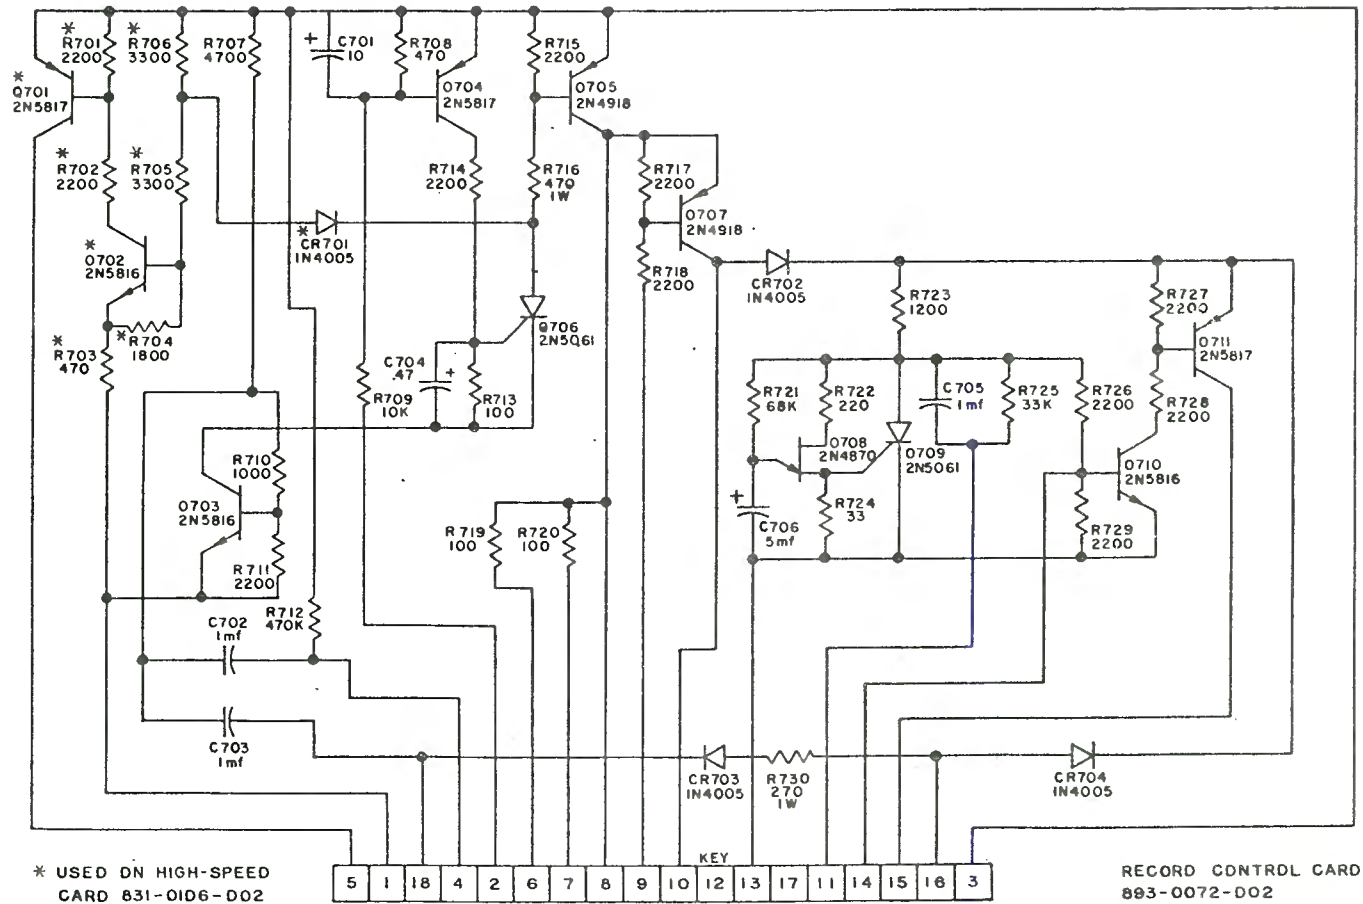


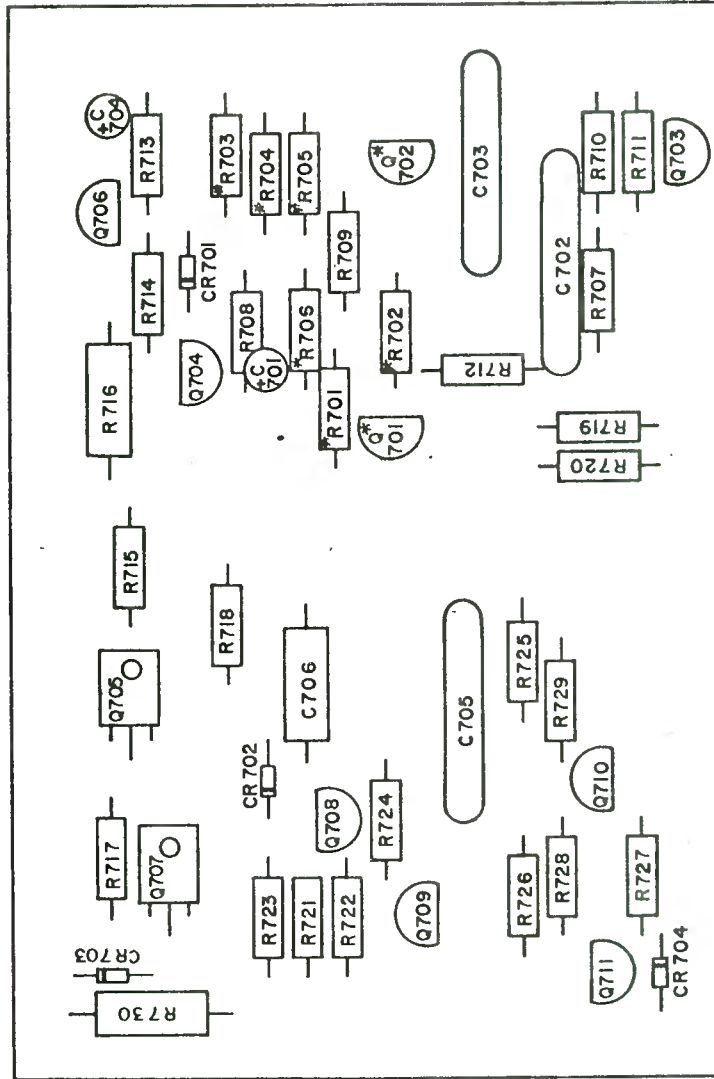


RECORDER CONTROL P.C. BOARD  
ITC PART - 831-0106-003(HIGH SPEED CUE)  
- 831-0106-013 (SINGLE SPEED MODELS)

\* USED ON HIGH SPEED  
CUE MODELS ONLY

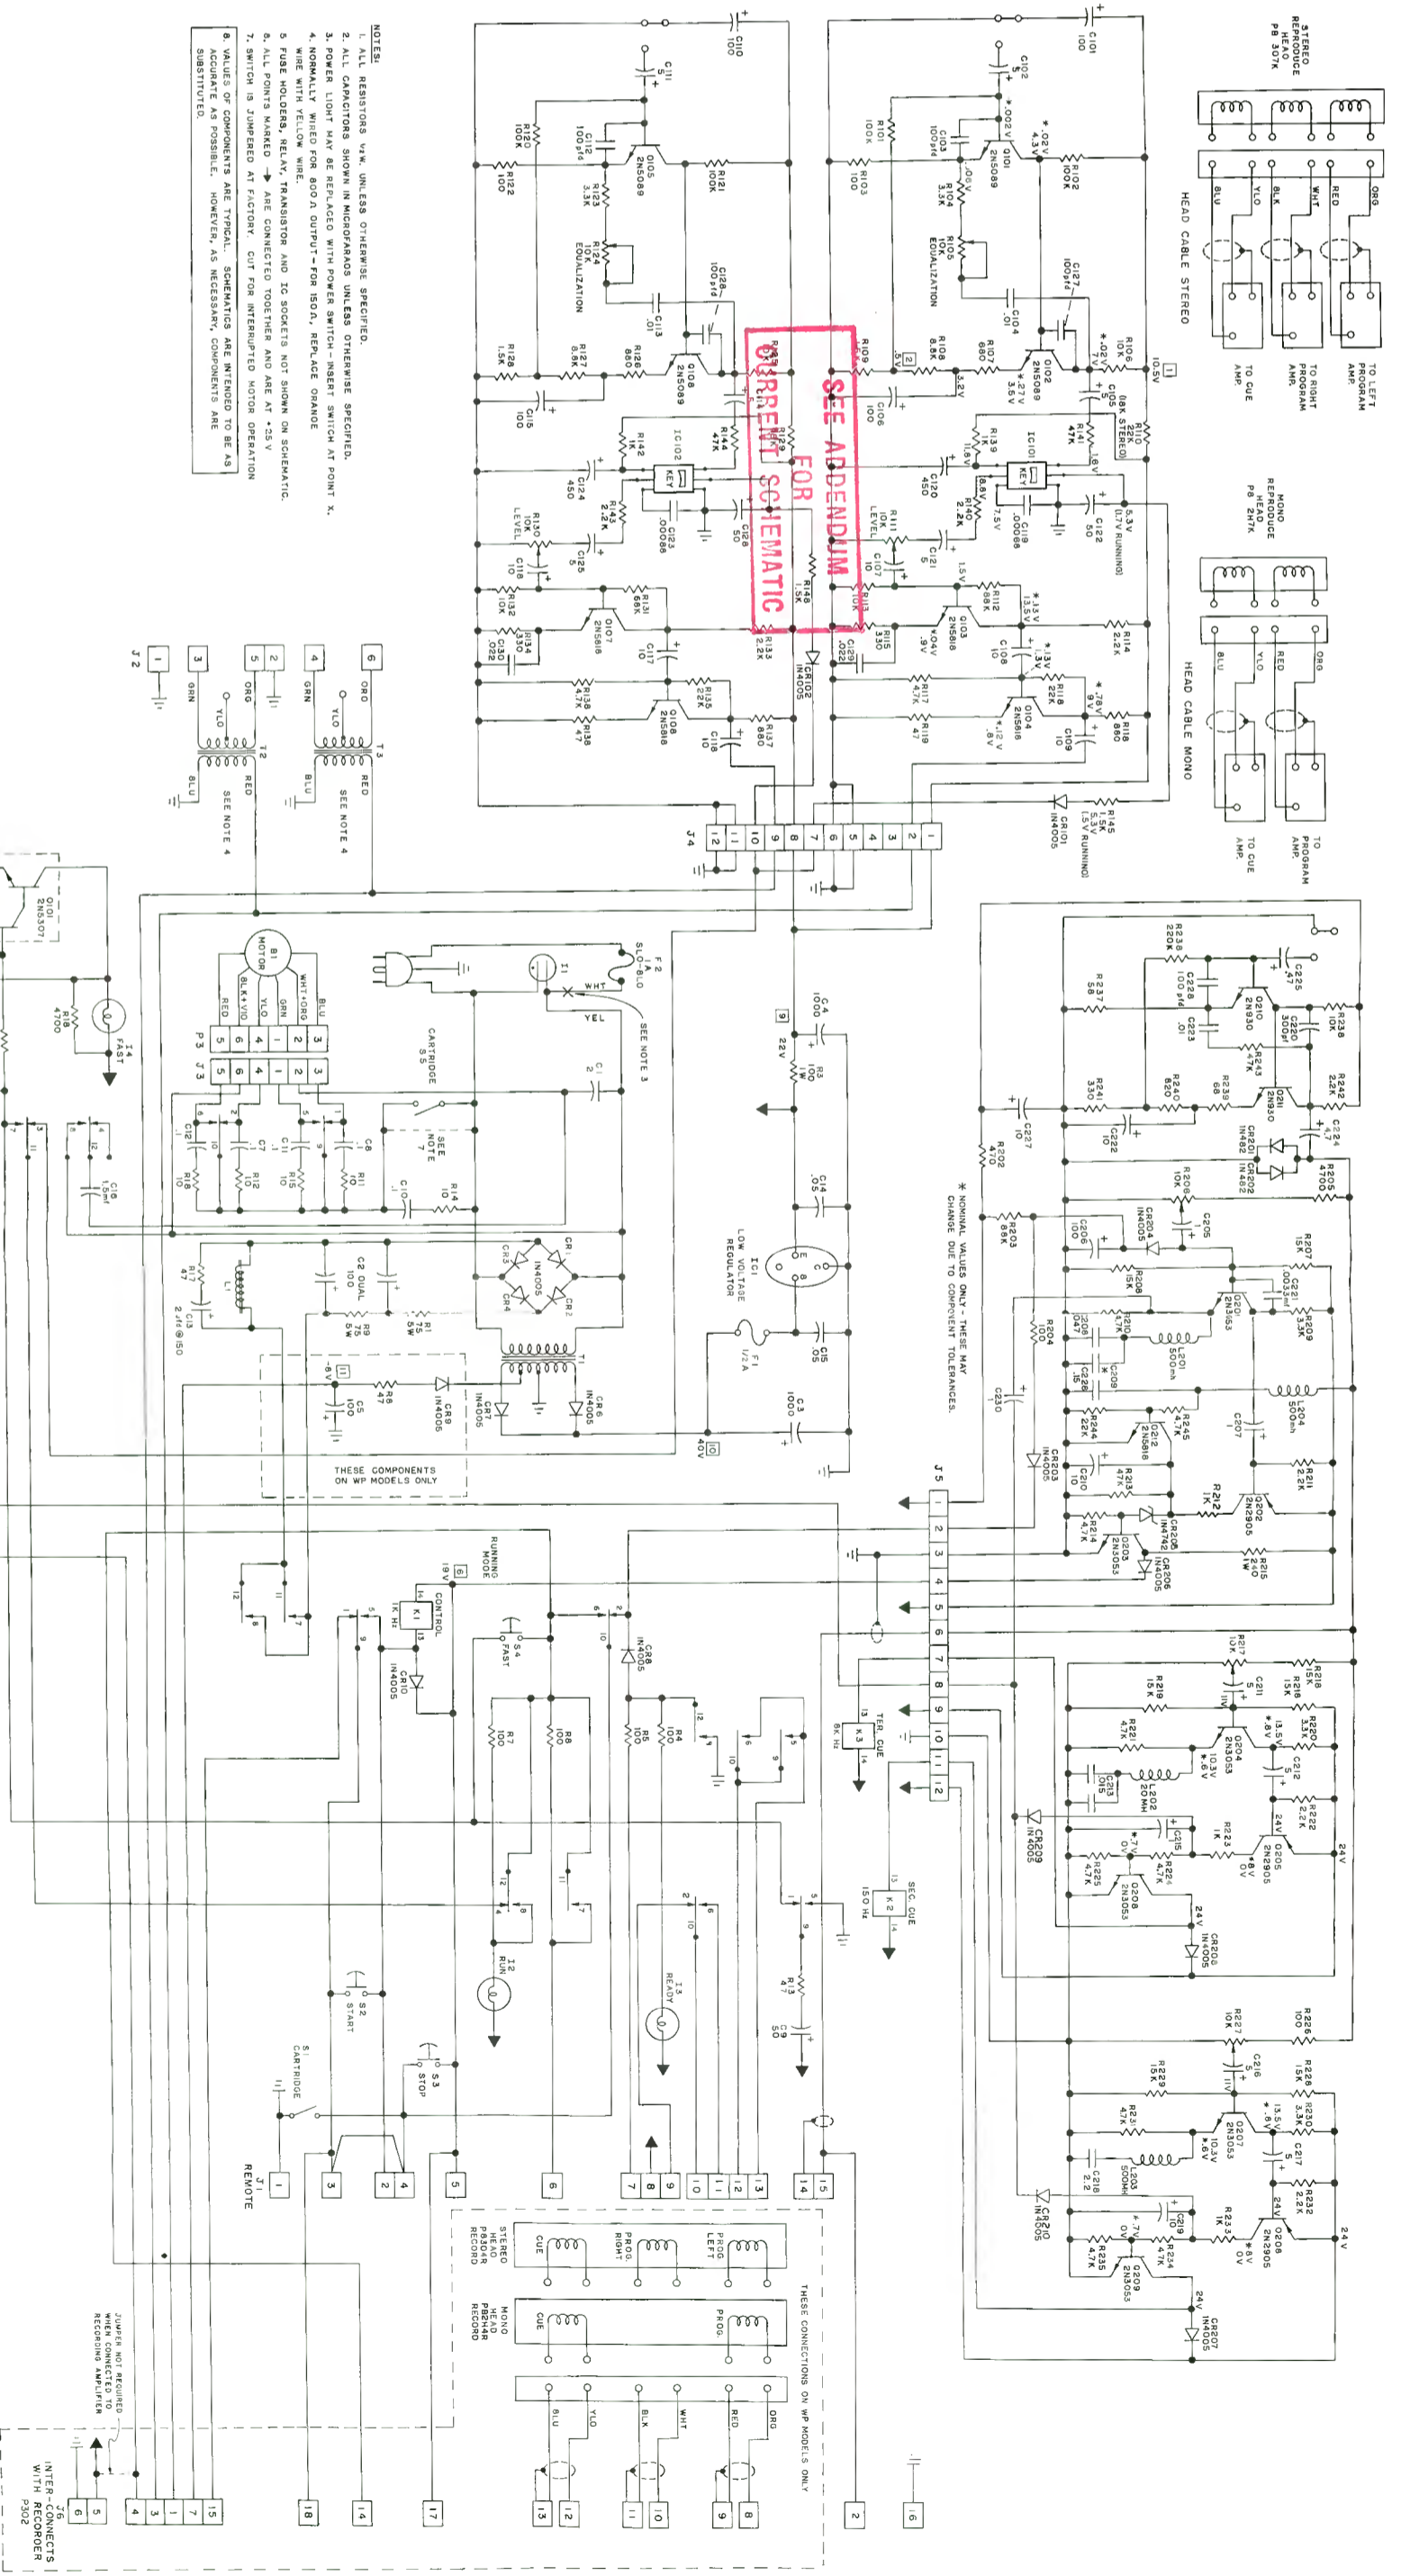

- NOTES:
1. ALL RESISTORS V.V. UNLESS OTHERWISE SPECIFIED.
  2. ALL CAPACITORS SHOWN IN MICROGRAMS UNLESS OTHERWISE SPECIFIED.
  3. POWER LIGHT MAY BE REPLACED WITH POWER SWITCH-RESET SWITCH AT POINT X.
  4. NOMINALLY 100 OHM RESISTOR FOR 800 HZ OUTPUT- FOR 800 HZ, REPLACE CHANGE.
  5. FUSE HOLDERS, RELAY, TRANSISTOR AND IC SOCKETS NOT SHOWN ON SCHEMATIC.
  6. ALL POINTS MARKED WITH AN ARROW ARE CONNECTED TOGETHER AND ARE AT +25V.
  7. SWITCH IS JUMPERED AT FACTORY. CUT FOR INTERRUPTED MOTOR OPERATION.
  8. VALUES OF COMPONENTS ARE TYPICAL. SCHEMATICS ARE INTENDED TO BE AS ACCURATE AS POSSIBLE. HOWEVER, AS NECESSARY, COMPONENTS ARE SUBSTITUTED.

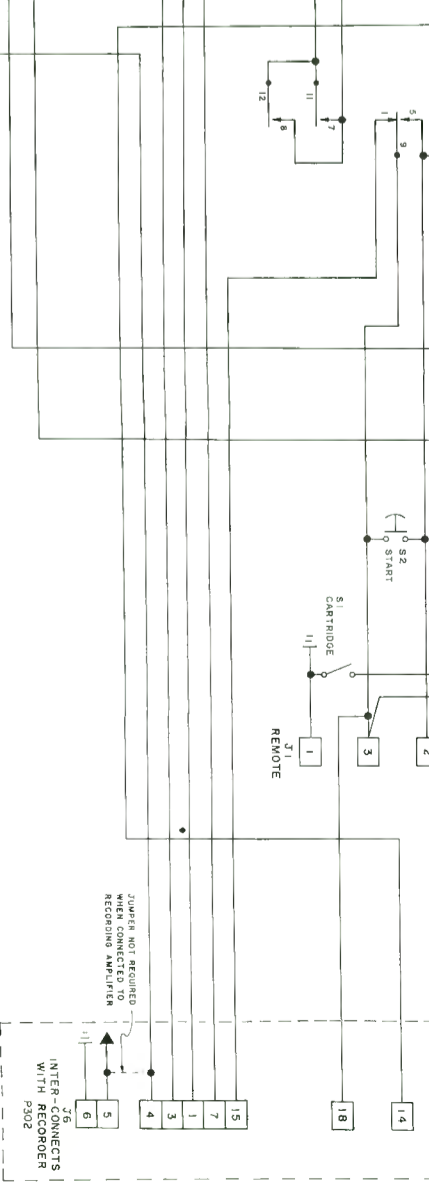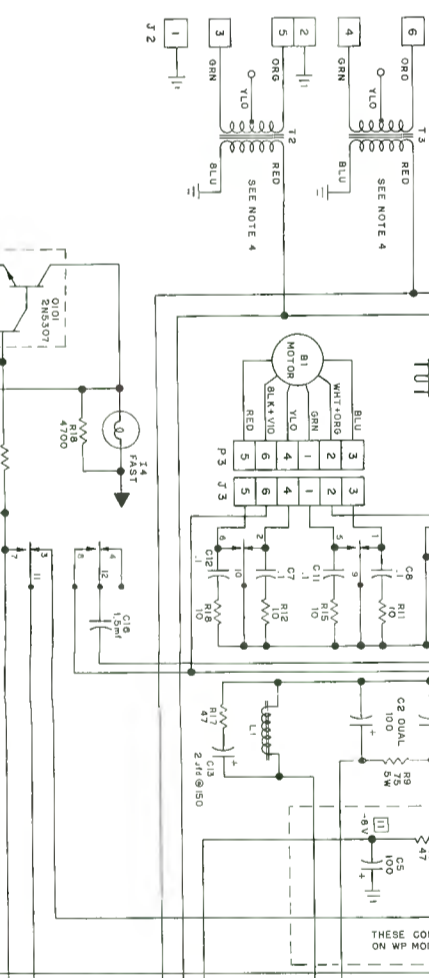


THESE CONNECTIONS ON WP MODEL'S ONLY

TITLE  
SCHEMATIC, SP & WP SERIES  
HIGH SPEED CUE  
INTERNATIONAL  
TAPETRONICS  
CORPORATION  
893-0060-005 A  
DRAWING NUMBER REV

*Note: On Front Panel Switches:*

*Dark Wires Are Lamps*

*Single Wires Are Switched*

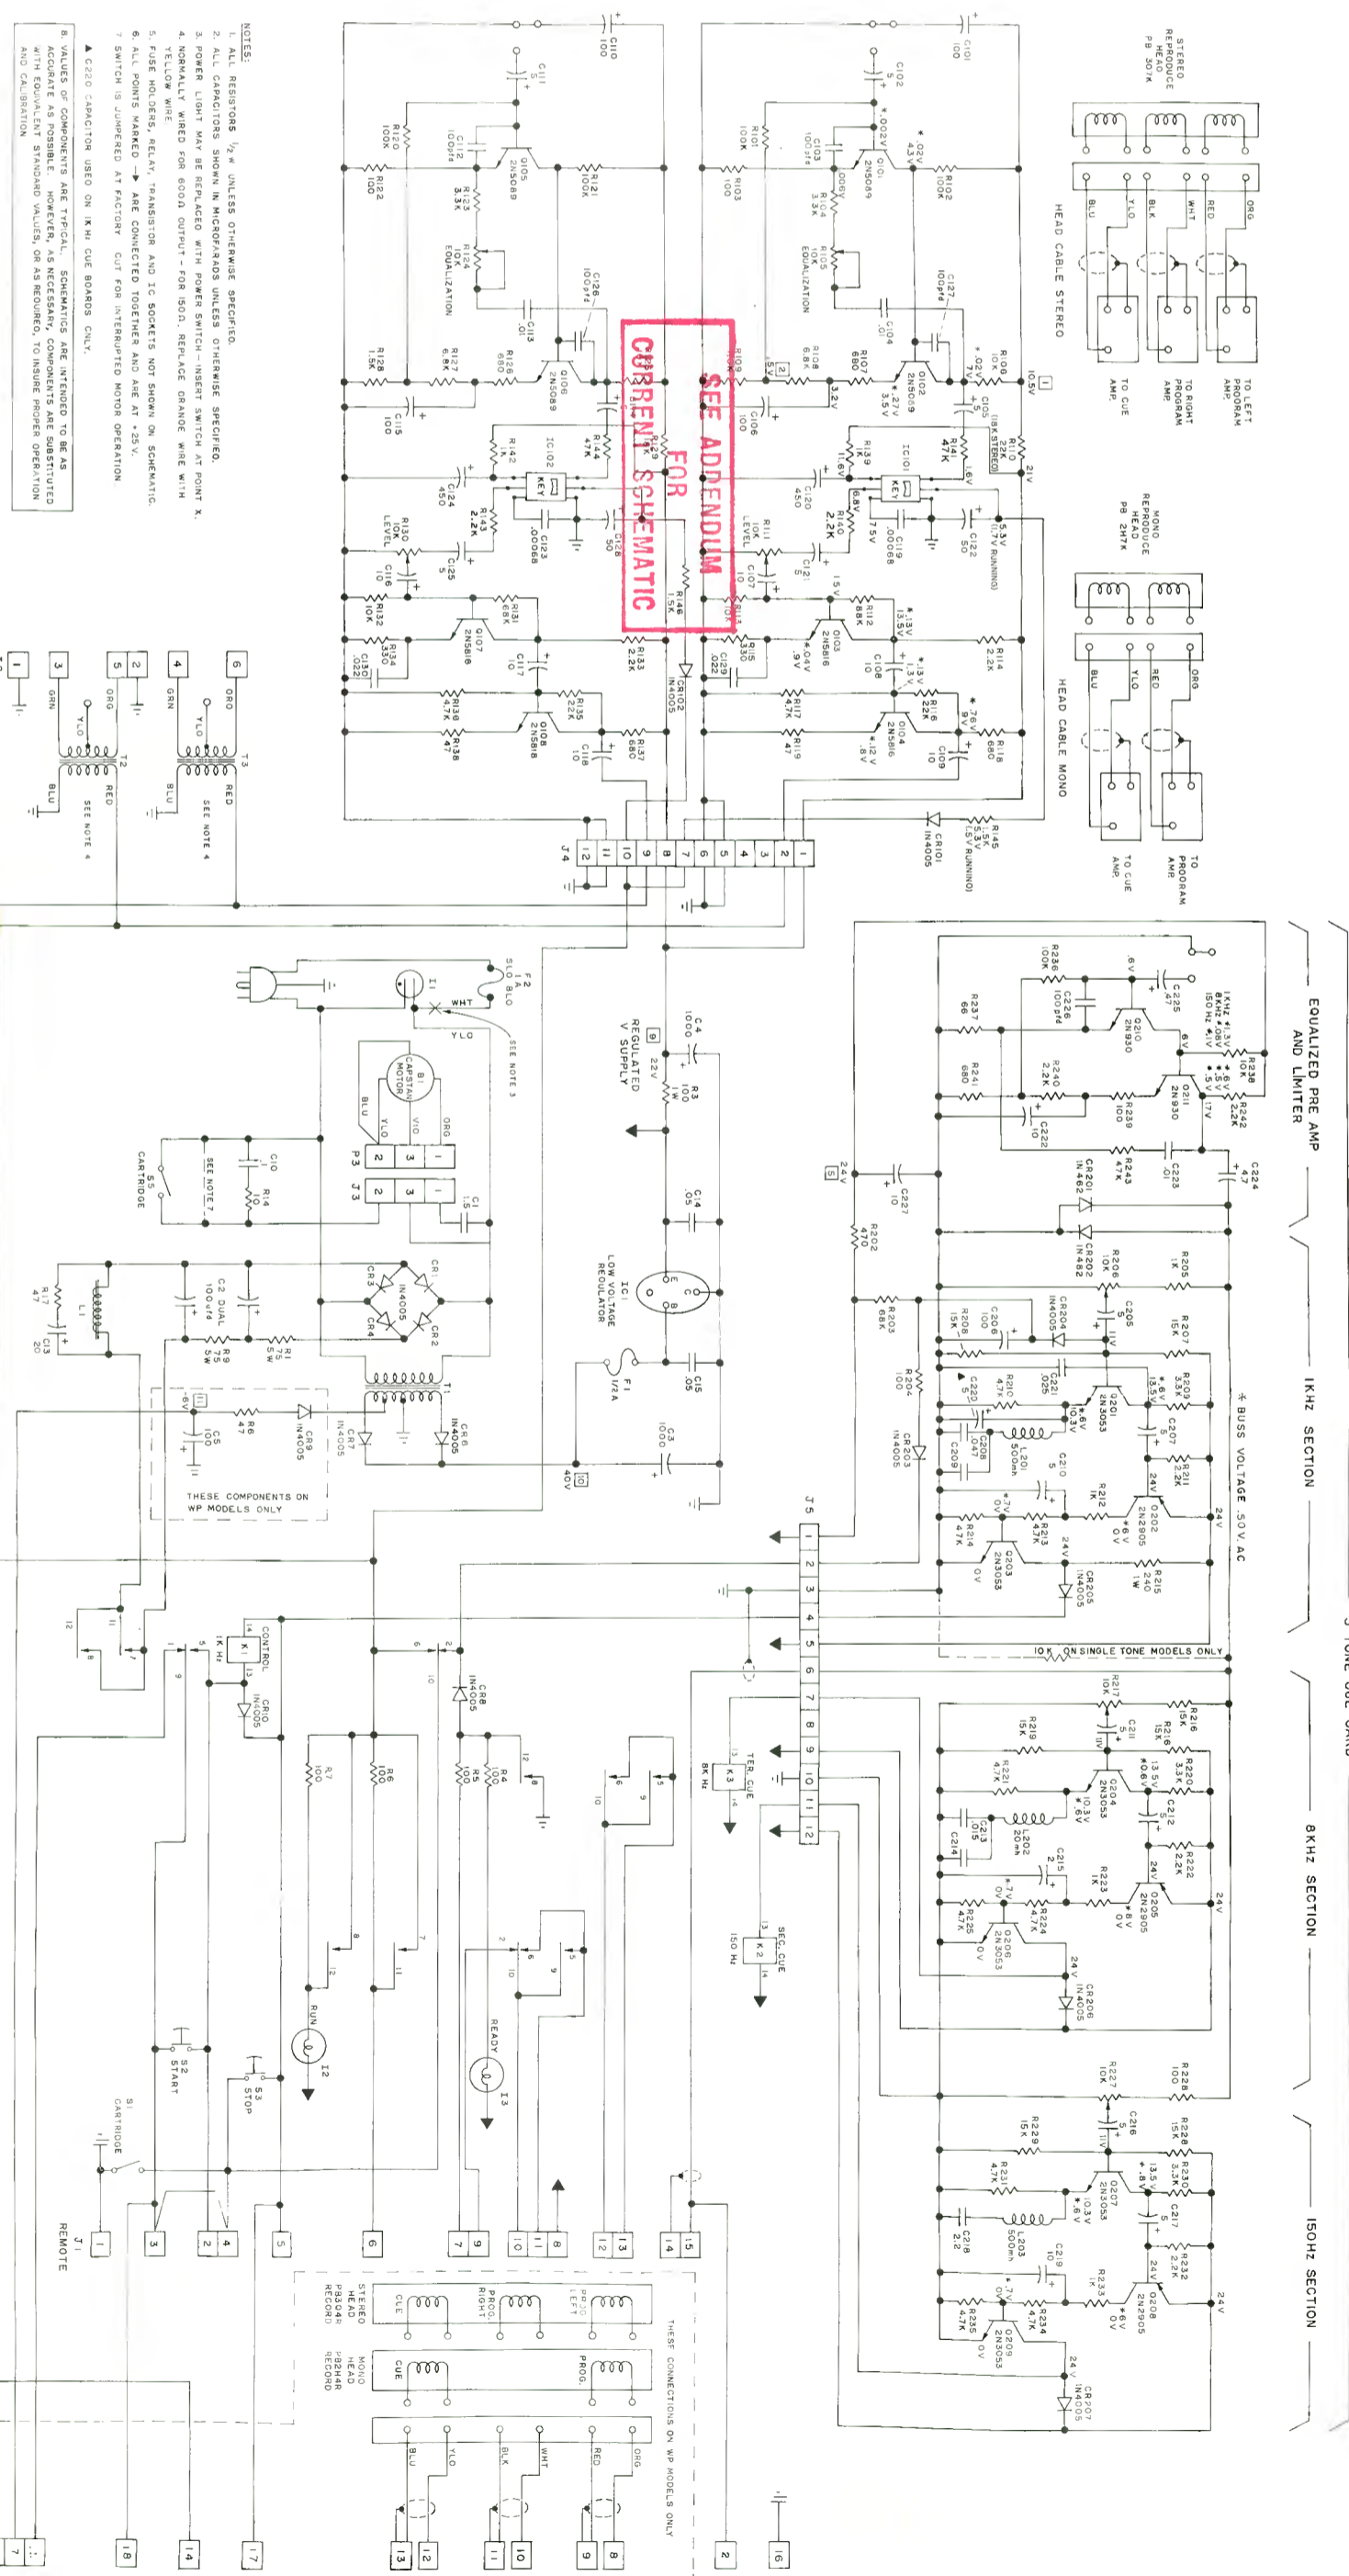

- NOTES:
1. ALL RESISTORS  $\frac{1}{2}$ " UNLESS OTHERWISE SPECIFIED.
  2. ALL CAPACITORS SHOWN IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
  3. POWER LIGHT MAY BE REPLACED WITH POWER SWITCH-INSERT SWITCH AT POINT X.
  4. NORMALLY WIRED FOR GOOD OUTPUT - FOR SON, REPLACE DIODE WIRE WITH 1N34A.
  5. FLYBACK WIRE, RELAY, TRANSFORMER AND IC SOCKETS NOT SHOWN ON SCHEMATIC.
  6. ALL POINTS MARKED  $\rightarrow$  ARE CONNECTED TOGETHER AND ARE AT +25V.
  7. SWITCH IS JUMPED AT FACTORY CUT FOR INTERRUPTED MODE OPERATION.

▲ C220 CAPACITOR USED ON 150 HZ CUE BOARD ONLY.

▲ VALUES OF COMPONENTS ARE TYPICAL. SCHEMATICS ARE INTENDED TO BE AS ACCURATE AS POSSIBLE. HOWEVER, AS NECESSARY, COMPONENTS ARE SUBSTITUTED WITH EQUIVALENT STANDARD VALUES, OR AS REQUIRED, TO INSURE PROPER OPERATION AND CONSTRUCTION.



TITLE  
SCHEMATIC, SP 8 WP SERIES  
INTERNATIONAL  
TAPETRONICS  
CORPORATION  
DRAWING NUMBER REV

INTER-CONNECTS  
W/ M. H. P. 302

KBBg

TECHNICAL MANUAL

(890-0004-000)

3D (THREE DECK) SERIES REPRODUCERS:

MONO, SINGLE TONE 827-0001-000

STEREO, SINGLE TONE 827-0002-000

MONO, TRIPLE TONE 827-0003-000

STEREO, TRIPLE TONE 827-0004-000

# ADDENDUM

## ADDENDUM FOR SP, WP, RP, RPD, & 3D

Several changes have been incorporated in ITC cartridge machines to provide enhanced performance and more reliable operation.

### OUTLINE OF IMPROVEMENTS

#### Reproduce Head

A new reproduce head, designed by ITC provides a flatter frequency response, especially in the lower frequencies. Playback frequency response is specified flat  $\pm 2$  dB from 50 to 15 kHz, but typically is much better than this. The new head, due to its unique construction can last up to 10 times longer than conventional lamination heads. The record head remains a Nortronics Duracore with extended life expectancy.

Ordering information for the new head is as follows:

ITC Part Number	Description
504-0033-000	Head, 2 Track Mono, Reproduce
504-0034-000	Head, 3 Track Stereo, Reproduce

#### Head Mounting Assembly

The head mounting assembly is removable as a unit, maintaining proper alignment. Each adjustment is independent of the other adjustments, and each is lockable. The new head module incorporates a longer azimuth pivot for much finer adjustment. Figure (1) shows an exploded view of the head mounting assembly.



INTERNATIONAL TAPETRONICS CORPORATION  
2425 SOUTH MAIN STREET • BLOOMINGTON, ILLINOIS 61701

TELEPHONE: 309-828-1381

DAVE NEAL



## Pressure Roller

ITC is now using a pressure roller made from 525K, an advanced rubber compound which exhibits twice the pulling power of ordinary rubber and is not affected by temperature, humidity and all commonly used cleaning substances. The pressure roller also offers five times the life of conventional rollers and increased hardness stability (durometer.) This pressure roller is presently being used in all ITC cartridge machines, and is being shipped as a standard replacement part.

## Cartridge Hold-Down System

The final area of improvement to your ITC unit is a new cartridge hold-down system which provides very precise and repeatable cartridge insertion. This is accomplished by exerting downward pressure on the load-bearing side rails of the cartridge and by applying pressure on the left side of the cartridge to consistently seat it against the right cartridge guide.

## MECHANICAL AND ELECTRICAL ADJUSTMENTS

Some of the following procedures require the use of a tape height gauge. This gauge can be obtained from ITC (part number 830-0022-011). See figure 4 for an illustration of this gauge.

## Cartridge Hold-Down System

Optimum performance from tape cartridges can only occur if the cartridge is positioned accurately and consistently in precisely the same location each time it is inserted into the machine. A means of alignment can be achieved by using a specifically marked cartridge as illustrated in Figure 2. Use a point or scribe and mark the cartridge as shown.

Refer now to Figure 3 in which a cartridge is shown in its properly aligned position. If the alignment cartridge does not position as illustrated, remove the left hand cartridge guide completely and loosen (do not remove) the mounting screws on the right hand cartridge guide. Position the cartridge to the right or left until the scribed lines are located directly over the heads as shown. Be certain that the front edge of the cartridge seats firmly and squarely against the tape guide screws. With the cartridge held securely in this location, position the right hand cartridge guide firmly against the right hand side of the cartridge and then tighten down both cartridge guide mounting screws.

Remove the cartridge and re-insert into the machine forcing it to slide squarely against the right hand guide. Check the alignment again, if it is not exactly positioned, repeat the alignment procedure. It is very important that this alignment is being made as perfectly as possible and that it be consistent in all other cartridge machines. Failure to achieve consistent alignment from machine to machine will create inconsistent tape travel path and thus phase error on stereo machines and azimuth errors on mono.

Mount the left hand cartridge guide as illustrated in Figure 3. A gap of approximately 1/16 inch (1.5 mm) between the edge of the cartridge and the guide is recommended. This will insure correct "seating" of the cartridge each time it is inserted into the machine (an important key to consistent tape travel and alignment).

### Tape Guides

Three independent tape guides are used to provide maximum tape guidance outside of the cartridge. The left tape guide has been specially formed to provide clearance for the cartridge corner post area.

1. Check the positioning of each tape guide by advancing the tape height gauge into the tape guide as shown in Figure 4. The gauge should advance fully into the tape guide without friction, while resting flat on the deck - not tilted as shown by the dashed line (or its opposite) in Figure 4. The tape height gauge must be demagnetized so that it will not affect the heads.
2. If adjustment is required, loosen the two mounting screws.
3. Keeping the tape height gauge flat on the deck, position the tape guide as shown in Figure 4.
  - a. Position the tape guides as close to the head as possible without contacting the head mounting blocks or any parts mounted on these blocks.
  - b. Keep the tape guides vertical. Normally the bottom edge of the tape guide's mounting surface will rest very near the surface of the deck plate.
4. Tighten the tape guide mounting screws and recheck the adjustment.
5. Check and adjust the other tape guides as required. The slot in the tape guide is .249 inch wide (actual tape width is .246, + .002 - .000 inch). The width of this slot can also be properly gauged with the tape height gauge. The arm on the gauge should advance fully into the slot without friction, but there should be no room for noticeable movement of the tool in the slot.

Correctly made adjustments obtained with the tape height gauge will be accurate to less than .001 of an inch.

### Head Height and Zenith

The magnetic tape head nearest the capstan shaft is the reproduce head. The head farthest from the capstan is the record head, except on reproduce only machines. A dummy head is mounted in this position on reproduce only machines in order to maintain constant tension on the tape and thus minimize wow and flutter and improve tape guidance.

The adjustment procedure outlined below should be followed in positioning both the reproduce and record heads. Only height and zenith adjustments are required for a "dummy" head. See Figure 5 for the location of the adjustment screws.

1. Loosen the head adjusting screw lock nut by turning counterclockwise approximately four complete turns.
2. Coarse Height: Adjust the Front Height Set Screw until the top of the upper head track (pole Piece) is 9/16 of an inch above the deck surface.
3. Coarse Zenith: Adjust the Rear Height Set Screw until the face of the head is perpendicular with the surface of the deck. Position the Tape Height Gauge (or any gauge known to be square) on the deck surface and move it against the face of the head as shown in Figure 6. The gauge must be demagnetized before making adjustments. Be careful to avoid scratching the face of the head. When the head is perpendicular, the face of the head and the "square" will be flush.
4. Fine Height and Zenith: This adjustment is made using the tape height gauge.
  - a. Position the gauge in front of the face of the heads as the tape would be positioned if it were being played (Figure 4).
  - b. Alternately adjust the Rear and Front Height Set screws to position the top of the upper head track (pole piece) so that it is even with the upper edge of the gauge, and to position the bottom of the lower head track (pole piece) so that it is even with the lower edge of the gauge. The set screws should be adjusted by equal amounts in the same direction.
  - c. Recheck the zenith of the head instructed in step 3. If adjustment is necessary, height must also be rechecked and adjusted until both height and zenith are perfect.
  - d. Carefully tighten the Front and Rear Height Lock Nuts. Recheck the height and zenith adjustments. If a change has resulted, repeat the Fine Height and Zenith adjustments.

## Mono Azimuth Adjustments

Before attempting these adjustments, insure that the mechanical adjustments of the tape guides and the adjustment of height and zenith of both the Record and Reproduce heads (or Reproduce and "dummy" in Reproduce only machines) are correct.

### 1. Reproduce Head Azimuth Adjustment:

- a. Connect a 600 ohm load to the reproduce amplifier output terminals. Connect a high impedance voltmeter across this load.
- b. Insert a 15 kHz Standard Azimuth Alignment Tape and start the machine.
- c. Adjust the reproduce head azimuth set screw (refer to Figure 5 for location) to produce maximum output level.
- d. Carefully tighten the lock nut observing the voltmeter to insure that no change in output level occurs.

### 2. Record Head Azimuth Adjustment: It is reminded that changes in azimuth to the Master Record head can result in azimuth errors in all the Reproduce machines within a system unless the resultant azimuth is carefully checked against each of these Reproducers. Any change in azimuth of the record head should be attempted ONLY AFTER all mechanical adjustments are carefully checked and the Master Reproduce head is aligned to the 15 kHz Standard Azimuth Alignment Tape as above.

- a. Select an erased 3 1/2 minute cartridge which is known to have consistently good operating characteristics. It is suggested that this cartridge be set aside and used only for recording head adjustments. It thus will become the standard for your operation.
- b. Connect a 600 ohm load to the Reproducer output terminals. Connect a high impedance voltmeter across this load.
- c. Connect an audio oscillator to the recorder input and set it for -10 dBm at 15 kHz.
- d. Start the recorder and adjust the azimuth set screw on the record head to produce maximum output level (See Figure 5).
- e. Carefully tighten the lock nut observing the voltmeter to insure that no change in output level occurs.

## Stereo Azimuth Adjustment

Two track stereo recording-reproducing performance is subject to several contributing mechanical inaccuracies which can cause phase shift in simultaneously monitored reproducer outputs. In stereo systems these phase shifts are generally not perceptible in the final reproduction; however, in cases where monophonic "dubbing" or channel summing is desired, phase shifts can result in serious amplitude variations or drop-outs especially at the higher frequencies. Most common causes of these problems are:

1. Lateral displacement of the pole pieces with respect to each other within the head case.
2. Improper azimuth of the heads with respect to each other (record head to reproduce head on any reproducer in a system).
3. Improper tape guidance (skew) either within the cartridge or through the tape guide system.

International Tapetronics has attempted to provide the best features possible to assist in the proper guidance of tape outside of the cartridge. Three adjustable tape guides, heavy-duty micro-adjustable patented head module, and the use of "dummy" heads in Reproduce only machines, lend to consistent guidance of the tape through the head assembly.

The following tests and adjustments do not preclude the many possible techniques for measuring phase shift, but provide the basis for satisfactory results using a minimum of equipment and skill.

### 1. Master Reproduce Head Azimuth:

- a. Connect 600 ohm loads to both left and right channel outputs. Connect a high impedance voltmeter to the left channel output. Insert a FULL TRACK 1 kHz reference "0" level tape and start the machine. Set the left output gain control for 0 dBm output. Now connect the voltmeter to the right channel output and adjust the right output gain control for 0 dBm output.
- b. Insert a 15 kHz FULL TRACK azimuth alignment tape and carefully adjust the reproduce head azimuth screw for a maximum reading on the voltmeter. Observe the mechanical position of the azimuth screw.
- c. Move the voltmeter to the left channel output. Now move the azimuth screw a small amount in either direction and observe the voltmeter reading as an increasing or decreasing output. Continue moving the screw in the direction that produces increasing output until a maximum reading is obtained.

- d. Observe direction and amount that the screw was turned to obtain maximum reading on the left output with respect to the previous setting for maximum on the other channel. Set the azimuth screw to the midpoint between these settings to obtain AVERAGE azimuth for the two channels.
- e. Connect the horizontal input of a scope so equipped to the right channel output. Insert a FULL TRACK FREQUENCY ALIGNMENT TAPE and start the machine. Adjust the horizontal gain, if provided on the scope to a suitable amplitude. Remove the horizontal input.
- f. Connect the vertical input to the same right channel output and adjust the vertical gain to provide a deflection equal to that of the horizontal above.
- g. Now connect the horizontal input to the left channel output. Run the tape to the 1 kHz section. A pattern such as Figure 7 should now appear. If not, reverse the two leads of the horizontal input. This pattern represents the "0" or near "0" phase shift pattern of the system.
- h. Allow the tape to run to the 4 kHz section and observe if phase shift has occurred. (Refer to Figures 8 through 10.) If phase shift has occurred, adjust the play head azimuth screw to correct this phase shift in the exact reverse rotation to which it has occurred. (This means that if the pattern was increasing clockwise from 0 shift as frequency increased, the azimuth screw should be turned in such a way to cause the scope display to rotate CCW back to the "0" position.)
- i. Now allow the tape to continue through the various frequencies observing the scope display to insure that no 180° reversals occur. At 15 kHz final adjustment of the azimuth screw can be made to provide best average phase shift. It is normal for shift "jitters" of several degrees to occur at the highest frequencies, so setting should be based on best results. It is desirable to run the tape several times, observing that phase reversals do not occur at any frequency. Tighten the azimuth lock nut while observing that no phase changes occur.

## 2. Master Record Head Azimuth:

NOTE: Performance of this procedure assumes that the reproduce alignment procedure has been performed, and that all test equipment is still connected to the unit under test.

- a. Select a 3 1/2 minute cartridge that is known to have consistently good operating characteristics.
- b. Connect an audio oscillator to the recorder input and set it for 1 kHz at -10 dBm.
- c. Start the recorder and adjust the recording head azimuth screw for maximum amplitude of the display on the scope. (The scope gains may be adjusted in equal amounts to increase amplitude of the display if necessary.)

- d. Sweep the oscillator from 1 kHz up to 15 kHz. If a phase shift begins to occur, adjust the azimuth screw to retain the "0" phase shift pattern. When 15 kHz is reached and the azimuth is set, tighten the lock nut while observing that the phase does not change.
3. Other Reproduce Head Azimuth: It is important to realize that all reproducers within a system must be azimuth - aligned to the master recorder. To implement this, it is necessary to prepare a test cartridge recorded on the master recorder each time any adjustment to this recorder is performed. This cartridge is in turn used to align EACH reproducer in the system.

### Head Replacement


ITC equipment utilizes no-mount type heads to provide quick and easy installation.

1. Loosen the two screws in the head mounting strap. Remove the old head and insert a new one.  
NOTE: The color of the head lead arrangement
3. Align the rear edge of the head case so that it seats squarely against the back of the "step" cast into the head mounting block. See Figure 11.
4. Tighten the screws in the head mounting strap.
5. Reconnect the head cables.

CAUTION: Use care when reconnecting the head cables as the head pins can be broken off if excessive side pressure is exerted against them.

6. Follow the procedures outlined in this SECTION regarding height, zenith and azimuth/phase alignment.

Figure 1

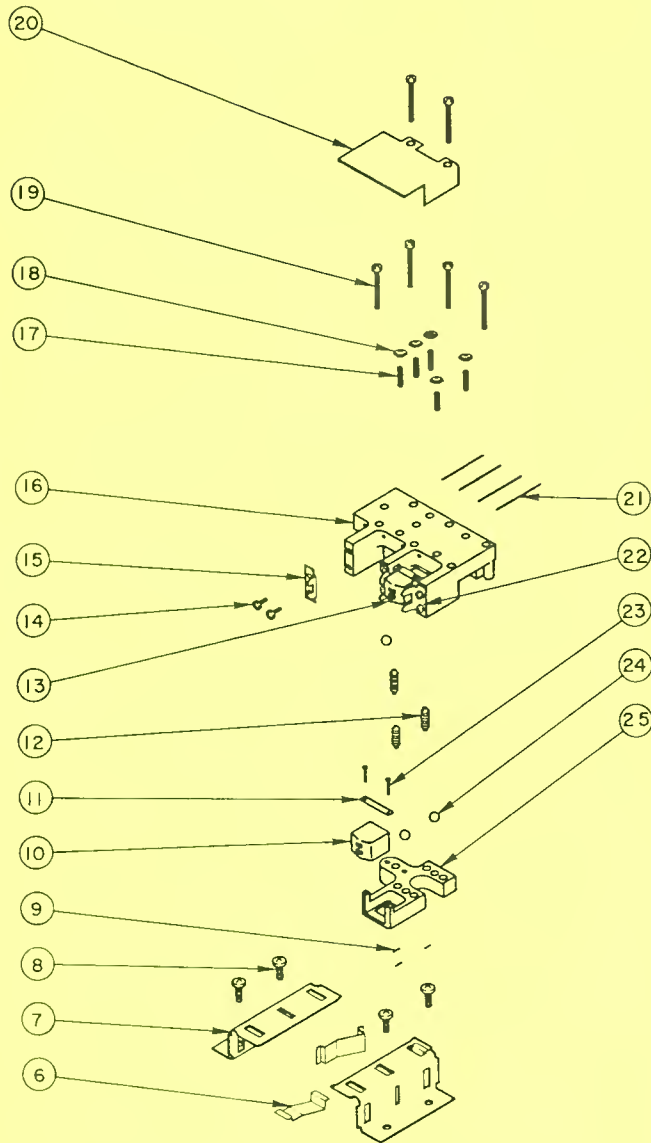

- |    |              |                                      |
|----|--------------|--------------------------------------|
| 6  | 301-0045-001 | Spring, Cartridge Retaining          |
| 7  | 272-0020-002 | Guide, Cartridge                     |
| 8  | 350-0604-000 | Screw, Phillips Panhead 6-32 x 1/4   |
| 9  | 282-0001-001 | Pin, Roll 1/16 x 5/16                |
| 10 | 504-0036-000 | Head, Recording - Mono               |
|    | 504-0037-000 | Head, Recording - Stereo             |
| 11 | 303-0001-001 | Strap, Head Mounting                 |
| 12 | 301-0036-000 | Spring, Extension 7/16 x 3/16 O.D.   |
| 13 | 504-0033-000 | Head, Reproduce - Mono               |
|    | 504-0034-000 | Head Reproduce - Stereo              |
| 14 | 350-0403-000 | Screw, Phillips Panhead 4-40 x 3/16  |
| 15 | 272-0003-001 | Guide, Tape L.H.                     |
| 16 | 253-0057-003 | Block, Head Assembly                 |
| 17 | 355-0608-000 | Screw, Socket Set 6-32 x 3/8         |
| 18 | 370-0602-000 | Nut, Hex 6-32 x 1/4                  |
| 19 | 350-0616-000 | Screw, Phillips Panhead 6-32 x 1-1/8 |
| 20 | 297-0010-001 | Shield, Head Upper                   |
| 21 | 282-0034-001 | Pin, Head Assembly 1.312 x .093      |
| 22 | 272-0002-002 | Guide, Tape R.H. and Center          |
| 23 | 350-0308-000 | Screw, Phillips 3-48 x 5/8           |
| 24 | 322-0002-000 | Ball, Steel 5/16 Diameter            |
| 25 | 253-0056-002 | Block, Head Mounting                 |

Figure 2

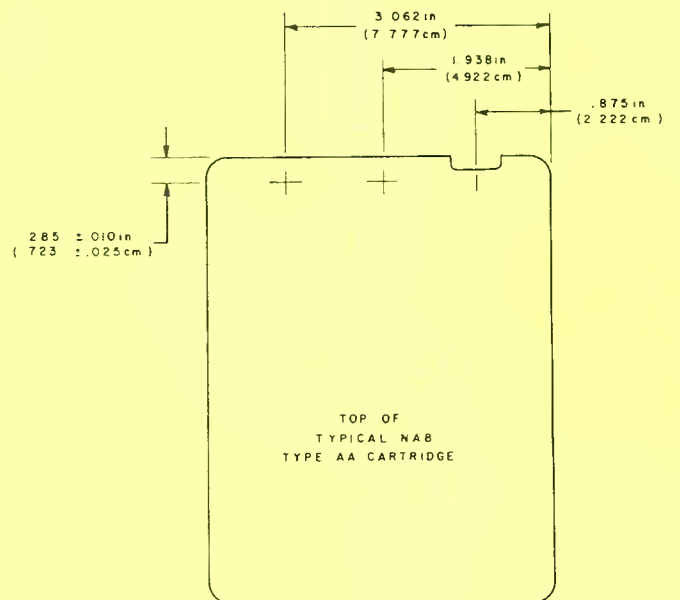




Figure 3

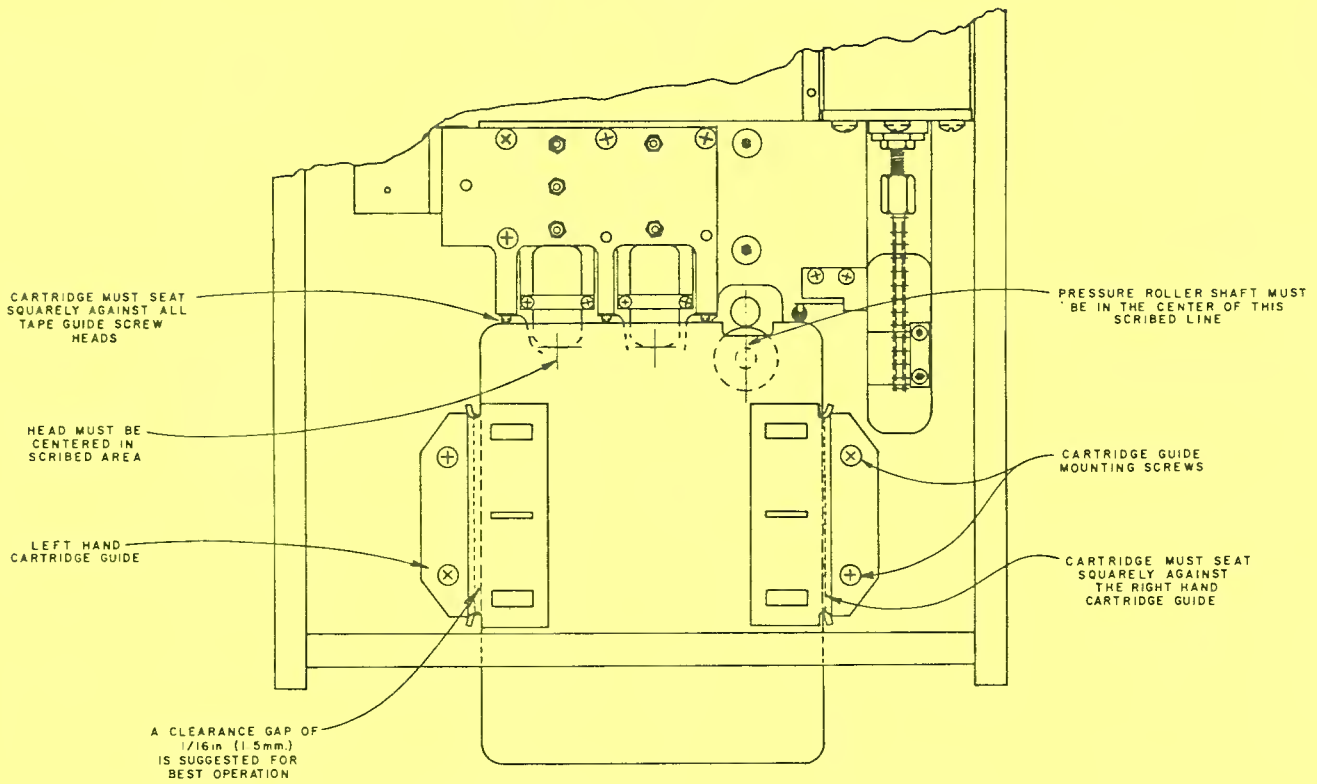


Figure 4

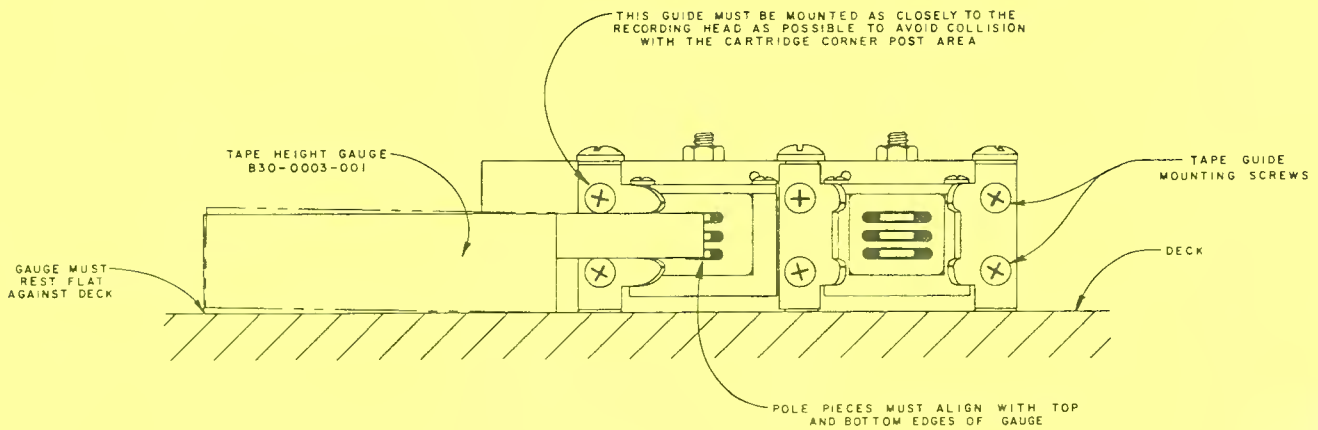


Figure 5

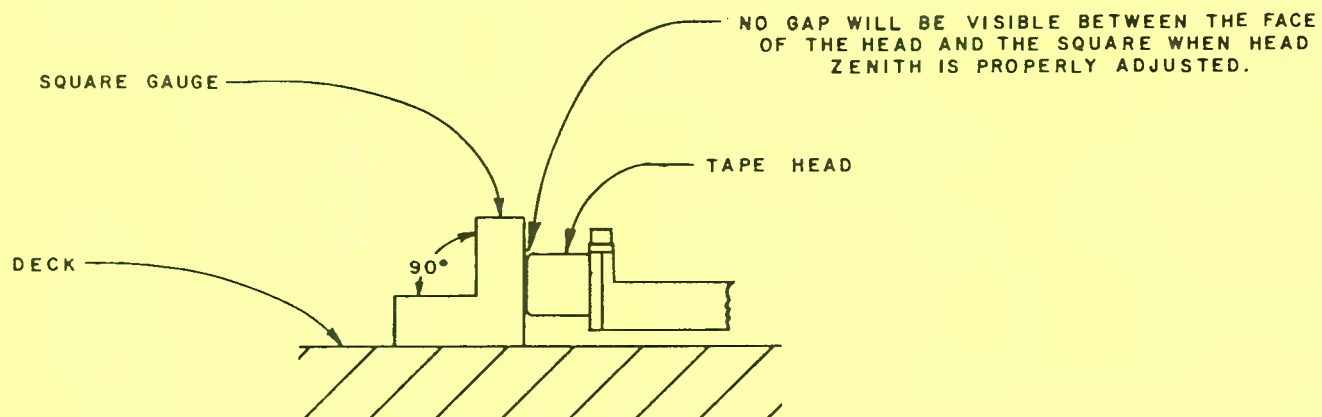
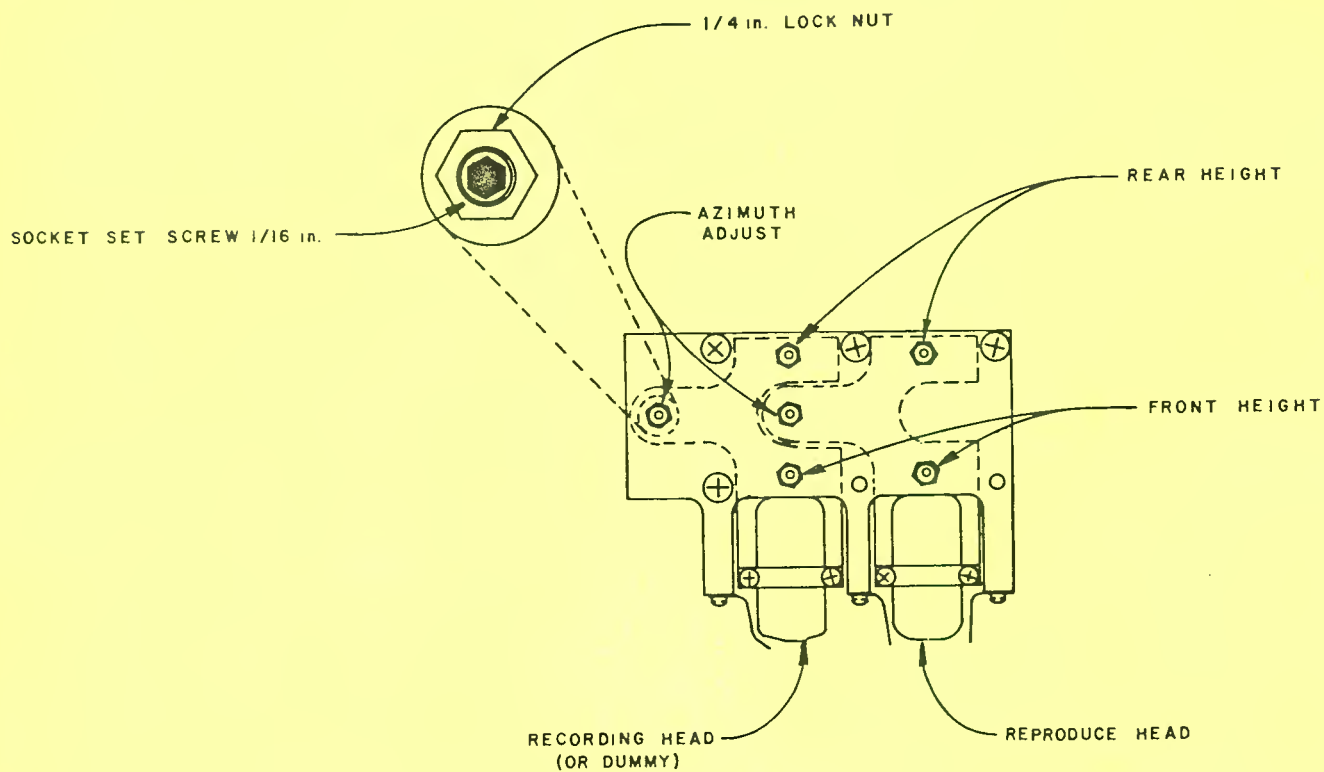


Figure 6

0° PHASE SHIFT

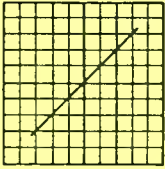


Figure 7

45° PHASE SHIFT

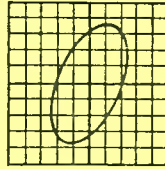


Figure 8

90° or 270° PHASE SHIFT

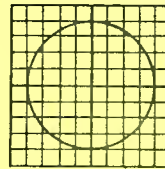


Figure 9

180° PHASE SHIFT

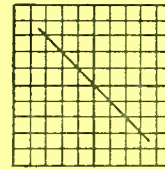


Figure 10

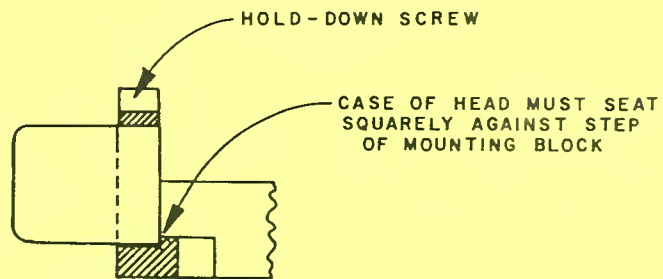


Figure 11

# TECHNICAL SERVICE INFORMATION

TO: CHIEF ENGINEER

SUBJECT: ITC CARTRIDGE MACHINE GAUGES

REASON: GAUGE UPDATE

ITC has made numerous changes recently regarding gauge usage on it's many models of tape machines. Because of improvements in pressure roller design, we find it advantageous to clarify the use of the appropriate gauges when performing preventative maintenance on your ITC gear.

Due to a change in pressure roller composition in ITC cartridge machines, a minor change has been made in the mechanical adjustments necessary to provide optimum performance regarding the Wow and Flutter specifications. All ITC cartridge machines manufactured after (February 1, 1979) utilize the new pressure roller compound "525-K". This compound is greatly improved over the older rubber rollers you are familiar with in that it is much less hygroscopic - that is, it is not affected by changes in temperature and humidity, which caused the old style rubber rollers to change in size and durometer (compression factor) with changes in weather. It is also immune to most cleaning agents. The result is much more consistent performance, relating to tape skew and phase performance. Mechanically, the new "525-K" rollers will fit your existing ITC cartridge tape equipment. They look exactly like the older rubber rollers, but upon close examination, you will find the new "525-K" rollers to be slightly larger in the overall outside diameter than the old rubber rollers. Because of this, ITC has made minute changes in the setup gauges used in the mechanical adjustment of ITC cartridge tape gear. The procedure used in adjustment of your equipment remains the same as in your technical manuals. The only change is the gauge itself, which is available from ITC. Please refer to the gauge chart at the rear of this bulletin to determine your specific need.

**INTERNATIONAL TAPETRONICS CORPORATION /3M**

2425 South Main Street, P.O. Box 241  
Bloomington, Illinois 61701  
309/828-1381 • TWX 510-352-2500

022780/DM

ITC is presently shipping cartridge machine pressure rollers made with the new "525-K" compound to customers who purchase pressure rollers as replacement parts. When changing from the old rubber pressure rollers to the new "525-K" compound pressure rollers, mechanical adjustments should be made to your cartridge tape machines to maintain optimum performance. We suggest you develop a method of segregating your "old" supply of pressure rollers from any "new" rollers you may have as spare parts in order to keep the two different pressure roller "compounds" apart when replacement time comes. The "old" rollers are .01" smaller in outside diameter than the 525-K compound pressure rollers.

Gauge number 830-0029 has replaced 830-0006. This is the pressure roller pressure gauge used in ITC Series SP, WP, RP, RPD, 3D, and PD-II cartridge tape machines. The distinguishing difference between the gauges is physical shape: the new gauge has a single step at the end, where the old gauge had two steps. Refer to the pictorial gauge chart at the end of this bulletin for distinguishing differences. Use gauge number 830-0029 when making mechanical adjustments where the new "525-K" compound pressure rollers are in use. Gauge number 830-0006 should be used only when making mechanical adjustments where the old "rubber" pressure roller is in use.

Gauge number 830-0028 has replaced gauge number 830-0007 as the capstan shaft locator gauge. This gauge is used in SP, RPD, WP, RP, 3D, and PD-II cartridge tape machines. The distinguishing difference between the two gauges can be discovered in a simple comparison of physical size. The 830-0028 gauge is approximately 1.6 cm tall, while the 830-0007 gauge is approximately 1.8 cm tall. The 830-0028 gauge is also slightly larger in diameter, and can be "felt" if the two gauges are held end to end. The actual difference in diameter can be measured with a micrometer. Use gauge number 830-0028 in place of gauge number 830-0007 when the new "525-K" compound pressure rollers are in use.

Gauge number 830-0022 replaces gauge number 830-0003. This gauge is for adjusting head height in the SP, WP, RP, 3D, PD-II and Series 99 cartridge tape machines. It is similar to the old number 830-0003 gauge, except that we have cut an extra "notch" at the rear of the gauge to facilitate its fitting into the more compactly designed tape decks such as the 3D. These two gauges may be used interchangeably where space is not a limiting factor. Please refer to Fig. 1 for physical differences.







Gauge number 830-0027 is new, and is used as the capstan shaft locator gauge on ITC Series 99 cartridge tape machines. Please refer to your Series 99 Technical Manual for instructions on its use.

The new ITC gauge numbers are listed below, in chart form. These new gauge numbers are for your convenience in ordering the appropriate gauges necessary for your particular needs. If you have any questions regarding gauge usage, or wish to order them, call ITC Technical Service at (309) 828-1381, or write to:

International Tapetronics Corporation  
 2425 S. Main Street  
 P.O. Box 241  
 Bloomington, Illinois 61701

CARTRIDGE MACHINE GAUGES - USER INFORMATION

Description and ITC Part Number	SP-WP-RP-RPD	3-D	PD-II	Series 99	Description and ITC Part Number
Capstan Shaft Locator 830-0027				X	Capstan Shaft Locator 830-0027
Capstan Shaft Locator 830-0028	X	X	X		Capstan Shaft Locator 830-0028
Pressure Roller Pressure 830-0029	X	X	X		Pressure Roller Pressure 830-0029
Head Height 830-0022	X	X	X	X	Head Height 830-0022

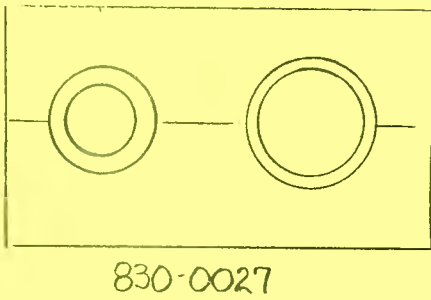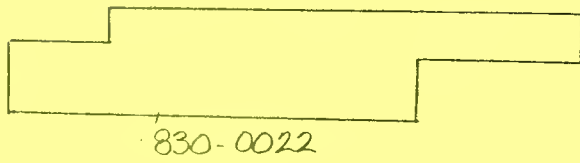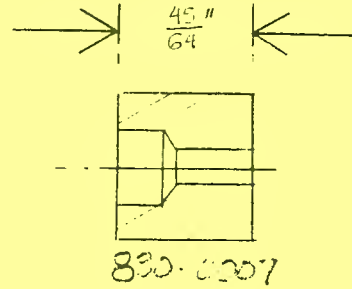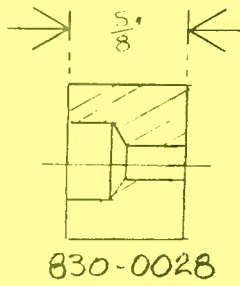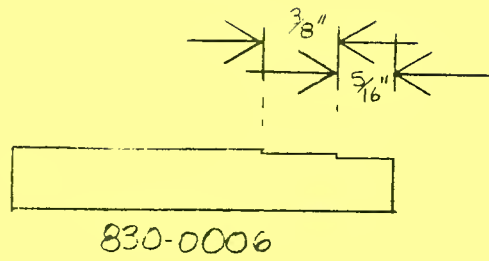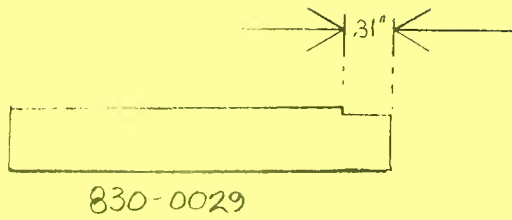

# TECHNICAL SERVICE INFORMATION

TO: ALL ITC CUSTOMERS

SUBJECT: RETURN OF EQUIPMENT TO ITC

When return of ITC equipment or components is necessary, please follow the procedure outlined in this bulletin. These four easy steps will insure prompt attention for your equipment.

1. Call the ITC Technical Service Department for return authorization and assistance. We must know that your equipment is coming and what the problem is before we can help. Unexpected or unidentified equipment is subject to delays of days or weeks since only properly documented material can be processed. Also, many problems can be diagnosed and rectified without actually returning the equipment, thereby saving you the expense of shipping and downtime!
2. Let us know who you are by writing a brief note listing the problem, your name, call letters or company name, address, phone number and who you spoke with at ITC. Enclose this note with the equipment. Also, make sure that your return address is visible on the outside of the carton.
3. Package the equipment securely! ITC is not responsible for shipping damage. If possible, use the original packing material. (Replacement packing material is available from ITC.)
4. Ship the equipment, prepaid, via a traceable mode of transportation; UPS, air express or air freight. Parcel Post and Air Mail are not traceable. Do not ship collect unless prior arrangements have been made. ITC recommends that you insure your shipment. Our Technical Service or Customer Service staff can assist with declared values for insurance purposes.

We continually strive to make available the finest in technical support and service for our products. Your help in making this possible is appreciated.

Call Toll-Free 800-447-0414. From Alaska, Hawaii and Illinois, call collect 309-828-1381.

INTERNATIONAL TAPETRONICS CORPORATION / 3M

2425 South Main Street, P.O. Box 241  
Bloomington, Illinois 61701  
309/828-1381 • TWX 510-352-2500

810-0008-010  
BH090784



# ADDENDUM

## PROGRAM REPRODUCE AMPLIFIER FOR SP, WP, RP, RPD, & 3D MACHINES

831-0094-003 (Mono)  
831-0094-013 (Stereo)

### General Description

The Program Reproduce Amplifier shown in the Technical Manual has been replaced with a new amplifier circuit bearing ITC part number 831-0094-003 (mono) or 831-0094-013 (stereo). The new amplifier offers improved sonic performance, passive squelching and increased reliability.

All interconnect wiring to the 831-0094 printed circuit board (via J4) remains as represented in the Technical Manual. However, one jumper wire has been added from the Program Reproduce Amplifier edge connector, J4, Pin 3 to the Detector card edge connector, J5, Pin 5. This jumper supplies 24 volts to the squelch devices (LDR 101 and LDR 102) on the Program Reproduce Amplifier P.C. card.

### Circuit Description

The 831-0094-003 (mono) and 831-0094-013 (stereo) Program Reproduce Amplifiers are provided to amplify and contour the signal supplied by the reproduce tape head.

On stereo units the Left Channel and Right Channel are identical. Therefore, the description on the following page references components in the Left Channel Only.

## Circuit Description (continued)

The input signal is coupled from the reproduce tape head to the first stage via coupling capacitor C102. Transistors Q101 and Q102 serve as a pre-amplifier which is stabilized to prevent performance variations. DC Feedback is supplied to the base of Q101 from the emitter of Q102 via R101, R107, and R108. AC feedback from the collector of Q102 to the emitter of Q101 (C105, R105, and R104) determines the frequency response of the amplifier. Variable "equalization" is provided by potentiometer R105. C103 and C104 are included for high frequency (RF) rejection.

The output of the pre-amplifier is AC coupled (C107) to the Light Dependent Resistor, LDR 101, which functions as a squelching device. LDR 101 and R113 form a signal voltage divider circuit. The resistance of LDR 101 is controlled by the internal lamp element's brilliance. In this application, the lamp is either fully "on" or "off" as determined by relay K1. With the deck in the run mode, a ground path is supplied to LDR 101 via contacts 6 and 10 of relay K1. Hence, the resistance element of LDR 101 exhibits minimum resistance and the potential across R113 is at its maximum value.

Signal from R113 is again AC coupled (C108) to the base of Q103, a common emitter amplifier stage, with the biasing resistor, R114, connected between the collector and base for DC and temperature stability. The collector output of Q103 is AC coupled (C109) to the base of driver transistor Q104. Q104 supplies drive current for complimentary amplifiers Q105 and Q106. Transistors Q104, Q105, and Q106 are direct coupled with local feedback provided by R119. The output stage (Q105 and Q106) is AC coupled (C111) to Pin 2 of J4.

PARTS LIST

831-0094-003 (Mono)  
831-0094-013 (Stereo)



<u>Component</u> (LC-RC)	<u>ITC Part Number</u>	<u>Description</u>
R101, R129	630-0311-000	Resistor, 100K ohm 1/2 watt 5%
R102, R125	630-0303-000	Resistor, 47K ohm 1/2 watt 5%
R103, R126	630-0247-000	Resistor, 220 ohm 1/2 watt 5%
R104, R127	630-0269-000	Resistor, 1.8K ohm 1/2 watt 5%
R105, R128	636-0002-000	Potentiometer, 10K ohm 1/4 watt
R113, R137	"	"
R106, R130	630-0271-000	Resistor, 2.2K ohm 1/2 watt 5%
R117, R141	"	"
R121, R145	"	"
R107, R131	630-0251-000	Resistor, 330 ohm 1/2 watt 5%
R118, R142	"	"
R108, R132	630-0267-000	Resistor, 1.5K ohm 1/2 watt 5%
R109, R133	630-0255-000	Resistor, 470 ohm 1/2 watt 5%
R110, R134	630-0285-000	Resistor, 8.2K ohm 1/2 watt 5%
R111, R135	630-0295-000	Resistor, 22K ohm 1/2 watt 5%
R120, R144	"	"
R112, R136	630-0258-000	Resistor, 620 ohm 1/2 watt 5%
R114, R138	630-0307-000	Resistor, 68K ohm 1/2 watt 5%
R115, R139	630-0287-000	Resistor, 10K ohm 1/2 watt 5%
R116, R140	"	"
R119, R143	630-0315-000	Resistor, 150K ohm 1/2 watt 5%
R122, R146	630-0252-000	Resistor, 360 ohm 1/2 watt 5%
R123, R147	630-0231-000	Resistor, 47 ohm 1/2 watt 5%
R124, R148	630-0223-000	Resistor, 22 ohm 1/2 watt 5%
C101, C112	696-0124-000	Capacitor, Electrolytic 100MFD, 25V
C102, C113	696-0114-000	Capacitor, Electrolytic 5MFD, 25V
C107, C118	"	"
C108, C119	"	"
C103, C114	677-0001-000	Capacitor, Silver Mica 100PFD 300V
C104, C115	"	"
C105, C116	681-0048-000	Capacitor, Paper .015 MFD 200V
C106, C117	696-0078-000	Capacitor, Electrolytic 100 MFD 12V
C109, C120	694-0003-000	Capacitor, Tantalum 4.7 MFD 35V
C110, C121	694-0007-000	Capacitor, Tantalum 47 MFD 20V
C111, C122	696-0201-000	Capacitor, Electrolytic 220 MFD 25V
C123, C124	681-0050-000	Capacitor, Paper .022 MFD 200V


PARTS LIST (cont.)

<u>Component</u>	<u>ITC Part Number</u>	<u>Description</u>
Q101, Q107	590-0013-000	Transistor, 2N5089
Q102, Q108	"	"
Q103, Q109	590-0017-000	Transistor, 2N5816
Q104, Q110	"	"
Q105, Q111	"	"
Q106, Q112	590-0018-000	Transistor, 2N5817
LDR101	650-0003-000	LDR, Sigma, 301-T1-12B1
LDR102	"	"

Miscellaneous Parts

(3/6)	282-0002-000	Pin, Terminal, P.C.
(1)	325-0094-003	P.C. Card, Mono
(1)	325-0094-013	P.C. Card, Stereo
(12)	613-0001-000	Socket, Transistor

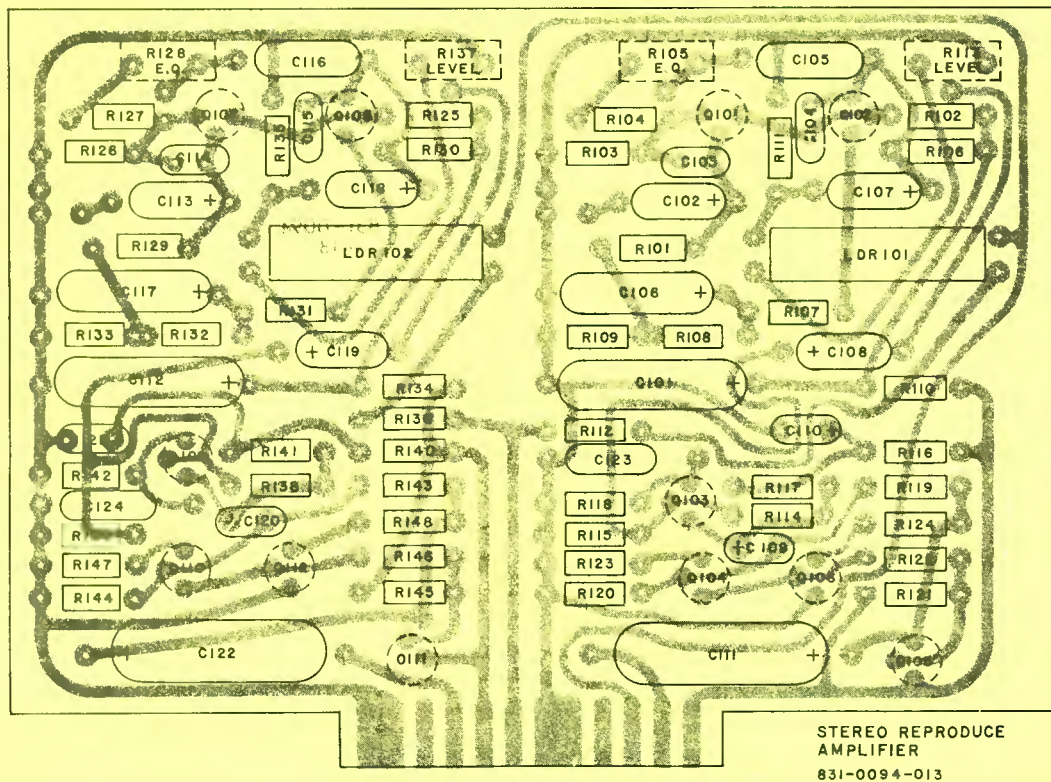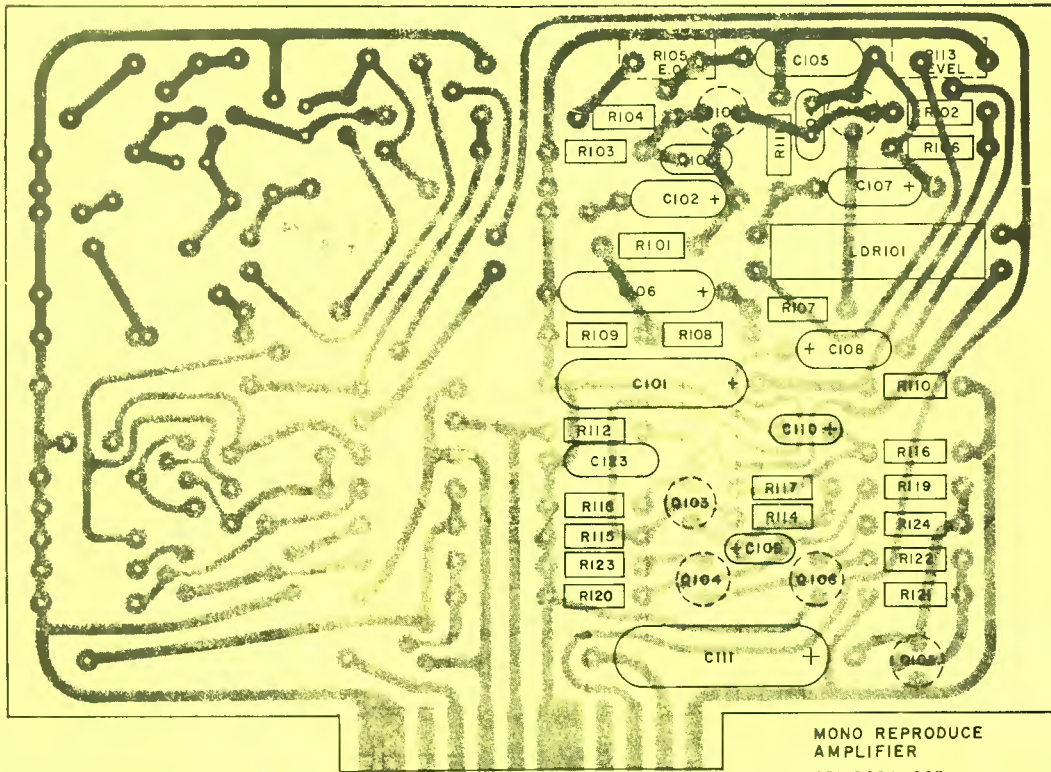

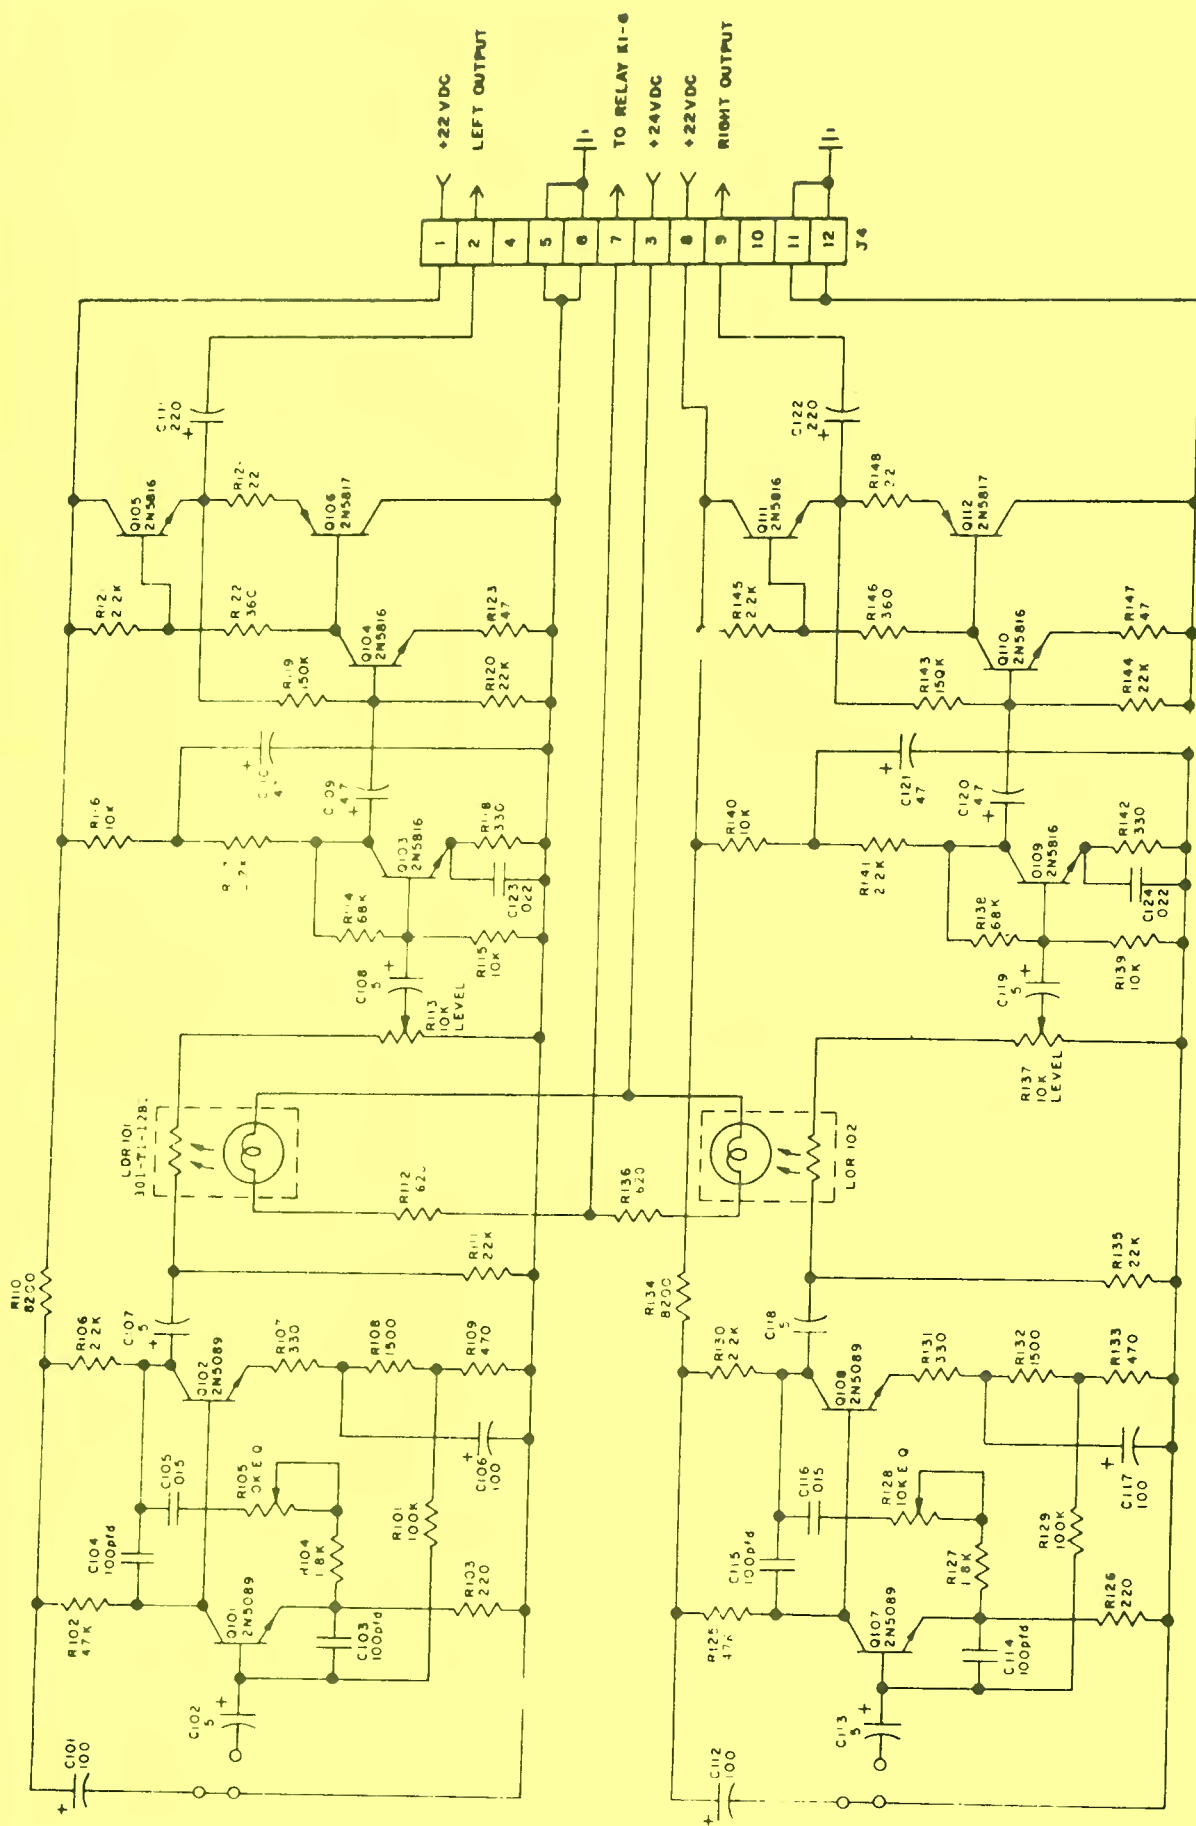

TITLE SCHEMATIC - SP, WP, 30  
 +18dBm REPRODUCE AMR

INTERNATIONAL  
 TAPETRONICS  
 CORPORATION  
 BIRMINGHAM, AL 35202

893-0064-003  
 DRAWING NUMBER

# TECHNICAL MANUAL

## TABLE OF CONTENTS

## 3D SERIES REPRODUCER

	Page
<b>SECTION I INTRODUCTION</b>	<b>1-1</b>
A. GENERAL DESCRIPTION . . . . .	1-1
B. SPECIFICATIONS . . . . .	1-3
<b>SECTION II INSTALLATION AND OPERATION</b>	<b>2-1</b>
A. UNPACKING . . . . .	2-1
B. INSTALLATION . . . . .	2-1
C. EXTERNAL CONNECTIONS — AUDIO . . . . .	2-1
D. EXTERNAL CONNECTIONS — CONTROL . . . . .	2-1
E. CONTROL SWITCHES AND INDICATORS . . . . .	2-1
F. OPERATING PROCEDURES . . . . .	2-2
<b>SECTION III PRINCIPLES OF MECHANICAL OPERATION</b>	<b>3-1</b>
A. HEAD ASSEMBLY . . . . .	3-1
B. CAPSTAN DRIVE . . . . .	3-1
C. PRESSURE ROLLER LINKAGE . . . . .	3-1
<b>SECTION IV MECHANICAL ADJUSTMENTS</b>	<b>4-1</b>
A. GENERAL MECHANICAL INFORMATION . . . . .	4-1
B. DECK REMOVAL . . . . .	4-1
C. CAPSTAN SHAFT (MOTOR) POSITION . . . . .	4-1
D. PRESSURE ROLLER/CAPSTAN PRESSURE — COARSE SOLENOID ADJUSTMENT . . . . .	4-2
E. PRESSURE ROLLER/CAPSTAN PRESSURE — FINE SOLENOID ADJUSTMENT . . . . .	4-2
F. SOLENOID DAMPING . . . . .	4-3
G. RIGHT CARTRIDGE GUIDE . . . . .	4-3
H. LEFT CARTRIDGE GUIDE . . . . .	4-3
I. TAPE GUIDE ADJUSTMENT . . . . .	4-3
J. HEAD HEIGHT ADJUSTMENT . . . . .	4-4
K. HEAD AZIMUTH ADJUSTMENT . . . . .	4-4
L. HEAD REPLACEMENT . . . . .	4-5
<b>SECTION V MECHANICAL DRAWINGS</b>	<b>5-1</b>
<b>SECTION VI MECHANICAL PARTS LIST</b>	<b>6-1</b>
<b>SECTION VII PRINCIPLES OF ELECTRICAL OPERATION</b>	<b>7-1</b>
A. GENERAL INFORMATION . . . . .	7-1
B. SOLENOID POWER SUPPLIES . . . . .	7-1
C. LOW VOLTAGE POWER SUPPLY . . . . .	7-1
D. CONTROL CIRCUITRY . . . . .	7-1
E. CUE CIRCUITRY . . . . .	7-2
F. PROGRAM CIRCUITRY . . . . .	7-2
<b>SECTION VIII ELECTRICAL ADJUSTMENTS</b>	<b>8-1</b>
A. CONTROLS . . . . .	8-1

<b>SECTION IX</b>	<b>TEST CARTRIDGES</b>	9-1
A.	PREVENTIVE MAINTENANCE .....	9-1
B.	TEST CARTRIDGES .....	9-1
C.	USE OF TEST CARTRIDGES .....	9-1
<b>SECTION X</b>	<b>ELECTRICAL DRAWINGS</b>	10-1
<b>SECTION XI</b>	<b>ELECTRICAL PARTS LIST</b>	11-1, 2, 3
<b>SECTION XII</b>	<b>MAINTENANCE SCHEDULE</b>	12-1
A.	GENERAL .....	12-1
B.	MECHANICAL MAINTENANCE .....	12-1
C.	ELECTRICAL MAINTENANCE.....	12-1
<b>SECTION XIII</b>	<b>WARRANTY</b>	13-1
<b>SECTION XIV</b>	<b>SCHEMATICS</b>	



## SECTION I

### INTRODUCTION

### 3D SERIES REPRODUCER

#### A. GENERAL DESCRIPTION

International Tapetronics magnetic cartridge Reproducers are designed to meet or exceed the NAB standards for cartridge tape recording and reproducing. The 3D (Three Deck) series reproducers are available in monophonic or stereophonic configurations. All reproducers are furnished with primary (1 kHz) cue capabilities while the secondary (150 Hz) and tertiary (8 kHz) cue detectors are optional.

The top two decks are designed to function as independent reproducers. The bottom deck may be used as a reproducer or, with a WRA series Recording Amplifier, as a Master Recorder/Reproducer. All decks accept the NAB type A and B cartridges.

The electronic circuits are constructed on printed circuit cards and, with the exception of the Utility card, are of plug-in design. Silicon semiconductors are used throughout. The regulated power supply is an integrated circuit in a plug-in TO-3 case. The program amplifiers have NAB equalization and transformer coupled outputs.

The cue tone detectors utilize reliable L-C networks and provide relay contact output information. Upon the conclusion of the audio, the Reproducer continues to advance the tape until a 1 kHz primary cue tone is detected, whereupon the 1 kHz cue detector stops the tape drive mechanism.

The Secondary Cue Tone (150 Hz) Detector, when the machine is so equipped, can be used for such functions as the indication of the "end-of-message." This is necessary in automated systems to start the next deck or machine and can be useful in live operations to keep the operator "on cue" for inserts, tags, or the beginning of the next material. The presence of the secondary cue tone is indicated by the brightening of the front panel and remote "Run" (Start) Lamps.

The Tertiary Cue Tone (8 kHz) Detector, also optional, can be used to supply digital information in automated systems or for auxiliary switching such as the control of slide projectors in television. Presence of the tertiary cue tone is indicated by the illumination of the front panel and remote "Ready" Lamps.

The full-swing pressure roller is connected to the actuating solenoid by a simple and reliable chain linkage with a clevis screw adjustment for pressure roller capstan pressure. Air damping of the solenoid is adjustable with a needle valve. The direct-capstan, 450 RPM (375 RPM in 50 Hz models), hysteresis synchronous drive motor (with an electrolyzed shaft) provides optimum tape drive.

Routine servicing requires a minimum of disassembly. Removal of the cover grille provides accessibility to both mechanics and electronics. The top two decks readily slide from the housing after the head leads and solenoid cables are unplugged. Either or both of the top two decks may be removed for service without affecting the remaining decks.

Cue and program cards are easily removed from the rear of the chassis. A single extender card, optionally available, provides a means for mounting each card for circuit analysis. Level controls are located on the circuit cards and are accessible from the rear.

Remote connections make use of latching plugs and sockets to prevent accidental loss of contact. Full remote control and audio output information are readily available on the sockets for each deck. Wiring and an interconnect socket are provided for the optional addition of the WRA Series Recording Amplifier.

The head and track configuration of the ITC Three Deck Reproducer is in accordance with the NAB Standards.

The magnetic tape head nearest the capstan shaft is head A, the reproducing head. Head B is a "dummy" which is installed to maintain constant tension on the tape and minimize wow and flutter. Head B of Deck C is a recording head when the Reproducer is connected to a WRA Series Recording Amplifier.

On mono machines, the upper track is the program channel and the lower track is the cue channel. On stereo units, the upper track is the left program channel, the center track is the right program channel, and the lower track is the cue channel. A graphic comparison of the mono and stereo track configuration is shown in Figure 5-17.

#### B. SPECIFICATIONS

Power: 117 volts AC, 60 Hz, 144 watts; other voltage and frequency variations are available on special order.

Tape Speed:	7½ inches per second; direct drive, hysteresis-synchronous, common-capstan motor with electrolyzed shaft and instrument-type, permanently lubricated ball bearings.
Wow and Flutter:	0.2% or less
Timing Accuracy:	0.1% or better
Audio Output:	+12 dBm before clipping; normally +4 dBm; 600 ohms balanced. May be strapped for 150 ohms. Independent output for each deck.
Distortion:	2% or less, record to playback at 0 VU record level, 400 Hz.
Noise:	55 dB or better below reference of 400 Hz at 3% THD, monophonic, 50 dB or better below reference of 400 Hz at 3% THD, stereophonic.
Cross Talk Between Channels:	Better than 50 dB at 1 kHz.
Frequency Response:	± 2 dB from 50 to 15,000 Hz.
Equalization:	NAB. Adjustable to compensate for head wear.
Cue Signals:	NAB primary cue, 1 kHz, standard. Secondary cue, 150 Hz, and tertiary cue, 8 kHz, optional. External information when tone is sensed furnished as relay contact closure.
Playback Time:	NAB size A and B cartridges, 2 seconds to 16 minutes, each shelf.
Start Time:	0.1 seconds, at minimum solenoid damping.
Stop Time:	0.1 seconds, at minimum solenoid damping.
Ambient Temperature:	55 degrees C, 131 degrees F, maximum.
Remote Control:	All controls and indicators.
Mounting:	Table top mounting with rack mounting adapters optional.
Dimensions:	10-1/2'' high (add 5/8'' for feet); 13'' deep, 8-5/8'' wide.
Weight:	38½ pounds.
Head Configuration:	NAB (provided with reproduce heads only; except bottom deck supplied with recording head when accompanied by WRA Series Recording Amplifier).

## SECTION II

### INSTALLATION AND OPERATION

### 3D SERIES REPRODUCER

#### A. UNPACKING

Remove the 3D Reproducer from the shipping carton and inspect the unit for damage. All packing material must be retained if a claim for shipping damage is to be filed; and, therefore, should be kept on hand until installation has been completed in case concealed damage is discovered. If shipping damage is found, contact ITC for assistance in the filing of claims.

#### B. INSTALLATION

The 3D Reproducers are supplied in cases prepared for table top mounting. Adapter angle brackets and hardware for mounting in a 19 inch equipment rack are supplied with instructions on an optional basis.

To provide adequate ventilation in rack installations, vertical spacing between Reproducers and other equipment should be from 1 $\frac{3}{4}$ " to 3 $\frac{1}{2}$ " depending on the temperature inside the closed rack.

#### C. EXTERNAL CONNECTIONS—AUDIO

Audio output connections are made on the six pin sockets J2A, J2B, and J2C. Mating plugs are supplied, and terminal information is as follows:

##### CONNECTOR J-2

Terminal	Function
1	Monophonic Shield (Ground) (left channel stereo)
3	Monophonic Audio Output (left channel stereo -)
5	Monophonic Audio Output (left channel stereo +)
2	Right Channel Stereo Shield (Ground)
4	Right Channel Stereo Audio Output (-)
6	Right Channel Stereo Audio Output (+)

Socket J2A is associated with the top "A" deck while J2B is for the center "B" deck and J2C is for the bottom "C" deck. Socket and terminal locations are shown in Figure 5-2.

The load impedance of the audio output is normally 600 ohms. A 150 ohm output can be provided by changing the transformer wires on connector J2 as noted on the schematic diagram.

In stereo systems, proper phasing of the audio connections must be observed.

#### D. EXTERNAL CONNECTIONS—CONTROL

Remote Control connections are provided on

the fifteen pin sockets J1A, J1B, and J1C. Mating plugs are supplied for this purpose and terminal information is as follows:

##### CONNECTOR J-1

Terminal	Function
1	Ground
2	Remote Start (Run Ground)—Normally Open Switch
3	Remote Start (Ready Ground)—Normally Open Switch
4	Remote Stop (Ready Ground)—Normally Open Switch
5	Remote Stop (Stop Ground)—Normally Open Switch
6	Remote Run Lamp Ground Circuit
7	Remote Ready Lamp Ground Circuit
8	+24 Volts
9-10	Secondary Cue Relay Contacts (Normally Closed)
10-11	Secondary Cue Relay Contacts (Normally Open)
12-13	Tertiary Cue Relay Contacts (Normally Open)
14-15	Cue Audio — Unbalanced Audio Output from Cue Preamplifier; High Impedance (Terminate with 10K ohms or greater)

Socket J1A is associated with the top "A" deck while J1B is for the center "B" deck and J1C is for the bottom "C" deck. Socket and terminal locations are shown in Figure 5-2.

Ground switching is employed in all remote control functions. Normally open, momentary action switches are used for both the remote START and STOP functions. A sample remote control schematic is shown in Figure 10-1.

If necessary, the normally open stop circuit can be replaced with a normally closed circuit by removing the jumper installed inside the machine between pins 3 and 4 on J1 and installing a remote, normally closed switch in its place.

#### E. CONTROL SWITCHES AND INDICATORS

Each of the three tape transport mechanisms (decks) has the following associated control switches and indicators.

##### CARTRIDGE SWITCH

A cartridge Sensing Micro Switch is located on each deck to provide a "Ready" indication to the Reproducer's control circuit and illuminate the yellow indicator lamp just

above the Stop Switch. The Cartridge Switch must be operated in order for the tape transport to be started. See Figure 5-3 for the location of this switch.

**START  
SWITCH**

The Start Switch (green) is used to energize the transport's pressure roller solenoid and put the tape in motion. The indicator lamp in the Start Switch shows that the machine is in a "Run" condition. Location is shown in Figure 5-1.

**STOP  
SWITCH**

The Stop Switch (red) can be used to stop the tape drive system. (Remember that unless a cartridge stops automatically, it will not be properly cued for the next play.)

**READY  
LAMP**

The Ready Lamp (yellow) shows that a cartridge has been properly loaded and the machine is "Ready" to be started.

## F. OPERATING PROCEDURES

To play a tape cartridge:

1. Insert a properly recorded tape cartridge into the right-hand side of any of the three cartridge slots.
2. Check to see that the Ready Lamp associated with that deck is illuminated, indicating that the cartridge has been properly inserted and that the deck is "Ready" for operation.
3. Press the Start Switch momentarily. The tape drive system will be started, and tape motion will continue until the primary (1 kHz) cue tone automatically stops the deck or until the Stop Switch for that deck is pressed.

## SECTION III

### PRINCIPLES OF MECHANICAL OPERATION

### 3D SERIES REPRODUCER

#### A. HEAD ASSEMBLY

The reliability and the maintenance required is improved through the use of heads with a metal face and a hyperbolic front contour. The shape and material reduce the need for cleaning and relieve the problems caused by pressure pads. The heads are of plug-in, no mount design and are readily replaced as described in Section IV (Mechanical Adjustments).

The 3D Reproducer deck assembly contains three tape guides of nonmagnetic material which are mounted on the head assembly bracket. The positioning of these tape guides is preset at the factory but may be field adjusted should it be required. The head mounting bracket is of very sturdy construction with the azimuth pivot point located directly behind the center of the heads in both a vertical and horizontal plane. This feature permits azimuth adjustment without disturbing the zenith adjustment. An integral locking screw is provided to prevent movement after adjustment.

#### B. CAPSTAN DRIVE

The proper drive of tape in a cartridge is much more difficult than in reel and other types of tape equipment. The 3D Reproducer is designed and constructed to overcome the difficulties of cartridge tape drive. In a cartridge, the tape pulls from the center and winds back on the outside of an endless loop of tape. Therefore, the tape must slip upon itself as the cartridge plays. This slipping action does not occur at an even rate, and the tape tends to jerk as it pulls from the center of the hub. In addition, the tape is coated with a lubricant which reduces drive friction. One means of improving the tape drive would be to use a larger diameter pressure roller, but this is not possible since there is insufficient clearance in the bottom of the cartridge for a larger roller. The

tape drive required in a cartridge machine is improved by using a 450 RPM (375 RPM in 50 Hz models), direct drive motor with an electrolyzed shaft. The hysteresis-synchronous direct drive motor has a constant speed because there are no belts or pulleys to introduce speed variables.

With a large capstan, directly driven, constant tape drive can be achieved if the tape is not permitted to slip between the pressure roller and the capstan. In the 3D Reproducer, this problem is eliminated by machining the shaft to a very high polish and then blasting it with aluminum oxide particles. This type of finish is a random rough pattern which provides the positive tape drive demanded of cartridge machines. An electrolyzing process holds the roughened pattern and reduces wear of the surface. This finish is very durable and results in a normal wear life of approximately 5 years in normal service.

#### C. PRESSURE ROLLER LINKAGE

The use of a mechanical chain assembly which has a design life in excess of a million operations brings the pressure roller into contact with the capstan. The pressure roller cross-shaft must exert much greater turning torque as the roller contacts the capstan. In the 3D Reproducer the required torque is achieved by using a reliable and efficient chain and sprocket. The shape of the solenoid plunger provides the required torque curve. Correct pressure roller/capstan pressure is achieved by adjusting the clevis screw which attaches the chain assembly to the solenoid plunger.

The solenoid and pressure roller action of the 3D Reproducer is extremely quiet in its operation. The speed and the resultant noise of this assembly is controlled by an adjustable damping valve at the rear of the solenoid. The design is intended to provide long life, dependable operation, and a minimum of maintenance.

## SECTION IV

### MECHANICAL ADJUSTMENTS

### 3D SERIES REPRODUCER

#### A. GENERAL MECHANICAL INFORMATION

Tapetronics Tape Cartridge Reproducers have been designed to provide reliable, rugged mechanics which require a minimum of simplified adjustments.

The sequence in which mechanical adjustments are completed, however, is important. Therefore, if a complete check of all mechanical adjustments is required, start at the beginning of this section and check and/or adjust the "C" (bottom) deck as instructed—from Capstan Shaft (Motor) Position to Head Azimuth Adjustment. Then repeat the entire procedure on the "B" (center) deck; and finally, repeat the procedure on the "A" (top) deck.

Head Adjustments, outlined last in this section, may be made without having completed the deck adjustments covered first in this section.

The alignment gauges mentioned in this section are optionally available from Tapetronics.

#### B. DECK REMOVAL

Decks "A" (top) and "B" (center) must be removed to provide access to make mechanical adjustments on the "C" (bottom) deck. When removing decks always remove source power from the equipment.

1. Remove the two top cover retaining screws from the rear chassis and lift off the cover grille.
2. Remove the two front panel 7/64" Allen-type retaining screws (see Figure 5-1), and open the front panel.
3. Unplug the solenoid and head cables from the upper two decks and slide these tape transport mechanisms forward and out of the main chassis.

*The upper deck has been labeled (on its front edge) "A" while the center deck is designated "B."*

#### C. CAPSTAN SHAFT (MOTOR) POSITION

While the adjustment procedure outlined below will normally be required only if the motor has been removed, a check for proper positioning of the capstan should be part of the regular maintenance schedule.

1. "C" (bottom) Deck
  - a. Remove the mounting screws from the top bearing block so that the top end of the capstan shaft is free to move.
  - b. Remove the rubber pressure roller and place the round steel Capstan Shaft Locator Gauge on the pressure roller shaft of the "C" (bottom) deck as shown in Figure 5-7.
  - c. Loosen the motor mounting screws and

manually press the steel Capstan Shaft Locator Gauge against the capstan shaft.

- d. While squeezing the steel gauge and the capstan shaft together, position the capstan shaft as shown in Figure 5-8. The steel tool must lie flat against the capstan shaft to make the pressure roller shaft parallel with the capstan shaft.

*The slight offset between the two shafts allows the tape to come into contact with the capstan shaft before the pressure roller to minimize wow and flutter and to slightly "wrap" around the capstan shaft for better pull.*

- e. Tighten the motor mounting screws and re-check the adjustment.
- f. Replace the rubber pressure roller on its shaft. The steel washer goes on the bottom and the nylon washer goes on the top just under the retainer clip.
- g. Replace the screws in the top bearing block and tighten. Be careful to avoid excessive flexing of the capstan shaft.
- h. Complete the subsequent mechanical adjustments outlined in Section III on the "C" (bottom) deck before starting adjustments on decks "A" and "B."

"B" (center) Deck

- a. Replace the "B" deck (labeled on its front edge) in the main chassis.
- b. Remove the rubber pressure roller and place the steel Capstan Shaft Locator Gauge on the pressure roller shaft.
- c. Check to see that the steel tool and the capstan shaft lie flat against each other.
  - (1) If the adjustment is incorrect, first loosen the bearing block mounting screws to make sure that the capstan shaft is not flexed.
  - (2) If the adjustment is still not correct, loosen the screws in the deck stop blocks mounted on either side of the deck on the deck slides (see Figure 5-3), adjust the position of the deck so that the steel tool lies flat against the capstan shaft, and tighten the screws in the deck stop blocks.
- d. Replace the rubber pressure roller on its shaft, and reconnect the solenoid and head cables. The locator slot in the head socket of mono units must be on the top side to prevent a reversal of the program and cue channels. See the schematic diagram for the color code of

the head lead arrangement used on stereo units.

- e. Adjust the "set" screws in the front edge of the deck so that a small amount of pressure is exerted against the front panel when it is bolted into place. The purpose of this adjustment is to prevent the deck from being pushed toward the front panel of the machine (thereby destroying the adjustments completed above) when the solenoid is energized.
  - f. Tighten the two front panel retaining screws and complete the subsequent mechanical adjustments outlined in Section IV on the "B" (center) deck before starting adjustments on deck "A."
3. "A" (top) Deck
- a. Replace the "A" deck (labeled on its front edge) in the main chassis.
  - b. Remove the rubber pressure roller and place the steel Capstan Shaft Locator Gauge on the pressure roller shaft of the "A" (top) deck.
  - c. Check to see that the steel tool and the capstan shaft lie flat against each other. If the adjustment is incorrect, loosen the screws in the deck stop blocks mounted on either side of the deck on the deck slides, adjust the position of the deck so that the steel tool lies flat against the capstan shaft, and tighten the screws in the deck stop blocks.
  - d. Replace the rubber pressure roller on its shaft and reconnect the solenoid and head cables.
  - e. Adjust the "set" screws in the front edge of the deck so that a small amount of pressure is exerted against the front panel when it is bolted into place.
  - f. Tighten the two front panel retaining screws and complete the subsequent mechanical adjustments on the "A" (top) deck.

#### D. PRESSURE ROLLER/CAPSTAN PRESSURE — COARSE SOLENOID ADJUSTMENT

This adjustment is made at the factory and should not normally have to be repeated unless a parts replacement (solenoid, solenoid plunger, linkage chain, clevis, or cross-shaft clamp) has been made in the solenoid linkage assembly. If there is no specific reason for making this adjustment, skip ahead to part "E" of Section IV.

The adjustment procedure outlined below is applicable to all three decks. The front panel must be bolted into its closed position when adjusting sliding decks "A" and "B."

1. Check to see that the steel roll pin protruding from the cross-shaft clamp is inserted between the eleventh and twelfth (counting from the clevis) connector pins

- in the linkage chain as shown in Figure 5-9.
2. Loosen the clevis locknut and rotate the solenoid plunger and the locknut until the Pressure Roller Compression Tool will fit snugly between the shoulder of the clevis and the locknut as shown in Figure 5-10. The locknut must be finger tight against the plunger. If the tool is not available, the space between the clevis and the locknut should be .2812 (9/32) inch.
3. Remove the capstan motor plug from the socket located on the utility board (see Figure 5-4), and actuate the cartridge sensing micro switch by pushing a piece of folded cardboard or other material between the switch's actuator arm and plunger (Figure 5-3).
4. Press the front panel START switch to energize the solenoid; loosen the screws in the cross-shaft clamp (Figure 5-3). The front panel must be bolted into its closed position when adjusting sliding decks "A" and "B." Adjust the clamp screws so that the clamp is snug on the shaft but can be moved with a small amount of force.
5. Remove the rubber pressure roller and adjust the pressure roller shaft so that the Pressure Roller Compression Gauge fits snugly between the left side of the slot in the deck and the pressure roller shaft as shown in Figure 5-11.
6. Place the steel Capstan Shaft Locator Gauge on the pressure roller shaft, press it tight against the capstan shaft (see Figure 5-7), and tighten the screws in the cross-shaft clamp. If the Capstan Locator Gauge is not available, place a rubber pressure roller on the shaft, press it against the capstan until the rubber is depressed approximately 1/32 of an inch where it makes contact with the capstan shaft, and tighten the screws in the cross-shaft clamp. Pressure is applied by pushing plunger into solenoid, this will keep this linkage taught.
7. Remove the Capstan Shaft Locator Gauge and check the adjustment made in Step 5 above.
8. Replace the rubber pressure roller on its shaft. The steel washer goes on the bottom and the nylon washer goes on the top just under the retainer clip.
9. Plug motor back, check set screws on the front of deck and bolt front panel in place.

#### E. PRESSURE ROLLER/CAPSTAN PRESSURE — FINE SOLENOID ADJUSTMENT

This adjustment will normally be required only after parts replacement; but for best results, a check of the pressure roller/capstan pressure should be on the routine maintenance schedule.

The adjustment procedure outlined below is applicable to all three decks. The front panel must

be bolted into its closed position when adjusting sliding decks "A" and "B."

1. Using the Pressure Roller Compression Gauge, check the distance between the capstan shaft and the pressure roller shaft. The tool should advance to the first "step" and stop as shown in Figure 5-12.
2. If adjustment is required, loosen the clevis locknut and rotate the solenoid plunger as follows (Figure 5-3):
  - a. To increase the pressure, rotate the solenoid plunger so that it penetrates deeper into the solenoid (clockwise as viewed from the front panel). This will increase the pull of the solenoid on the plunger and, therefore, the pressure roller/capstan pressure will be increased. The plunger must not "bottom out" to the seat of the solenoid.
  - b. To decrease the pressure, rotate the plunger counterclockwise as viewed from the front panel.
3. Tighten the clevis locknut when the proper pressure has been achieved. (If proper adjustment cannot be attained, complete the coarse adjustment outlined in part "D" of Section IV before repeating the fine adjustment.)

#### F. SOLENOID DAMPING

The air damping of the solenoid is controlled by the adjustment of the set screw at the rear end of the solenoid seat. The speed of the solenoid operation is proportional to the speed at which air is allowed to move through the small hole on the underside of the solenoid seat. The noise of the solenoid operation shares the same relationship.

The adjustment procedure outlined below is applicable to all three decks. See Figure 5-3 for parts location. This adjustment in no way affects pressure roller/capstan pressure as in some machines of older design.

1. Loosen the locknut on the Solenoid Damping Set Screw.
2. Turn the Damping Screw clockwise to reduce, or counterclockwise to increase the speed of the solenoid operation. The average length of time for the solenoid to retract is .01 sec.
3. Check the adjustment by inserting a cartridge and starting the Reproducer. Repeat the adjustment as required.
4. Tighten the locknut.
5. Check the "set" screws in the front edge of the deck for a slight pressure when front panel is closed.

#### G. RIGHT CARTRIDGE GUIDE

The right cartridge guide controls the cartridge positioning in relation to the heads, capstan shaft, and pressure roller shaft. Proper location of this cartridge guide is essential to proper operation of

the machine. The right cartridge guide is properly positioned at the factory and should not normally require adjustment.

The adjustment procedure outlined below is applicable to all three decks.

1. Loosen the right cartridge guide mounting screws and insert a cartridge into the deck.
2. Adjust the cartridge so that the pressure roller shaft is centered in the "keyhole" in the cartridge.
3. Position the cartridge guide 1/64 of an inch from the cartridge and at a right angle with the front edge of the deck.
4. Tighten the cartridge guide mounting screws.
5. Press the start switch and, with the cartridge playing, check to see that the cartridge is free to move approximately 1/64 of an inch in and out and from left to right. If the cartridge is tight in the machine, recheck all mechanical adjustments.

#### II. LEFT CARTRIDGE GUIDE

The left cartridge guide is intended to help guide the cartridge into the machine and prevent damage to a head due to improper loading. When NAB type B cartridges are used, the left cartridge guide must be removed.

The adjustment procedure outlined below is applicable to all three decks.

1. With a cartridge in the machine, position the end of the left cartridge guide nearest the front panel approximately 1/8 of an inch from the cartridge and snug down the mounting screw nearest the front panel.
2. Position the end of the left cartridge guide nearest the head assembly approximately 1/32 of an inch from the cartridge.
3. Tighten both mounting screws.

*The left cartridge guide should not come into contact with the cartridge when the cartridge has been properly inserted into the machine. Its purpose is to simply guide the cartridge into place—not to hold it there.*

#### I. TAPE GUIDE ADJUSTMENT

The Three Deck Reproducer has three independent tape guides on each deck to provide the maximum of tape guidance outside of the cartridge. The left tape guide has been specially formed to provide clearance for the corner post in the cartridge.

For optimum performance, not only should a check for proper tape guide positioning be made, as outlined below; but, also the positioning of the corner post in the cartridges should be checked and adjusted as shown in in Figure 5-16.

The adjustment procedure outlined below is applicable to all three decks.

1. Check the positioning of each tape guide by advancing the Tape Height Gauge into



the tape guide as shown in Figure 5-13. The gauge should advance fully into the tape guide, without friction, while resting flat on the deck—not tilted as shown by the dashed line (or its opposite) in Figure 5-13. The tape height gauge should be demagnetized so that it will not effect the “heads.”)

2. If adjustment is required, loosen the two tape guide mounting screws.
3. Keeping the Tape Height Gauge flat on the deck, position the tape guide as shown in Figure 5-13.
  - a. Keep the tape guides as close to the head as possible without coming into contact with the head mounting blocks or any parts mounted on these blocks.
  - b. Keep the tape guides vertical. Normally, the bottom edge of the tape guide’s mounting surface should rest on or very near the surface of the deck plate.
4. Tighten the tape guide mounting screws and re-check the adjustment.
5. Check and adjust as required the other tape guides.

The slot in the tape guide is .249 inch wide. (Actual tape width is  $.246 \pm .002$  inch.) The width of this slot can also be properly gauged with the Tape Height Gauge. The arm on the gauge should advance fully into the slot without friction, but there should be no room for noticeable movement of the foot in the slot.

Adjustments obtained with the Tape Height Gauge should be accurate to less than .001 of an inch—much better than that obtained with most inexpensive optical devices.

## J. HEAD HEIGHT ADJUSTMENT

The adjustment procedure outlined below is applicable to all three decks. See Figure 5-3 for the location of the adjustment screws mentioned below.

1. Loosen the Lock Screw L by turning it counterclockwise approximately four complete turns.
2. **Course Height:** Adjust the Front Height Screw FH until the top of the upper head track (pole piece) is  $9/16$  of an inch above the deck surface.
3. **Course Zenith:** Adjust the Rear Height Screw RH until the face of the head is perpendicular with the surface of the deck. Position the Tape Height Gauge (or any gauge known to be square) on the deck surface and move it against the face of the head as shown in Figure 5-14. The gauge used should be demagnetized before using for adjustment. Be careful to avoid scratching the face of the head. When the head is perpendicular, the face of the head and the “square” will be flush.

4. **Fine Height and Zenith:** This adjustment is made by using a strip of white “leader” tape or a piece of recording tape from which the oxide has been removed. (Shellac thinner, flux remover or a similar solvent will loosen the oxide which can then be wiped off the transparent base.) A test cartridge may be used for this adjustment (refer to Section VIII).

- a. Position the transparent tape across the face of the heads as the tape would be positioned if a cartridge was being played. See Figure 5-15. Check to see that the tape is not being distorted (wrinkled) where it makes contact with the tape guides and attach it to one of the tape guide support blocks with adhesive tape to free one hand for adjustments.
- b. Alternately adjust Height Screws FH and RH to position the top of the upper head track (pole piece) so that it is even with the upper edge of the tape, and to position the bottom of the lower head track (pole piece) so that it is even with the lower edge of the tape. Screws FH and RH should be adjusted by equal amounts in the same direction.
- c. Re-check the zenith of the head as instructed in Step 3 above.
- d. Remove the transparent tape.

## K. HEAD AZIMUTH ADJUSTMENT

The adjustment procedure outlined below is applicable to all three decks. See Figure 5-3 for the location of the adjustment screws.

1. Insert a test cartridge with a 15 kHz azimuth alignment tone. The test cartridge **must** be checked for correct tape tracking or the resulting azimuth adjustment will not be correct. (Check corner post and pressure pads)
2. Meter the output of the Reproducer and adjust Azimuth Screw A of the reproducing head for maximum output level.
3. Tighten Lock Screw L and re-check the meter output to correlate with Step 2.
4. **Record Head Azimuth Adjustment:** Record head adjustment required when used with recording equipment.
  - a. Perform the record head adjustments (mechanical) as outlined for the playback head.
  - b. Select an erased  $3\frac{1}{2}$  minute cartridge. (This cartridge should have the corner post properly positioned and be maintained as a test cartridge.)
  - c. Feed a 15 kHz tone into the recorder 10 db below normal level.
  - d. Meter the output of the reproducer and adjust azimuth screw A of head B, the

recording head, for maximum playback output level while recording the 15 kHz tone (see Figure 5-3).

- e. Tighten lock screw L of the record head.

#### L. HEAD REPLACEMENT

The Tapetronics Reproducers utilize the no-mount type heads to provide quick and easy installation.

1. Loosen the two screws in the head mounting strap.
2. Remove the old head and insert a new one. (The side of the head with the printing on

it should be positioned up.)

3. Align the rear edge of the head case so that it is flush with the rear edge of the head mounting strap.
4. Tighten the screws in the head mounting strap.
5. Reconnect the head cable. The locator slot in the head socket of mono units must be on the top side to prevent a reversal of the program and cue channels. See the schematic diagram for the color code of the head lead arrangement used on stereo units.
5. After head replacement it is necessary to adjust the heads as described in (J) & (K).

SECTION V

MECHANICAL DRAWINGS

3D SERIES REPRODUCER

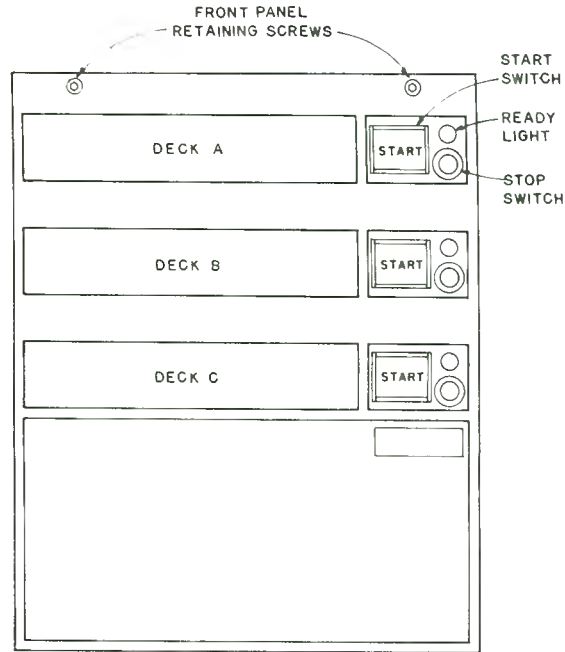


FIGURE 5-1  
3D, FRONT VIEW

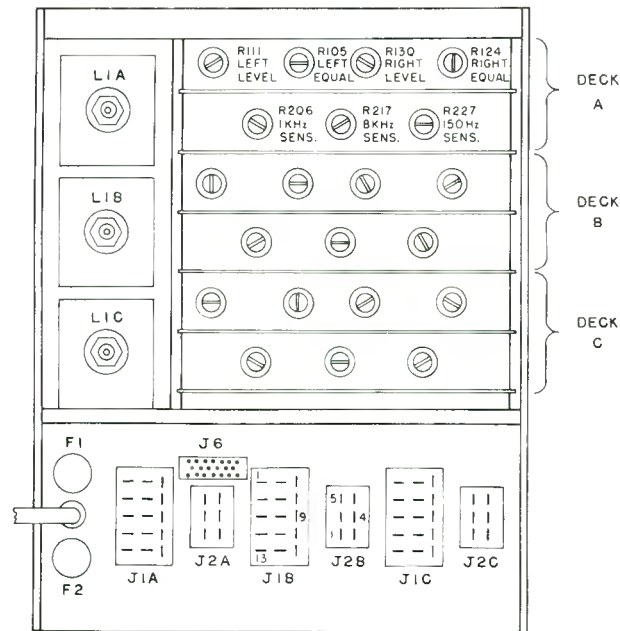


FIGURE 5-2  
3D, REAR VIEW

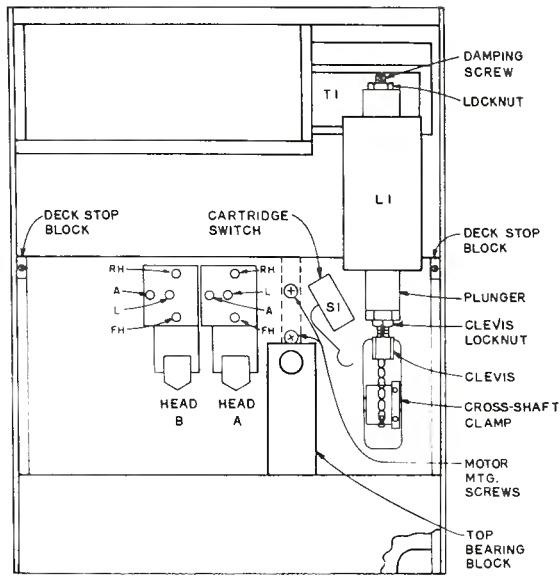


FIGURE 5-3  
3D, TOP VIEW

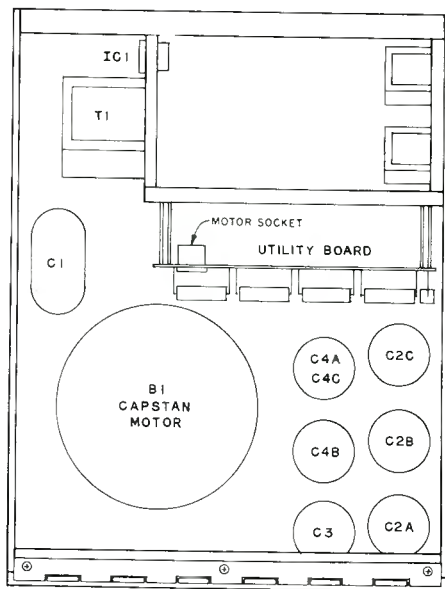


FIGURE 5-4  
3D, BOTTOM VIEW

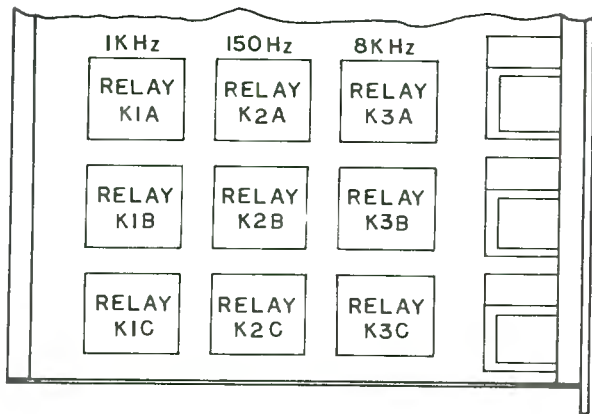


FIGURE 5-5  
3D RELAY CHASSIS, REAR VIEW

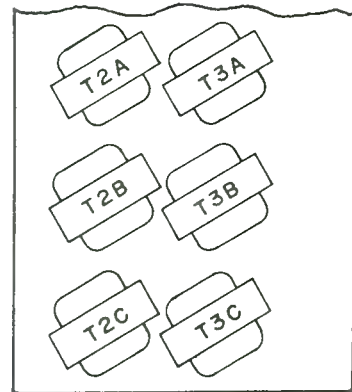


FIGURE 5-6  
3D OUTPUT TRANSFORMER LAYOUT

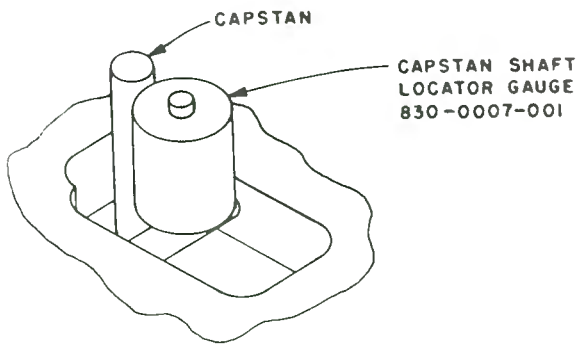


FIGURE 5-7  
CAPSTAN SHAFT ALIGNMENT

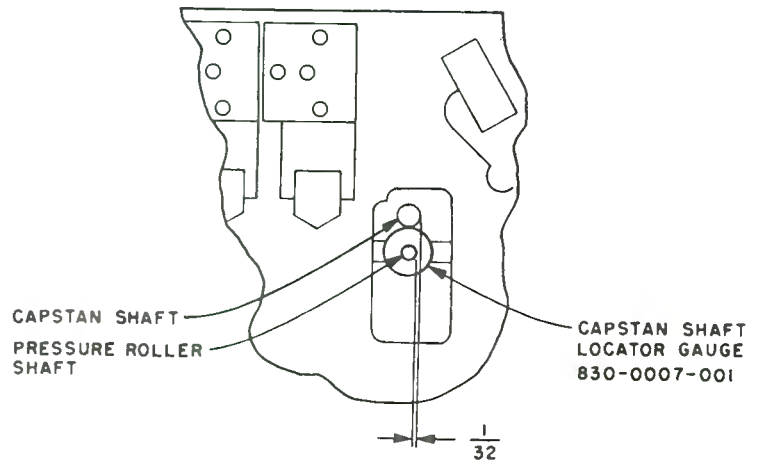


FIGURE 5-8  
CAPSTAN/PRESSURE ROLLER SHAFT ALIGNMENT

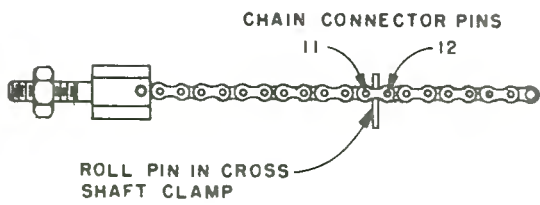


FIGURE 5-9  
LINKAGE CHAIN POSITIONING

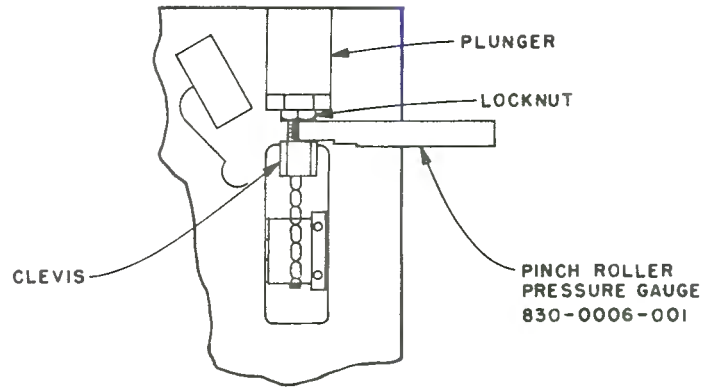


FIGURE 5-10  
PRELIMINARY PLUNGER ADJUSTMENT

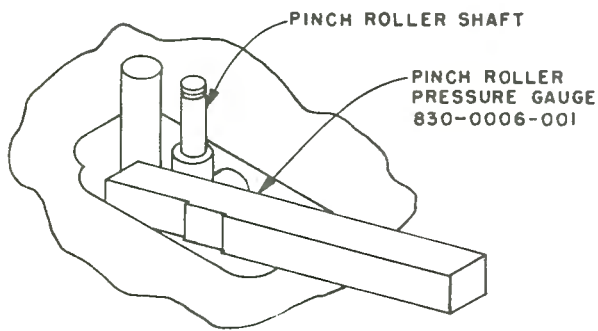


FIGURE 5-11  
PRESSURE ROLLER SHAFT ALIGNMENT

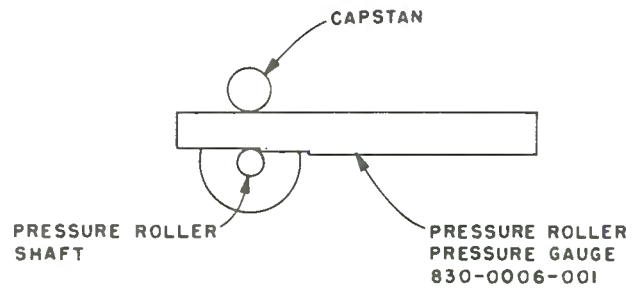


FIGURE 5-12  
TEST OF PRESSURE ROLLER PRESSURE

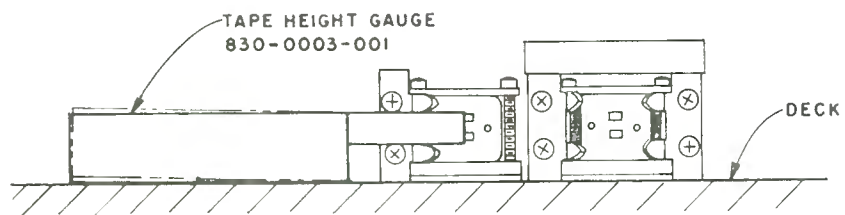


FIGURE 5-13

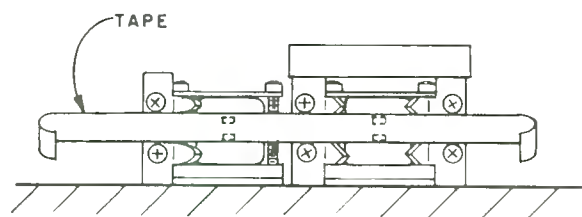


FIGURE 5-15

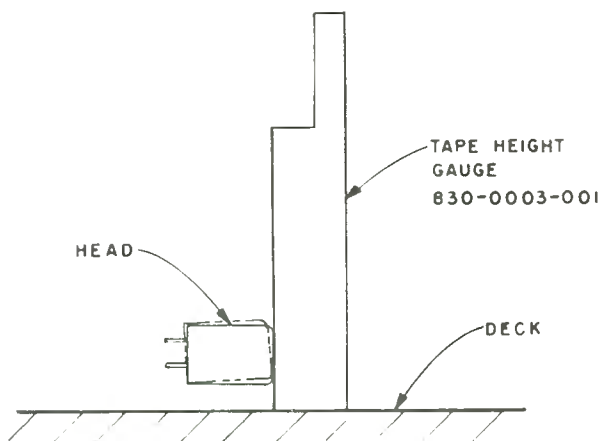


FIGURE 5-14

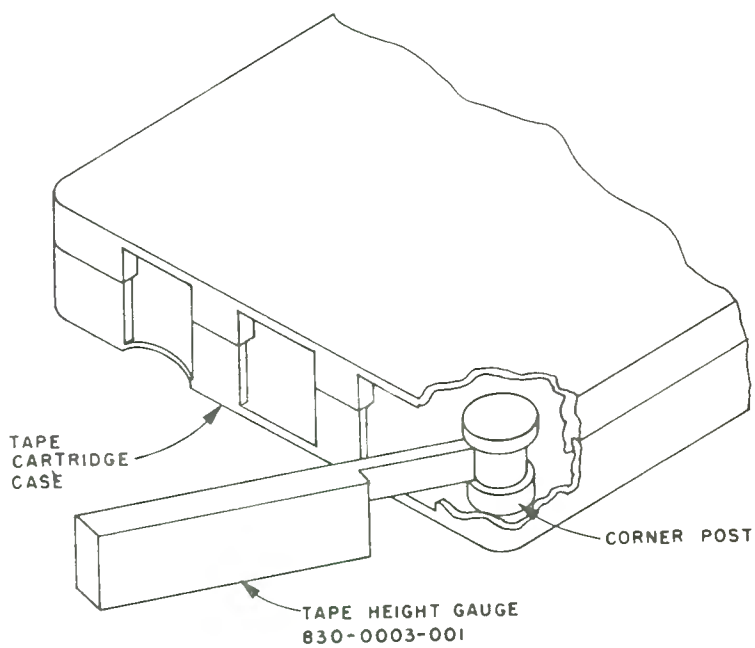


FIGURE 5-16

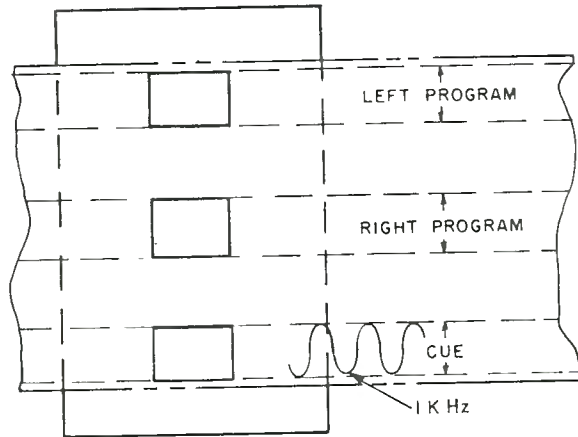
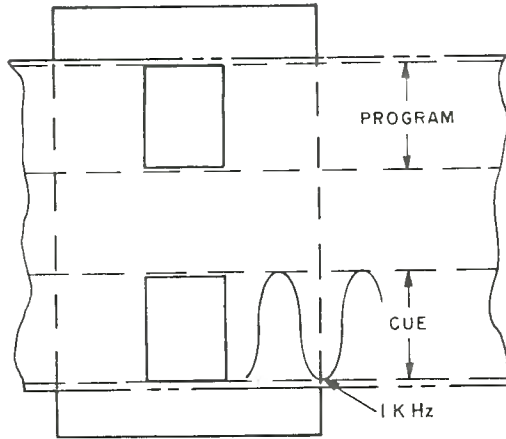


FIGURE 5-17



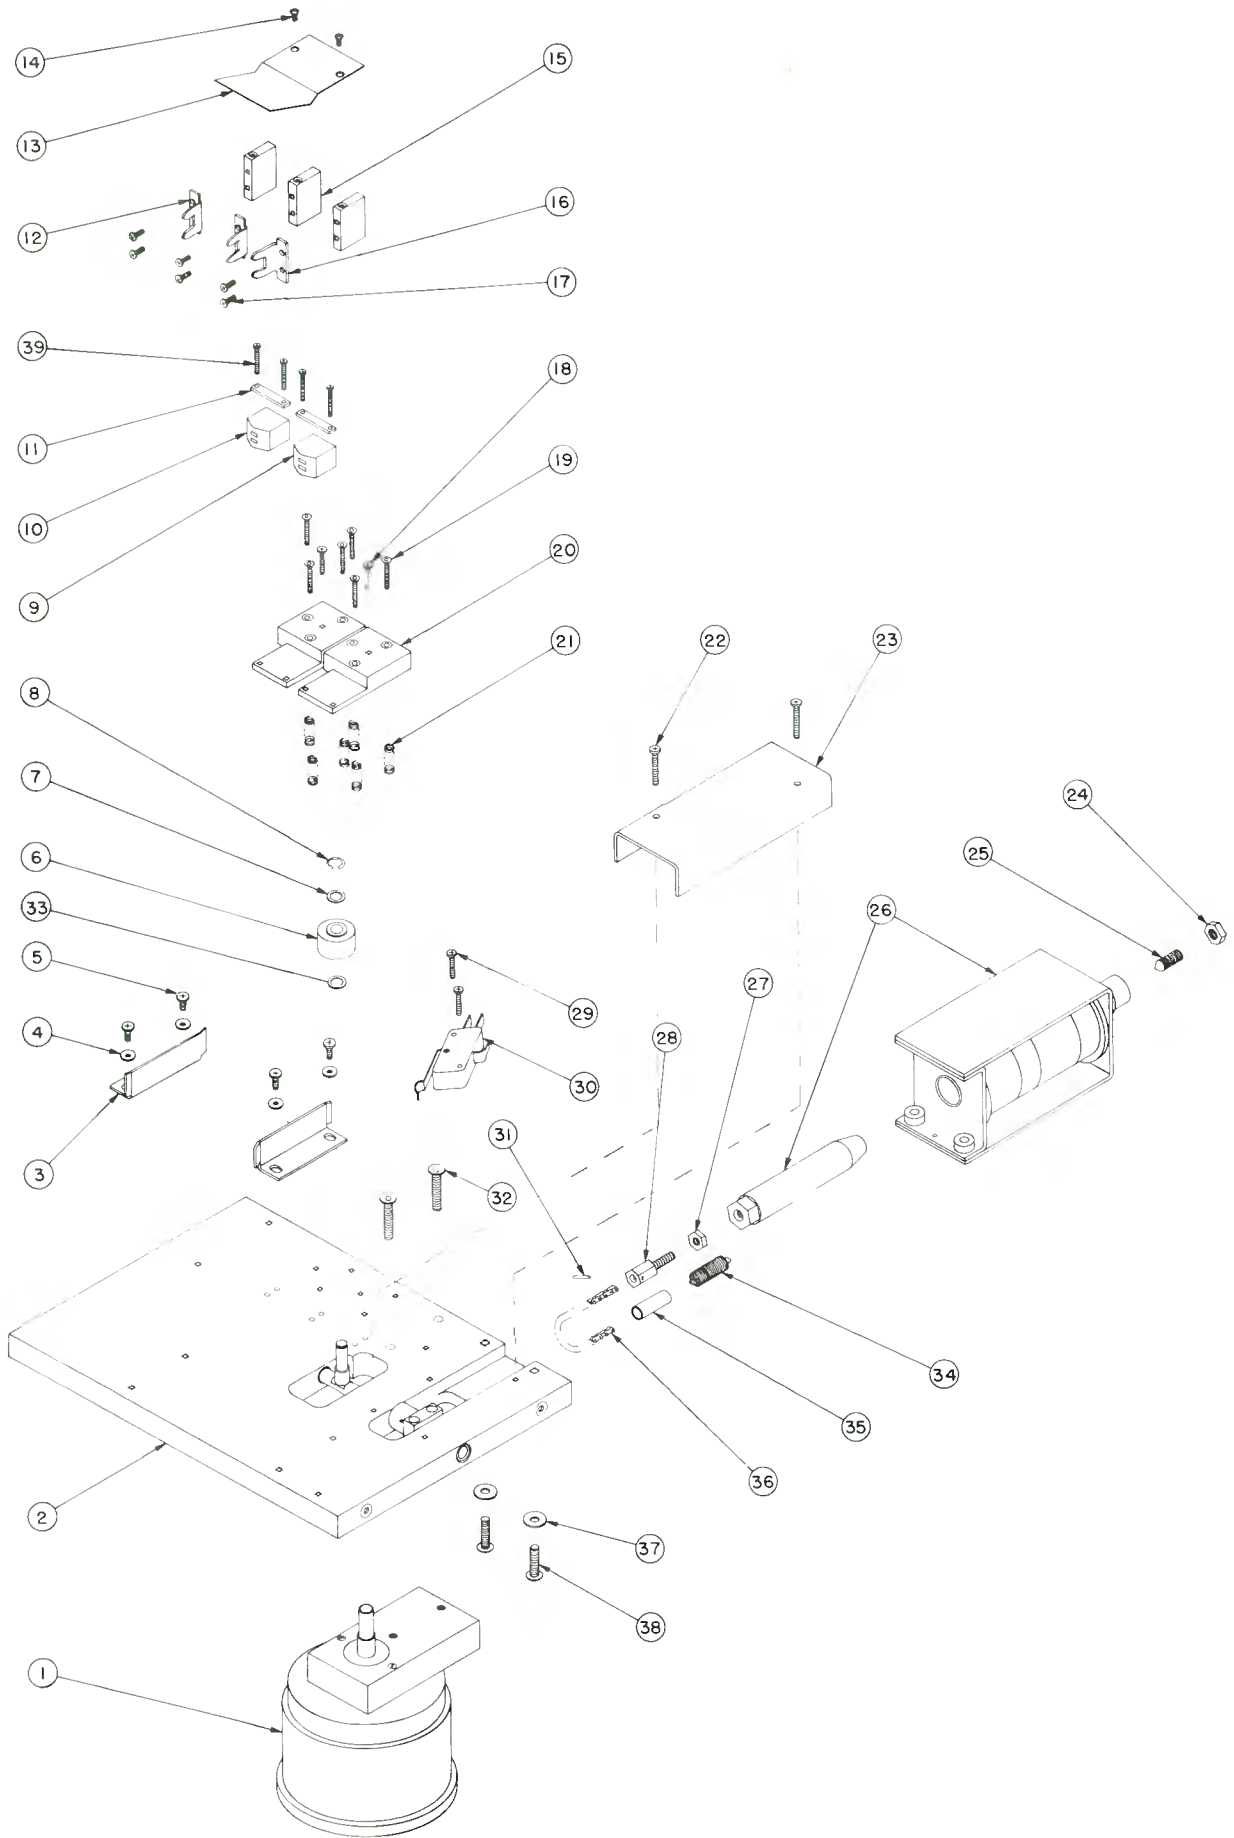


FIGURE 5-18

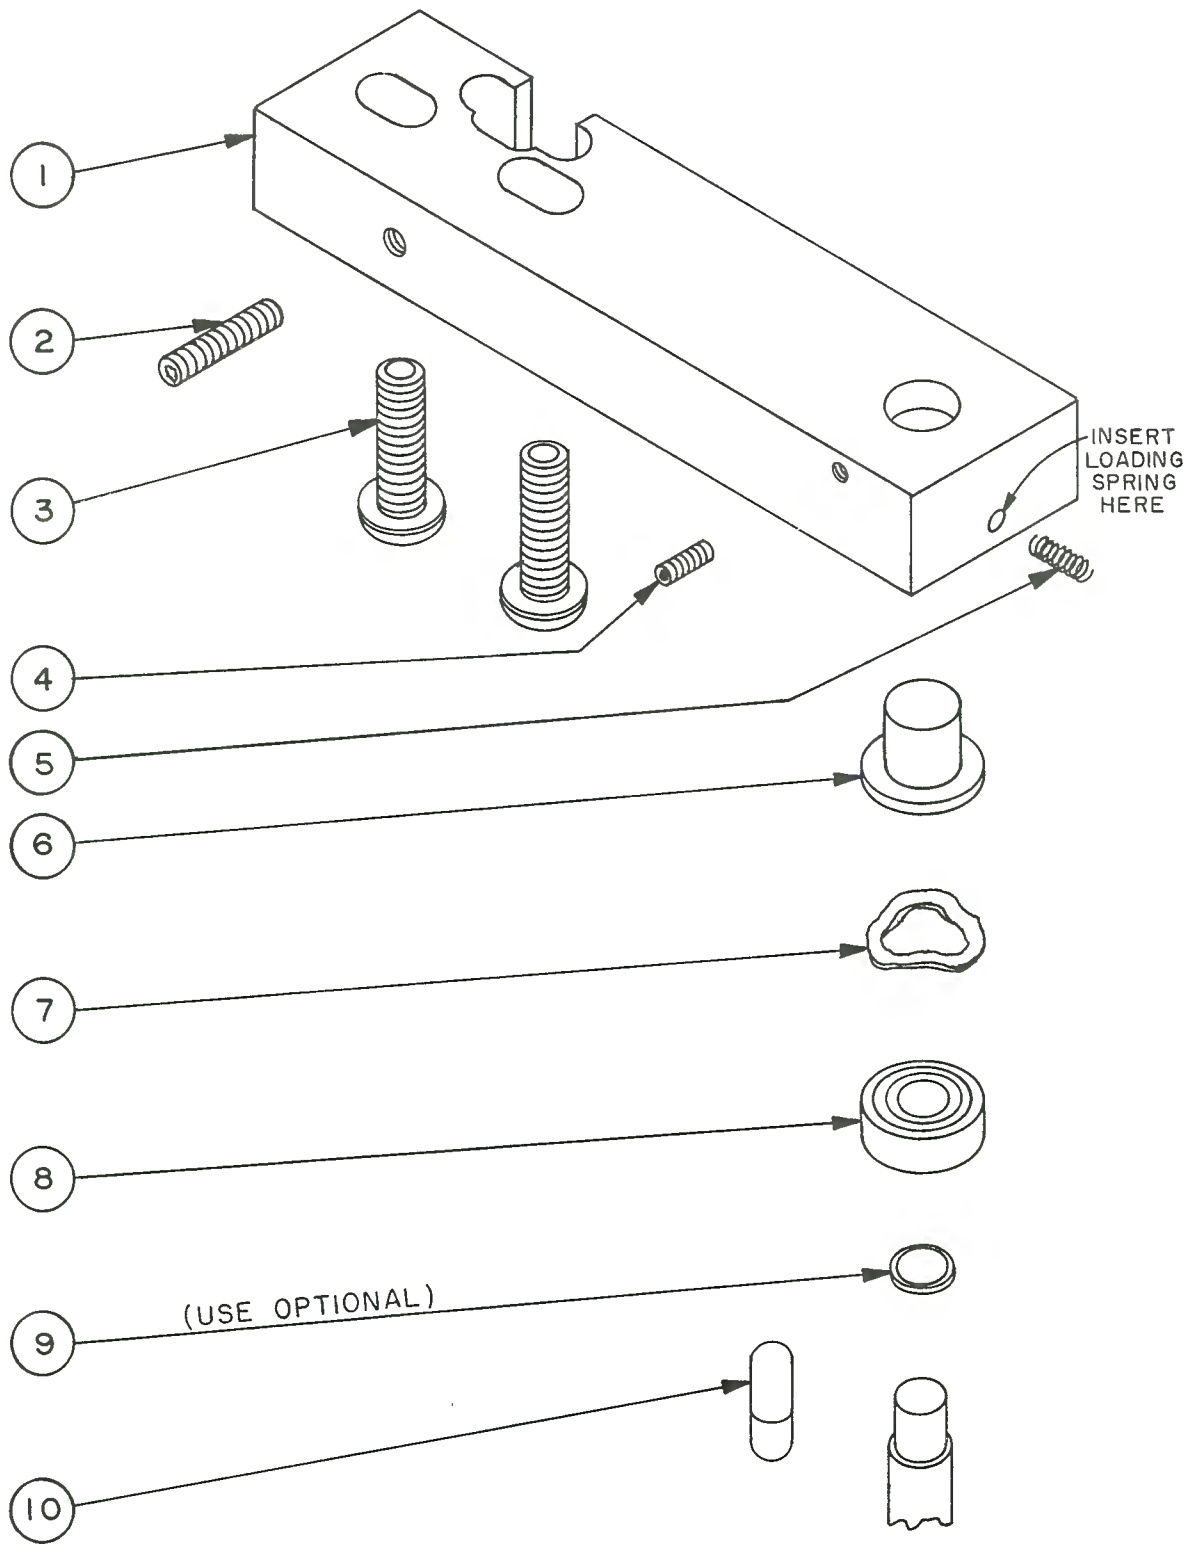


FIGURE 5-19

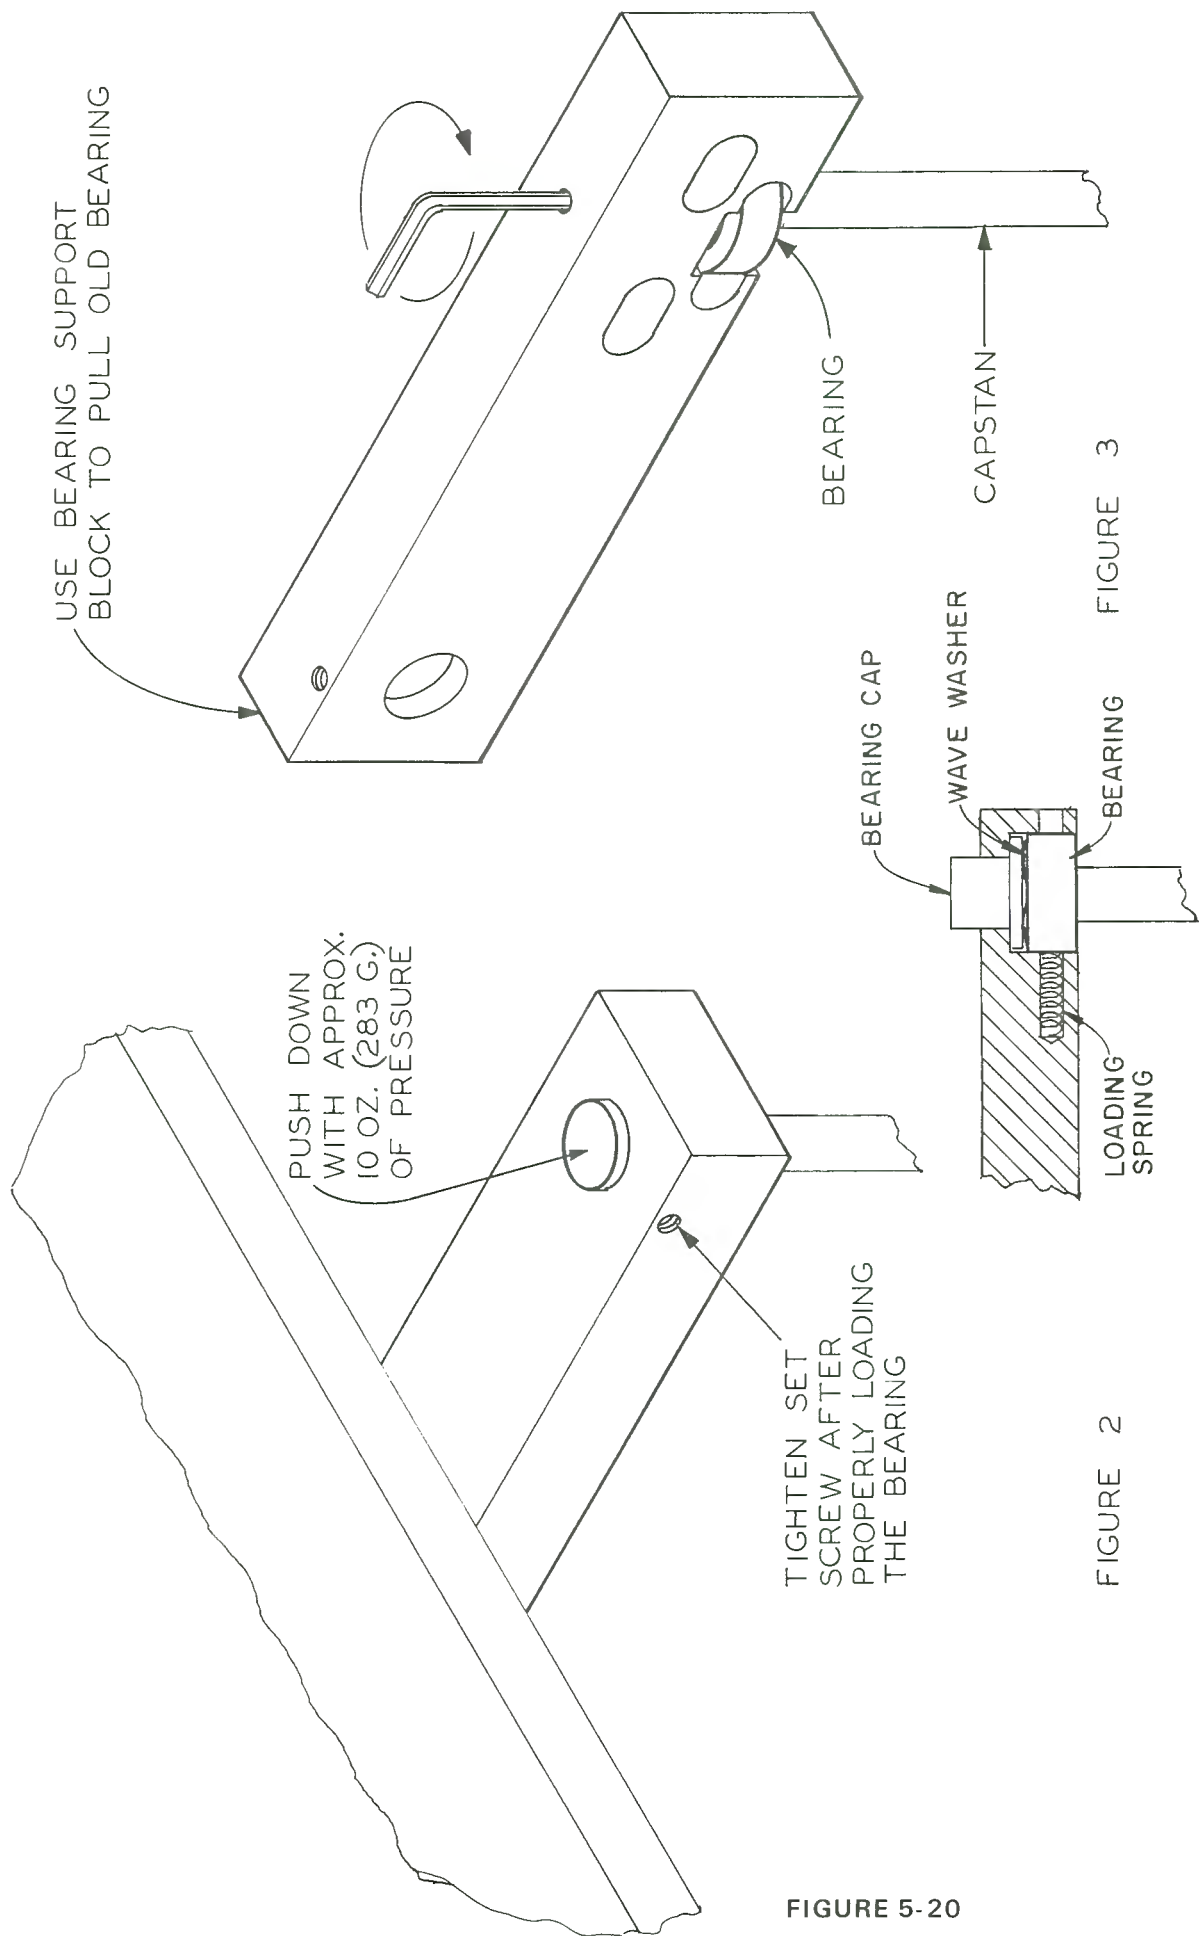


FIGURE 5-20

## SECTION VI

## MECHANICAL PARTS LIST

## 3D SERIES REPRODUCER

(See Figure 5-18)

Item	Part Number	Description	Item	Part Number	Description
1	451-0003-010	Motor, Capstan, 450 RPM, 110 V., 60 Hz, 6 inch shaft	25	355-1102-000	Screw, Set, Solenoid Damping
	451-0008-010	Motor, Capstan, 500 RPM, 110 V., 50 Hz, 6 inch shaft	26	477-0003-002	Solenoid Coil and Plunger
2	267-0003-012	Deck, Fixed, 3D Series	27	370-1001-000	Nut, Lock, Clevis Screw
	267-0002-013	Deck, Movable, 3D Series	28	264-0001-001	Clevis, Screw (Solenoid Linkage)
3	272-0001-001	Guides, Cartridge (two)	29	350-0420-000	Screws, Micro Switch Mtg., (two)
4	360-0601-000	Washers (four)	30	392-0001-000	Switch, Micro
5	350-0604-000	Screws, Cartridge Guide Mtg. (four)	31	282-0001-001	Pin, Roll
	360-1005-000	Washer, steel	32	353-0004-000	Screws, Motor Mounting
6	291-0003-001	Pressure Roller	34	301-0002-000	Spring, Expansion, Solenoid Linkage Return
7	359-0006-000	Washer, mylar	35	441-0004-010	Tubing
8	289-0002-000	Clip, retainer	36	277-0001-000	Chain, Solenoid Linkage
9	504-0002-000	Head, Mono Reproduce, Nortronics, PB2H7KNO	37	360-1003-000	Washers, (two)
	504-0004-000	Head, Stereo Reproduce, Nortronics, PB3Q7KNO	38	353-0003-000	Screws, Solenoid Mounting (two) (See Figure 5-19)
10	504-0001-000	Head, Dummy, Nortronics B12NO	1	284-0001-000	Cap, Bearing Block (hole plug)
	504-0003-000	Head, Mono Record, Nortronics PB2H4RNO (on "C" Deck only when used with recording amp)	2	253-0008-001	Block, Top Bearing
	504-0005-000	Head, Stereo Record, Nortronics PB3Q4RNO (on "C" Deck only when used with recording amp)	3		Screws, Bearing Block Mtg.
11	303-0001-001	Straps, Head Mounting (two)	4	361-0001-000	Washer, Wave
12	350-0307-000	Screws, Head Mtg. (four)	5	311-0011-000	Boot, Bearing
13	301-0001-000	Spring, Cartridge Hold-Down	6	251-0003-000	Bearing, Top
14	350-0402-000	Screws, Cartridge Spring Mtg (two)	7	311-0012-000	Ring, "O"
15	304-0001-001	Supports, Tape Guide (three)	8	359-0003-000	Washers, Shim, mylar, .265 1D, 7/16 OD
	272-0003-001	Guide, Tape, Left (one)	<b>MISCELLANEOUS MECHANICAL PARTS</b>		
16	272-0002-002	Guides, Tape, Center and Right (two)	290-0001-000		Slides, Deck
17	350-0403-000	Screws, Tape Guide Mtg., (six)	253-0007-001		Blocks, Deck Stop (four)
18	350-0415-000	Screws, Head Block Locking, (two)	250-0624-000		Screws, (for above)
19	353-0001-000	Screws, Head Block Azimuth and Height (six)	355-0601-000		Screws, set (In front of sliding decks)
20	253-0001-002	Blocks, Head Mounting (two)	293-0002-013		Grille, bottom
21	301-0003-000	Springs, Compression, Head Block Support (six)	293-0003-014		Grille, top
22	350-0422-000	Screws, Solenoid Plunger Cover Mtg., (two)	311-0010-000		Foot, plastic
23	265-0009-011	Cover, Solenoid Plunger	830-0003-001		Gauge, Tape Height
24	372-1101-000	Nut, Lock	830-0006-001		Gauge, Pressure Roller Pressure
			830-0007-000		Gauge, Capstan Shaft Locator

## SECTION VII

### PRINCIPLES OF ELECTRICAL OPERATION

### 3D SERIES REPRODUCER

#### A. GENERAL INFORMATION

This section of the manual describes the electronic circuitry and the way in which it works. The symbol designations referred to are used on the schematic diagram for the 3D Series Reproducer. (The schematics are located in Section XIV.)

#### B. SOLENOID POWER SUPPLIES

Diodes CR1, CR2, CR3, and CR4 are a full wave bridge rectifier which furnishes 110 volts DC to the solenoid power supply filter. The dual section filter consists of R1, R9, and the two sections of C2. The diodes and resistors are located on the Utility Power Supply board (see Figure 5-4 for the board location) while the filter capacitors are mounted on the under side of Deck C, the bottom deck (see Figure 5-4). The output of 110 volts DC (under load) is switched by the parallel contacts 7 and 11 / 8 and 12 of control relay K1. A network consisting of C13 and R17 is across the coil of each solenoid L1 for transient protection when power is removed.

#### C. LOW VOLTAGE POWER SUPPLY

Transformer T1 provides low voltage AC (with the center tap grounded) to diodes CR6 and CR7, a full wave rectifier that supplies the input to the regulated power supply. Capacitor C3 acts as an input filter. The diodes and resistors of this power supply are mounted on the Utility Power Supply board (see Figure 5-4 for the board location) while the filter capacitors are located on the under side of the deck (see Figure 5-4).

IC1 is the regulated power supply. (See Figure 5-4 for location.) The output of this power supply is +24 volts. The regulated power supply is protected by F1, a fast acting fuse. The output of the regulated power supply is represented on the schematic diagram by a triangle which is common to all other points on the schematic shown with a like symbol. R3 and C4 provide decoupling and additional filtering for the program amplifier card.

The case of IC1 is insulated from the chassis by a mica washer to prevent hum loops. To provide maximum heat dissipation, the mica washer is coated on both sides with thermal conductive agent and IC1 is held firmly in place with two mounting screws.

#### D. CONTROL CIRCUITRY

The chassis control circuitry is furnished with power by the low voltage DC power supply and utilizes ground switching. At all times other than when a primary (1 kHz) cue tone is being detected, positive voltage is routed from the low voltage DC power supply through R215 and CR205 on the cue card to control relay, K1. When a cartridge has been properly inserted in the deck, the cartridge sensing micro switch S1 closes furnishing ground information through contacts 2 and 10 on relay K1 and pin 2 on J5 to the stop cue tone protection circuit on the cue card, the action of which is described under Cue Circuitry. This same "ready" ground is furnished through CR8 and R4 to illuminate I3, the "ready" lamp, and through R5 to a remote "ready" lamp.

The ground furnished through S1 is routed to S3, the Stop Switch, through pin 4 on J1 to a remote stop switch, through the jumper installed between pins 3 and 4 on J1 to S2, the Start Switch, and through pin 3 on J1 to a remote start switch. On the bottom deck the ground arriving at the Start Switch is also made available to a recording amplifier through pin 18 on J6 and through contacts 9 and 1 on K1 and pin 15 on J6.

With conditions described above, pressing the Start Switch presents a ground to pin 13, the coil of K1, the control relay, which energizes and holds itself energized by closing contacts 5 and 9. Contacts 1 and 9 open removing the "ready" ground from the recording amplifier. Contacts 2 and 10 open removing the "ready" ground from the stop tone cue protection circuit and the Ready lamps. Contacts 6 and 10 close providing a ground through R6 to a remote run lamp and to the audio squelch to turn on the audio. Parallel contacts 7 and 11 / 8 and 12 close completing the circuit to energize the solenoid.

When a primary (1 kHz) cue tone is detected, transistor Q203 turns on and takes the junction of R215 and CR205 to ground, removing the positive holding voltage from K1.

Pressing S3, the Stop Switch, accomplishes the same thing with a normally open, momentary action switch which eliminates the disadvantages of a series stop circuit. If for any reason a series remote stop circuit is required, the normally open stop circuit can be replaced with a normally closed circuit by removing the jumper installed inside the machine between pins 3 and 4 on J1

and installing a remote, normally closed switch in its place.

When a secondary (150 Hz) cue tone is sensed, relay K2 is energized. A contact closure is then provided on pins 10 and 11 of J1 by parallel contacts 5 and 9 / 6 and 10. The closure of contacts 8 and 12 shorts out dropping resistor R7 providing a brighter illumination of the Run Lamp as an indication of 150 Hz cue tone detection. Contacts 7 and 11 short out R6 in the remote run lamp circuit.

Relay K3 is energized when an 8 kHz tone is detected. A contact closure is provided on pins 12 and 13 of J1 by parallel contacts 5 and 9 / 6 and 10. The closure of contacts 8 and 12 provides an indication of the 8 kHz cue tone detection by returning the ground to the Ready Lamp circuit. Diode CR8 functions as a blocking diode and prevents this ground from being presented to the stop cue tone protection circuit.

## E. CUE CIRCUITRY

The plug-in Cue Detector card is located at the rear of the deck assembly. The 1 kHz Primary Cue detector and the optional 150 Hz and 8 kHz detectors when so equipped are designed to operate from tones as specified in the NAB Standards.

Transistors Q210 and Q211 are the equalized preamplifier stages which provide essentially equal voltage for each of the normal level cue tones to the common signal bus of the three detectors (when so equipped).

Diodes CR201 and CR202 act as a signal limiter to prevent the signal bus from exceeding the detector input maximum level of approximately .5 volts. This bus is also supplied to the remote socket J1 (Pin 15) and to the recorder meter circuits via J6 (Pin 2) of WP Series Reproducers.

The 1 kHz Primary Cue section contains a stop cue tone protection circuit which prevents the machine from being stopped by a 1 kHz tone for approximately two seconds after the unit is started. While the reproducer is sitting idle with a cartridge inserted (cartridge sensing micro switch S1 closed), capacitor C206 is discharged through R204, CR203, contacts 2 and 10 of relay K1, and S1 to ground. When the reproducer is started, the discharge path is opened by relay K1, and C206 begins to be charged by the 24 volt DC power supply through resistor R203. While C206 is charging, the base of Q201 is clamped sufficiently close to ground to prevent operation of the 1 kHz detector. When C206 is charged to approximately 11 volts, diode CR204 is reverse biased and the lamp is removed.

In the 1 kHz Primary Cue Section, a series resonant circuit consisting of L201, C208 and C209 provides a low impedance regenerative cir-

cuit for Q201 at 1 kHz, while attenuating frequencies more than a few percent above or below 1 kHz. Transistor Q202 is a zero bias signal rectifier which amplifies positive current pulses present at its base. R212, R213 and C210 act as the rectifier load and coupling network to switching transistor Q203. This configuration also acts to filter out any transients that may be present on incoming signals. Q203 diverts current flow from relay coil K1 during the cue tone and causes it to de-energize and stop the tape drive.

The operation of the 150 Hz Secondary and 8 kHz Tertiary Cue sections is, in principle, the same — except that the tuned circuit is designed for the respective frequency. Since no tone protection is provided in these circuits, the 150 Hz and 8 kHz detectors are free to operate at any time. Switching transistors Q209 and Q206, when conducting, operate relays K2 and K3 respectively.

NOTE: The NAB standards specify that the Primary Cue tone oscillator generate a tone of 925 Hz to 1075 Hz. Many older cartridge recorders produce a stop cue tone that is well outside these tolerances.

A broad-band cue detector is supplied in ITC single cue tone machines. This broad-band cue detector will pass a wide range of frequencies which permits proper cueing of cartridges recorded on older machines. The broad-band characteristics will cause no problem as long as only single cue tone operation is used. Components C220 and C221 provide the broad-band operation.

The broad-band detector can be changed to the narrow band mode (1 kHz  $\pm$  75 Hz) by removing the white wire strap that is on top of the detector PC card. In addition, it may be necessary to increase the gain of the detector by turning the sensitivity control clockwise. (The detector has about 10 dB less gain in the narrow band mode.)

## F. PROGRAM PLAY CIRCUITRY

The program play amplifier is located on the plug-in PC Card immediately to the rear of the deck assembly. Single monophonic or dual stereophonic amplifiers of identical design are on the same card, depending upon machine design.

Transistors Q101 and Q102 are the high stability equalized pre-amplifier stages. Adjustable AC feedback equalization is employed to improve input impedance. These components are C104, R104 and R105 in the L. Channel amplifier. Out-

## A. CONTROLS

The various electrical controls listed below are adjusted at the factory to provide optimum operation of the ITC Reproducer. At the time of installation, the only control which may require adjustment is Program Level.

A good maintenance schedule will include periodic checks (weekly or monthly—depending upon operational requirements) of the machine's electronics, but always remember to check the adjustment of and demagnetize heads first. Small adjustments of the electronic controls may be required to compensate for normal head wear, but large adjustments may indicate the need for head replacement or further testing.

See Figure 5-2 for the location of the electronic controls, and notice that all controls, both program and cue, are duplicated for each deck.

1. **Program Level:** The output level of the program amplifier(s) is factory adjusted for 0 dBm when reproducing a "standard level" tone. R111 is the control for mono reproducers and the left channel of stereo units. R130 controls the right channel of stereo machines. If the output level must be reduced below -10 dBm, an external pad should be installed to maintain the best possible signal to noise ratio.
2. **Program Equalization:** Equalization of the program amplifier(s) is factory adjusted to

conform with NAB equalization curve. The equalization control(s) may be used to compensate for head wear and for small variations in heads when replacement is required. The equalization control for mono and the left channel of stereo units is R105 while R124 is the control for the right channel of stereo reproducers. The equalization control(s) should be adjusted to provide the smoothest possible response during the reproduction of a frequency response test cartridge.

3. **Primary (1 kHz) Cue Sensitivity:** The sensitivity of the 1 kHz Primary Cue Detector is increased by turning R206 clockwise. This control is normally set to respond to a 1 kHz tone 8 dB below the NAB level for this tone.
4. **Secondary (150 Hz) Cue Sensitivity:** Turning R227 clockwise increases the sensitivity of the Secondary (150 Hz) Cue Detector and is normally adjusted to respond to a 150 Hz tone 10 dB below the NAB level for this tone.
5. **Tertiary (8 kHz) Cue Sensitivity:** To increase the sensitivity of the Tertiary (8 kHz) Cue Detector, turn R217 clockwise. Normal adjustment will allow the 8 kHz Detector to respond to a tone 10 dB below the NAB level for this tone.

put from these stages is coupled through the electronic attenuator IC101 to the gain control R111. Audio is muted by IC101 in all but the run mode. Transistors Q103 and Q104 are conventional voltage amplifiers, each with local AC feedback employed. The output is connected via edge pin 1 to the balanced output transformer T2. Output impedance is normally 600 ohms but may be changed to 150 ohms by re-connection of the secondary wires. Refer to the schematic notes.



## TEST CARTRIDGES

## 3D SERIES REPRODUCER

## A. PREVENTIVE MAINTENANCE

Preventive maintenance of the electrical adjustments should be done on monthly schedule. Each installation should be equipped with a primary test cartridge such as the NAB Standard Test Tape.

Should a primary test cartridge be used to test several tape transports on a monthly basis, the short wave length sensitivity will be degraded by repeated playing. The proper handling and storing of the Primary Test Cartridge, and proper cleaning of heads and tape guides will minimize signal loss. The best method to preserve a primary test cartridge is to record your own test cartridges as outlined below and compare them with the primary test cartridge every six months. It is important that all test cartridges contain the same type of tape that is used for normal recording.

## B. TEST CARTRIDGES

1. **Test Cartridge No. 1:** Carefully align the reproducer to the Primary Test Cartridge for azimuth and level. Verify the proper adjustment of the recorder electronics and the recording head azimuth. Select a properly erased cartridge of known good guidance. Record a 15 kHz azimuth tone at -10 dB level for 30 seconds. Follow this tone with 400 Hz, 10 kHz, 5 kHz, 2500 Hz, 1 kHz, 250 Hz, 100 Hz and 50 Hz tones at -10 dB level and 5 seconds duration. The last tone should be 400 Hz at 0 dB level of 20 seconds duration. This tape can now be used for day to day response tests as a second generation standard.
2. **Test Cartridge No. 2:** (Refer to the recorder instructions for adjusting the level of the tone oscillators.) Temporarily connect the cue head to the properly calibrated program amplifier input. With an erased tape, adjust these tone oscillator levels to 8 dB below normal. The program amplifier will play at -7.6 dB for 1 kHz, -1.9 dB for 150 Hz and -17.4 dB for 8 kHz. Record each tone at an interval of approximately 5 seconds at this level. Set this tape aside. With another tape, return the tone oscillators to their proper settings (+0.4 dB for 1 kHz, +6.1 dB for 150 Hz, and -9.4 dB for 8 kHz). The -8 dB tone tape may now be used as required to adjust the tone detector levels to just reliably operate at the -8 dB from normal tone level setting.
3. **Test Cartridge No. 3:** Using a long car-

tridge, record a single 1 kHz cue tone on the cue track. Accurately time this cartridge in several machines. Average the playing time and mark the exact time on the rear of this cartridge.

If a frequency counter is available, record a 12 kHz tone on the program track at -10 dB. Play this cartridge in two or more tape transports and measure the frequency of the tone. Average the measurements and mark the frequency on the rear of the cartridge.

4. **Test Cartridge No. 4:** This cartridge is to be used for the height adjustment of the heads during the run mode. The cartridge has the pressure pads removed and the top section is cut out to allow observation of the tape travel across the heads. Since the pressure pads are removed, the tape travel across the cartridge face must be checked to be sure it is parallel with the base of the case.

## C. USE OF TEST CARTRIDGES

1. **Mechanical Head Adjustment:** Place test cartridge No. 4 in the tape transport and check the tape travel across the tape heads. (Refer to Figure 5-15.) If the tape travel is incorrect, perform adjustment in accordance with Section 4.
2. **Program Playback Level:** The output level of the program amplifier is factory adjusted for 0 dBm when reproducing the NAB Standard Reference Level Tape, 400 Hz. Test cartridge No. 1 may be used to adjust this level as required. Refer to Section 8-1 for these adjustments.
3. **Program Playback Equalization:** Equalization of the program amplifier(s) is adjusted for flattest response. Test cartridge No. 1 may be used to adjust this response when necessary. It is cautioned not to attempt this adjustment until reproduce head azimuth adjustment of Section 4 are performed.
4. **Cue Detector(s) Sensitivity:** Test cartridge No. 2 is used to make adjustments as required. Refer to Section 8-3, 4, and 5 for these adjustments.
5. **Machine Speed Tests:** Test cartridge No. 3 is used for the periodic speed test. Insert this cartridge in the machine and measure the running time. If the running time is outside the 0.1% specification, refer to the mechanical adjustments in Section 4 and perform these as necessary to restore proper timing.


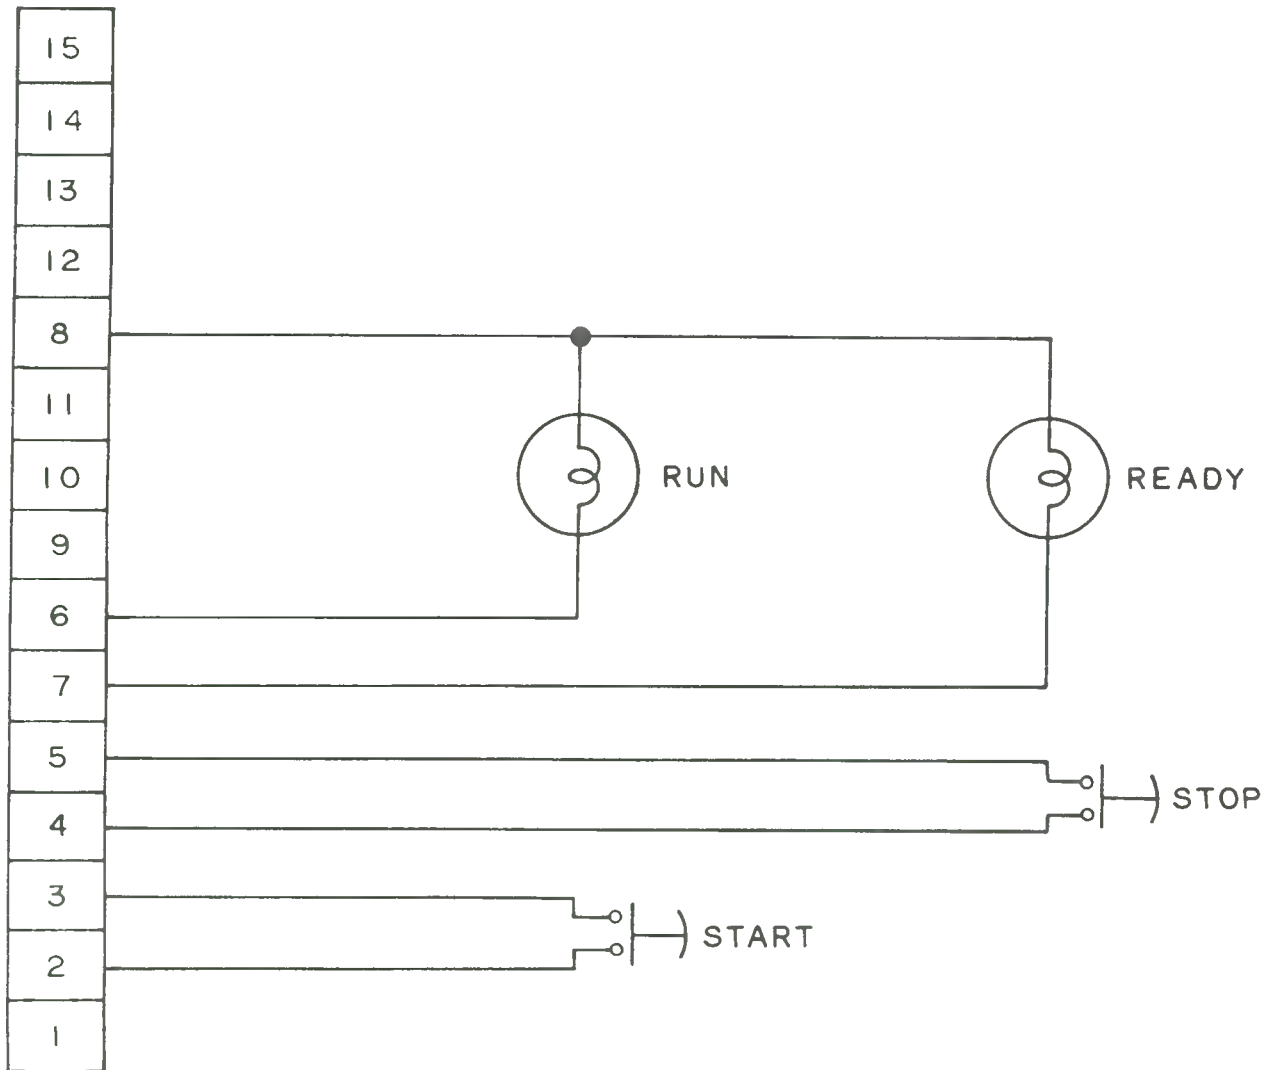


FIGURE 10-1

SAMPLE REMOTE CONTROL SCHEMATIC

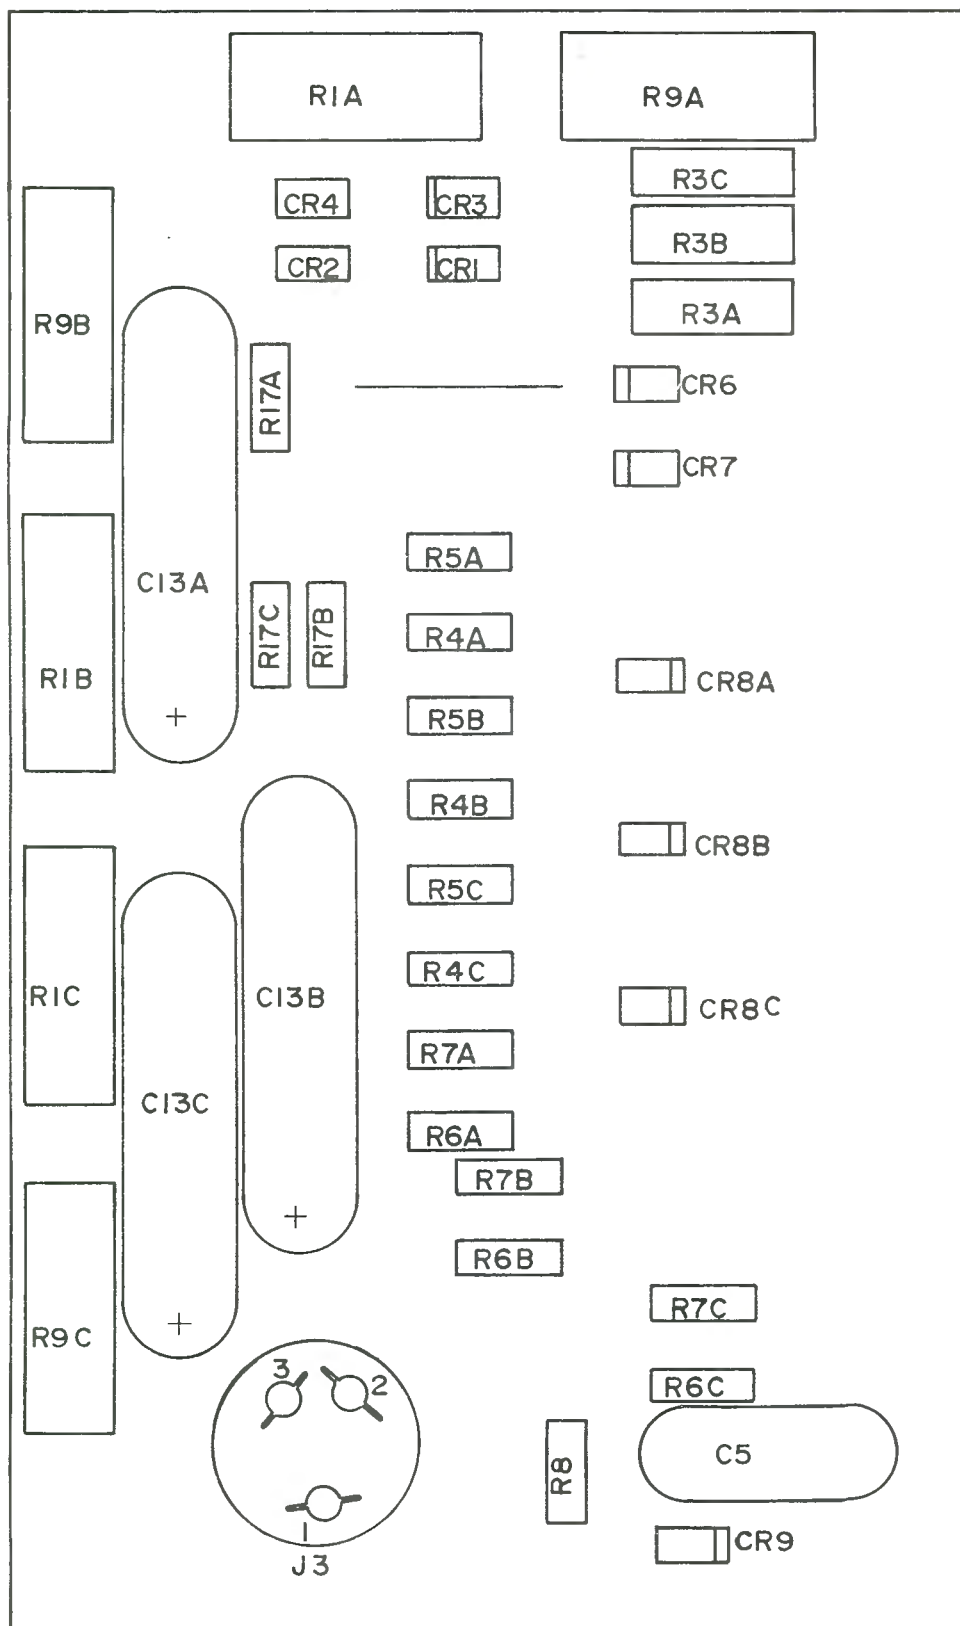

831-0030-003  
UTILITY CARD

# CUE DETECTOR CARD

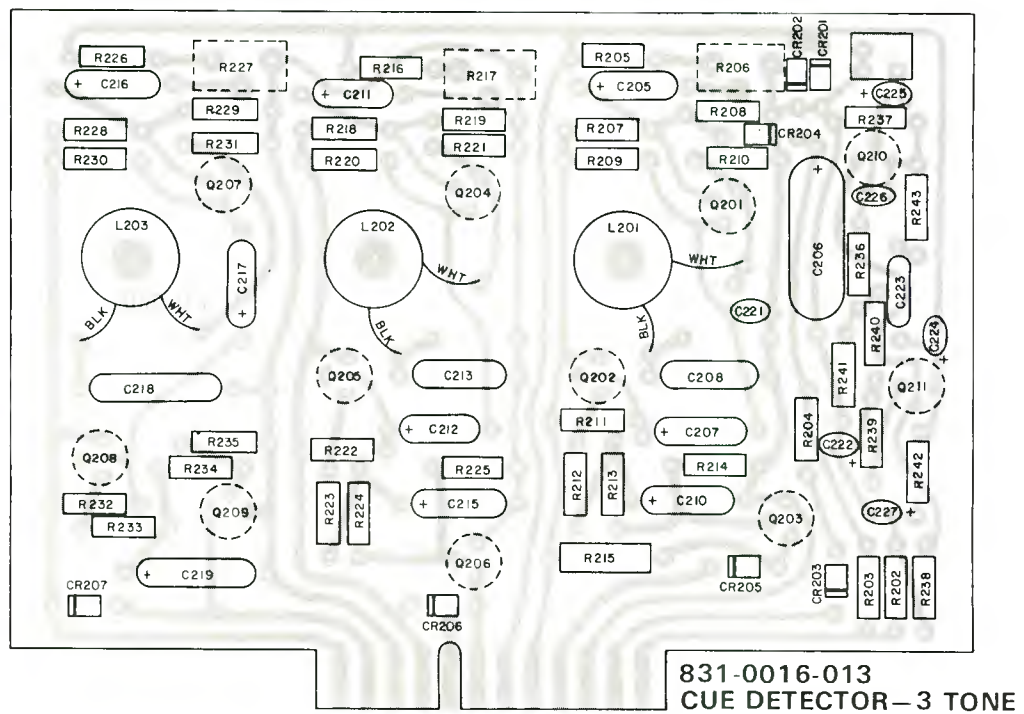
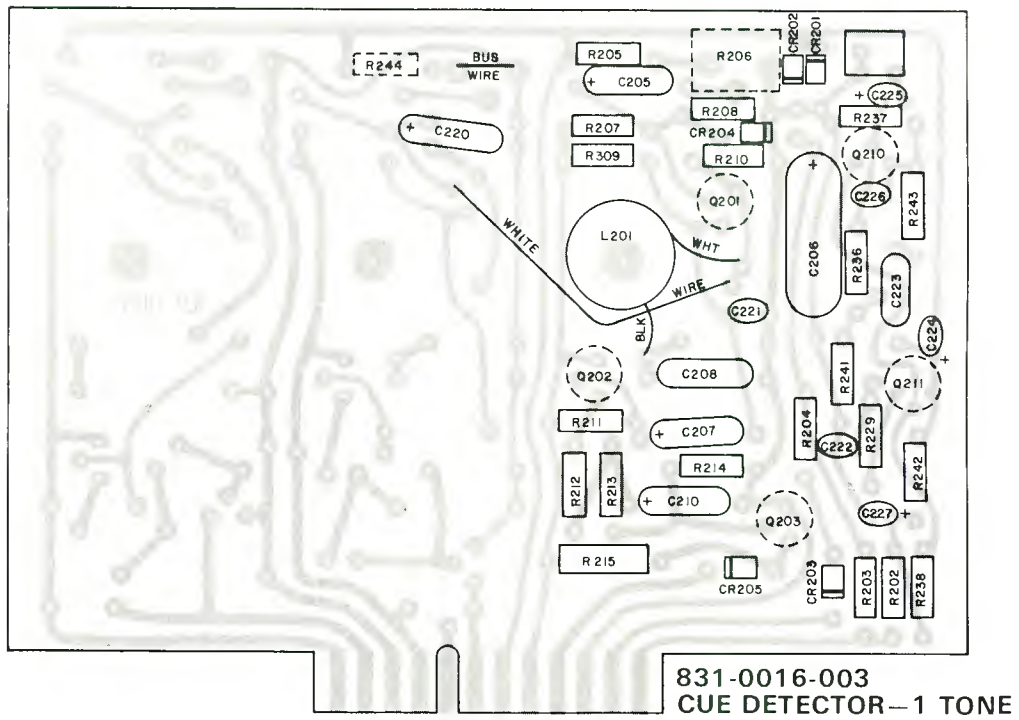


FIGURE 10-3

# PROGRAM AMPLIFIER CARD

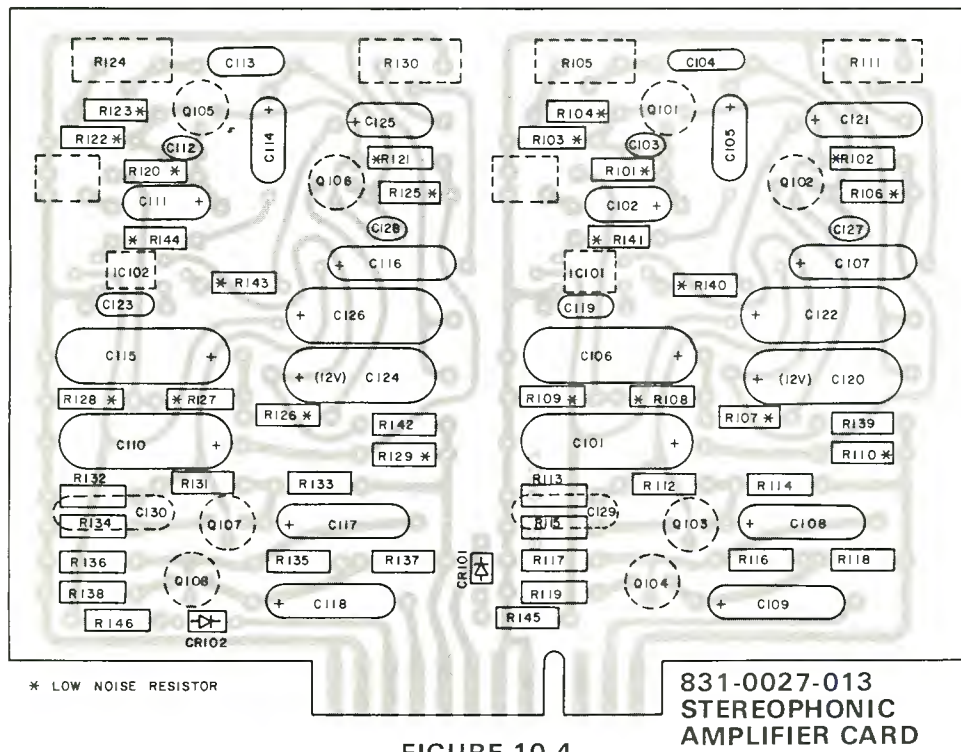
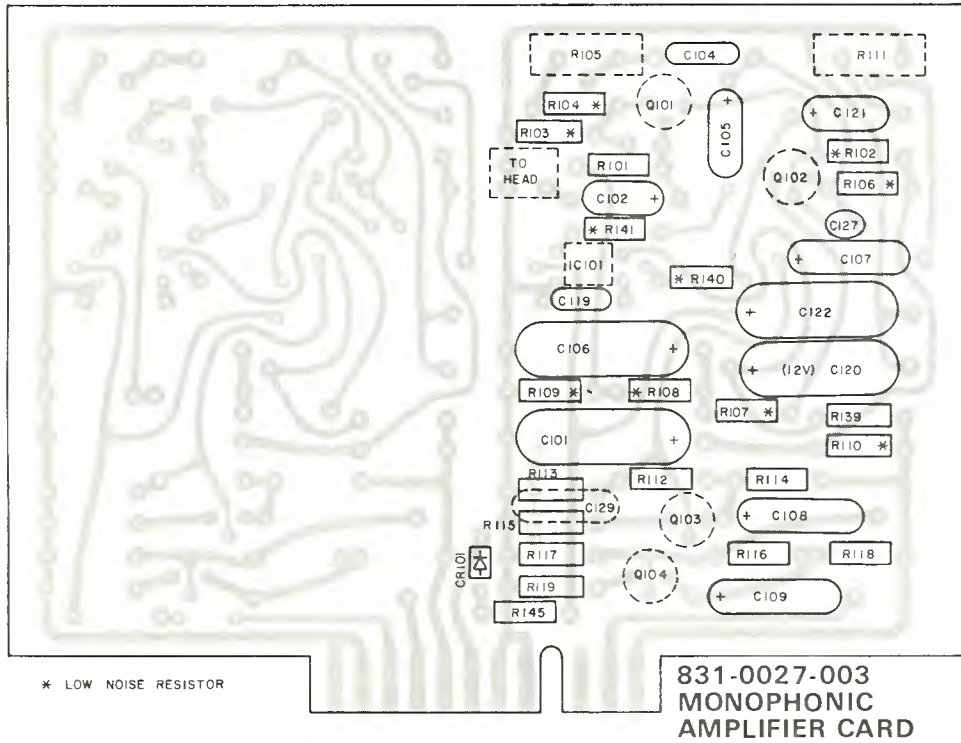


FIGURE 10-4

## SECTION XI

### ELECTRICAL PARTS LIST

### 3D SERIES REPRODUCER

#### A. CHASSIS

Symbol	Part Number	Description
<b>FUSES</b>		
F1	417-0006-000	¼ ampere, 3AG
F2	417-0002-000	1 ampere, slow-blow, 3AG
<b>LAMPS</b>		
I2 A,B,C	415-0001-000	≠ 327, 28 V
I3 A,B,C	415-0003-000	Cartridge, 28 V, yellow, Dialco 507-3918-1476-600
	263-0001-000	Clip, Retaining, for above lamp
<b>INTEGRATED CIRCUIT</b>		
IC1	605-0007-000	Series Regulated Power Supply, 25 VDC, 1 amp, Fairchild 7824 KC
<b>SOCKETS</b>		
J1 A,B,C	380-0004-000	15 pin (Control)
J2 A,B,C	380-0003-000	6 pin (Audio)
J4 A,B,C	380-0002-000	12 pin Card Edge (Program)
J5 A,B,C	280-0002-000	12 pin Card Edge (Cue)
J6	380-0011-000	20 pin (Interconnect to Recording Amp)
<b>RELAYS</b>		
K1 A,B,C	480-0001-000	4 PDT, 24 V (1 kHz, Control)
K2 A,B,C	580-0001-000	4 PDT, 24 V (150 Hz)
K3 A,B,C	480-0001-000	4 PDT, 24 V (8 kHz)
<b>INDUCTIVE DEVICES</b>		
L1 A,B,C	477-0006-002	Solenoid, 110 Volt DC
L2 A,B,C	504-0002-000	Head, Mono Reproduce, Nortronics PB2H7KNO
	504-0004-000	Head, Stereo Reproduce, Nortronics PB3Q7KNO
L3 A,B,C	504-0001-000	Head, Dummy, Nortronics H801016
	504-0003-000	Head, Mono Record, Nortronics PB2H4RNO (on "C" Deck only when used with a WRA Series Re- cording Amplifier)
	504-0005-000	Head, Stereo Record, Nortronics PB3Q4RNO (on "C" Deck only when used with a WRA Series Re- cording Amplifier)
<b>PLUGS</b>		
P1 A,B,C	378-0003-000	15 pin (Control)
P2 A,B,C	378-0002-000	6 pin (Audio)
P3	378-0001-000	3 pin (Motor)
<b>SWITCHES</b>		
S1 A,B,C	392-0001-000	Micro (Cartridge Sensing)
S2 A,B,C	391-0002-000	Push-Button (start) Dialco 513-0101-604
	404-0007-010	Lens for above, green, Dialco 303-3472, Engraved "START"
S3 A,B,C	391-0004-000	Switch, Push-Button (stop) Switchcraft 913
<b>TRANSFORMERS</b>		
T1	526-0002-000	Power (NT 1117)
T2 A,B,C	532-0001-010	Audio (NT 712)
T3 A,B,C	532-0001-010	Audio (NT712) (Stereo Only)
<b>CAPACITORS</b>		
C1	683-0001-000	1.5 mfd, 370 V, (for 60 Hz motor)
	683-0003-000	2.0 mfd, 370 V, (for 50 Hz motor)
C2 A,B,C	698-0003-000	100/ 100 mfd, 250 V

Symbol	Part Number	Description
C3	689-0001-000	1000 mfd, 50 V
C4 A	698-0001-000	1000 mfd, 50 V
C4 B,C	698-0004-000	1000/ 1000 mfd, 50 V
<b>MISCELLANEOUS</b>		
	507-0001-010	Head Lead Assembly, mono play
	507-0002-030	Head Lead Assembly, stereo play left
	507-0003-030	Head Lead Assembly, stereo play cue
	507-0004-030	Head Lead Assembly, stereo play right
	507-0001-000	Head Lead Assembly, mono record
	507-0002-030	Head Lead Assembly, stereo record left
	507-0003-030	Head Lead Assembly, stereo record cue
	507-0004-030	Head Lead Assembly, stereo record right
	433-0001-000	Cord, AC Power
	418-0001-000	Holder, Fuse
	487-0001-000	Sockets, relay
	613-0002-000	Socket, TO-3 Transistor (for IC1)
	831-0012-002	PC Card, Test Extender, 12 Conductor

#### B. UTILITY CARD (831-0030-003)

<b>CAPACITORS</b>		
C5	696-0078-000	100 mf, 12 V
C13 A,B,C	696-0164-000	20 mf, 150 V
<b>RESISTORS</b>		
R1 A,B,C	628-0116-000	75 ohms, 5 watts, 5%
R3 A,B,C	626-0439-000	100 ohms, 1 watt, 10%
R4 A,B,C	626-0251-000	330 ohms, ½ watt, 5%
R5 A,B,C	630-0239-000	100 ohms, ½ watt, 5%
R6 A,B,C	630-0239-000	100 ohms, ½ watt, 5%
R7 A,B,C	626-0239-000	100 ohms, ½ watt, 5%
R8	626-0231-000	47 ohms, ½ watt, 5%
R9 A,B,C	628-0116-000	75 ohms, 5 watt, 5%
R17 A,B,C	626-0231-000	47 ohms, ½ watt, 5%

<b>DIODES</b>		
CR1	575-0007-000	IN4005
CR2	575-0007-000	IN4005
CR3	575-0007-000	IN4005
CR4	575-0007-000	IN4005
CR6	575-0007-000	IN4005
CR7	575-0007-000	IN4005
CR8 A,B,C	575-0007-000	IN4005
CR9	575-0007-000	IN4005

<b>MISCELLANEOUS</b>		
J3	380-0001-000	3 Pin motor socket, w/ clip

#### C. PROGRAM REPRODUCE AMPLIFIER CARD

<b>MONO</b>	<b>831-0027-003</b>
<b>STEREO</b>	<b>831-0027-013</b>

<b>CAPACITORS</b>		
C101	696-0124-000	100 mfd, 25 V.
C102	696-0114-000	5 mfd, 25 V.
C103	677-0001-000	100 pfd, 300 V.
C104	681-0046-000	.01 mfd, 200 V.
C105	696-0114-000	5 mfd, 25 V.
C106	696-0124-000	100 mfd, 25 V.
C107	696-0117-000	10 mfd, 25 V.

Symbol	Part Number	Description	Symbol	Part Number	Description
C108	696-0117-000	10 mfd, 25 V.	R127	630-0283-000	6800 ohms, 1/2 watt, 5%, Lo Noise
C109	696-0117-000	10 mfd, 25 V.	R128	630-0269-000	1800 ohms, 1/2 watt, 5%, Lo Noise
C119	681-0032-000	.00068 mfd, 200 V.	R129	630-0293-000	18 K ohms, 1/2 watt, 5%, Lo Noise
C120	696-0202-000	450 mfd, 12 V.	R130	636-0002-000	Variable, 10 K ohms, 1/4 watt, (Right Level)
C121	696-0114-000	5 mfd, 25 V.	R131	626-0307-000	68 K ohms, 1/2 watt, 5%
C122	696-0122-000	50 mfd, 25 V.	R132	626-0287-000	10 K ohms, 1/2 watt, 5%
C127	677-0001-000	100 pfd, 300 V.	R133	626-0271-000	2.2 K ohms, 1/2 watt, 5%
C129	681-0050-000	.022 mfd, 200 V.	R134	626-0251-000	330 ohms, 1/2 watt, 5%

#### CAPACITORS (STEREO ONLY)

C110	696-0124-000	100 mfd, 25 V.
C111	696-0114-000	5 mfd, 25 V.
C112	677-0001-000	100 pfd, 300 V.
C113	681-0046-000	.01 mfd, 200 V.
C114	696-0114-000	5 mfd, 25 V.
C115	696-0124-000	100 mfd, 25 V.
C116	696-0117-000	10 mfd, 25 V.
C117	696-0117-000	10 mfd, 25 V.
C118	696-0117-000	10 mfd, 25 V.
C123	681-0032-000	.00068 mfd, 200 V.
C124	696-0202-000	450 mfd, 12 V.
C125	696-0114-000	5 mfd, 25 V.
C126	696-0122-000	50 mfd, 25 V.
C128	677-0001-000	100 pfd, 300 V.
C130	681-0050-000	.022 mfd, 200 V.

#### TRANSISTORS

Q101	590-0013-000	2N5089
Q102	590-0013-000	2N5089
Q103	590-0017-000	2N5816
Q104	590-0017-000	2N5816

#### TRANSISTORS (STEREO ONLY)

Q105	590-0013-000	2N5089
Q106	590-0013-000	2N5089
Q107	590-0017-000	2N5816
Q108	590-0017-000	2N5816

#### RESISTORS

R101	626-0311-000	100 K ohms, 1/2 watt, 5%
R102	630-0311-000	100 K ohms, 1/2 watt, 5%, Lo Noise
R103	630-0249-000	100 ohms, 1/2 watt, 5%, Lo Noise
R104	626-0275-000	3.3 K ohms, 1/2 watt, 5%
R105	636-0002-000	Variable, 10 K ohms, 1/4 watt, (L. Equalization)
R106	630-0287-000	10 K ohms, 1/2 watt, 5%, Lo Noise
R107	630-0259-000	680 ohms, 1/2 watt, 5%, Lo Noise
R108	630-0283-000	6800 ohms, 1/2 watt, 5%, Lo Noise
R109	630-0267-000	1500 ohms, 1/2 watt, 5%, Lo Noise
R110	630-0295-000	22 K ohms, 1/2 watt, 5%, Lo Noise
	630-0293-000	18 K ohms, 1/2 watt, 5%, Lo Noise (STEREO ONLY)
R111	636-0002-000	Variable, 10 K ohms, 1/4 watt, (L. Level)
R112	626-0307-000	68 K ohms, 1/2 watt, 5%
R113	626-0287-000	10 K ohms, 1/2 watt, 5%
R114	626-0271-000	2.2 K ohms, 1/2 watt, 5%
R115	626-0251-000	330 ohms, 1/2 watt, 5%
R116	626-0295-000	22 K ohms, 1/2 watt, 5%
R117	626-0279-000	4700 ohms, 1/2 watt, 5%
R118	626-0259-000	680 ohms, 1/2 watt, 5%
R119	626-0231-000	47 ohms, 1/2 watt, 5%
R139	626-0263-000	1 K ohms, 1/2 watt, 5%
R140	626-0271-000	2.2 K ohms, 1/2 watt, 5%
R141	626-0303-000	47 K ohms, 1/2 watt, 5%
R145	626-0267-000	1500 ohms, 1/2 watt, 5%

#### RESISTORS (STEREO ONLY)

R120	626-0311-000	100 K ohms, 1/2 watt, 5%
R121	630-0311-000	100 K ohms, 1/2 watt, 5%, Lo Noise
R122	630-0249-000	100 ohms, 1/2 watt, 5%, Lo Noise
R123	626-0275-000	3.3 K ohms, 1/2 watt, 5%
R124	636-0002-000	Variable, 10 K ohms, 1/4 watt, (Right Equal)
R125	630-0287-000	10 K ohms, 1/2 watt, 5%, Lo Noise
R126	630-0259-000	680 ohms, 1/2 watt, 5%, Lo Noise

R127	630-0283-000	6800 ohms, 1/2 watt, 5%, Lo Noise
R128	630-0269-000	1800 ohms, 1/2 watt, 5%, Lo Noise
R129	630-0293-000	18 K ohms, 1/2 watt, 5%, Lo Noise
R130	636-0002-000	Variable, 10 K ohms, 1/4 watt, (Right Level)
R131	626-0307-000	68 K ohms, 1/2 watt, 5%
R132	626-0287-000	10 K ohms, 1/2 watt, 5%
R133	626-0271-000	2.2 K ohms, 1/2 watt, 5%
R134	626-0251-000	330 ohms, 1/2 watt, 5%
R135	626-0295-000	22 K ohms, 1/2 watt, 5%
R136	626-0279-000	4700 ohms, 1/2 watt, 5%
R137	626-0259-000	680 ohms, 1/2 watt, 5%
R138	626-0231-000	47 ohms, 1/2 watt, 5%
R142	626-0263-000	1 K ohms, 1/2 watt, 5%
R143	626-0271-000	2.2 K ohms, 1/2 watt, 5%
R144	626-0303-000	47 K ohms, 1/2 watt, 5%
R146	626-0267-000	1500 ohms, 1/2 watt, 5%

#### MISCELLANEOUS

IC101	606-0003-000	MFC 6040
IC102	606-0003-000	MFC 6040 (Stereo Only)
CR101	575-0007-000	IN4005
CR102	575-0007-000	IN4005 (Stereo Only)

### D. CUE TONE DETECTOR CARD

1 TONE 831-0016-003  
3 TONE 831-0016-013

#### CAPACITORS

C205	696-0114-000	5 mfd, 25 V.
C206	696-0124-000	100 mfd, 25 V.
C207	696-0114-000	5 mfd, 25 V.
C208	681-0054-000	.047 mfd, 200 V.
C209		Selected to tune the detector to 1 kHz.
C210	696-0114-000	5 mfd, 25 V.
C211	696-0114-000	5 mfd, 25 V. (8 kHz)
C212	696-0114-000	5 mfd, 25 V. (8 kHz)
C213	681-0081-000	.015 mfd, 200 V. (8 kHz)
C214		Selected to tune the detector to 8 kHz.
C215	696-0110-000	1 mfd, 25 V. (8 kHz)
C216	696-0114-000	5 mfd, 25 V. (150 Hz)
C217	696-0114-000	5 mfd, 25 V. (150 Hz)
C218	685-0003-000	2.2 mfd, 250 V. (150 Hz)
C219	696-0117-000	10 mfd, 25 V. (150 Hz)
C220	696-0114-000	5 mfd, 25 V. (1 kHz only) Single Tone
C221	686-0002-000	.025 mfd, 100 V.
C222	694-0002-000	10 mfd, 20 V.
C223	681-0046-000	.01 mfd, 200 V.
C224	694-0003-000	4.7 mfd, 35 V.
C225	694-0004-000	.47 mfd, 35 V.
C226	677-0001-000	100 pfd, 300 V.
C227	694-0002-000	10 mfd, 20 V.

#### DIODES

CR201	575-0002-000	IN462
CR202	575-0002-000	IN462
CR203	575-0007-000	IN4005
CR204	575-0007-000	IN4005
CR205	575-0007-000	IN4005
CR206	575-0007-000	IN4005 (Three Tone Only)
CR207	575-0007-000	IN4005 (Three Tone Only)

#### INDUCTORS

L201	511-0002-000	Toroid, 500 mh
L202	511-0005-000	Toroid, 20 mh (8 kHz)
L203	511-0002-000	Toroid, 500 mh (150 Hz)

#### TRANSISTORS

Q201	590-0001-000	2N3053
Q202	590-0014-000	2N2905
Q203	590-0001-000	2N3053
Q204	590-0001-000	2N3053 (8 kHz)
Q205	590-0014-000	2N2905
Q206	590-0001-000	2N3053 (8 kHz)

Symbol	Part Number	Description
Q207	590-0001-000	2N3053 (150 Hz)
Q208	590-0014-000	2N2905 (150 Hz)
Q209	590-0001-000	2N3053 (150 Hz)
Q210	590-0011-000	2N930
Q211	590-0011-000	2N930

### RESISTORS

R202	626-0255-000	470 ohms, 1/2 watt, 5%
R203	626-0283-000	68 K ohms, 1/2 watt, 5%
R204	626-0239-000	100 ohms, 1/2 watt, 5%
R205	626-0263-000	1 K ohms, 1/2 watt, 5%
R206	636-0002-000	Variable, 10 K ohms, 1/4 watt (1 kHz sensitivity)
R207	626-0291-000	15 K ohms, 1/2 watt, 5%
R208	626-0291-000	15 K ohms, 1/2 watt, 5%
R209	626-0275-000	3.3 K ohms, 1/2 watt, 5%
R210	626-0279-000	4.7 K ohms, 1/2 watt, 5%
R211	626-0271-000	2.2 K ohms, 1/2 watt, 5%
R212	626-0263-000	1 K ohms, 1/2 watt, 5%
R213	626-0279-000	4.7 K ohms, 1/2 watt, 5%
R214	626-0279-000	4.7 K ohms, 1/2 watt, 5%
R215	626-0448-000	240 ohms, 1 watt, 10%
R216	626-0291-000	15 K ohms, 1/2 watt, 5%
R217	636-0002-000	Variable, 10 K ohms, 1/4 watt (8 kHz sensitivity)
R218	626-0291-000	15 K ohms, 1/2 watt, 5% (8 kHz)
R219	626-0291-000	15 K ohms, 1/2 watt, 5% (8 kHz)
R220	626-0275-000	3.3 K ohms, 1/2 watt, 5% (8 kHz)
R221	626-0279-000	4.7 K ohms, 1/2 watt, 5% (8 kHz)
R222	626-0271-000	2.2 K ohms, 1/2 watt, 5% (8 kHz)
R223	626-0263-000	1 K ohms, 1/2 watt, 5% (8 kHz)
R224	626-0279-000	4.7 ohms, 1/2 watt, 5% (8 kHz)
R225	626-0279-000	4.7 K ohms, 1/2 watt, 5% (8 kHz)
R226	626-0239-000	100 ohms, 1/2 watt, 5% (150 Hz)
R227	636-0002-000	Variable, 10 K ohms, 1/4 watt (150 Hz sensitivity)
R228	626-0291-000	15 K ohms, 1/2 watt, 5% (150 Hz)
R229	626-0291-000	15 K ohms, 1/2 watt, 5% (150 Hz)
R230	626-0275-000	3.3 K ohms, 1/2 watt, 5% (150 Hz)
R231	626-0279-000	4.7 K ohms, 1/2 watt, 5% (150 Hz)
R232	626-0271-000	2.2 K ohms, 1/2 watt, 5% (150 Hz)
R233	626-0263-000	1 K ohms, 1/2 watt, 5% (150 Hz)
R234	626-0279-000	4.7 K ohms, 1/2 watt, 5% (150 Hz)
R235	626-0279-000	4.7 K ohms, 1/2 watt, 5% (150 Hz)
R236	626-0311-000	100 K ohms, 1/2 watt, 5%
R237	626-0235-000	68 ohms, 1/2 watt, 5%
R238	626-0287-000	10 K ohms, 1/2 watt, 5%
R239	626-0239-000	100 ohms, 1/2 watt, 5%
R240	626-0271-000	2.2 K ohms, 1/2 watt, 5%
R241	626-0259-000	680 ohms, 1/2 watt, 5%
R242	626-0271-000	2.2 K ohms, 1/2 watt, 5%
R243	626-0303-000	47 K ohms, 1/2 watt, 5%
R244	626-0287-000	10 K ohms, 1/2 watt, 5% (single tone only)



## SECTION XII

### MAINTENANCE SCHEDULE

### 3D SERIES REPRODUCER

#### A. GENERAL

International Tapetronics has designed the 3D Series Reproducer with reliability and minimum maintenance as primary design goals. Simplicity and mechanical strength is an important factor in reducing mechanical maintenance. Electronic dependability is provided through the use of negative feedback and other techniques which stabilize circuits which are subjected to widely varying ambient conditions.

#### B. MECHANICAL MAINTENANCE

1. Weekly Maintenance:
  - a. Clean the capstan and pressure roller with a cloth dipped in alcohol. Remove all traces of lubricant and oxide from both the capstan and pressure roller.
  - b. Clean the head with a cotton swab dipped in a head cleaning solution.
2. Monthly Maintenance:
  - a. Check speed of unit. Since the capstan motor is a 450 RPM, direct drive, hysteresis synchronous device, there are no belts, pulleys, or flywheel assembly to cause speed variables. The bearings in this motor are permanently sealed ball bearings which need no lubrication.

Any effort to lubricate the motor bearings will result in oil seeping into the motor windings.

To check the speed of the unit, play test cartridge No. 4 (see Section IX). The playing time should not vary more than .4 seconds in 3½ minutes. If a frequency counter is available, the 12 kHz tone should not vary more than 24 Hz.

- b. Check the pressure roller using an ITC pressure roller gauge 830-0006-001.
- c. Check head alignment.
- d. The 3D Reproducer requires no lubrication.

#### C. ELECTRICAL MAINTENANCE

The electrical maintenance is recommended monthly and includes measuring electrical parameters and making corrective adjustments if required.

Using the test cartridges and procedures outlined in Section IX, check the cue sensitivity, program play level and equalization. Should the 3-D be used in conjunction with a WRA recording amplifier, refer to the WRA instruction manual for electrical recording maintenance.

## SECTION XIII


### WARRANTY

International Tapetronics Corporation (ITC) warrants to Purchaser that the equipment sold is free of defects of workmanship or material and conforms to the specifications referred to or set out herein. This warranty, applying only to the original user, extends from date of shipment for a period of two years. No claim shall be maintained hereunder unless written notice is received by Seller within thirty days after the discovery of the facts giving rise to the claim. The sole or exclusive liability of Seller for breach of warranty shall be to refund the purchase price of the item sold, or at its option, to replace or repair the item or part concerned FOB its factory, or such other place as it may designate. ITC's liability shall arise only if Purchaser causes the defective part or item to be delivered to ITC for inspection upon ITC's request at Purchaser's expense. This warranty shall not be effective if the alleged defect is due to maltreatment, exposure, excessive moisture or any other use of the equipment other than the use for which the manufacturer prescribed.

No warranties expressed or implied shall be applicable to any equipment sold hereunder, and the foregoing shall constitute the Buyer's sole right and remedy under the agreements in this paragraph contained. In no event shall International Tapetronics Corporation have any liability for consequential damages, or for loss, damage, or expense directly or indirectly arising from the use of the products, or any inability to use them either separate or in combination with other equipment or materials, or from any other cause.

ITC's warranty is given solely to the original user and only to the extent above described. No dealer or agent is authorized to make any other or additional guaranty or warranty.

EQUALIZED PRE AMP AND LIMITER 1KHZ SECTION 8KHZ SECTION 150HZ SECTION

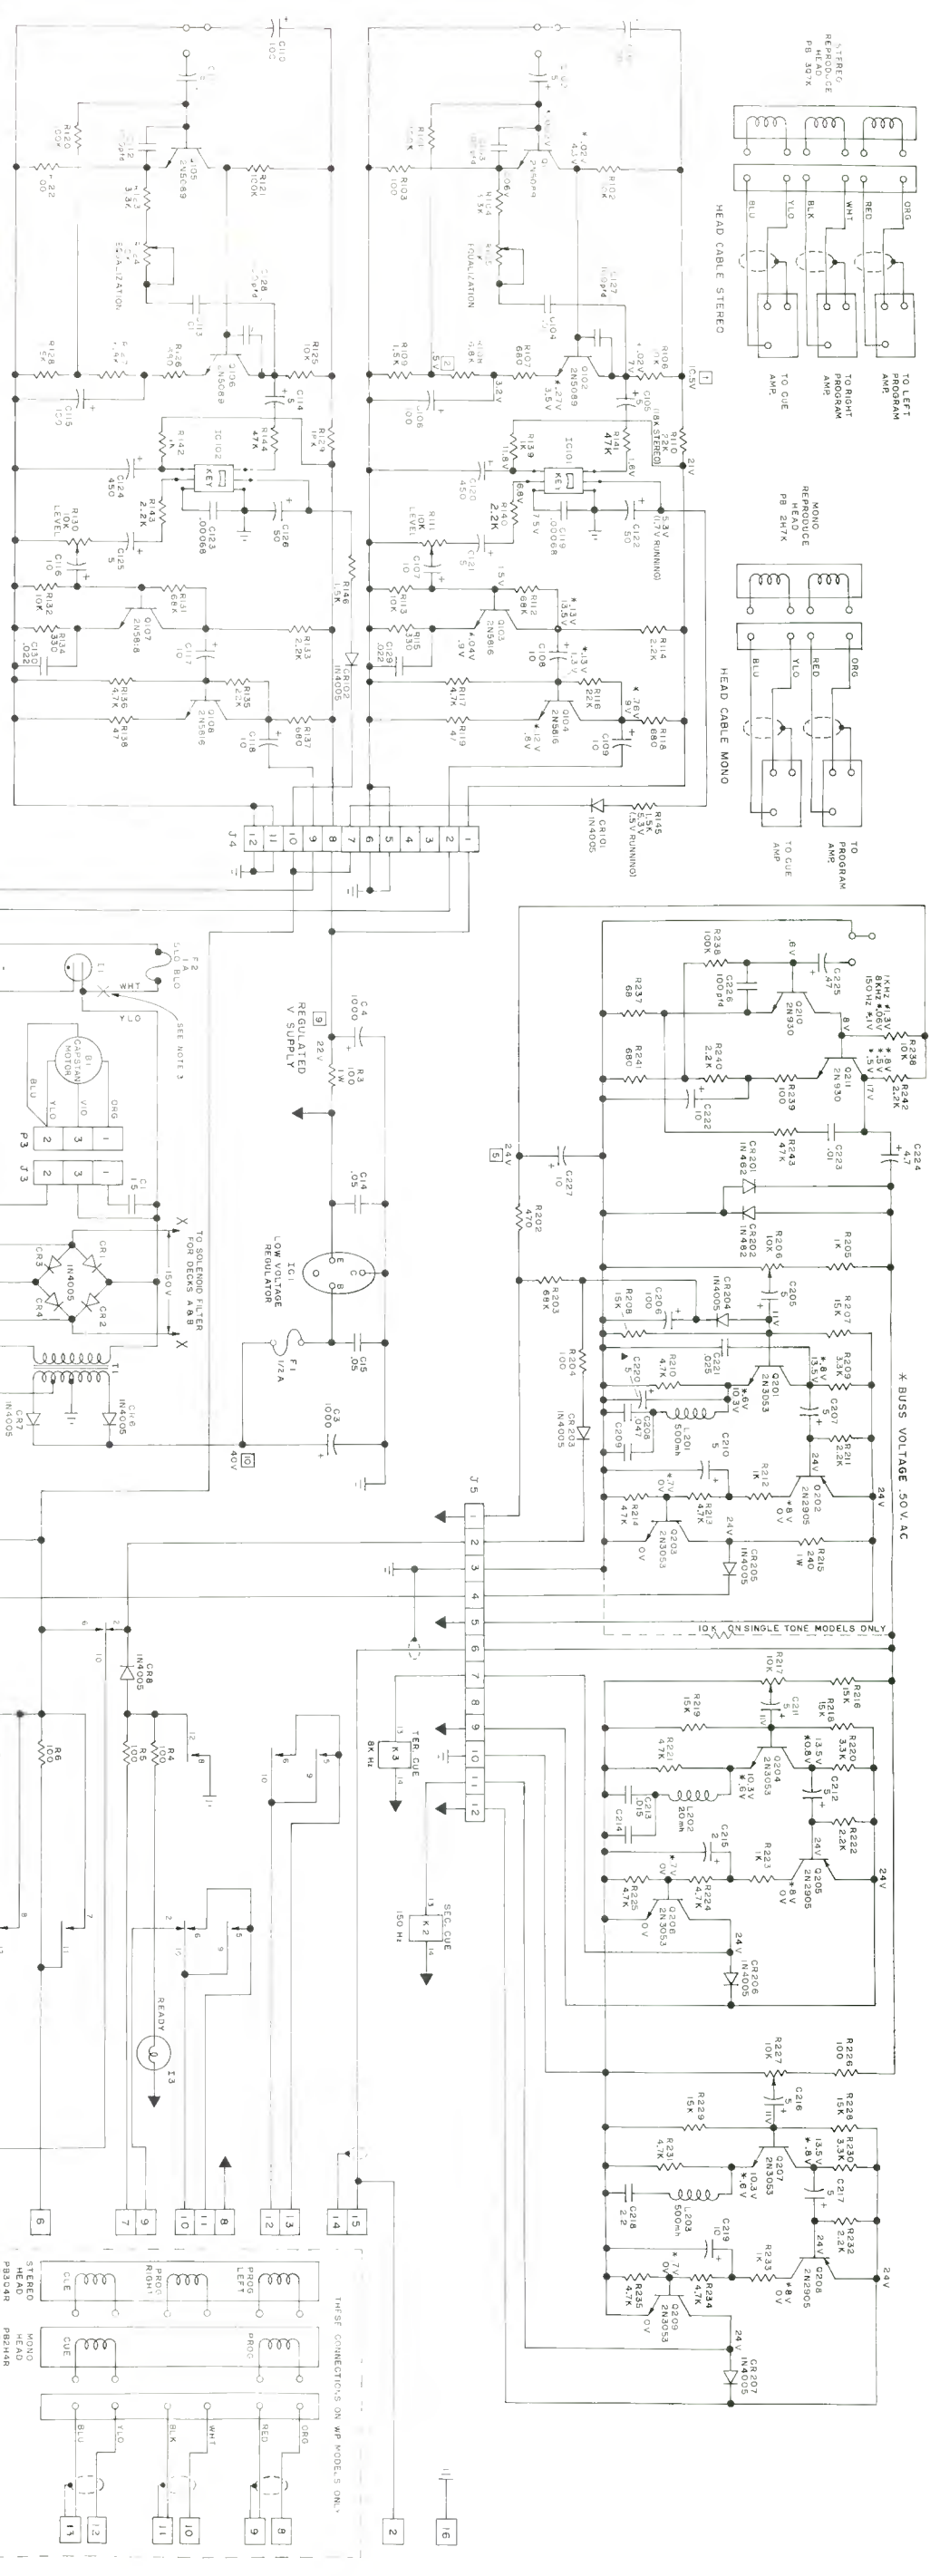


- NOTES:
1. ALL RESISTORS  $\frac{1}{2}$  W. UNLESS OTHERWISE SPECIFIED.
  2. ALL CAPACITORS SHOWN IN MICROGRAMS UNLESS OTHERWISE SPECIFIED.
  3. POWER LIGHT MAY BE REPLACED WITH POWER SWITCH-INSERT SWITCH AT POINT X
  4. NORMALLY WIRED FOR GOOD OUTPUT--FOR 100% REPLACE OHMAGE WIRE WITH 5.0 OHM WIRE. RELAY TRANSISTOR AND SOCKET NOT SHOWN ON SCHEMATIC.
  5. RELAY TRANSISTOR AND SOCKET NOT SHOWN ON SCHEMATIC.
  6. ALL POINTS MARKED  $\rightarrow$  ARE CONNECTED TOGETHER AND TO COMMON.
  7. SWITCH IS JUMPED AT FACTORY CUT FOR INTERRUPTED MOTOR OPERATION.
  8. VALUES OF COMPONENTS ARE TYPICAL. SOMEWAYS ARE INTENDED TO BE AS ACCURATE AS POSSIBLE. HOWEVER, AS NECESSARY, COMPONENTS ARE SUBSTITUTED WITH EQUIVALENT STANDARD VALUES, OR AS REQUIRED, TO INSURE PROPER OPERATION AND CALIBRATION.




TITLE  
SCHEMATIC, 3D SERIES  
LOWER DECK (C)

INTERNATIONAL  
TAPETRONICS  
CORPORATION  
893-0062-005  
DRAWING NUMBER REV

12 1/2" CONNECTS  
W/ 300  
P302

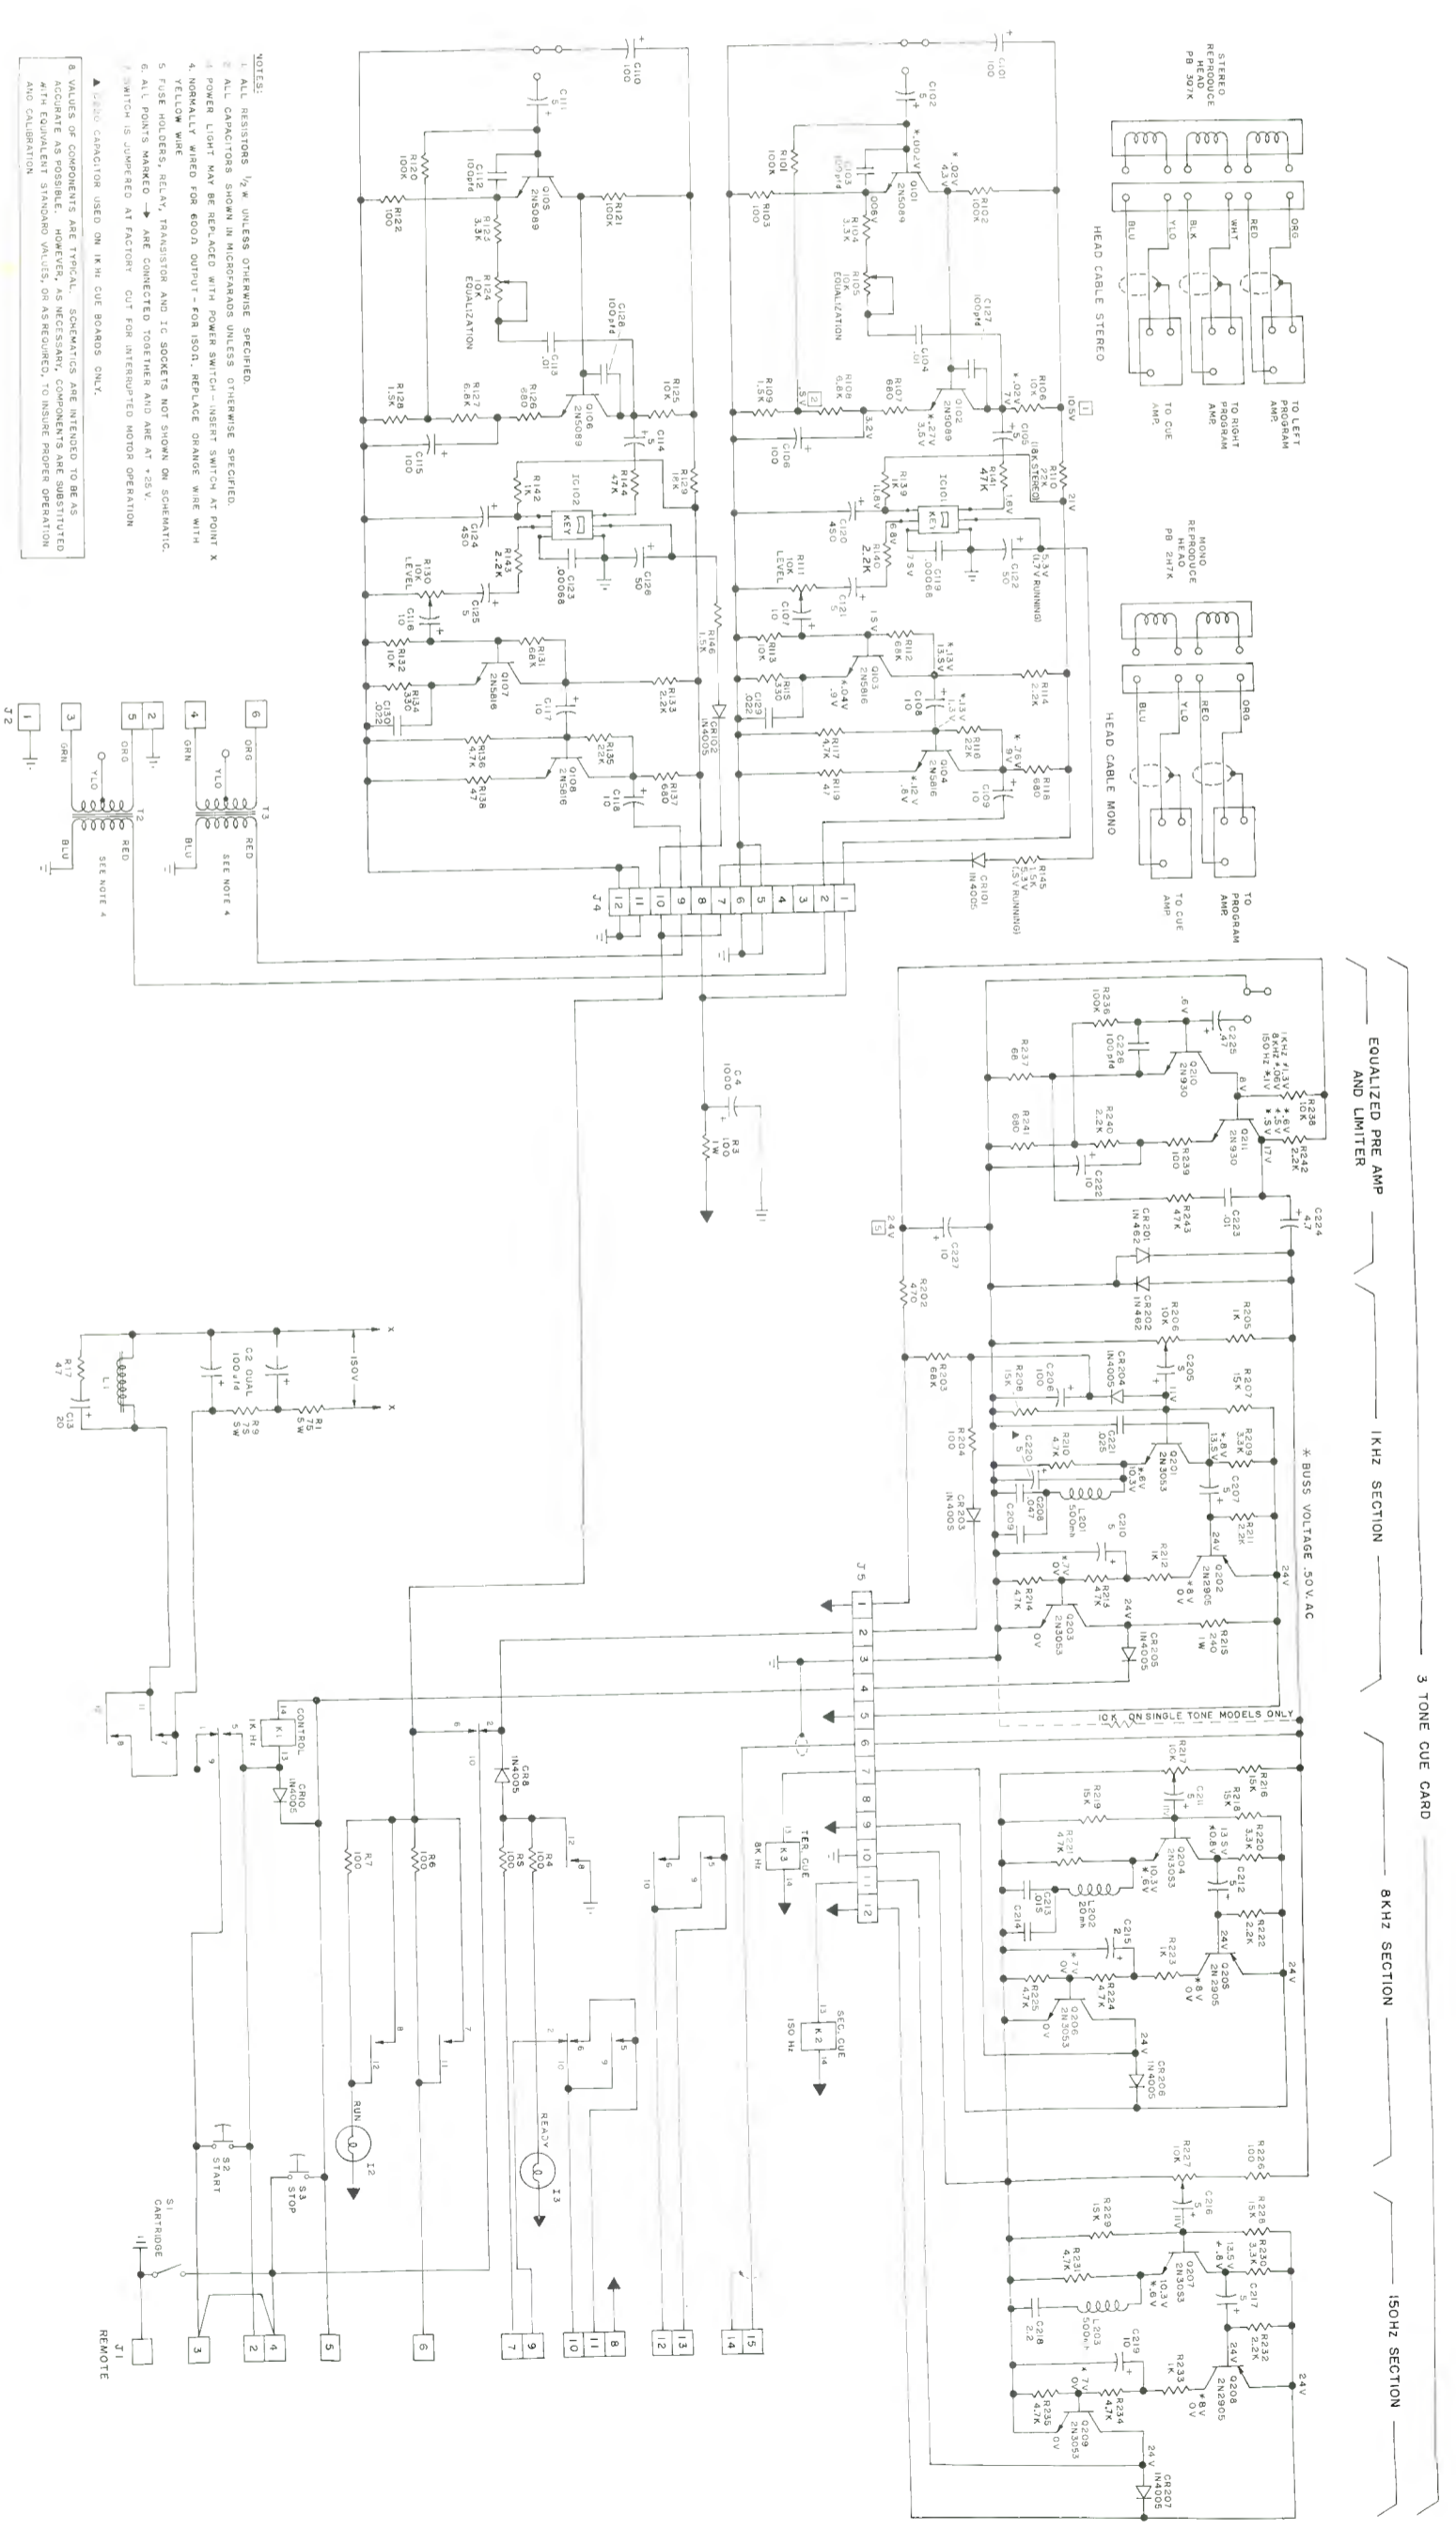

- NOTES:
1. ALL RESISTORS 1/2W UNLESS OTHERWISE SPECIFIED.
  2. ALL CAPACITORS SHOWN IN MICROGRAMS UNLESS OTHERWISE SPECIFIED.
  3. POWER LIGHT MAY BE REPLACED WITH POWER SWITCH-INSERT SWITCH AT POINT X.
  4. NORMALLY WIRE FOR GOOD OUTPUT - FROM 1500. REPLACE CHANGE WIRE WITH YELLOW WIRE.
  5. FUSE HOLDERS, RELAY, TRANSISTOR AND IC SOCKETS NOT SHOWN ON SCHEMATIC.
  6. ALL POINTS MARKED → ARE CONNECTED TOGETHER AND ARE OF THE SAME POTENTIAL.
  7. SWITCH IS JUMPED AT FACTORY CUT FOR INTERRUPTED MOTOR OPERATION.
  8. VALUES OF COMPONENTS ARE TYPICAL. COMPONENTS ARE INTENDED TO BE AS CLOSE AS POSSIBLE. HOWEVER, AS NECESSARY, COMPONENTS ARE SUBSTITUTED WITH EQUIVALENT STANDARD VALUES, OR AS REQUIRED, TO INSURE PROPER OPERATION AND CALIBRATION.

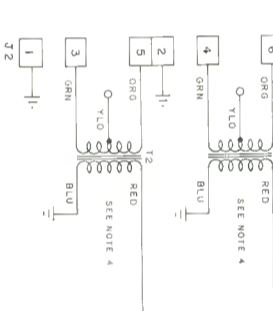

SCHEMATIC, 3D SERIES  
A & B DECKS  
INTERNATIONAL  
TAPETRONICS  
CORPORATION  
893-0063-005  
DRAWING NUMBER  
REX